


# CLOCK

## Component Index

[Dash Fuse Box](#)

# CLOCK

## Circuit Schematic

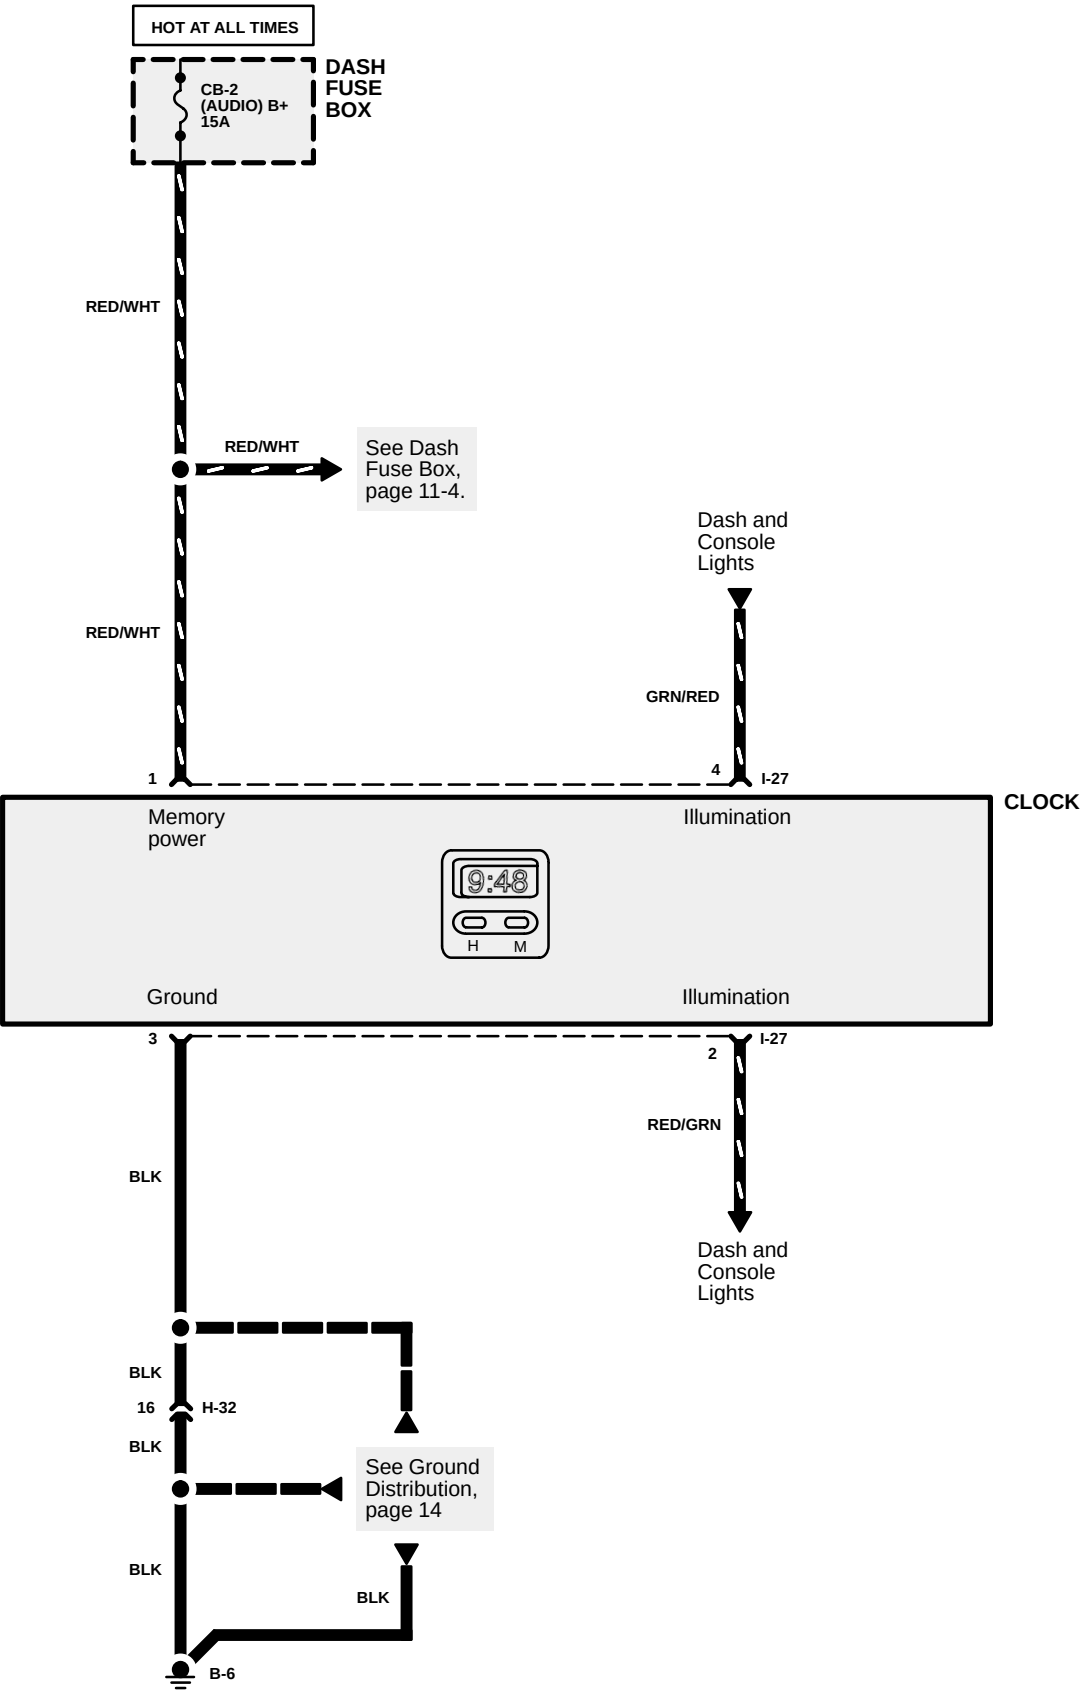

# CLOCK

## Component Location Index

(Refer to Section 201 for photographs.)

| <u>Component</u>                                         | <u>Photo No.</u> |
|----------------------------------------------------------|------------------|
| Dash Fuse Box ..... Left side of I/P, behind panel ..... | 58               |
| <u>Connector</u>                                         |                  |
| H-32 (16-WHT) ..... Behind left kick panel .....         | 62               |
| <u>Ground</u>                                            |                  |
| B-6 ..... Below center console .....                     | 81               |

## Circuit Operation

The CB-2 (AUDIO) B+ fuse is hot at all times and provides battery voltage to the Clock for its display and memory circuit.