 


HARNESS CONNECTOR VIEWS

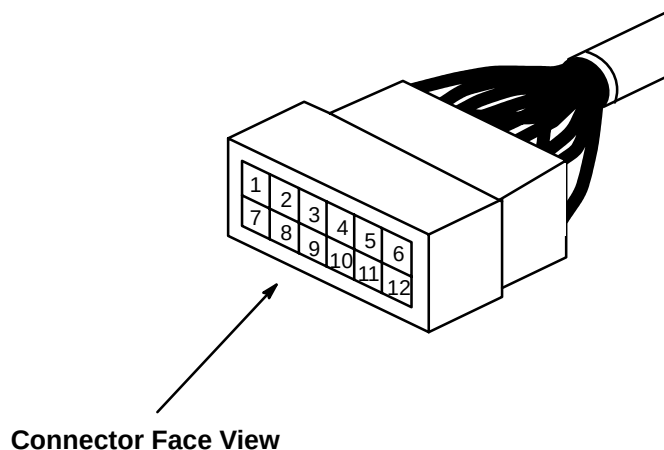

Harness connectors with six or more wire terminals are shown in this section. In-line connector faces (connectors between wire harnesses) are shown separated, with female terminal side in bold outline. Component connector faces are shown disconnected from components.

 
To make troubleshooting easier, the number of each terminal corresponds to the number found next to the appropriate connector on the schematic. Connectors appear in ascending alpha-numerical order.

HARNESS CONNECTOR VIEWS

B-9




B-24

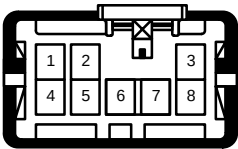


B-13



 
B-26



B-19

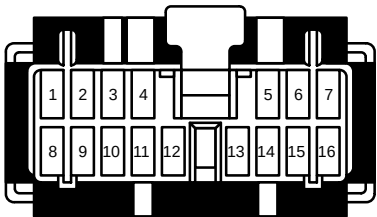 


C-1

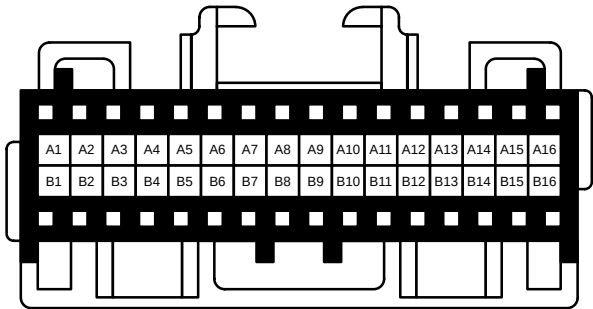 


HARNESS CONNECTOR VIEWS

 
C-2

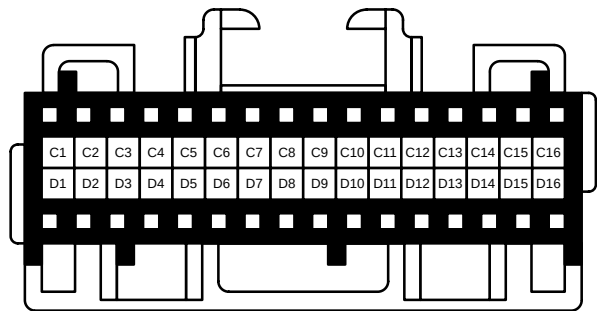


C-27

 


C-3

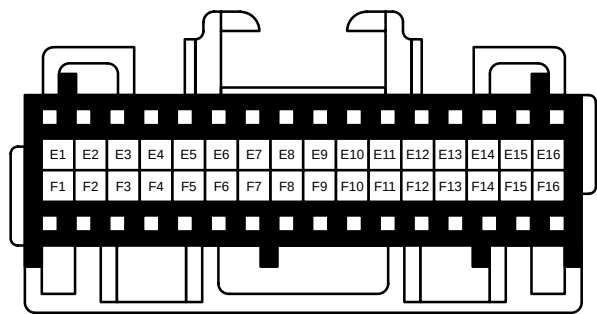 


C-34

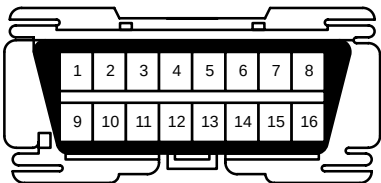 

C-4

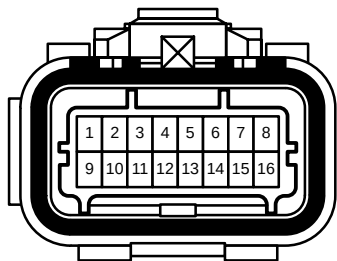 


C-37

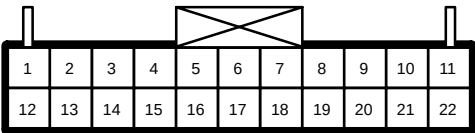 

HARNESS CONNECTOR VIEWS

 
C-39

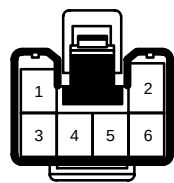


C-49



 
C-41




C-50

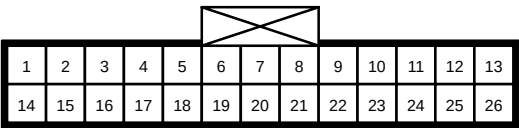 

C-48

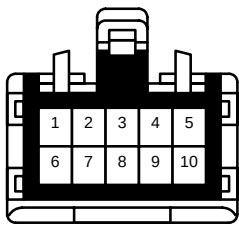 


C-51

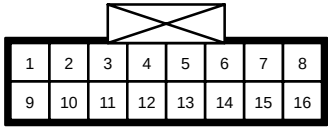 

HARNESS CONNECTOR VIEWS

 C-52

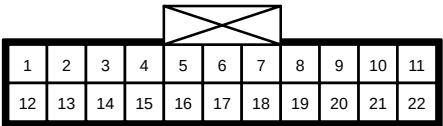


D-12




D-3



 
D-17

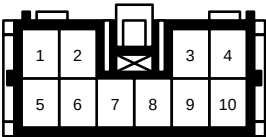

D-5

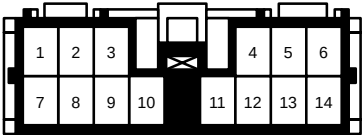 


D-22

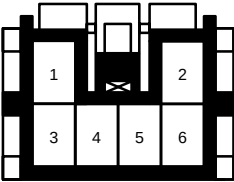 


HARNESS CONNECTOR VIEWS

 
D-27

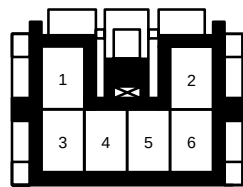


E-16 (3.2L)

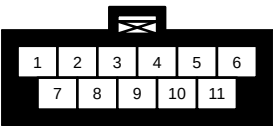 


E-5 (3.2L)

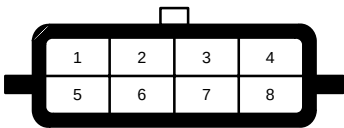 


E-21

 

E-9 (3.2L)

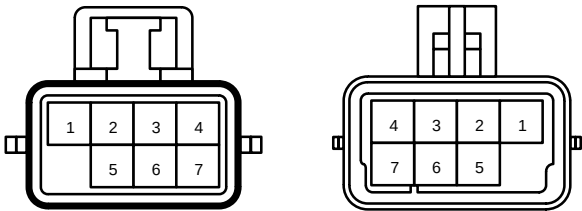 


E-22

 


HARNESS CONNECTOR VIEWS

 
E-33 (3.2L)

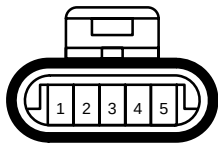


E-60

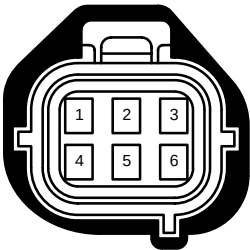 


E-53

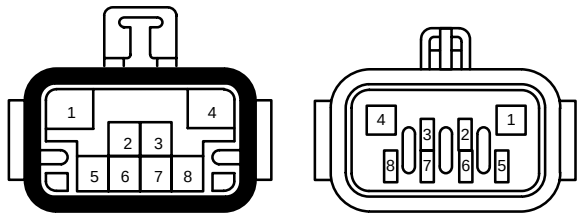 


F-6

 

E-54

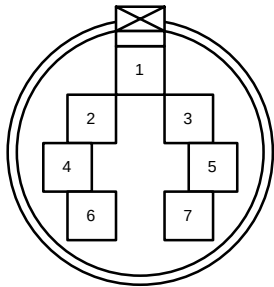 


F-7


 


HARNESS CONNECTOR VIEWS


 
G-6

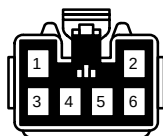



H-6

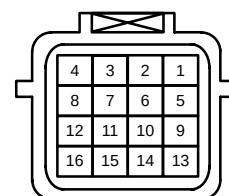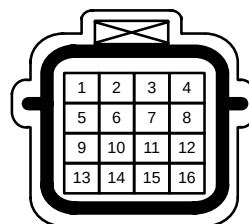  



H-4

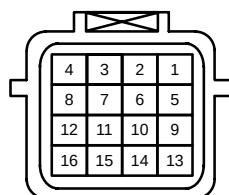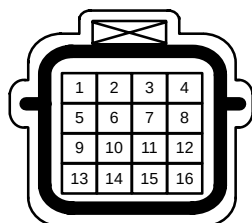  



H-7

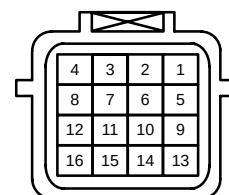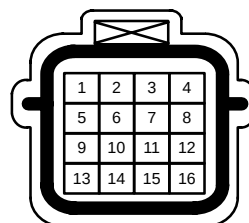  

H-5

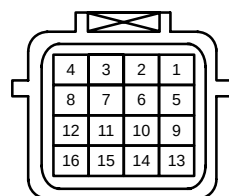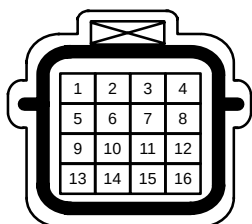  


H-8

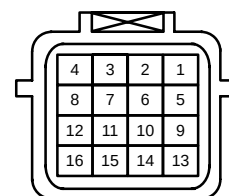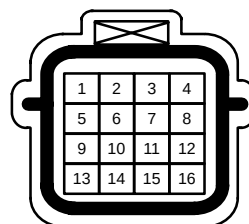  


HARNESS CONNECTOR VIEWS

 
H-11

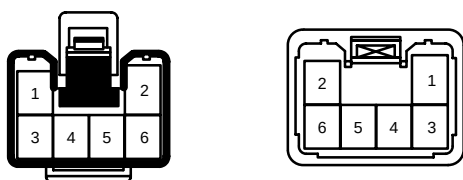


H-14

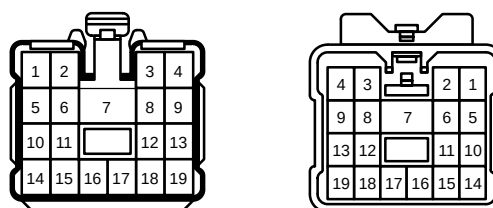 


H-12

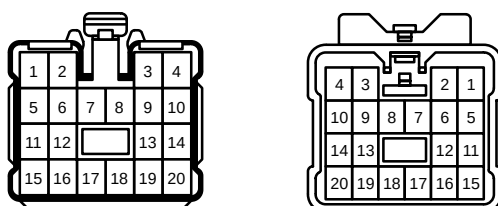 


H-15

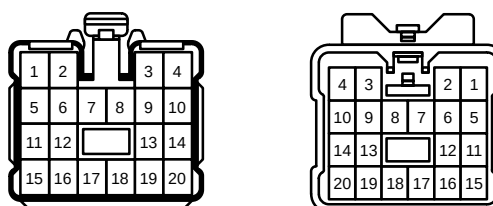 

H-13

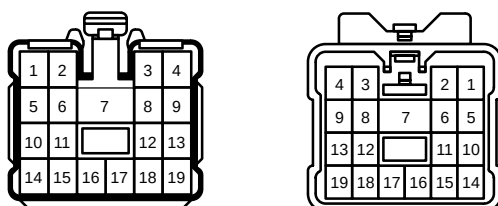 


H-16

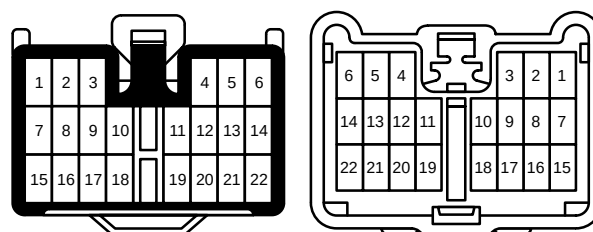 


HARNESS CONNECTOR VIEWS

 
H-17

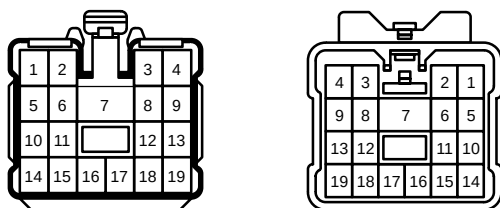


H-22

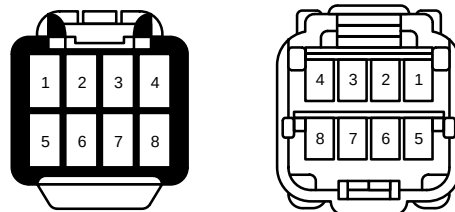 


H-18

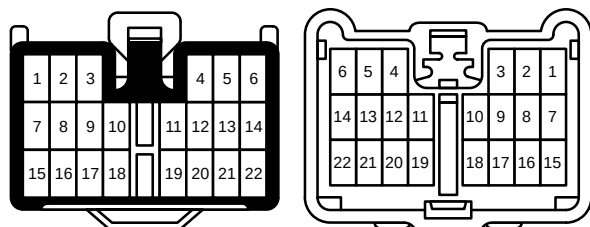 


H-23 Trailer Connector

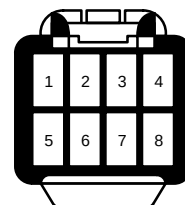 







H-19

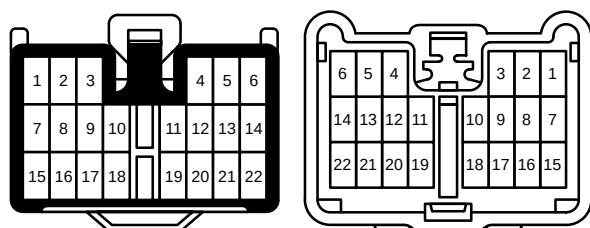 

H-24

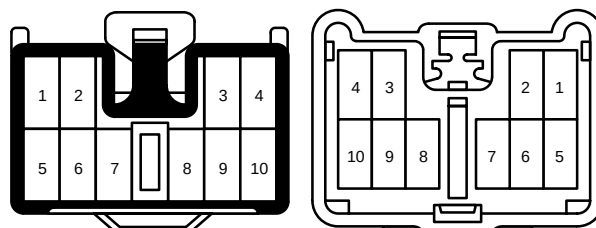 


HARNESS CONNECTOR VIEWS

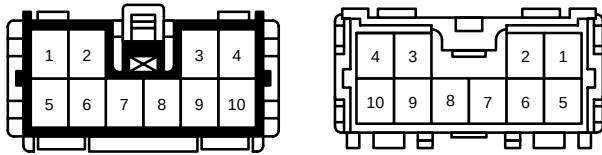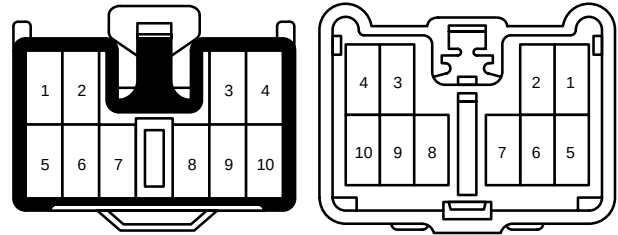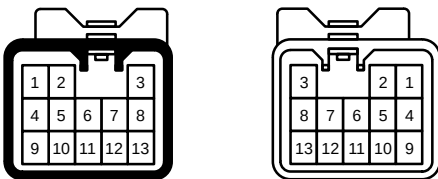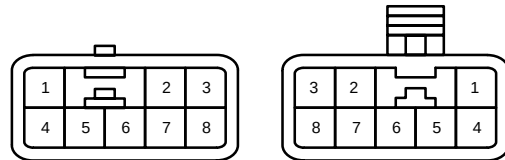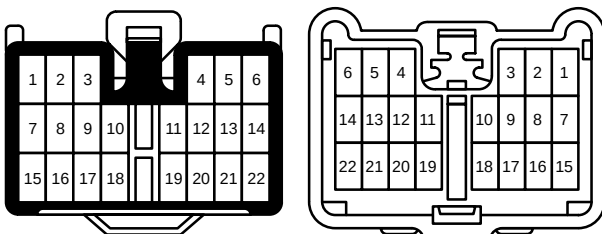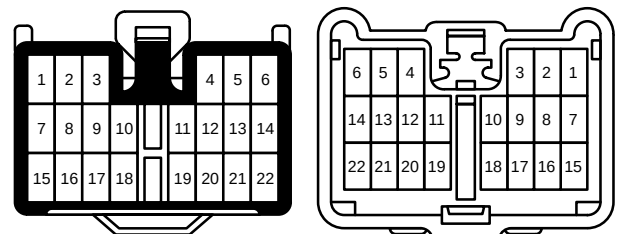      
H-25 (with Intelligent Suspension System)**H-29****H-25 (without Intelligent Suspension System)****H-30 (Rodeo)****H-28 (with Power Windows and Power Door Locks)****H-31**

HARNESS CONNECTOR VIEWS

 
H-32

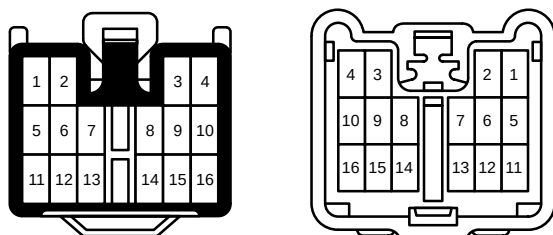


H-35

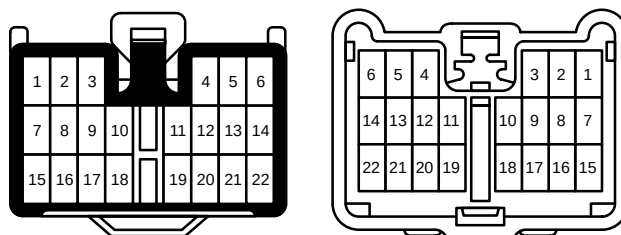 

 
H-33 (with Power Windows and Power Door Locks)

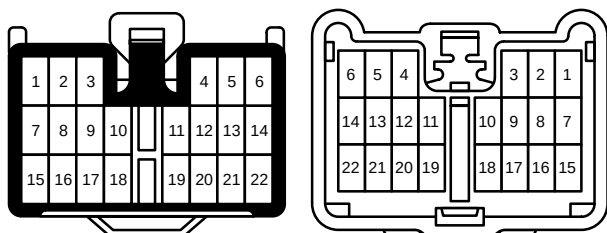


H-44 (2.2L)

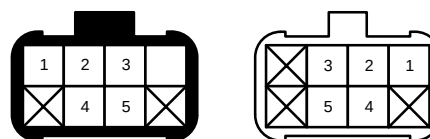 

H-34

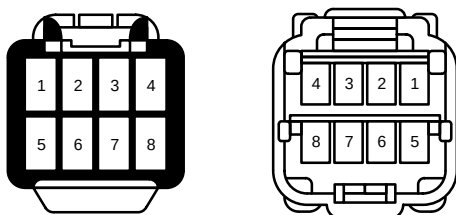 

H-44 (3.2L)

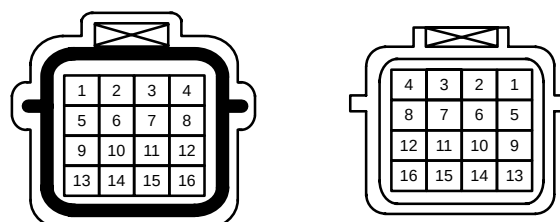 


HARNESS CONNECTOR VIEWS

I-1

1	2	3	4	5	6	7	X		8	9	10	11	12	13	14
15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30

 I-6

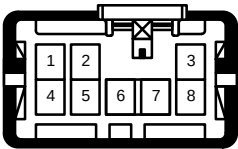


I-2

1	2	3	4	X		5	6	7
8	9	10	11	12	13	14	15	16

I-9

1	2	3	X		4	5	6
7	8	9	10	11	12	13	14

 I-3




I-11


1	2	X		3	4
5	6	7	8	9	10

HARNESS CONNECTOR VIEWS

 
I-12

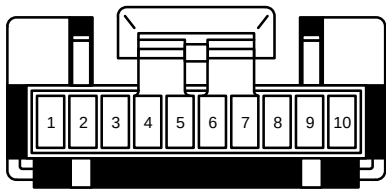

I-23

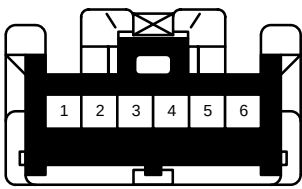 


I-15

 


I-26



 I-16

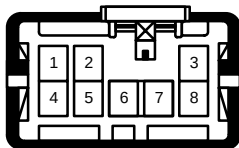


I-30

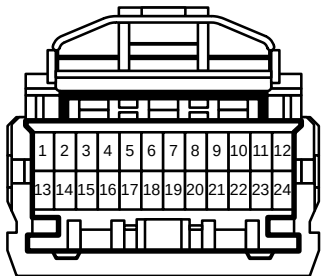 


HARNESS CONNECTOR VIEWS

 
I-31

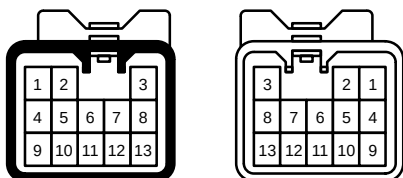


I-40

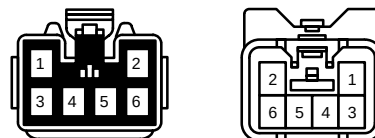 


I-32

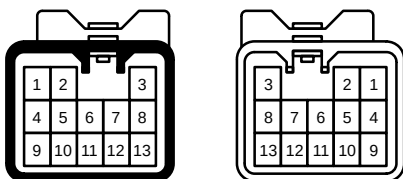 


I-41

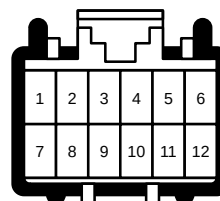 

I-33

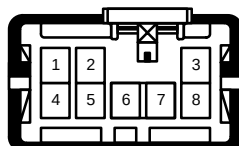 


I-42

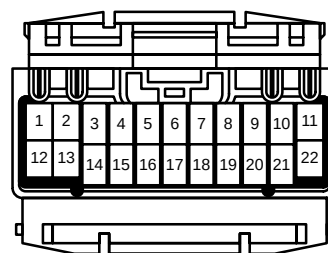 


HARNESS CONNECTOR VIEWS

 
I-46

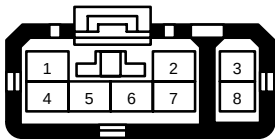


L-2

 

J-1

 

M-16

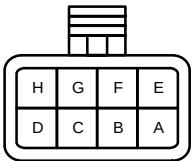 

J-2

