


MULTI-PLEXED INDICATOR CONTROL UNIT

Circuit Schematic

- [Clutch Switch](#)
- [Dash Fuse Box](#)
- [Data Link Connector \(DLC\)](#)
- [Engine or Powertrain Control Module \(ECM or PCM\)](#)
 - [2.2L](#)
 - [3.2L](#)
- [Multi-plexed Indicator Control Unit](#)
- [Taillight Relay](#)


MULTI-PLEXED INDICATOR CONTROL UNIT

Circuit Schematic

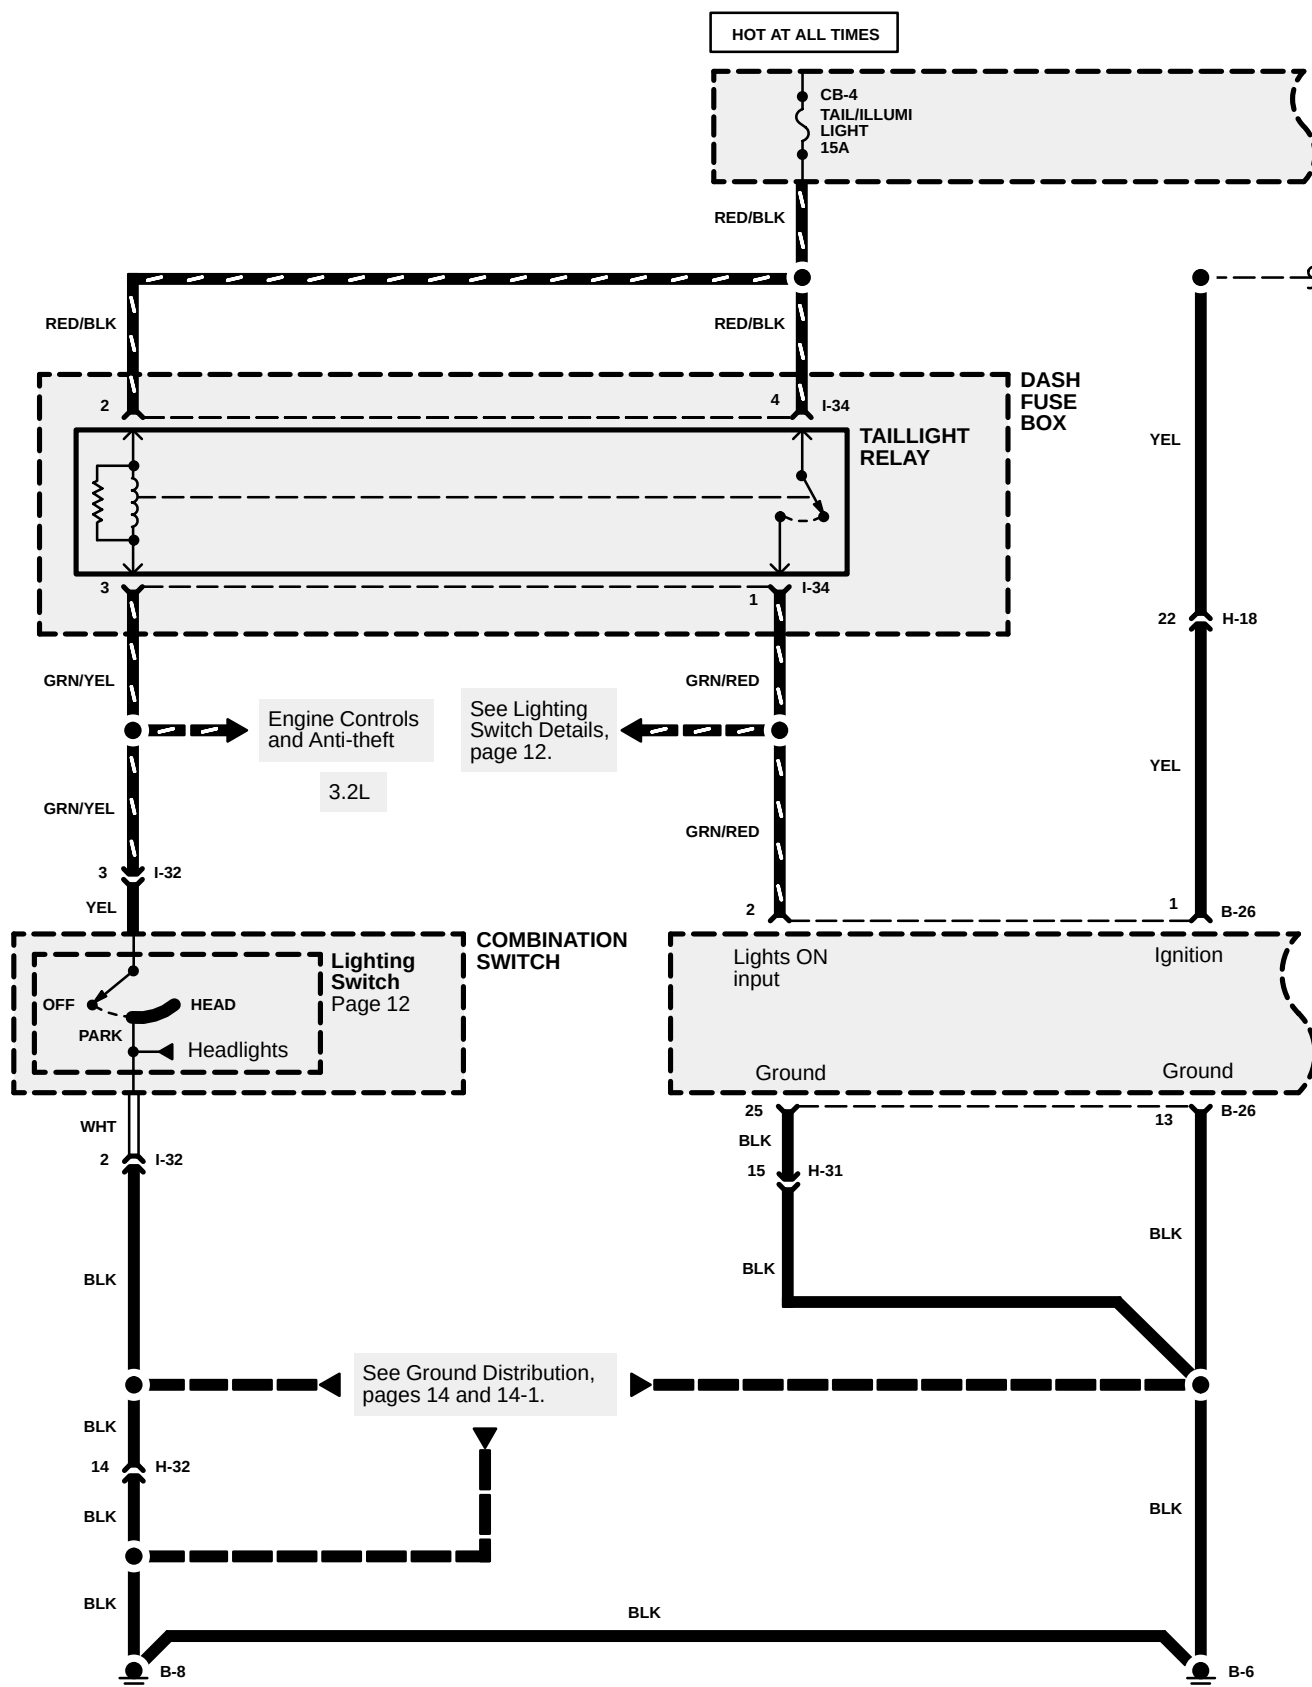

MULTI-PLEXED INDICATOR CONTROL UNIT

Circuit Schematic

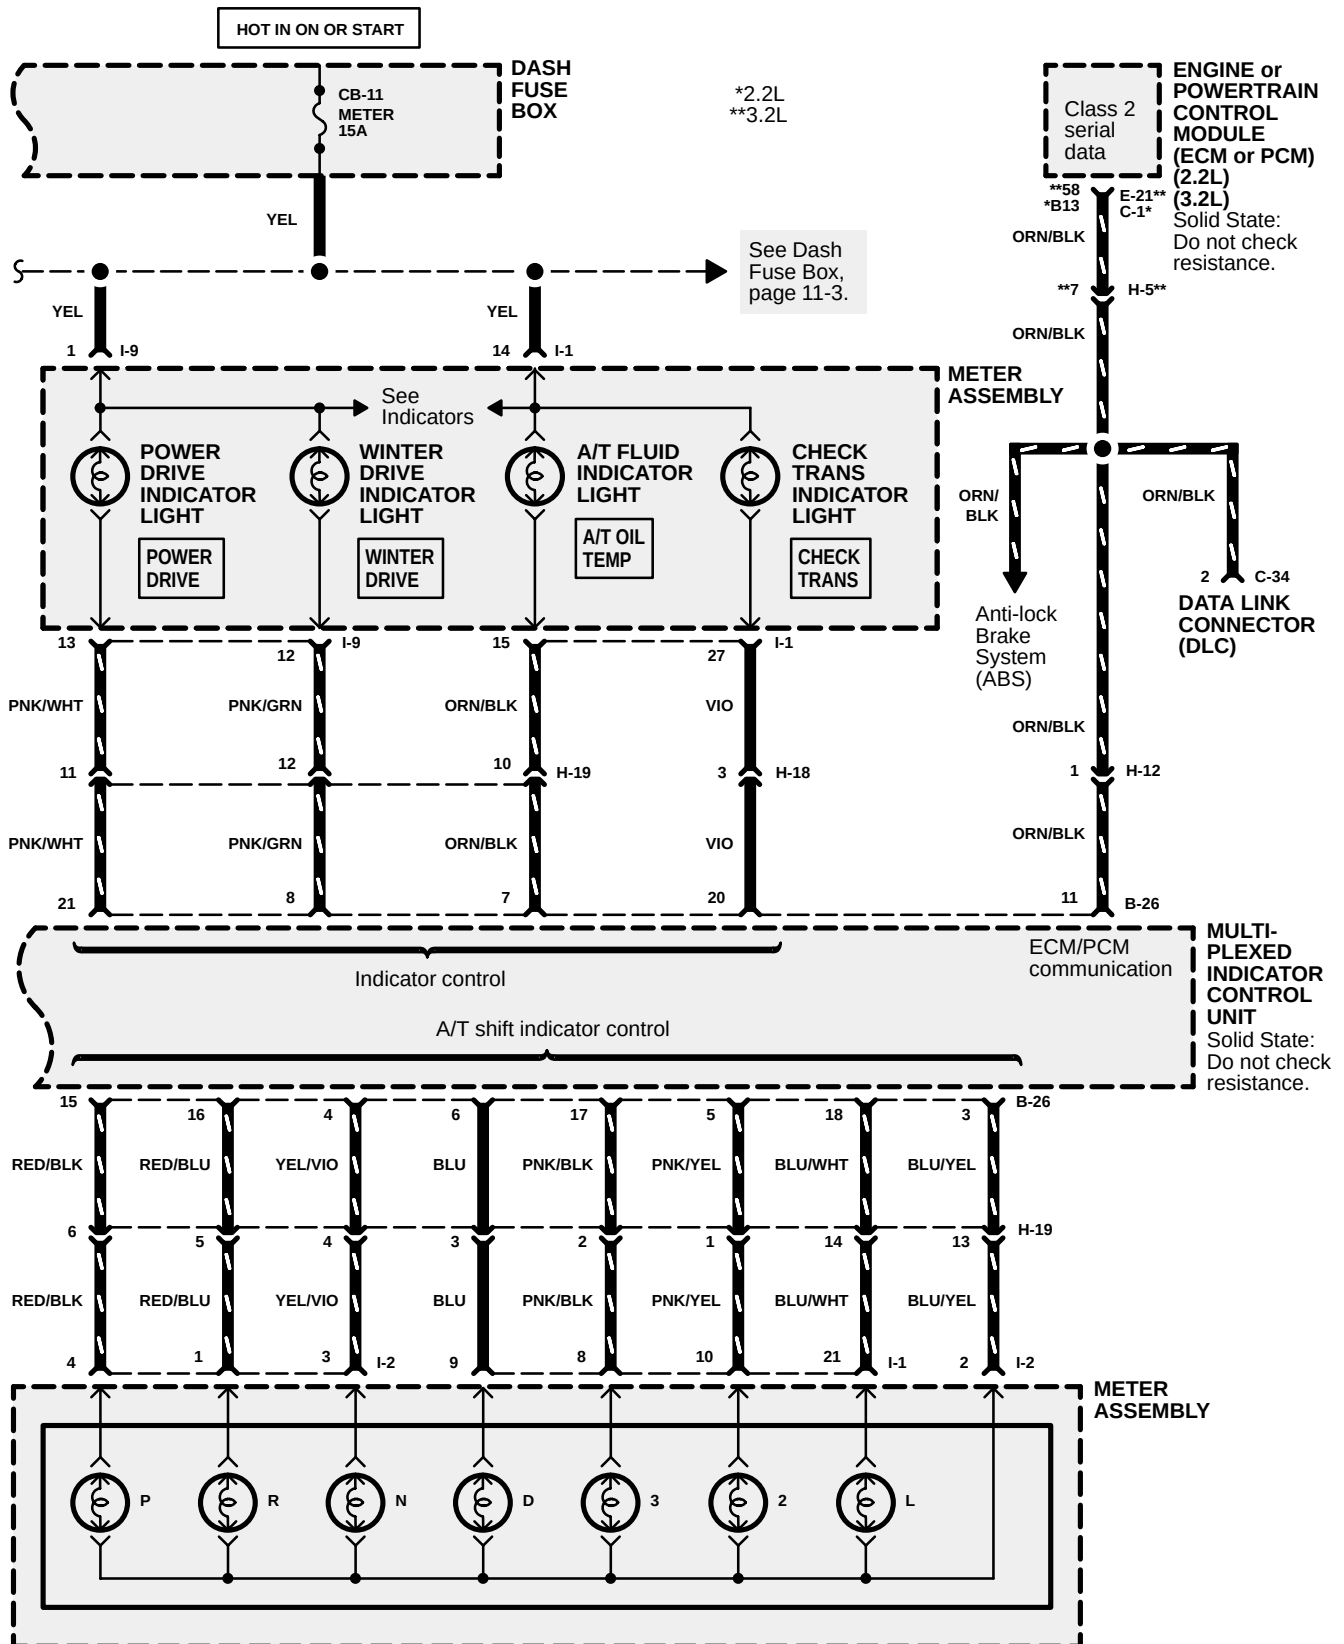

MULTI-PLEXED INDICATOR CONTROL UNIT

Circuit Schematic

(Refer to Section 201 for photographs.)

Component	Photo No.
Clutch Switch	Behind left side of I/P, on clutch pedal support 65
Dash Fuse Box	Left side of I/P, behind trim 58
Data Link Connector (DLC)	
C-34 (16-BLK)	Below left side of I/P, near engine hood release 61
Engine or Powertrain Control Module (ECM or PCM)	
(2.2L)	Below center of dash, console removed 73
Engine or Powertrain Control Module (ECM or PCM)	
(3.2L)	Left side of engine compartment 44
Multi-plexed Indicator Control Unit	Below rear of center console 79
Taillight Relay	Left side of I/P, in dash fuse box 60
Connector	
H-5 (16-GRN)	Left side of engine compartment 27
H-7 (16-WHT)	Left side of engine compartment 27
H-12 (20-BLU)	Below right side of I/P, behind kick panel 80
H-17 (19-BLK)	Behind left kick panel 62
H-18 (22-WHT)	Behind right kick panel 80
H-19 (22-WHT)	Below right side of I/P, behind kick panel 80
H-31 (22-WHT)	Behind left kick panel 63
H-32 (16-WHT)	Behind left kick panel 62
I-1 (30-GRN)	Behind left side of I/P, on top of meter assembly 86
I-2 (16-GRN)	Behind left side of I/P, on top of meter assembly 86
I-9 (14-GRN)	Behind left side of I/P, on top of meter assembly 86
I-32 (13-BLK)	Behind left side of I/P, on connector bracket 66
Ground	
B-6	Below center console 81
B-8	Below center console 81