


POWER DISTRIBUTION

Component Index

Alarm and Relay Control Unit	Hazard Warning Switch
2.2L	2.2L
3.2L	3.2L
Anti-Theft Horn	Headlight Relay
Condenser Fan Hi Relay	2.2L
Condenser Fan Lo Relay	3.2L
Condenser Fan Relay	Heater-A/C Relay
Dash Fuse Box	2.2L
2.2L	3.2L
3.2L	Immobilizer Control Unit
Data Link Connector (DLC) C-34 (16-BLK)	Intelligent Suspension Control Unit
2.2L	Meter Assembly
3.2L	2.2L
ECM/PCM Main Relay	3.2L
ECM Main Relay	Option Box
Electronic Brake Control Module (EBCM)	2.2L
2.2L	3.2L
3.2L	Rear Defogger Relay
Engine or Powertrain Control Module	2.2L
(ECM or PCM) (2.2L)	3.2L
Engine Control Module (ECM) (3.2L)	Starter
Fog Light Relay	2.2L
Fuel Pump Relay	3.2L
2.2L	Starter Relay
3.2L	2.2L
Fuse/Relay Box	3.2L
2.2L	Starter Switch
3.2L	2.2L
Generator	3.2L
2.2L	Transfer Control Unit
3.2L	Transmission Control Module (TCM)


POWER DISTRIBUTION: 2.2L

Circuit Schematic

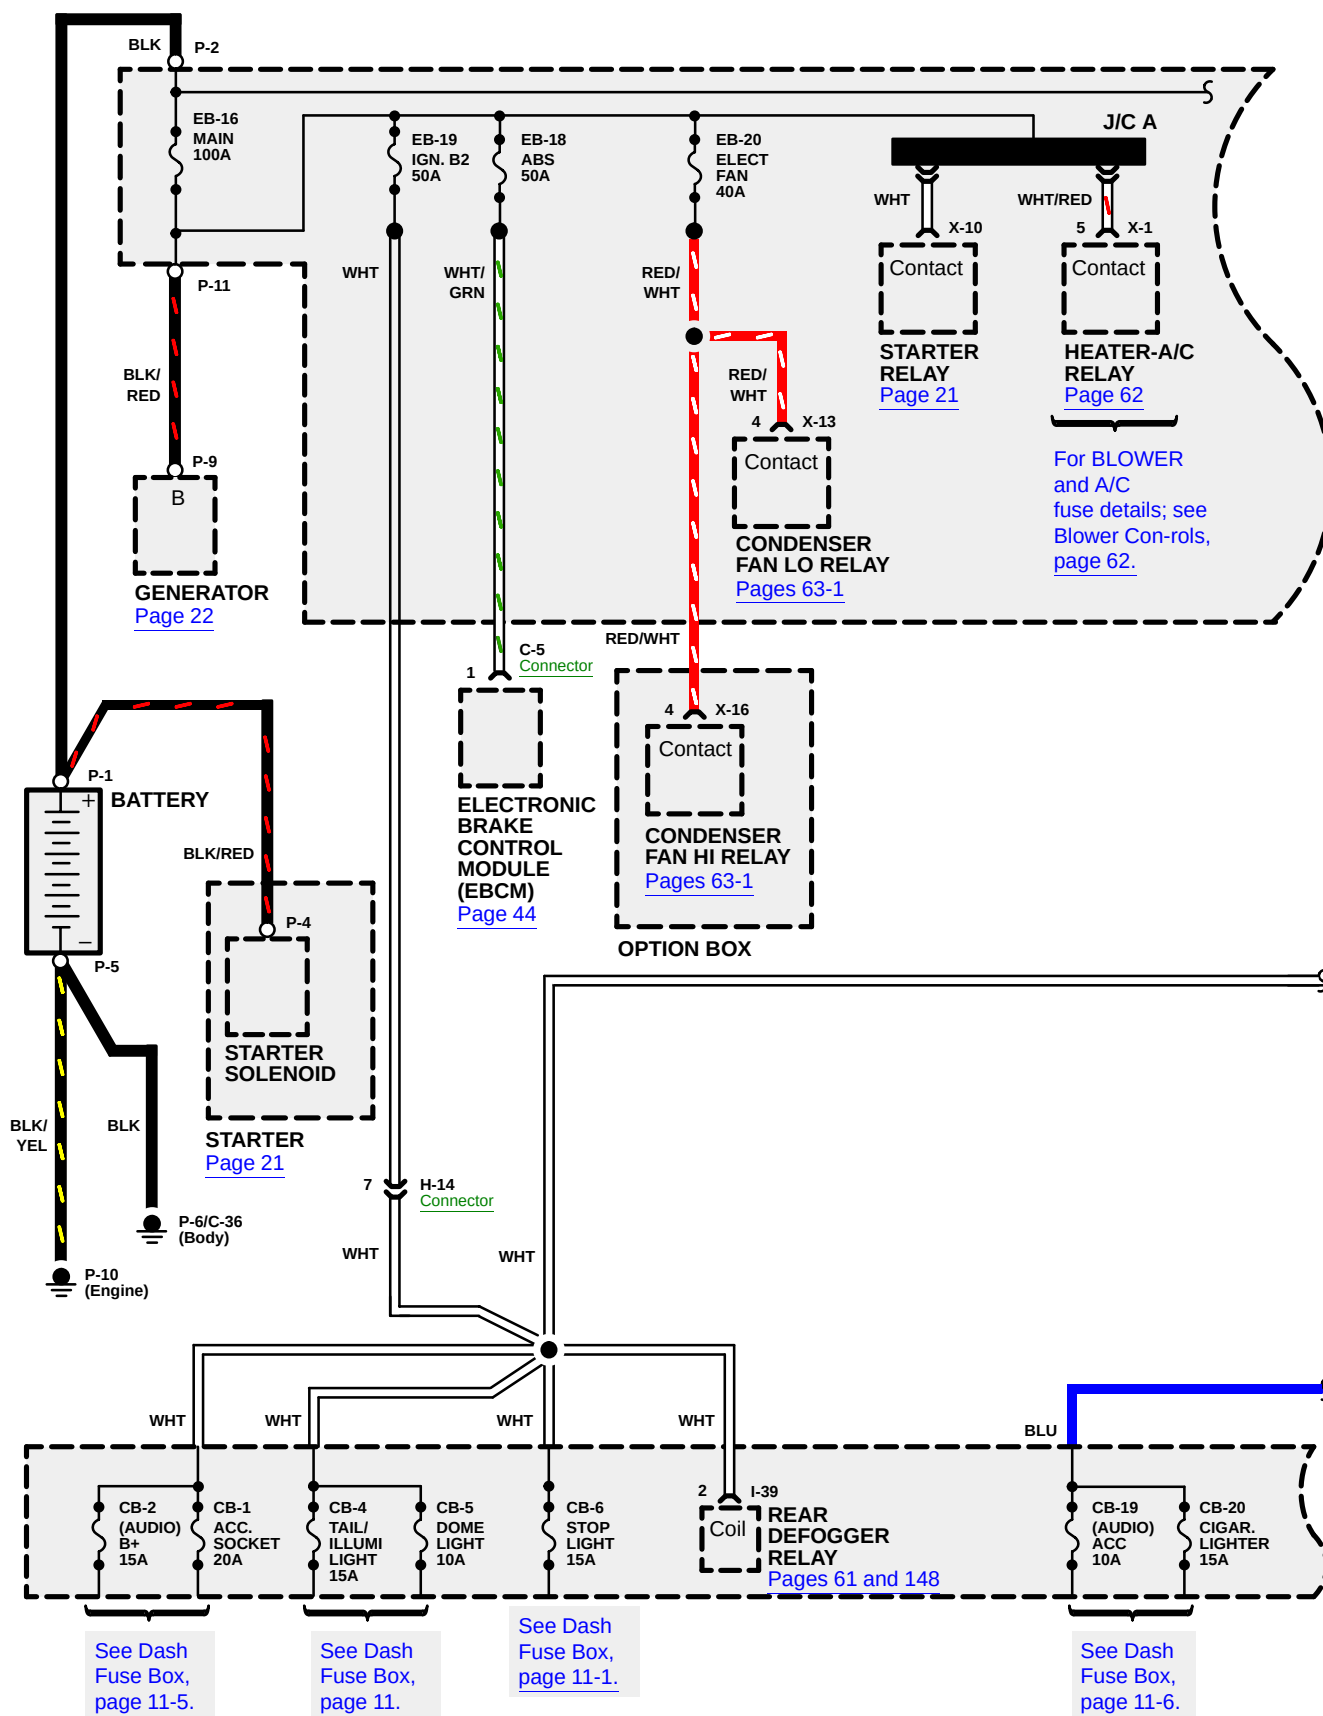

POWER DISTRIBUTION: 2.2L


Circuit Schematic

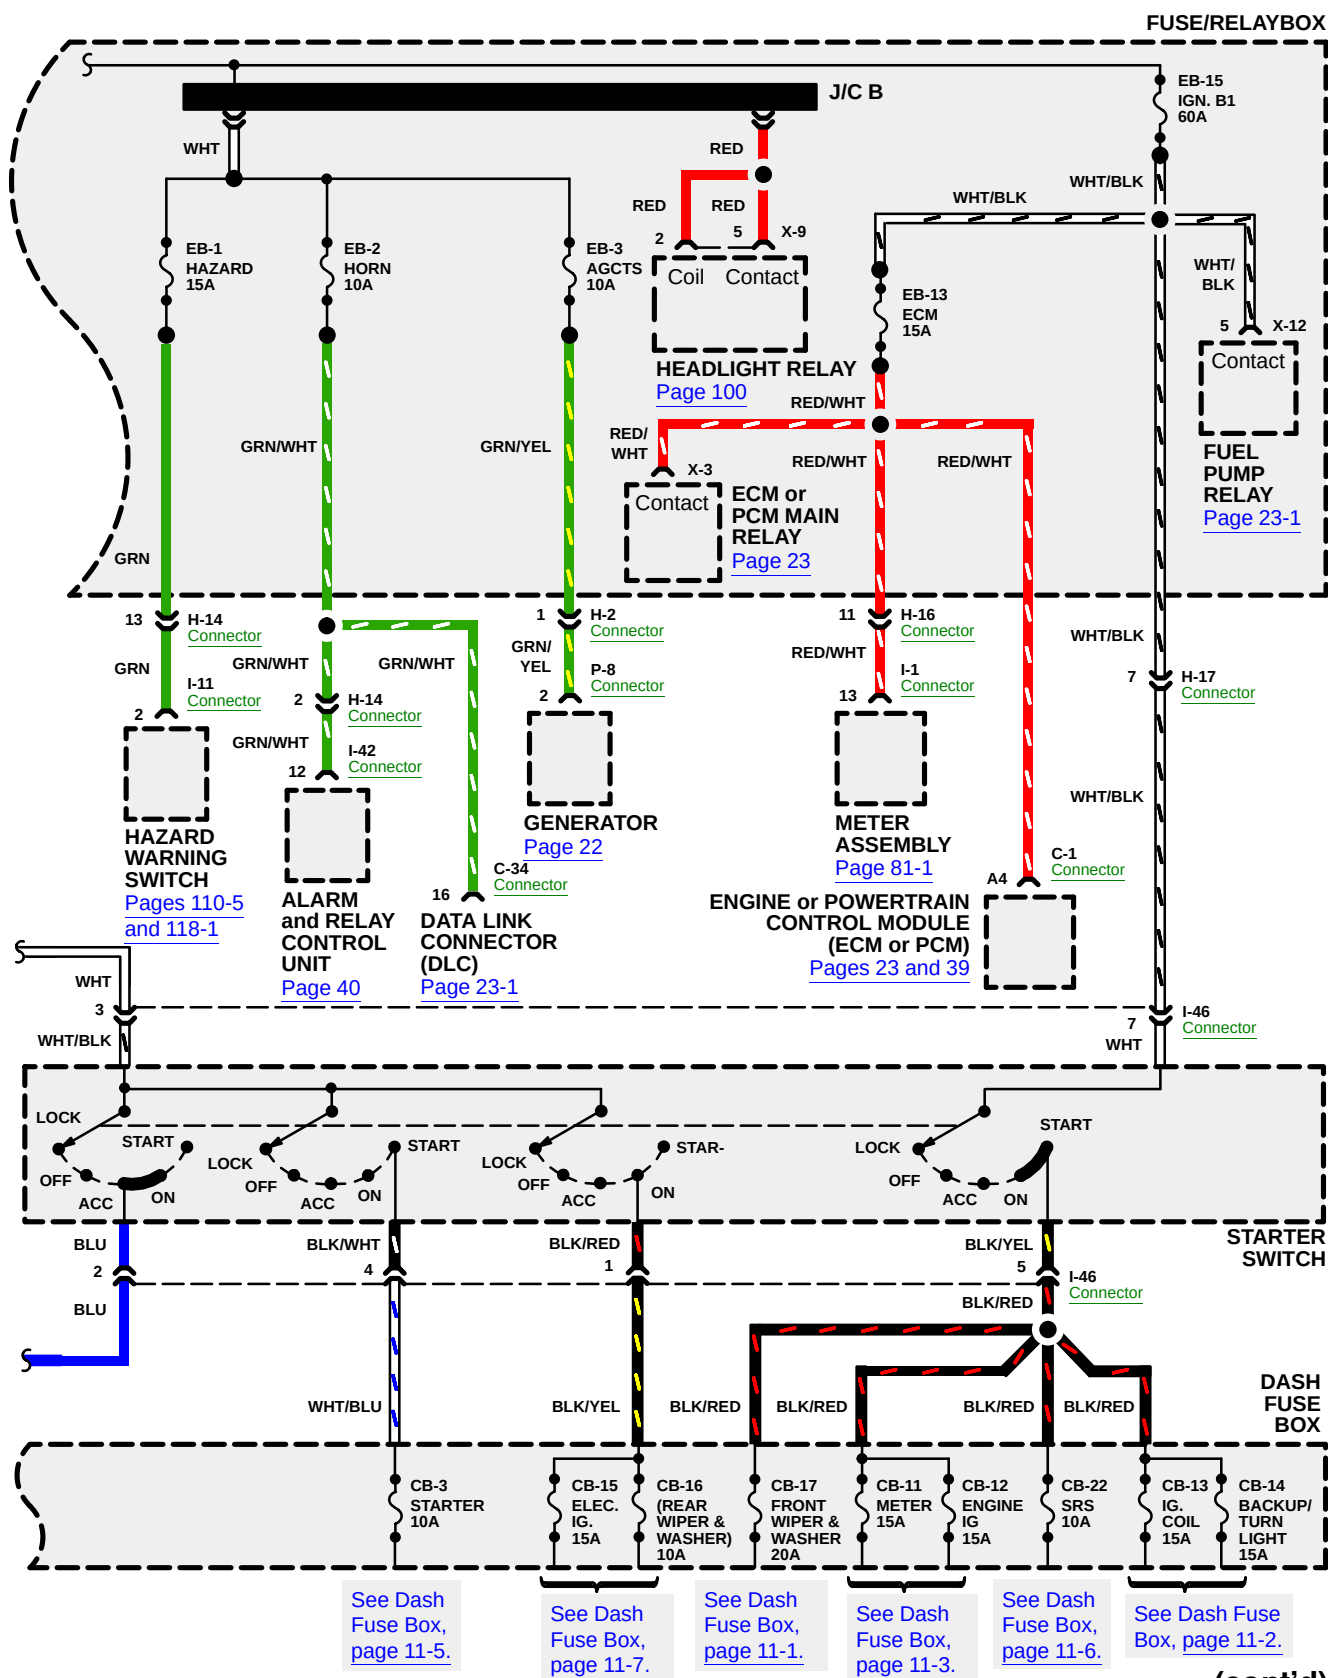

(cont'd)


POWER DISTRIBUTION: 3.2L

Circuit Schematic

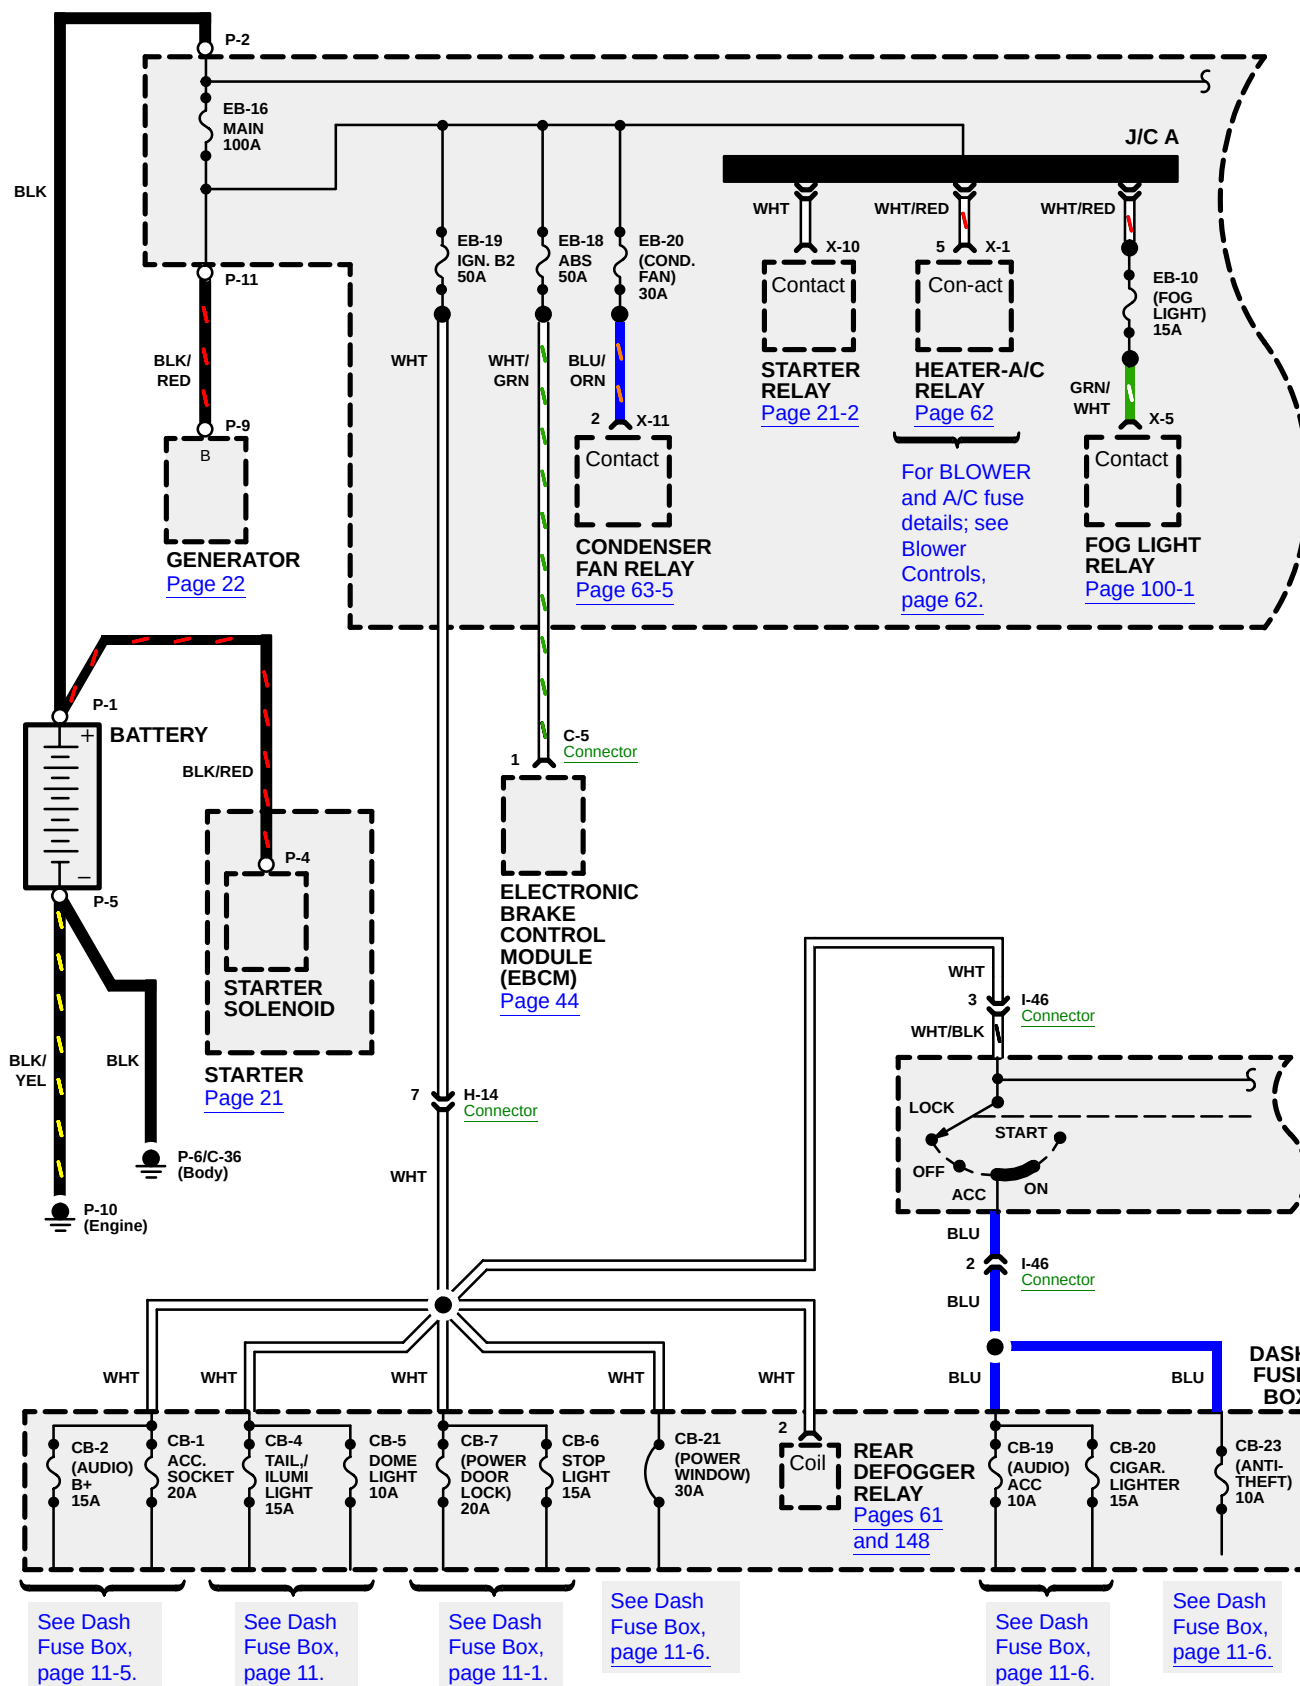


POWER DISTRIBUTION: 3.2L

Circuit Schematic

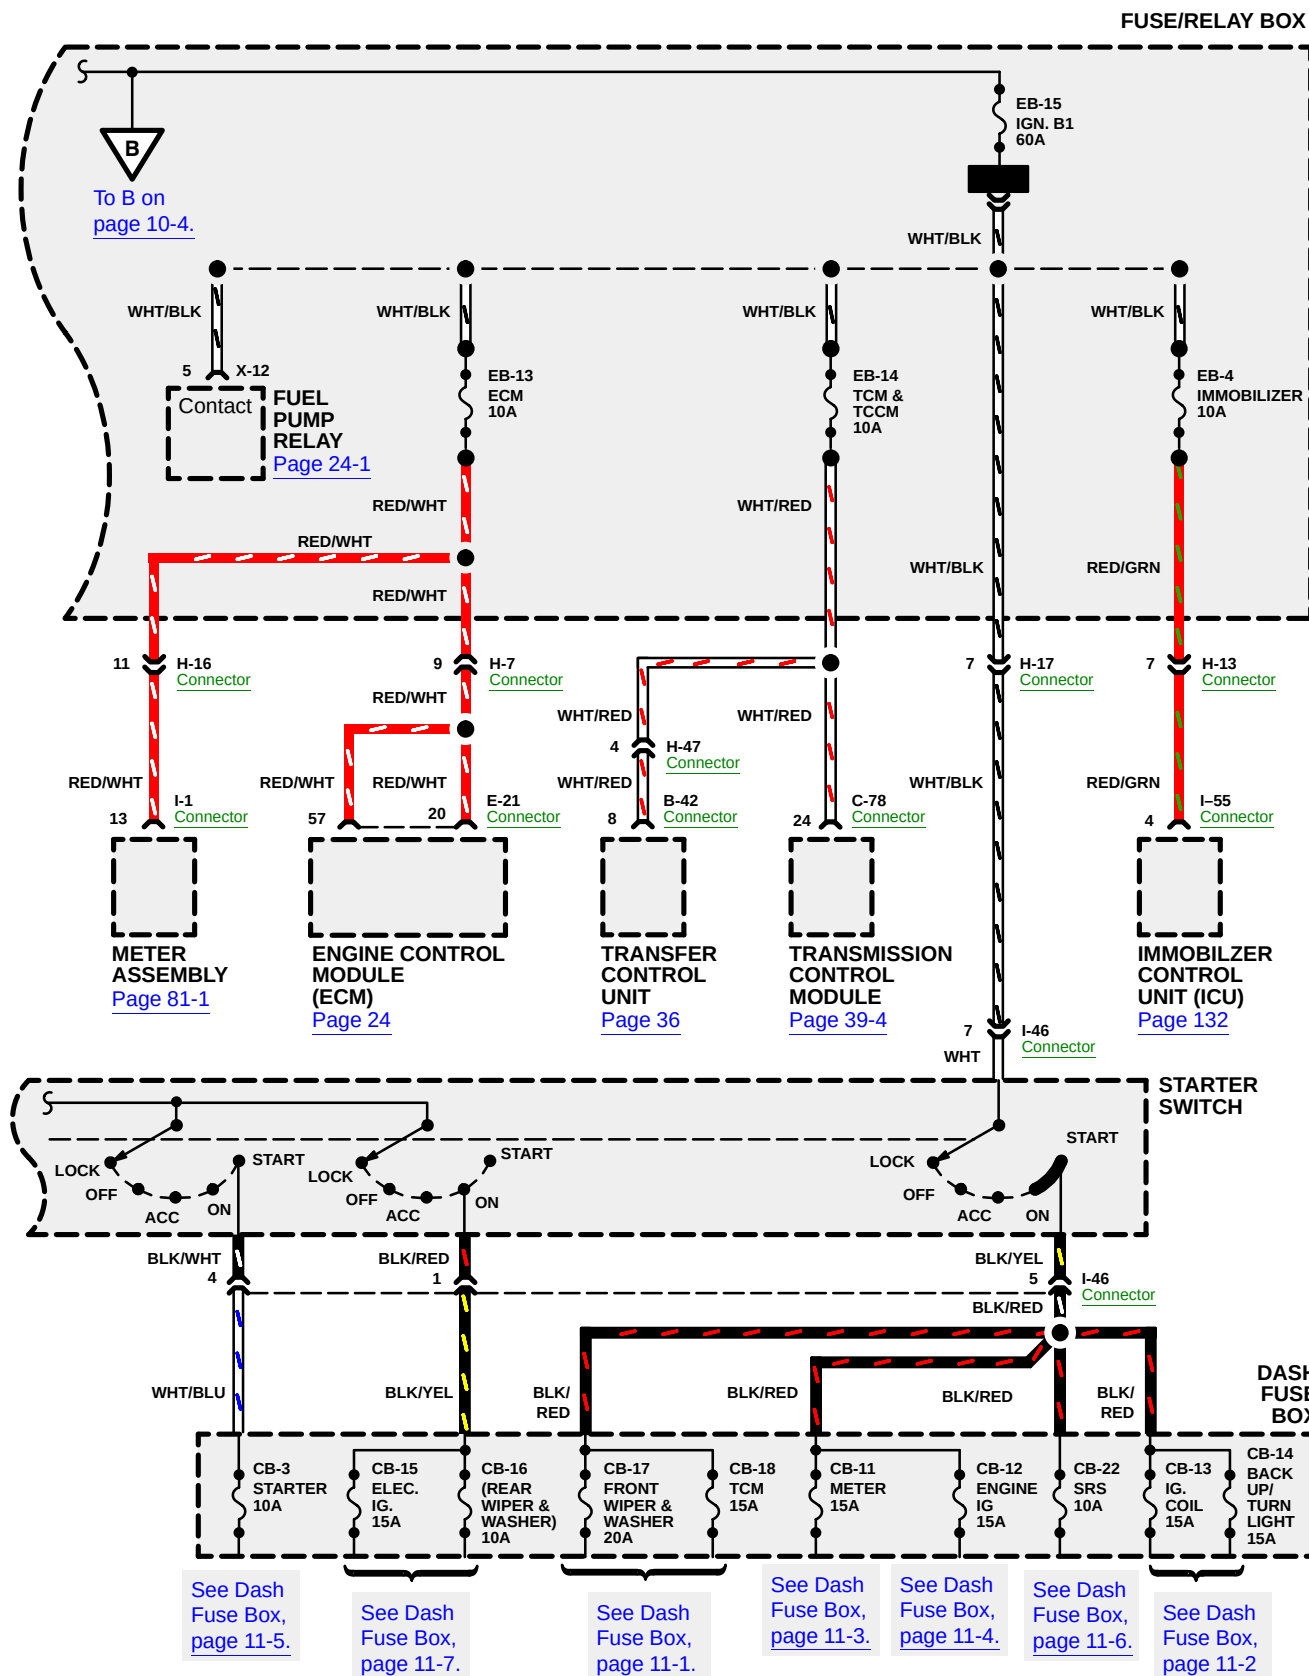

POWER DISTRIBUTION: 3.2L

Circuit Schematic

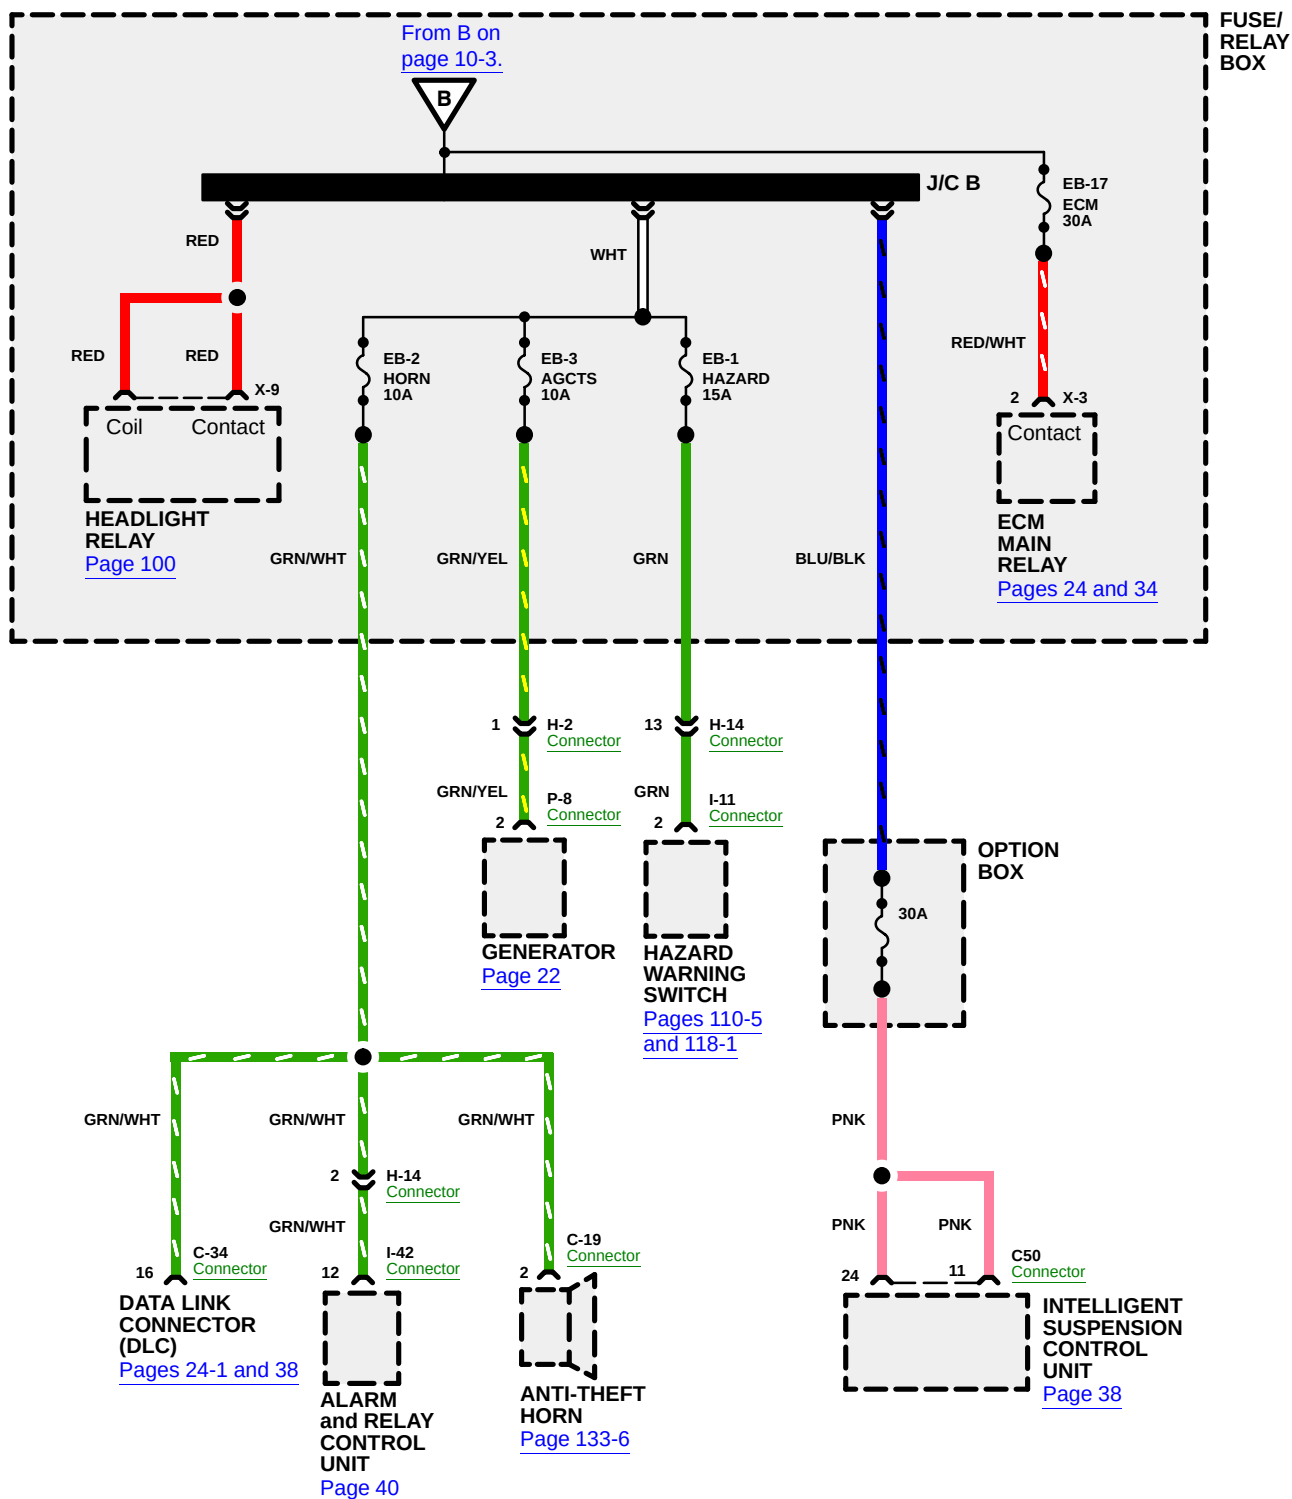

POWER DISTRIBUTION

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Alarm and Relay Control	
Unit	Behind right side of I/P, above kick panel 78
Anti-Theft Horn	Right rear corner of engine compartment 9
Condenser Fan Hi Relay (2.2L)	Right side of engine compartment, in option box 128
Condenser Fan Lo Relay (2.2L)	Right side of engine compartment, in fuse/relay box 16
Condenser Fan Relay	Right side of engine compartment, in fuse/relay box 19
Dash Fuse Box	Left side of I/P, behind panel 58
Data Link Connector (DLC) C-34 (16-BLK)	Below left side of I/P, near engine hood release 61
ECM or PCM Main Relay	Right side of engine compartment, in fuse/relay box 16
Electronic Brake Control Module (EBCM)	Right rear corner of engine compartment 17
Engine or Powertrain Control Module (ECM or PCM) (2.2L)	Below center of I/P 73
Engine Control Module (ECM) (3.2L)	Left side of engine compartment 44
Fog Light Relay	Right side of engine compartment, in fuse/relay box 16
Fuel Pump Relay	Right side of engine compartment, in fuse/relay box 15
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 14
Generator (2.2L)	Right front corner of engine 40
Generator (3.2L)	Lower right front of engine 26
Headlight Relay	Right side of engine compartment, in fuse/relay box 19
Heater-A/C Relay	Right side of engine compartment, in fuse/relay box 15
Immobilizer Control Unit	Below center of I/P 149
Intelligent Suspension Control Unit	Below center of I/P 75
Option Box	Right side of engine compartment 55
Rear Defogger Relay	Left side of I/P, in dash fuse box 59
Starter (2.2L)	Lower right rear of engine 35
Starter (3.2L)	Lower left side of engine 52
Transfer Relay	Right side of engine compartment, in fuse/relay box 19
Transfer Control Unit	Below center console 81
Transmission Control Module (TCM)	Under left side of dash 150
Connector	
H-2 (2-GRY)	Right side of engine compartment, on fuse/relay box 24
H-13 (16 or 20-WHT)	Below right side of I/P, behind kick panel 82
H-14 (19-BLK)	Below right side of I/P, behind kick panel 82
H-16 (22-BLK)	Behind left kick panel 62
H-17 (19-BLK)	Behind left kick panel 62
I-1 (30-GRN)	Behind left side of I/P, on top of meter assembly 86
I-46 (8-WHT)	Behind left side of I/P, on connector bracket 67
J/C A	Right side of engine compartment, in fuse/relay box 20
J/C B	Right side of engine compartment, in fuse/relay box 20
P-2	Right side of engine compartment, on fuse/relay box 20
P-11	Right side of engine compartment, on fuse/relay box 20
Ground	
C-36	Right side of engine compartment, behind battery 13
P-6	Right side of engine compartment, behind battery 13
P-10	Lower right front of engine 13