


MULTI-PLEXED INDICATOR CONTROL UNIT: 2.2L

Component Index

- Combination Switch
- Dash Fuse Box
- Data Link Connector (DLC) C-34 (16-BLK)
- Engine or Powertrain Control Module (ECM or PCM)
- Meter Assembly
- Multi-plexed Indicator Control Unit
- Taillight Relay


MULTI-PLEXED INDICATOR CONTROL UNIT: 2.2L

Circuit Schematic

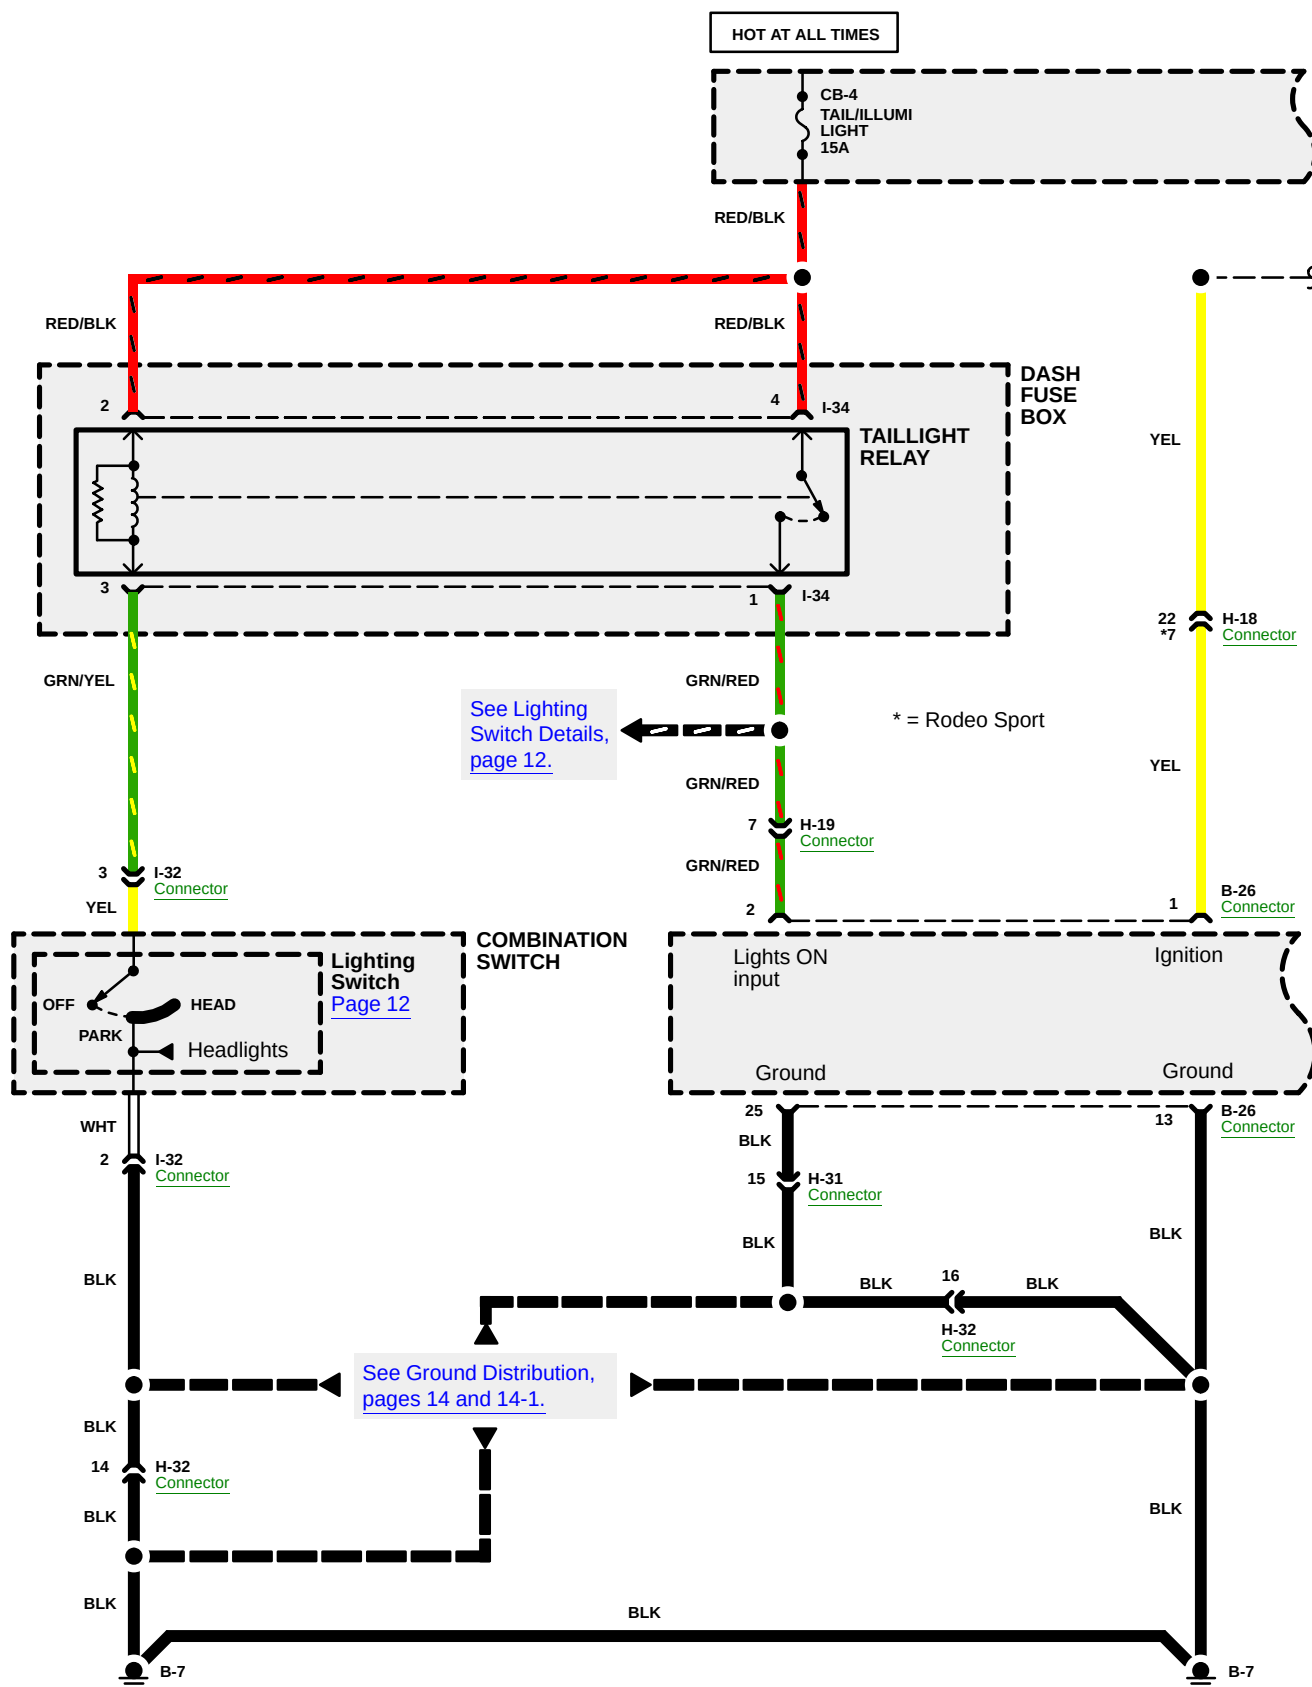


MULTI-PLEXED INDICATOR CONTROL UNIT: 2.2L

Circuit Schematic

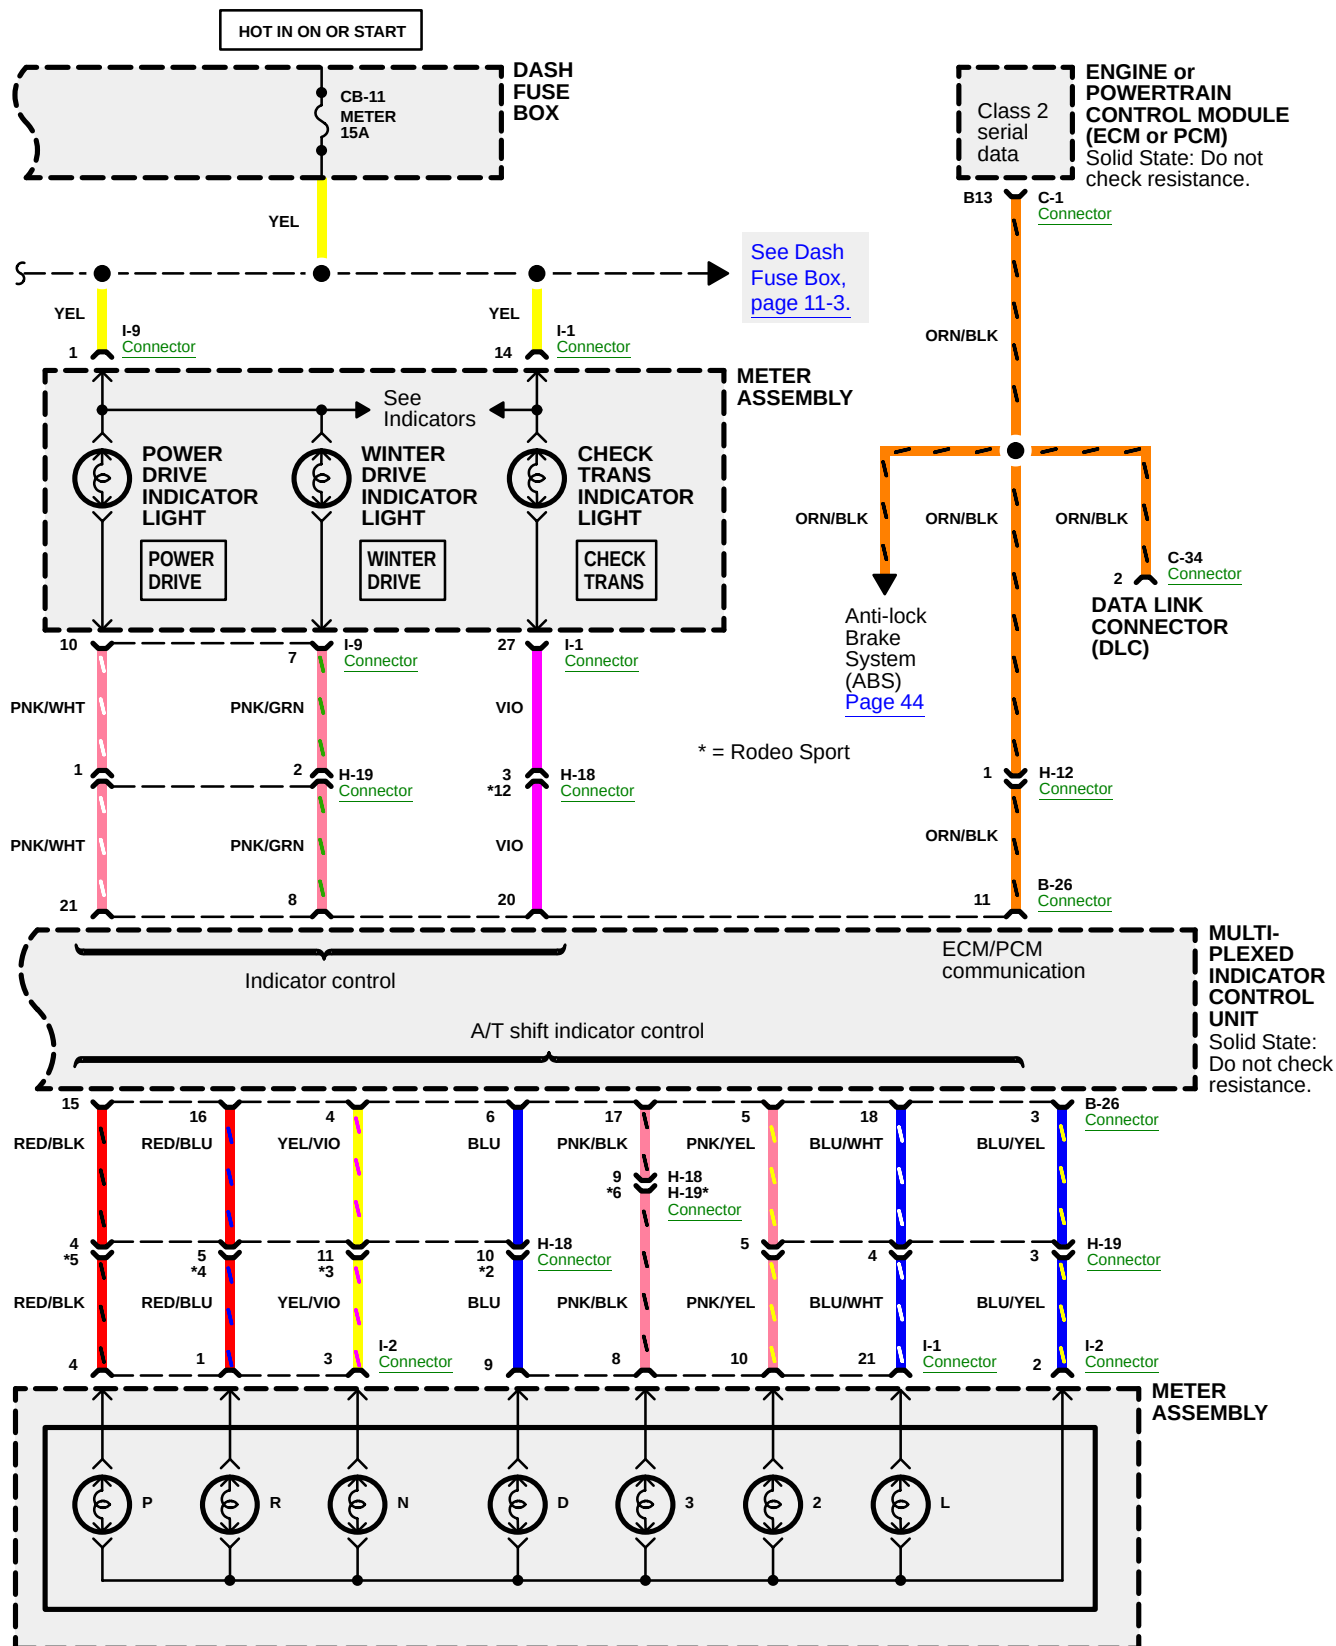

MULTI-PLEXED INDICATOR CONTROL UNIT: 2.2L

Circuit Schematic

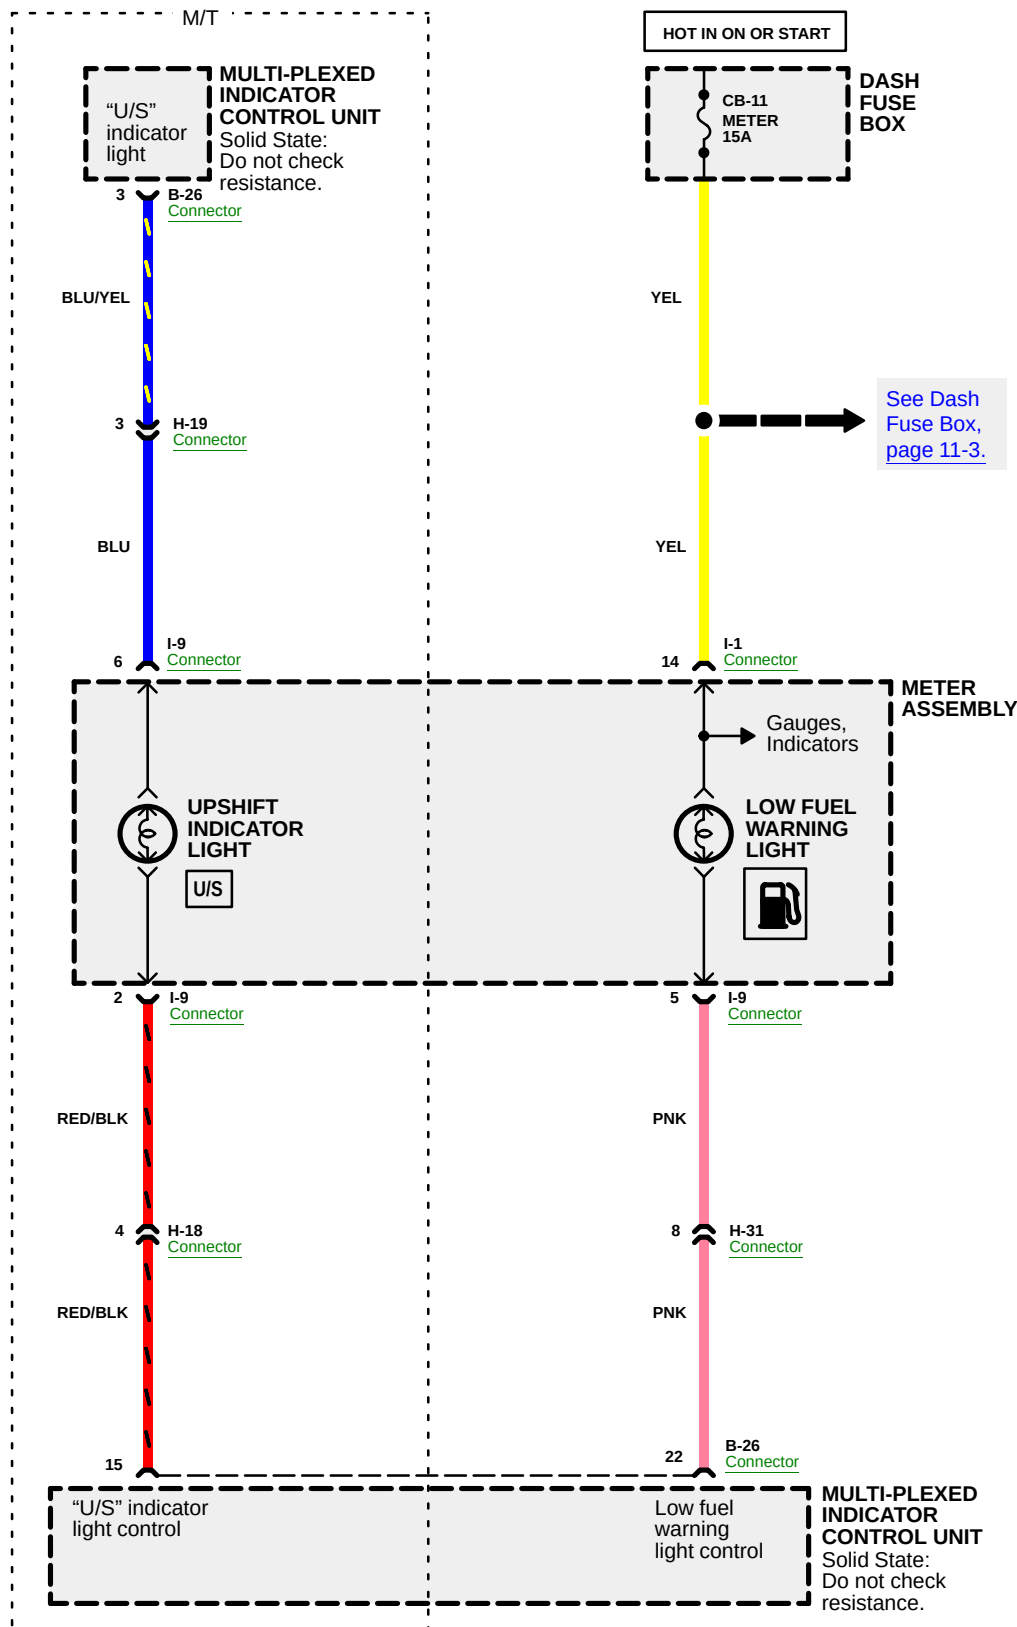

MULTI-PLEXED INDICATOR CONTROL UNIT: 2.2L

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Dash Fuse Box	Left side of I/P, behind trim 58
Data Link Connector (DLC)	
C-34 (16-BLK)	Below left side of I/P, near engine hood release 61
Engine or Powertrain Control	
Module (ECM or PCM)	Below center of dash, console removed 73
Multi-plexed Indicator	
Control Unit	Below rear of center console 79
Taillight Relay	Left side of I/P, in dash fuse box 60
Connector	
H-12 (20-BLU)	Below right side of I/P, behind kick panel 80
H-17 (19-BLK)	Behind left kick panel 62
H-18 (22-WHT) LWB	Behind right kick panel 80
H-18 (12-WHT) SWB	Behind right kick panel 80
H-19 (12 or 22-BLK)	Below right side of I/P, behind kick panel 80
H-31 (22-WHT)	Behind left kick panel 63
H-32 (16-WHT)	Behind left kick panel 62
I-1 (30-GRN)	Behind left side of I/P, on top of meter assembly 86
I-2 (16-GRN)	Behind left side of I/P, on top of meter assembly 86
I-9 (14-GRN)	Behind left side of I/P, on top of meter assembly 86
I-32 (20-WHT)	Behind left side of I/P, on connector bracket 66
Ground	
B-7	Below center console 81