


ALARM AND RELAY CONTROLS

Component Index

- [Alarm and Relay Control Unit](#)
- [Dash Fuse Box](#)
- [Driver's Seat Belt Switch](#)
- [Engine Control Module \(ECM\)](#)
- [Fuse/Relay Box](#)
- [Left Front Door Switch](#)
- [Meter Assembly](#)
- [Starter Switch](#)
- [Taillight Relay](#)


ALARM AND RELAY CONTROLS

Circuit Schematic

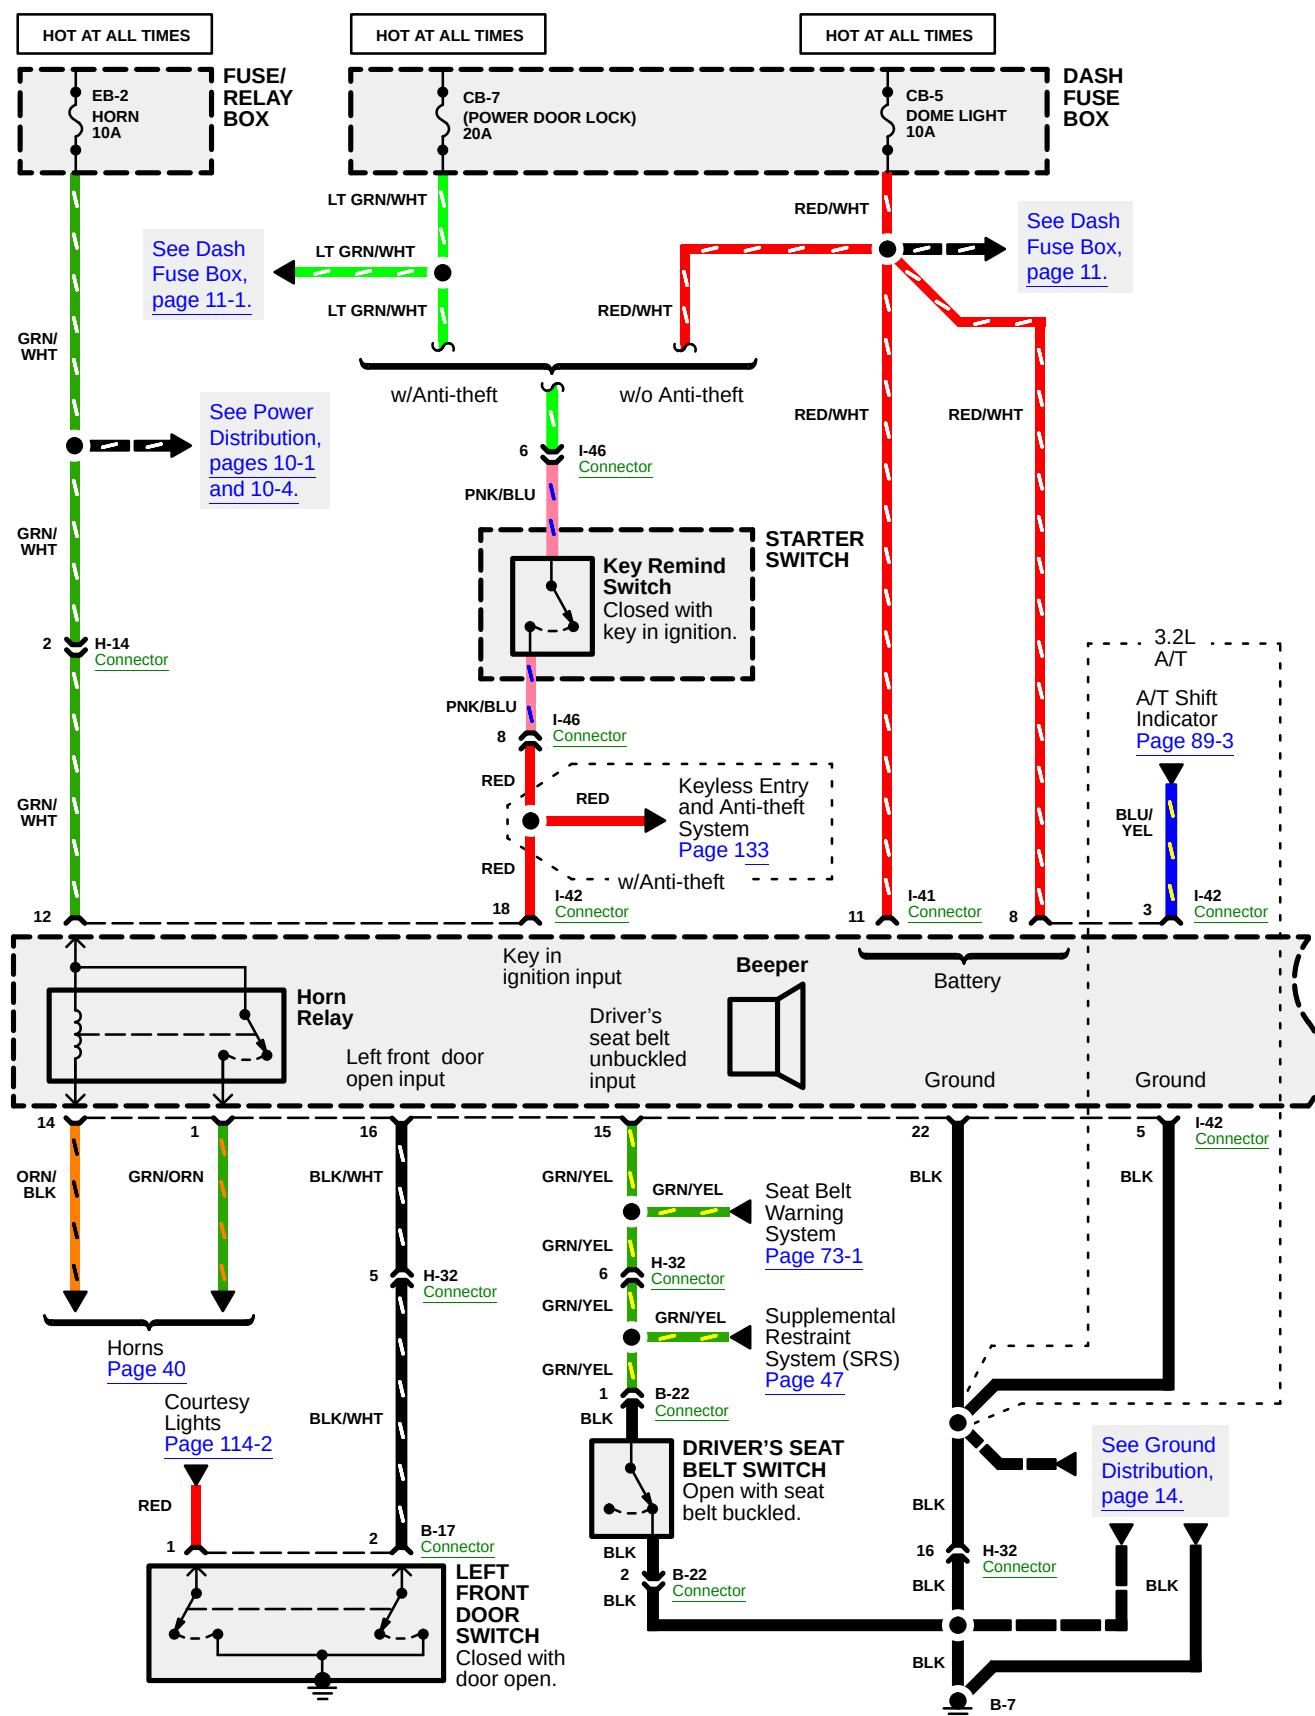


ALARM AND RELAY CONTROLS

Circuit Schematic

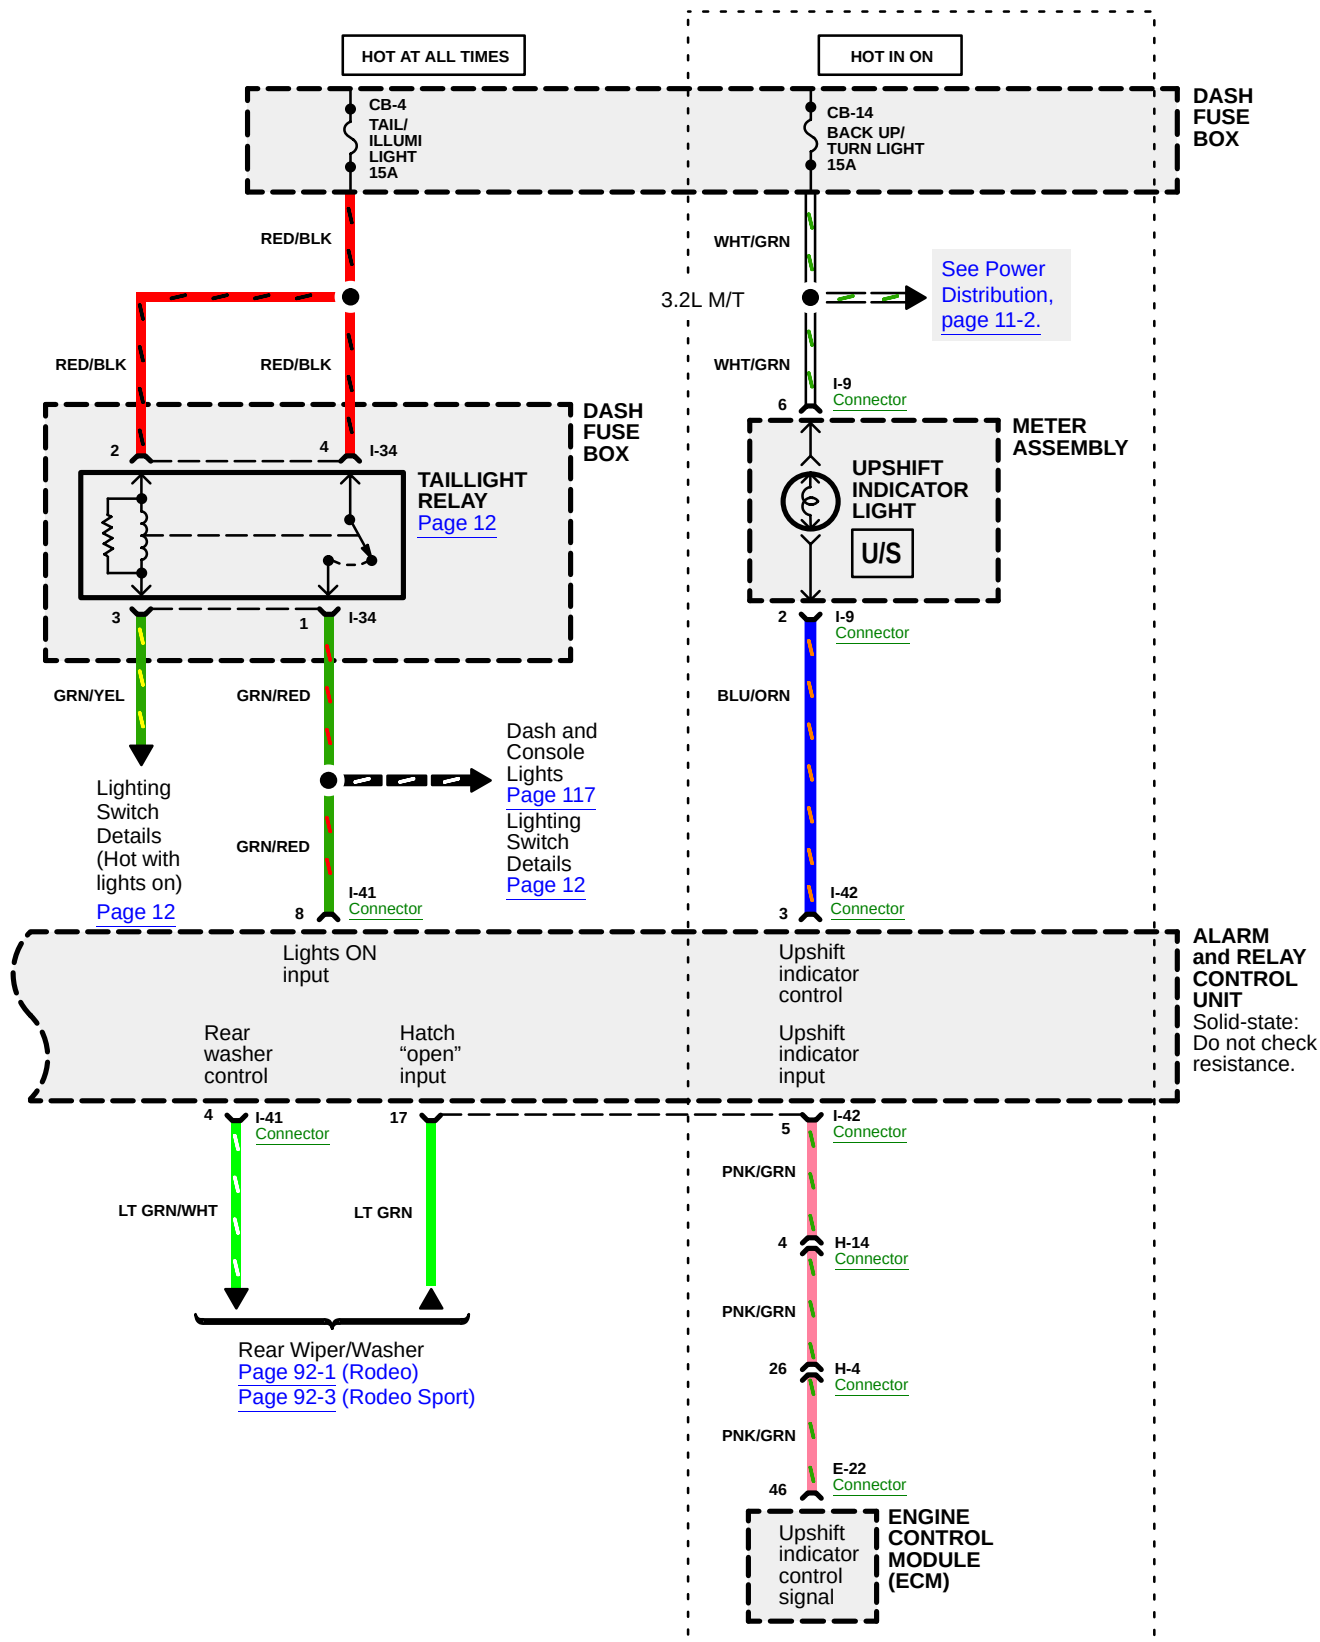

ALARM AND RELAY CONTROLS

Circuit Schematic

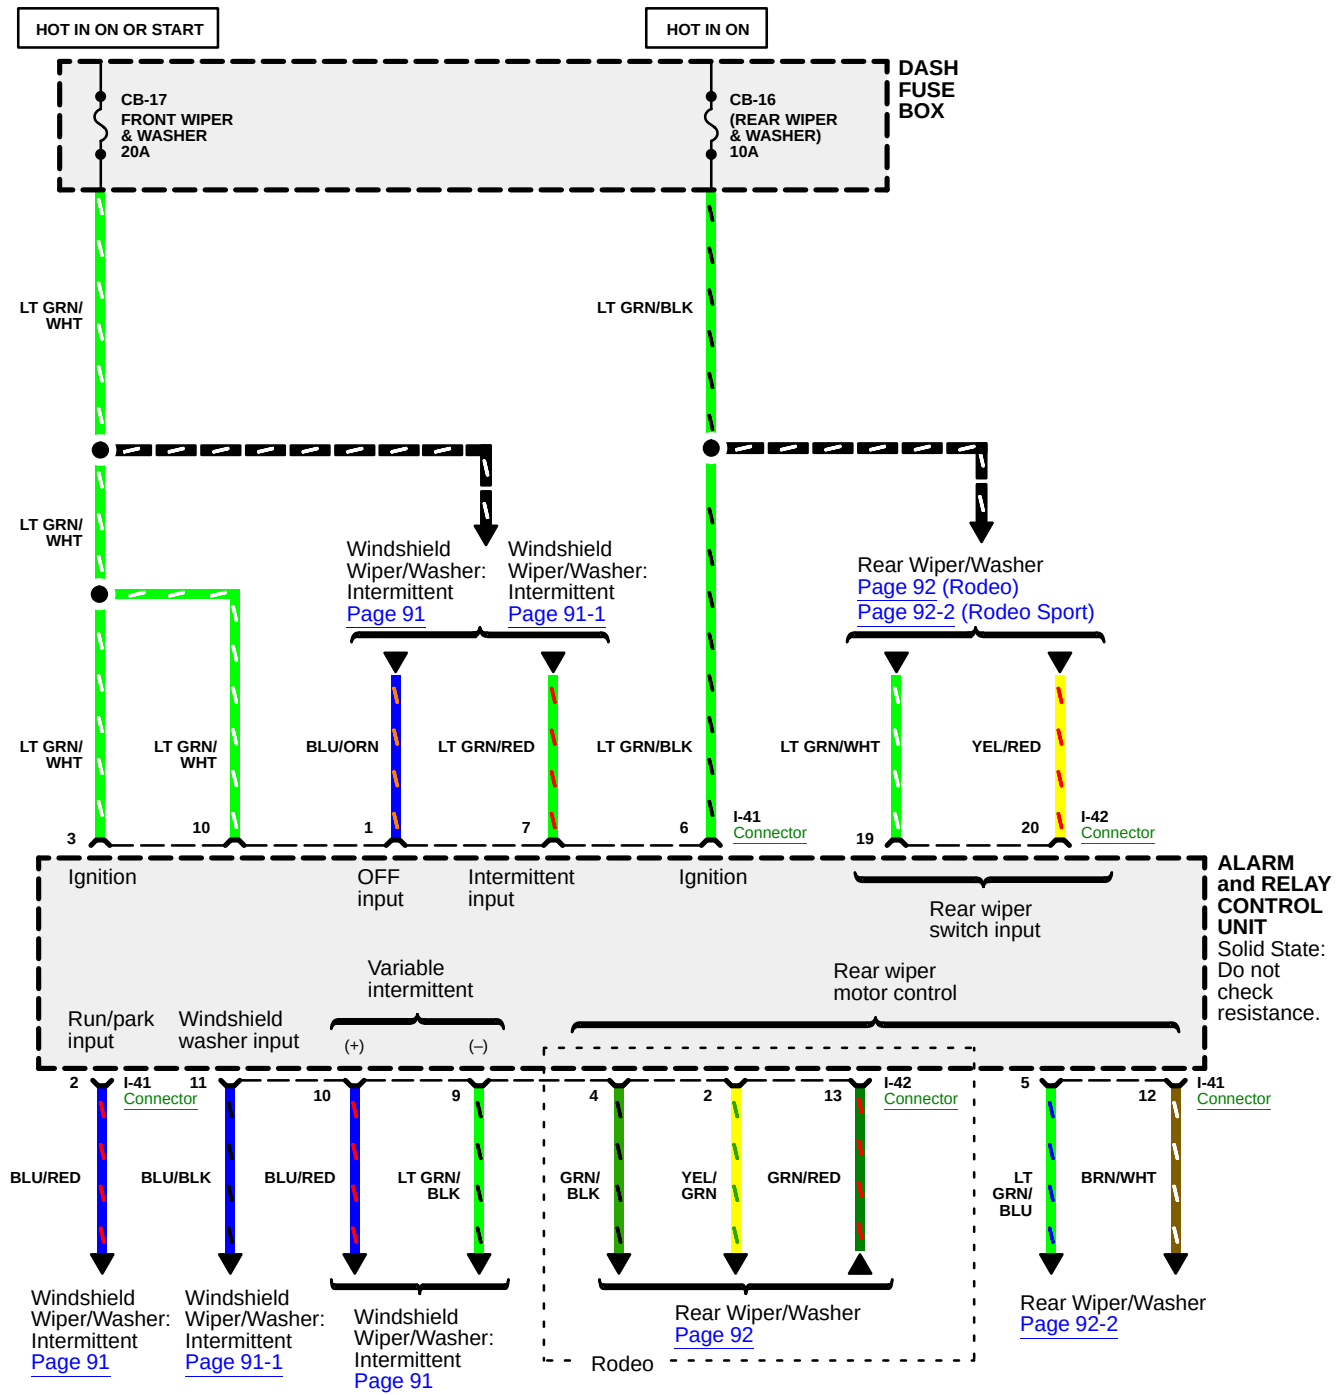

ALARM AND RELAY CONTROLS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Alarm and Relay Control	
Unit	Behind right side of I/P, above kick panel 78
Dash Fuse Box	Left side of I/P, behind panel 58
Driver's Seat Belt Switch	In driver's seat belt buckle
Fuse/Relay Box	Right side of engine compartment, on inner fender panel 14
Left Front Door Switch	At left front door striker 93
Taillight Relay	Left side of I/P, in dash fuse box 60
Connector	
B-22 (2-WHT)	Under left front seat
H-14 (19-BLK)	Below right side of I/P, behind kick panel 82
H-4 (52-GRY)	Left front of engine compartment 27
H-32 (16-WHT)	Behind left kick panel 62
I-9 (14-GRN)	Behind left side of I/P, on top of meter assembly 86
I-46 (8-WHT)	Behind left side of I/P, on connector bracket 67
Ground	
B-7	Below center console 81

Circuit Operation

The alarm and relay control unit controls the UPSHIFT INDICATOR LIGHT, Key-in ignition warning, seat belt warning, horns, windshield wiper/washer system, and the rear wiper/washer system.