


IMMOBILIZER SYSTEM

Component Index

- Dash Fuse Box
- Data Link Connector (DLC) C-34 (16-BLK)
- Engine Control Module (ECM)
- Fuse/Relay Box
- Immobilizer Antenna Coil
- Immobilizer Control Unit
- Meter Assembly
- Vehicle Speed Sensor

IMMOBILIZER SYSTEM

Circuit Schematic

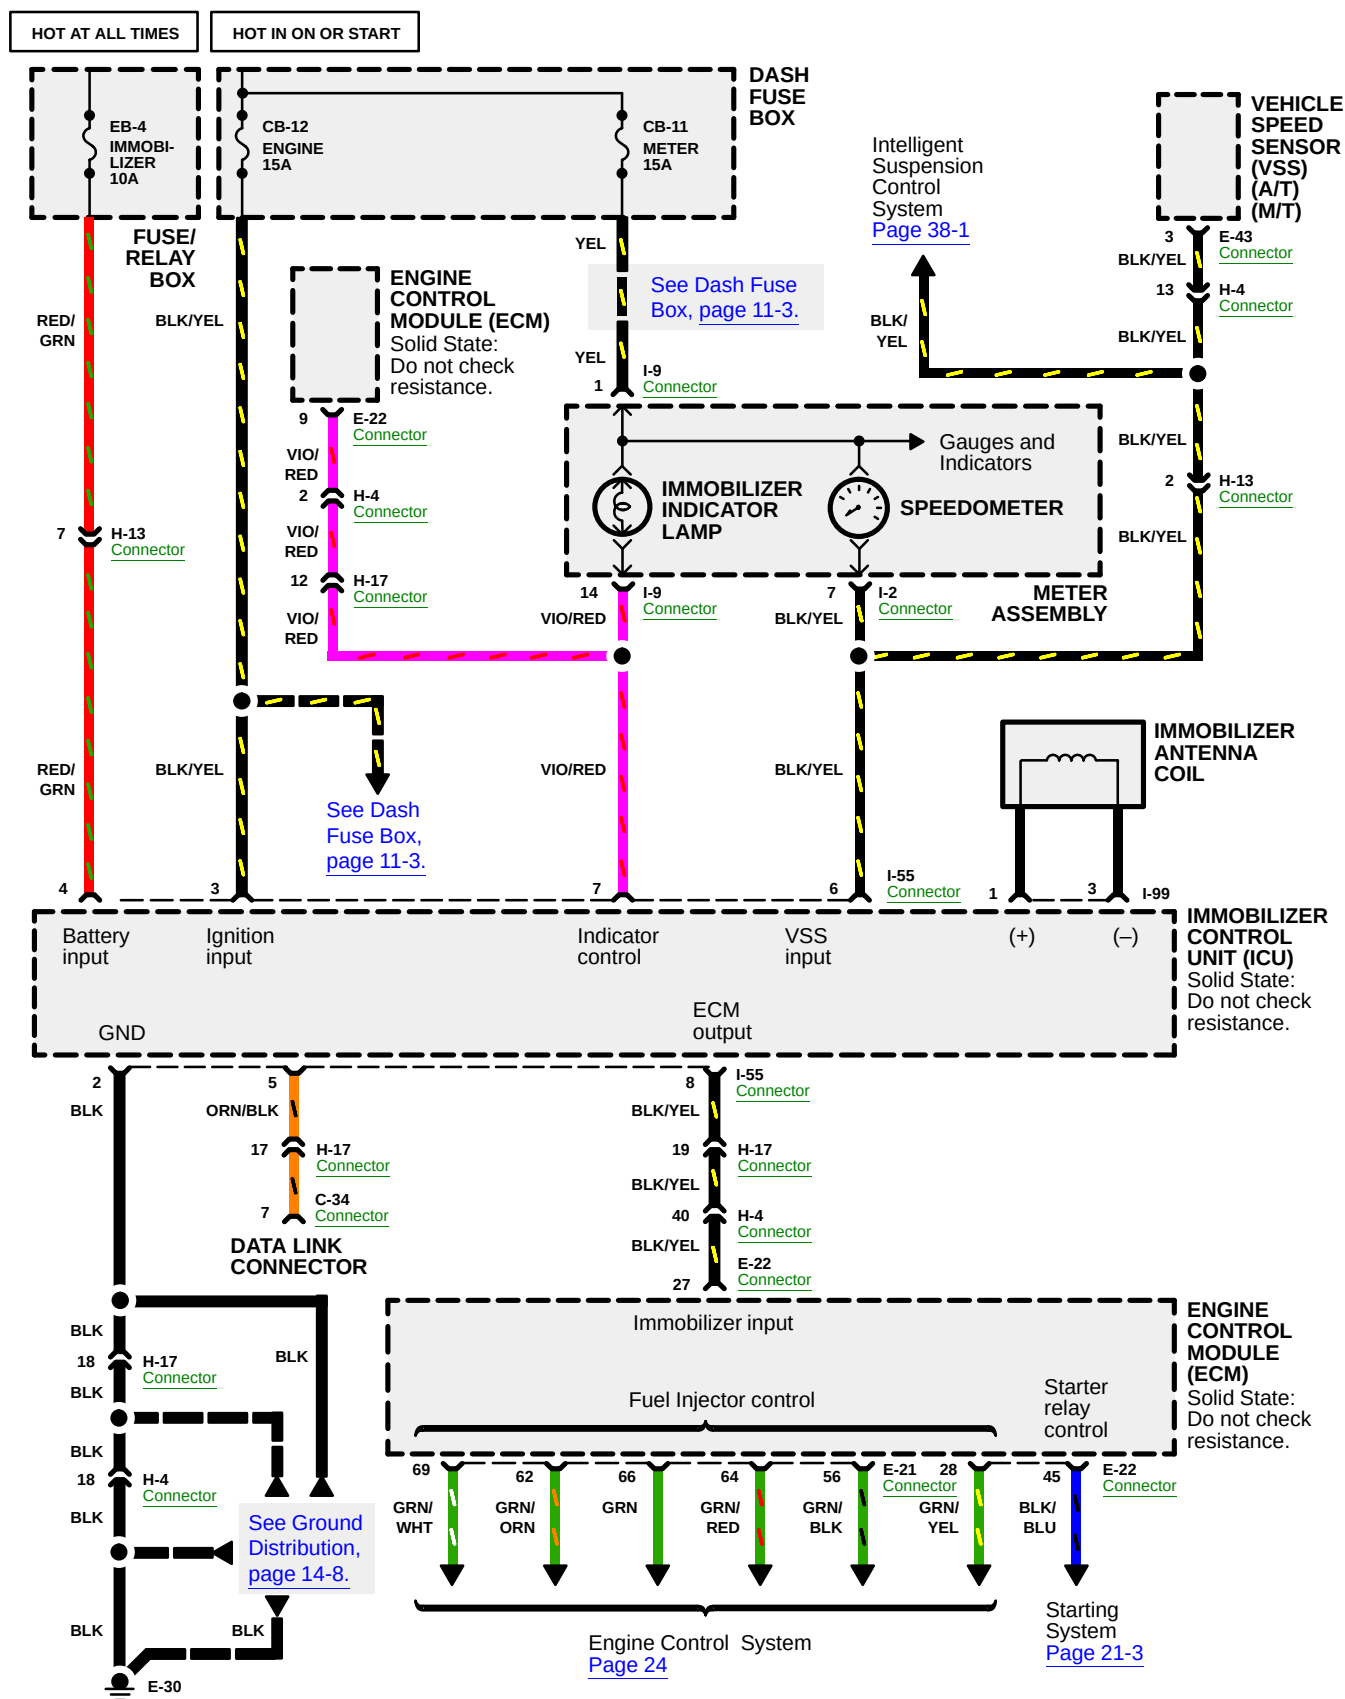

IMMOBILIZER SYSTEM

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Data Link Connector (DLC)	
C-34 (16-BLK)	Below left side of I/P, near hood release 61
Immobilizer Antenna Coil	In right side of steering column, around ignition lock cylinder 153
Immobilizer Control Unit	Under left side of dash 149
Vehicle Speed Sensor (VSS)	
(3.2L M/T)	Beneath center of vehicle, rear of transmission 120
(3.2L A/T)	Beneath center of vehicle, rear of transmission 154
Connector	
H-4 (52-GRY)	Left side of engine compartment 27
H-13 (16-WHT) (2.2L)	Behind right kick panel 82
H-13 (20-WHT) (3.2L)	Behind right kick panel 82
H-17 (6-BLK) (2.2L)	Behind left kick panel 62
H-17 (19-BLK) (3.2L)	Behind left kick panel 62
Ground	
E-30	Right side of engine 21

Circuit Operation

Immobilizer control unit (ICU) permits engine starting, when the security code which compares the security code registered into the transponder (key) and the security code registered into ICU, and is similarly registered into ICU and engine control unit (ECM) is compared and it is judged that it is normal. When the code registered into the key is unusual, and when not recognizing a security code, ICU does not permit starting of engine.