


CIGARETTE LIGHTER

Component Index

- [Dash Fuse Box](#)
- [Cigarette Lighter](#)

CIGARETTE LIGHTER

Circuit Schematic

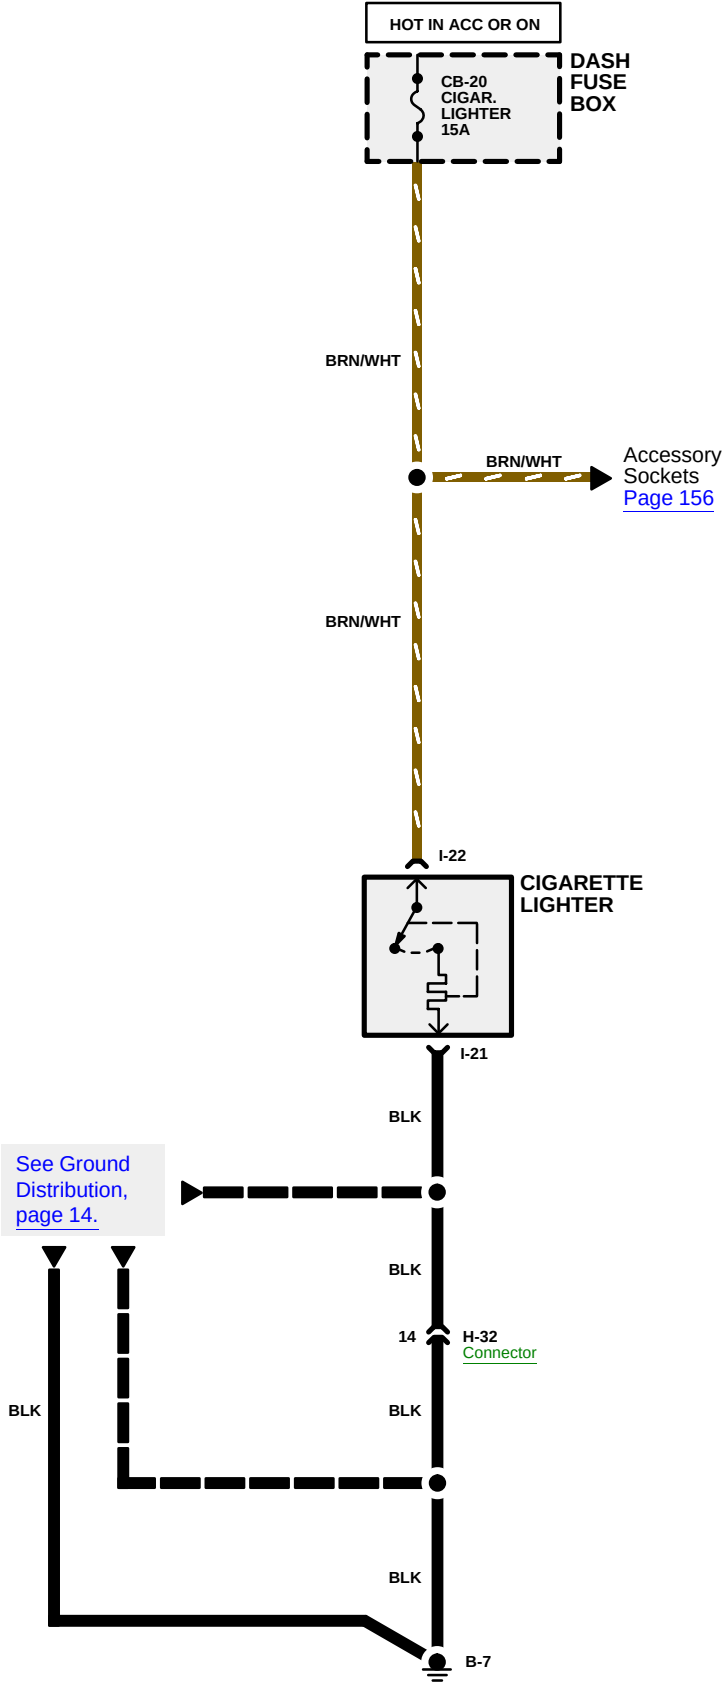

CIGARETTE LIGHTER

Component Location Index

(Refer to Section 201 for photographs.)

<u>Component</u>		<u>Photo No.</u>
Dash Fuse Box	Left side of I/P, behind panel	58
<u>Connector</u>		
H-32 (16-WHT)	Behind left kick panel	62
<u>Ground</u>		
B-7	Below center console	81

Circuit Operation

With the starter switch in ACC or ON, battery voltage is applied to the cigarette lighter through the CB-20 CIGAR. LIGHTER fuse. When the cigarette lighter is depressed, the cigarette lighter element completes the circuit to ground. When the element becomes sufficiently heated, it is spring-released and the circuit opens.