


ACCESSORY SOCKETS

Component Index

- [Accessory Socket Relay](#)
- [Dash Fuse Box](#)
- [Front Accessory Socket](#)

ACCESSORY SOCKETS

Circuit Schematic

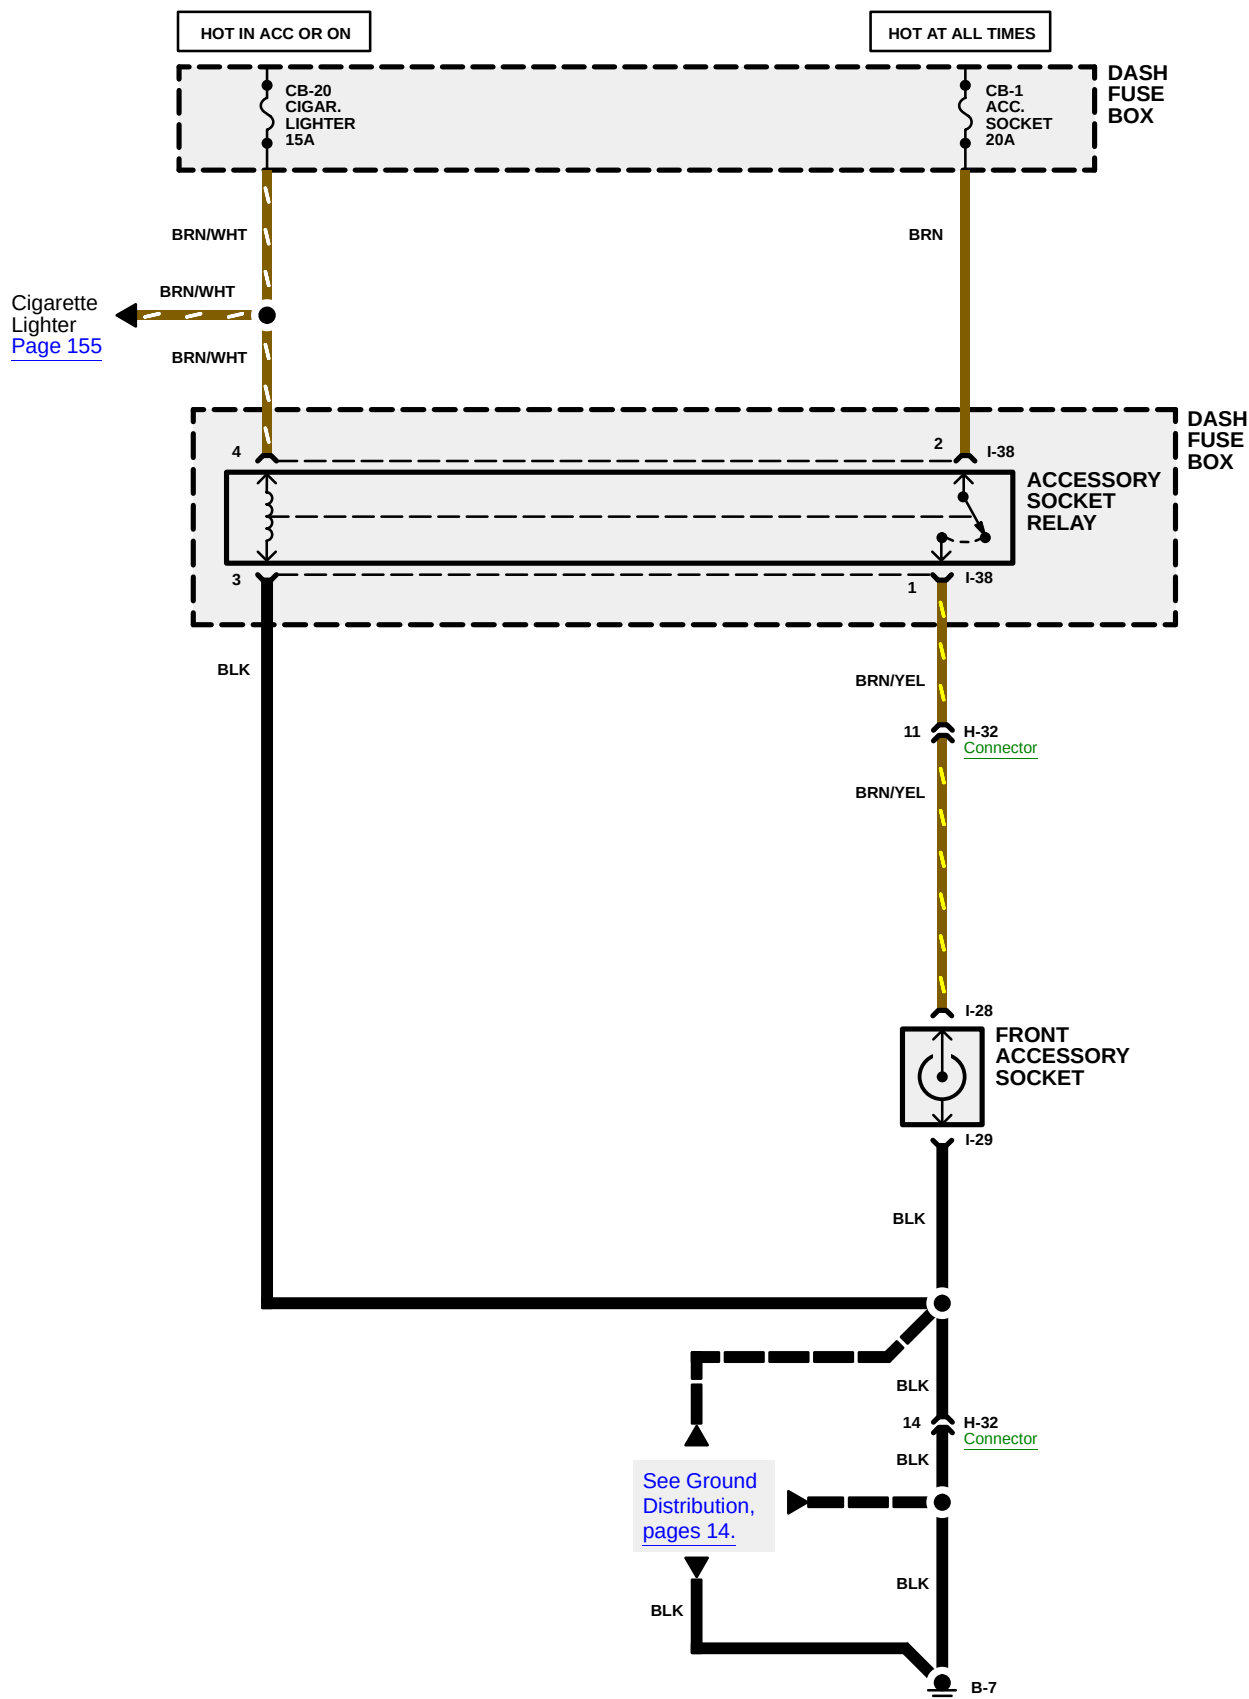

ACCESSORY SOCKETS

Component Location Index

(Refer to Section 201 for photographs.)

Component	Photo No.
Accessory Socket Relay Left side of I/P, in dash fuse box	59
Dash Fuse Box Left side of I/P, behind panel	58
Connector	
H-32 (16-WHT) Behind left kick panel	62
Ground	
B-7 Below center console	81

Circuit Operation

With the starter switch in ACC or ON, the accessory socket relay is energized from the CB-20 CIGAR. LIGHTER fuse, applying voltage from the CB-1 ACC. SOCKET fuse to the front and rear accessory sockets.