

SECTION 2

POSITION OF CONNECTORS AND GROUNDS


CONTENTS

- 1. CONNECTOR, GROUND AND SPLICE PACK INFORMATION 2-3**
- 2. WIRING HARNESS & CONNECTOR & GROUND LOCATION 2-4**


1. CONNECTOR, GROUND AND SPLICE PACK INFORMATION

1) WIRING HARNESS & GROUND & SPLICE PACK LOCATION

(LHD)

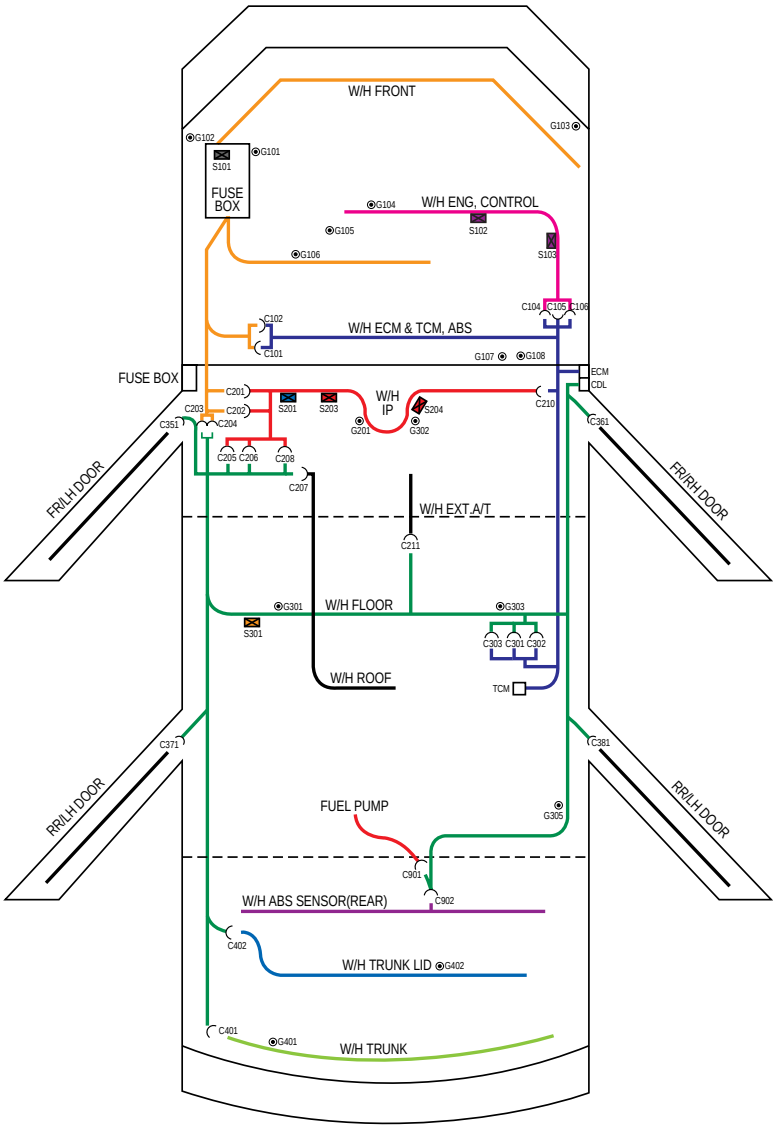

(RHD)

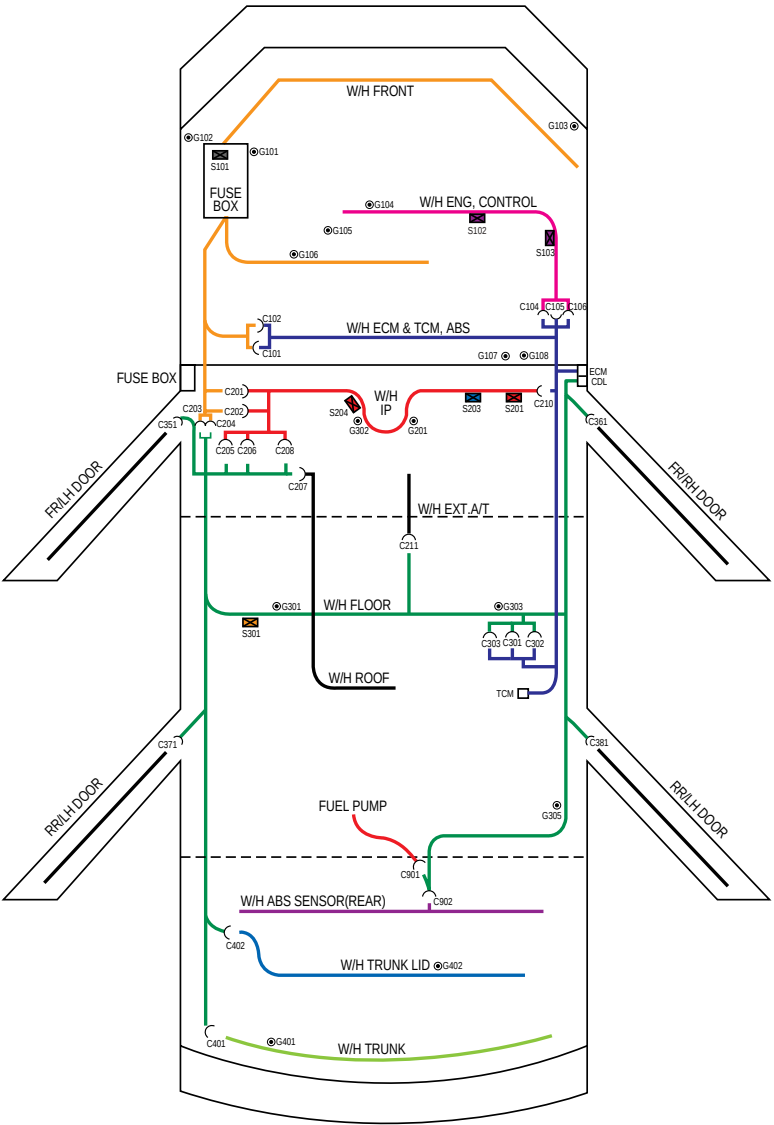

2) CONNECTOR INFORMATION

CONNECTOR NO (PIN NO, COLOR)	CONNECTING WIRING HARNESS	CONNECTOR POSITION
C101 (4PIN, BLACK)	W/H ECM & ABS–Front (Without A/C)	Below Engine Coolant Surge Tank (LHD)
C101 (6PIN, BLACK)	W/H ECM & ABS–Front (With A/C)	Below Engine Coolant Surge Tank (LHD)
C101 (8PIN, BLACK)	W/H ECM & ABS–Front	Below Engine Coolant Surge Tank (RHD)
C102 (1PIN, BLACK)	W/H ECM & ABS–Front	Below Engine Coolant Surge Tank
C104 (15PIN, BLACK)	W/H ECM & ABS–Engine Control	Behind Right Strut Mounting
C105 (16PIN, BLACK)	W/H ECM & ABS–Engine Control	Behind Right Strut Mounting
C106 (16PIN, BLACK)	W/H ECM & ABS–Engine Control	Behind Right Strut Mounting
C107 (10PIN, BLACK)	W/H Engine Control–Injector	Below Right Strut Mounting
C201 (7PIN, GREY)	W/H Front–IP	Connection Box Next to Passenger Room Fuse Box
C202 (18PIN, WHITE)	W/H Front–IP	Connection Box Next to Passenger Room Fuse Box
C203 (7PIN, BROWN)	W/H Front–Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN, WHITE)	W/H Front–Floor	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN, YELLOW)	W/H Floor–IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN, COLORLESS)	W/H Floor–IP	Connection Box Next to Passenger Room Fuse Box
C207 (4PIN, WHITE)	W/H Floor–Roof	Connection Box Next to Passenger Room Fuse Box
C208 (8PIN, WHITE)	W/H Floor–IP	Connection Box Next to Passenger Room Fuse Box
C209 (6PIN, WHITE)	W/H Air Bag–IP	Behind Left Front Console
C210 (20PIN, COLORLESS)	W/H ECM & ABS–IP	Below Glove Box (Right Side Panel)
C211 (4PIN, WHITE)	W/H EXT. AT–Floor	Inside Center Console
C219 (1PIN, WHITE)	W/H Front–Roof(Sun Roof Only)	Near Connection Box
C301 (10PIN, WHITE)	W/H ECM & ABS–Floor	Below Co-driver Seat
C302 (6PIN, WHITE)	W/H ECM & ABS–Floor	Below Co-driver Seat
C303 (8PIN, WHITE)	W/H ECM & ABS–Floor	Below co-driver Seat
C351 (21PIN, WHITE)	W/H Floor–Front Left Door	Below Front Left Door Upper Hinge
C361 (21PIN, WHITE)	W/H Floor–Front Right Door	Below Front Right Door Upper Hinge
C371 (6PIN, COLORLESS)	W/H Floor–Rear Left Door	Inside Left Center Pillar
C381 (6PIN, COLORLESS)	W/H Floor–Rear Right Door	Inside Right Center Pillar
C401 (10PIN, WHITE)	W/H Floor–Trunk	Above Left Seat Belt Retractor in Trunk
C401 (8PIN, WHITE)	W/H Floor–Trunk (Only 3, 5 Door)	Above Left Seat Belt Retractor in Trunk
C402 (8PIN, WHITE)	W/H Floor–Trunk Lid	Above Left Tail Lamp in Trunk
C403 (8PIN, WHITE)	W/H Floor–Tail Gate Extension	Inside Trunk(Only 3, 5Door)
C404 (5PIN, WHITE)	W/H Floor–Tail Gate Extension	Inside Trunk(Only 3, 5Door)
C451 (8PIN, WHITE)	W/H Tail Gate Extension–Tail Gate	Inside Tail Gate(Only 3, 5Door)
C452 (3PIN, WHITE)	W/H Tail Gate Extension–Tail Gate	Inside Tail Gate(Only 3, 5Door)
C901 (6PIN, BLACK)	W/H Floor–Fuel Trunk	Behind Fuel Tank
C902 (4PIN, BLACK)	W/H Floor–Rear ABS Sensor	Right Side Rear Axle

3) SPLICE PACK INFORMATION

SPLICE PACK NUMBER (PIN NO, COLOR)	WIRING HARNESS	SPLICE PACK POSITION
S101 (9PIN, BLACK)	W/H Front	Engine Room Relay and Fuse Box
S102 (14PIN, VIOLET)	W/H Engine Control	Under the intake Manifold
S103 (14PIN, VIOLET)	W/H Engine Control	Behind th intake Manifold
S201 (20PIN, BLUE)	W/H IP	Next to Passenger Room Relay Box
S203 (20PIN, RED)	W/H IP	Next to Passenger Room Relay Box
S204 (20PIN, RED)	W/H IP	Above Glove Box
S301 (20PIN, ORANGE)	W/H Floor	Below Driver Seat


4) GROUND POSITION INFORMATION

GROUND NUMBER	WIRING HARNESS	GROUND POSITION
G101	W/H Battery Cable	Behind Battery Support Body Ground
G102	W/H Front	Fender Below Engine Room Fuse Box
G103	W/H Front	Fender Next to Air Cleaner Housing
G104	W/H Engine Control	Intake Manifold #4 cylinder
G105	W/H Engine Control	Above Flywheel Housing
G106	W/H Battery Cable	Upper Bolt of Starter Motor Engine Ground
G107	W/H ECM & ABS	Next to EBCM
G108	W/H ECM & ABS	Next to EBCM
G201	W/H IP	Below Right Front Console Box
G301	W/H Floor	Below Driver Seat
G302	W/H Air Bag	Below Right Front Console Box
G303	W/H Floor	Below Co-driver Seat
G305	Rear Window Defroster Ground	Inside Rear Window Right Pillar Trim
G306	W/H Sun Roof	In the Roof Panel
G401	W/H Trunk	Center of Rear End Panel in Trunk
G402	W/H Trunk Lid	Behine License Plate

2. WIRING HARNESS & CONNECTOR & GROUND LOCATION

1) W/H FRONT, FRONT BUMPER


■ W/H FRONT

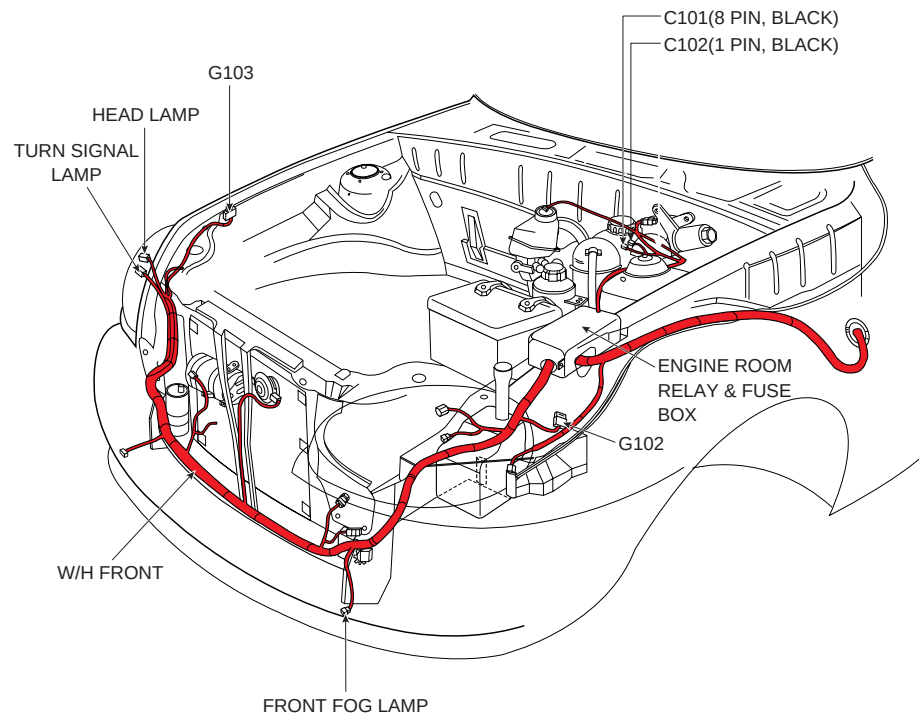

2) W/H ENGINE CONTROL, BATTERY CABLE

- SOHC ENGINE

■ W/H BATTERY CABLE
■ W/H ENGINE CONTROL

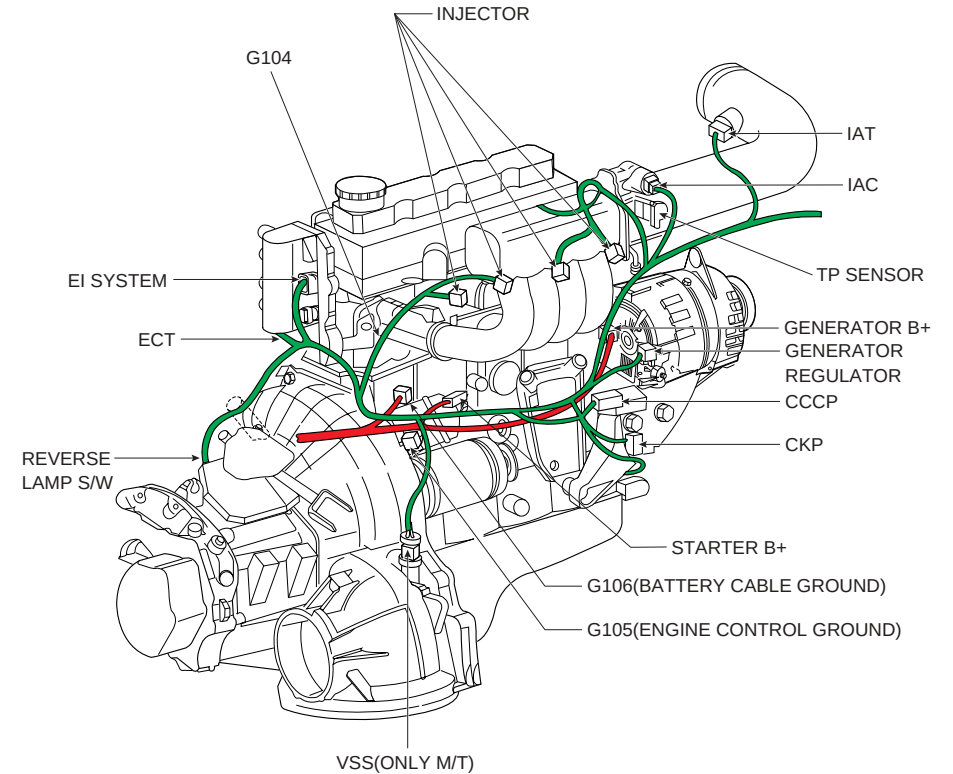



• DOHC ENGINE

3) W/H ECM & ABS

• ENGINE ROOM INSIDE


■ W/H BATTERY
■ W/H ENGINE CONTROL

■ W/H ECM & ABS

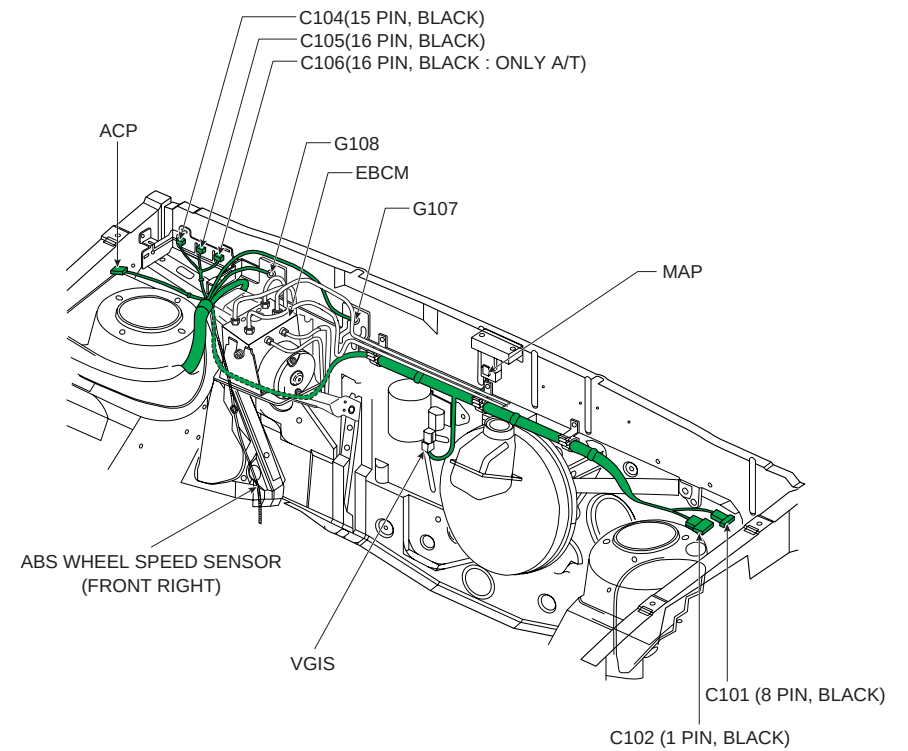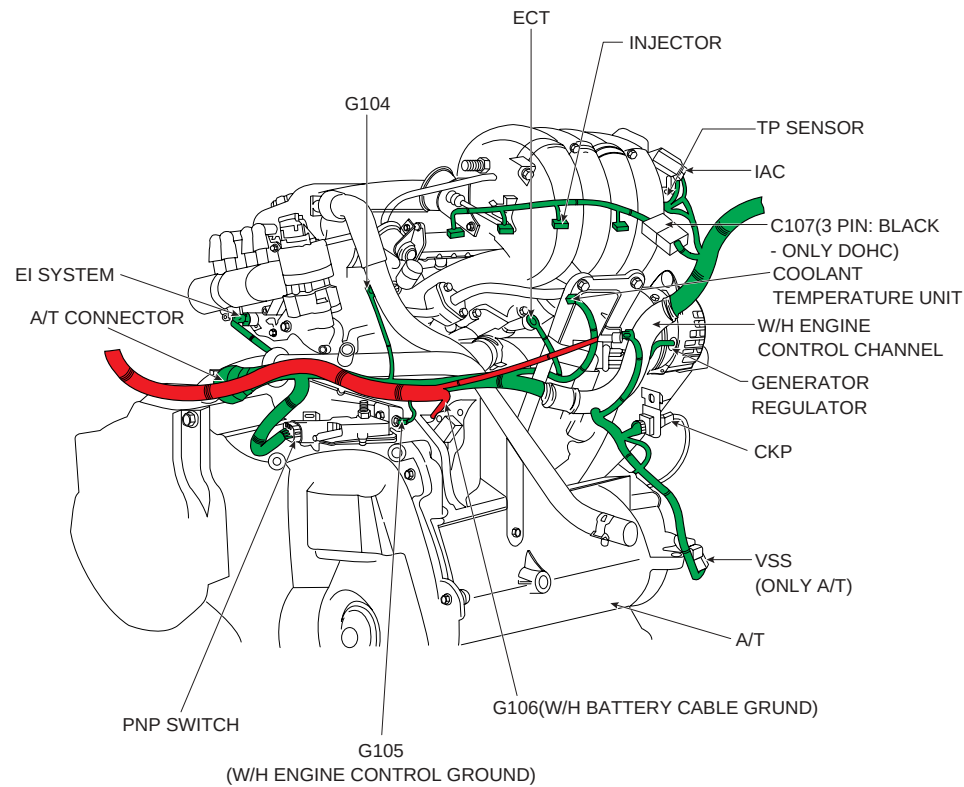


2-6 POSITION OF CONNECTORS AND GROUNDS

• PASSENGER ROOM RIGHT SIDE PANEL

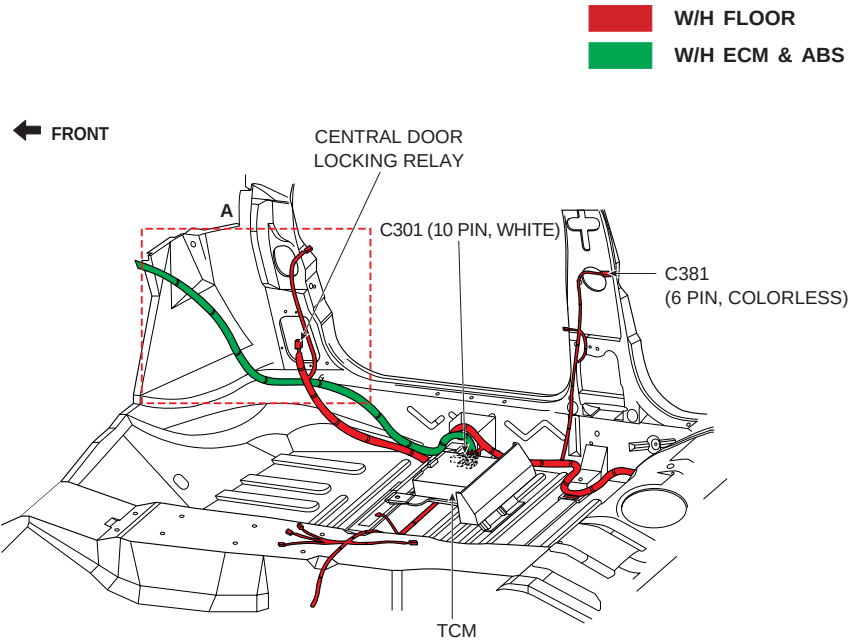


* "A" LOCATION

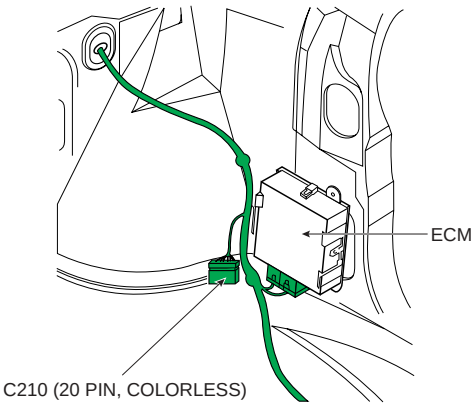

4) W/H INSTRUMENT PANEL


• INSTRUMENT PANEL INSIDE

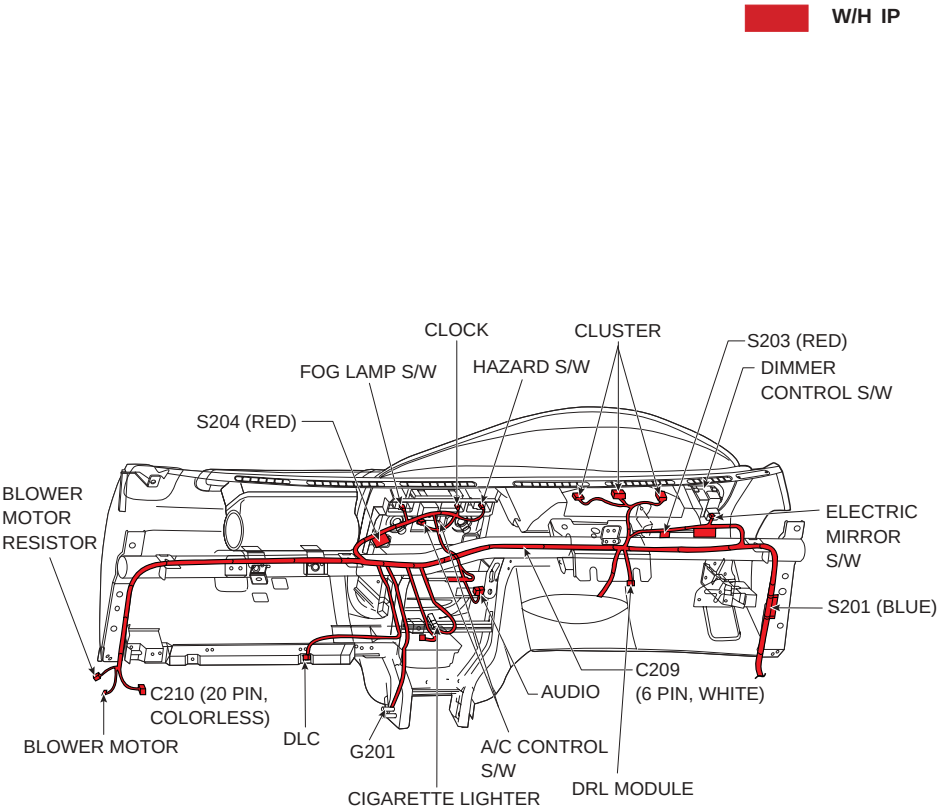

5) W/H AIR BAG INSTRUMENT PANEL

- INSTRUMENT PANEL INSIDE


W/H INSTRUMENT PANEL
 W/H AIR BAG

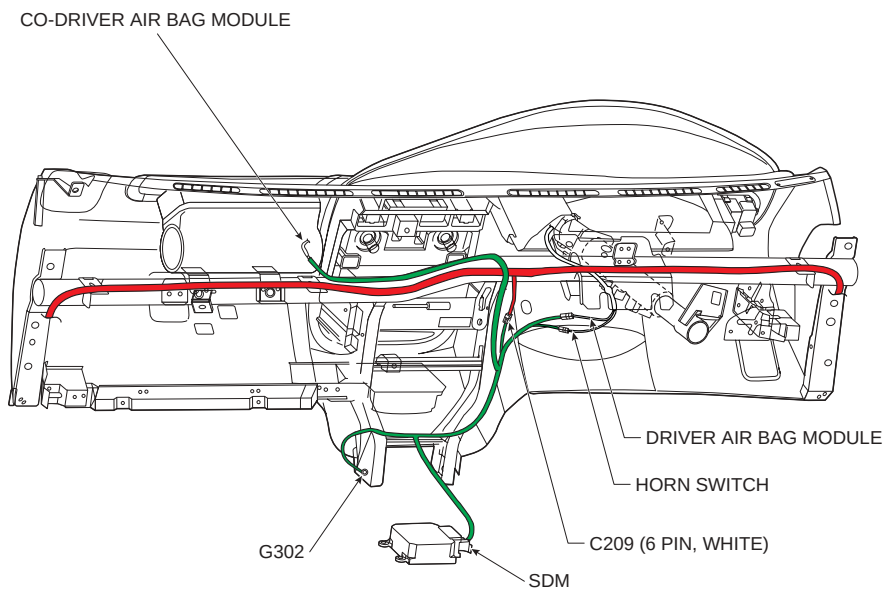

6) W/H FLOOR



- FLOOR PANEL

W/H FLOOR
 W/H ECM & ABS

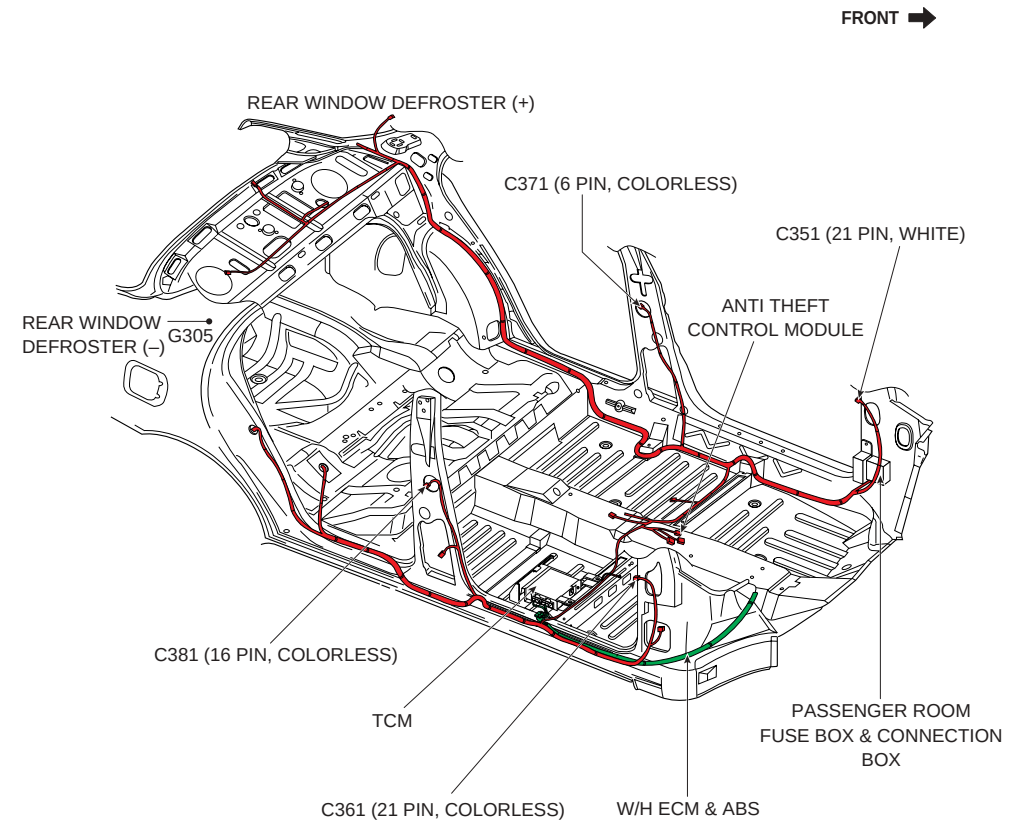



2-8 POSITION OF CONNECTORS AND GROUNDS

• FLOOR PANEL LEFT

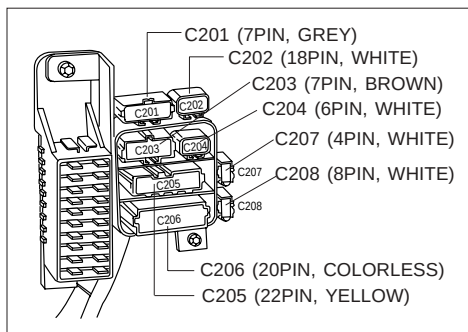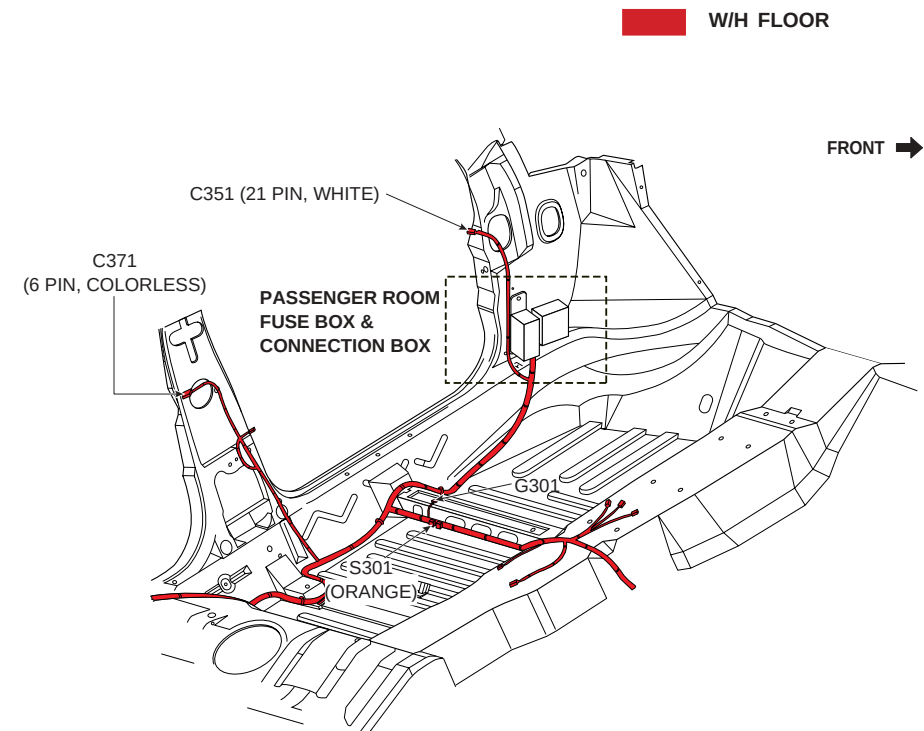


PASSENGER ROOM FUSE & CONNECTION BOX

• FLOOR PANEL RIGHT

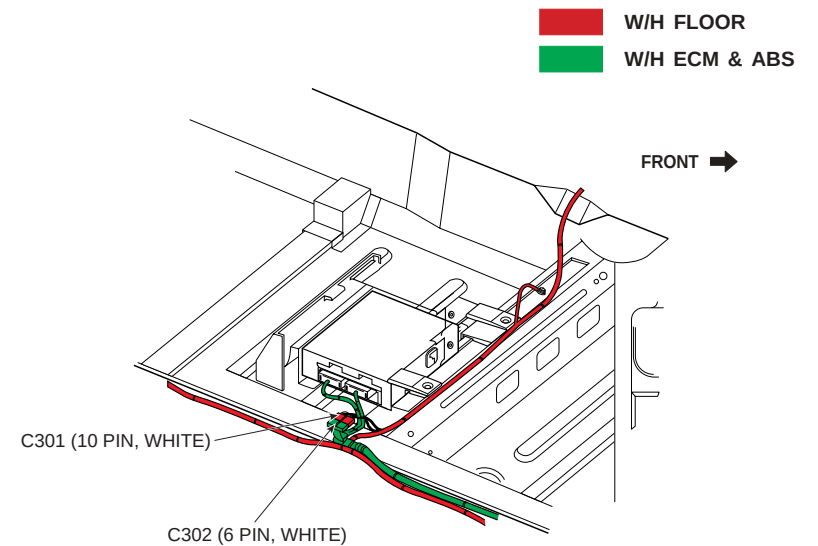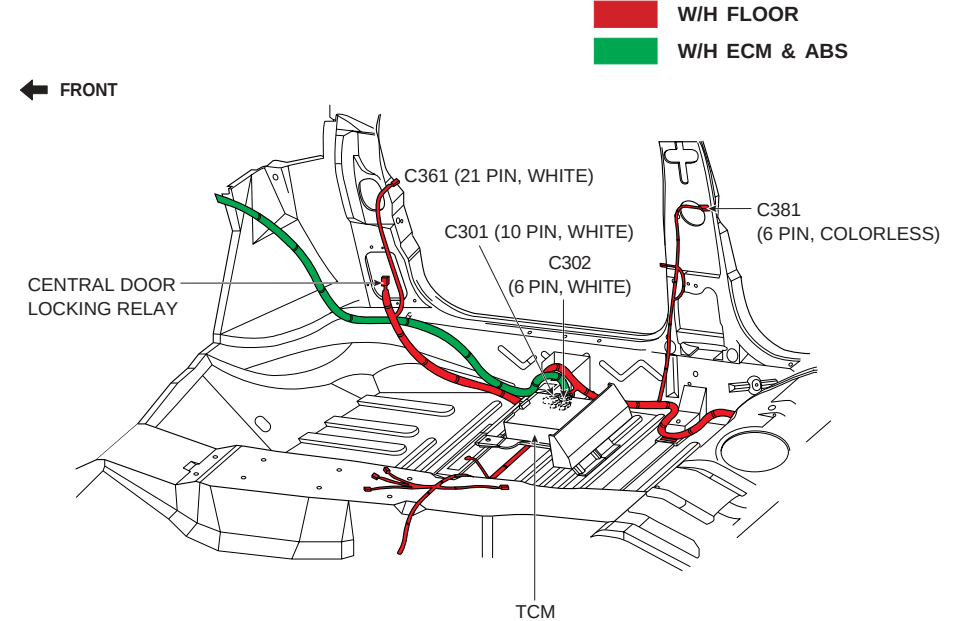


7) W/H FRONT DOOR, LEFT/RIGHT

• FRONT DOOR LEFT

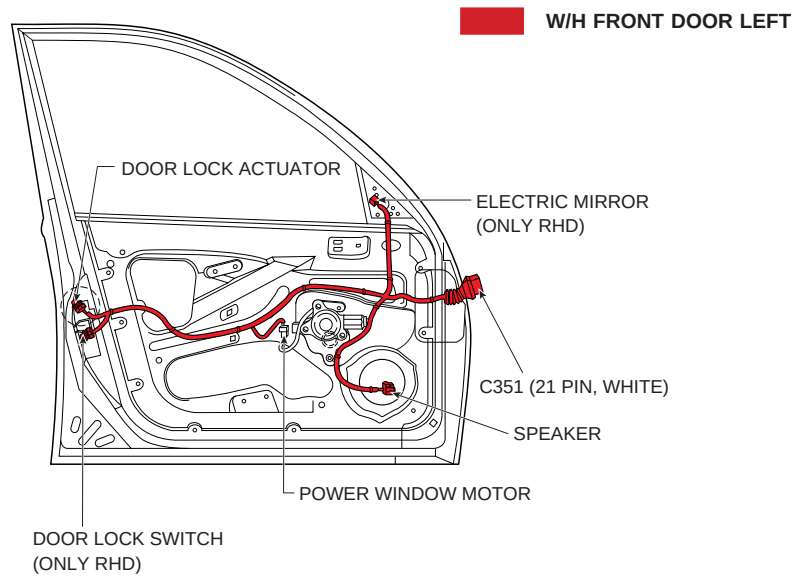


• FRONT DOOR RIGHT

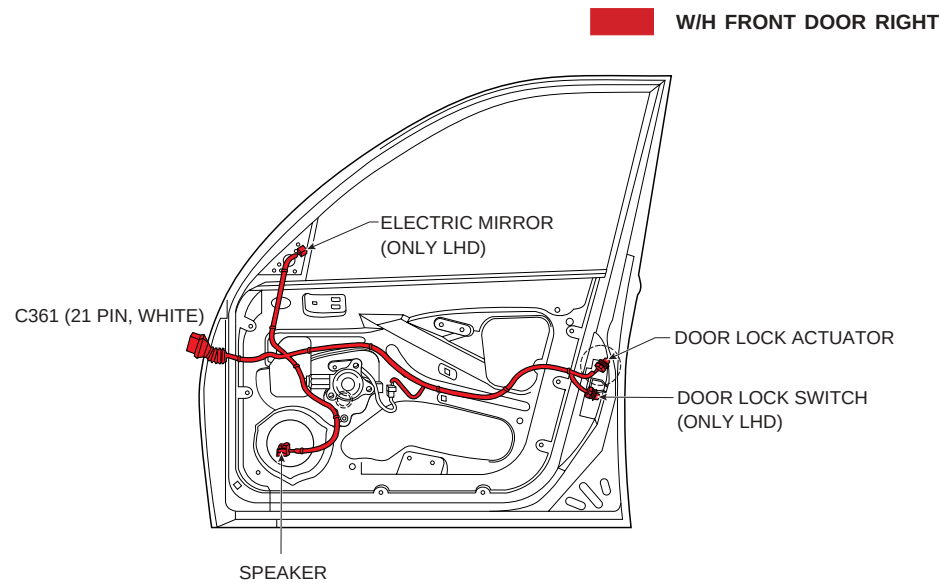

8) W/H REAR DOOR, LEFT/RIGHT


• REAR DOOR LEFT / RIGHT

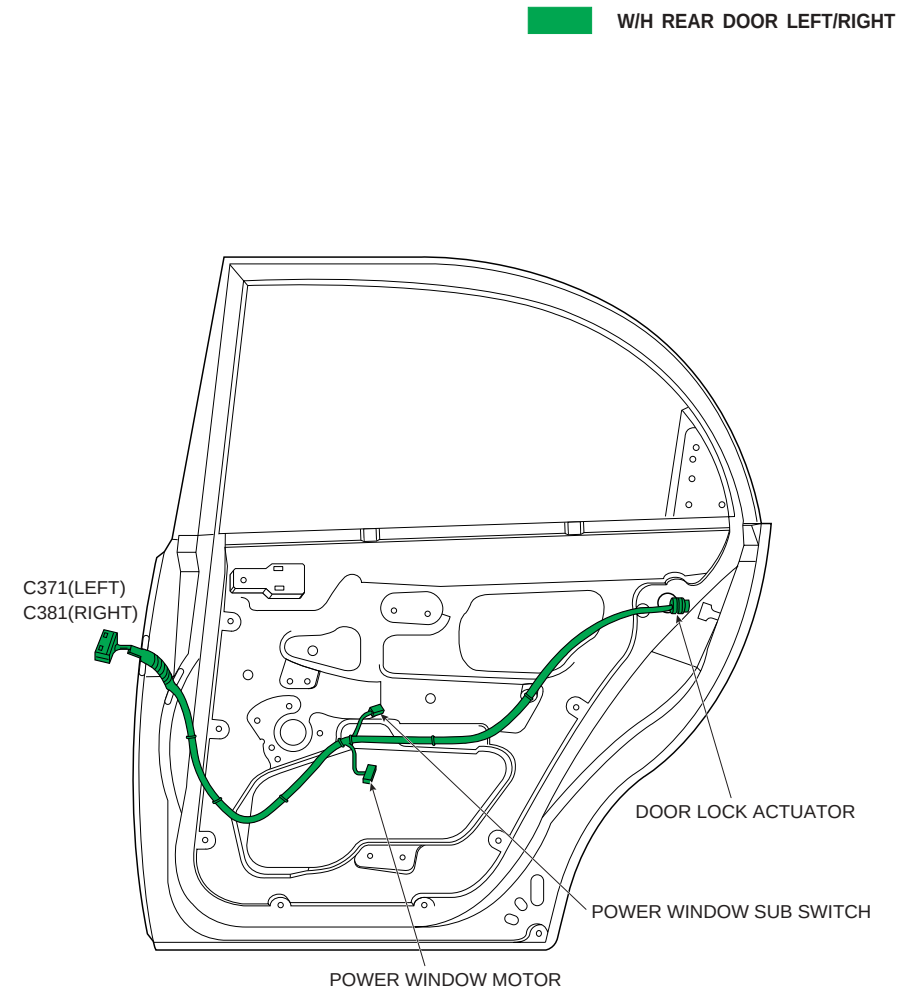

9) W/H ROOF

- LEFT PILLAR INSIDE


W/H ROOF

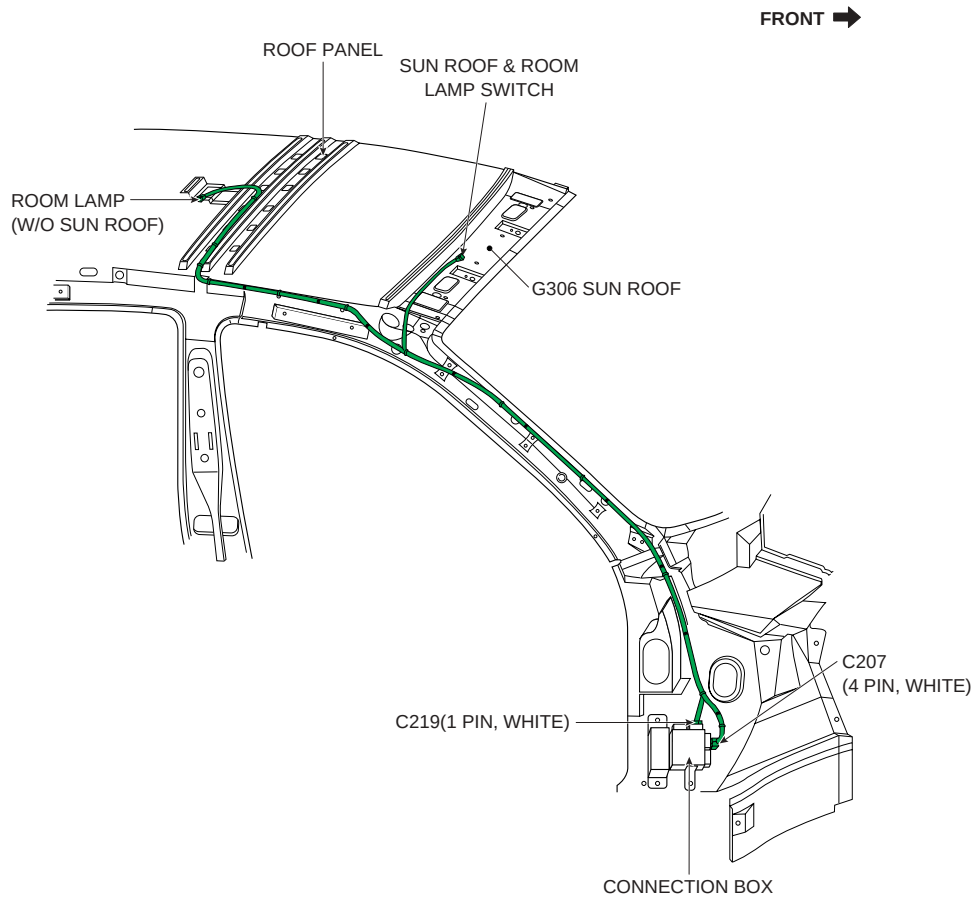


10) W/H FUEL TANK, REAR ABS SENSOR

- UNDER BODY


W/H FLOOR
W/H REAR ABS SENSOR

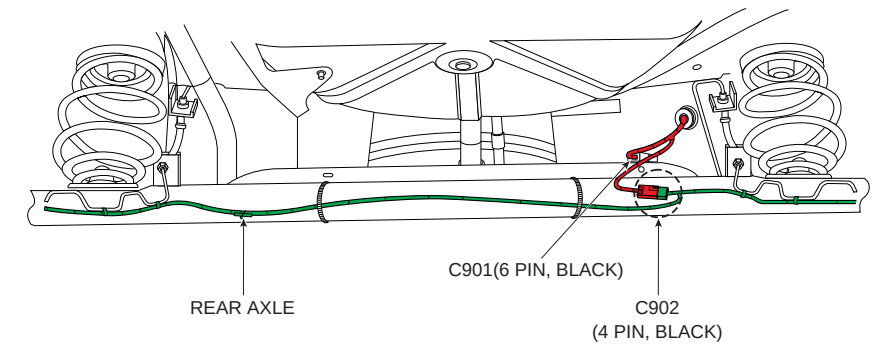

- REAR AXLE LEFT

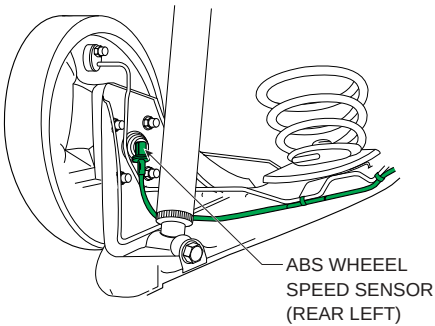


- REAR AXLE RIGHT

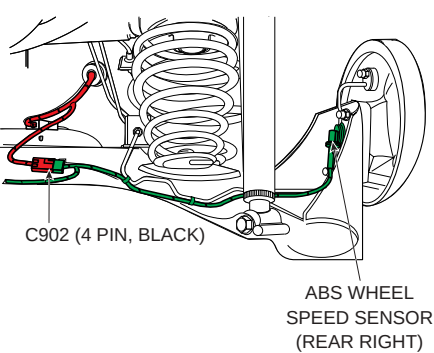


11) W/H TRUNK LID


- TRUNK LID INSIDE

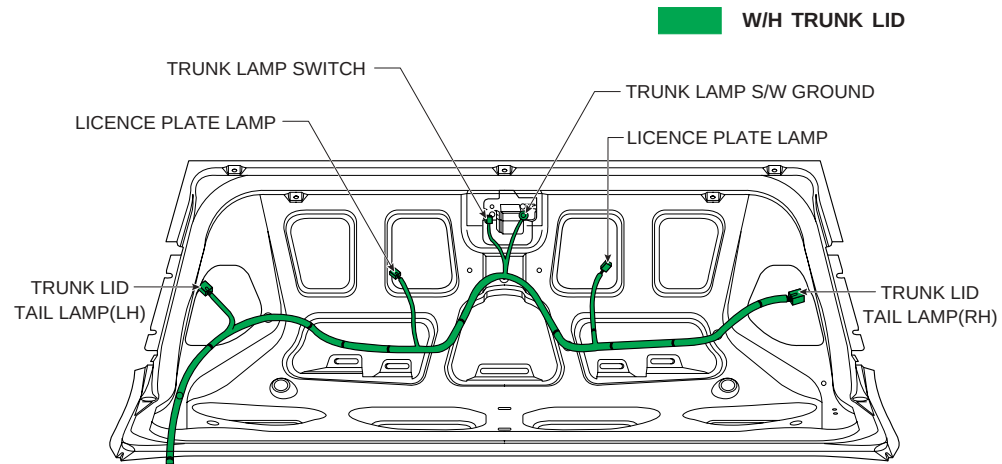

- TRUNK INSIDE LEFT

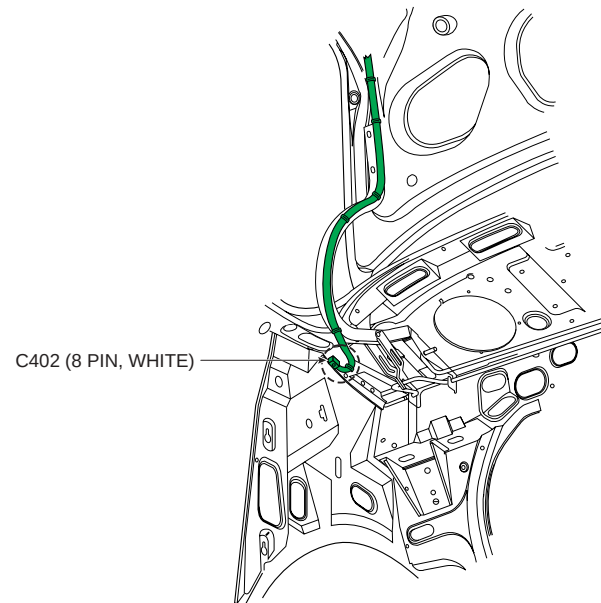


12) W/H TRUNK

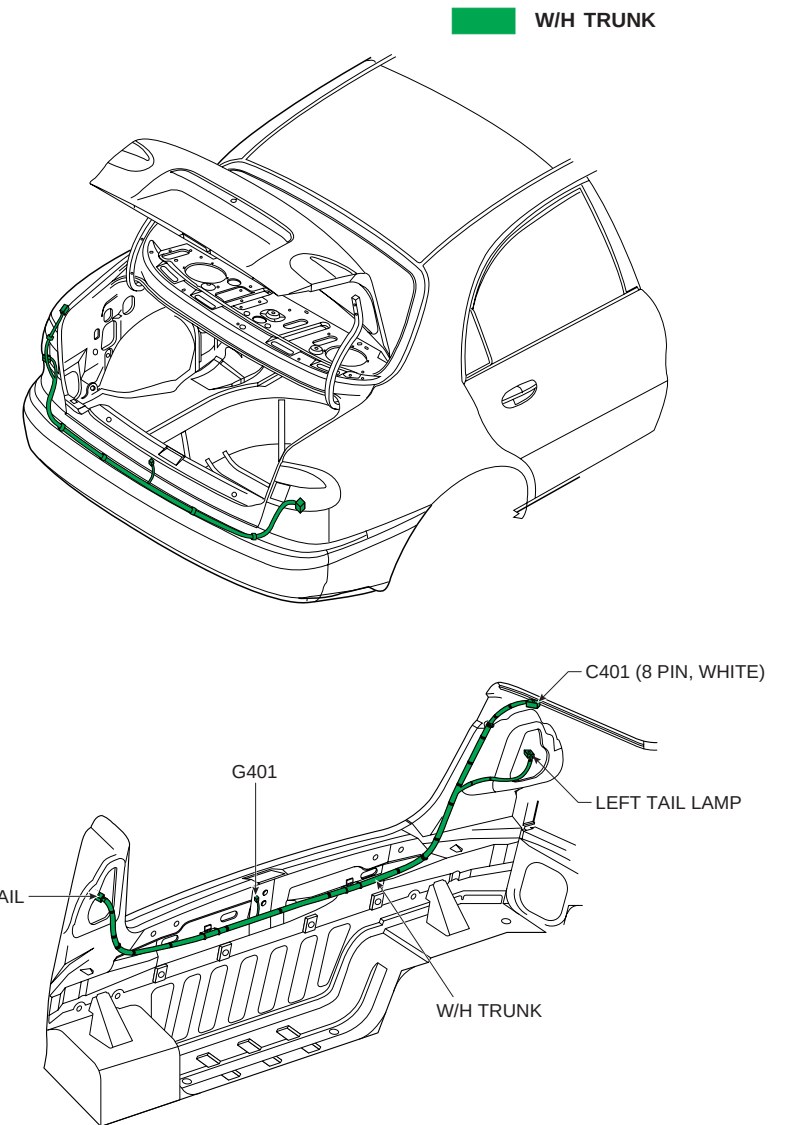

2-12 POSITION OF CONNECTORS AND GROUNDS

13) SPLICE PACK


S101(BLACK)

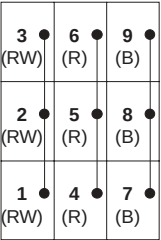


1. C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
2. COOLING FAN RELAY A : "86" Ter
B : "86" Ter
3. REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
4. BATTERY POWER SUPPLY(Ef4)
5. COOLING FAN RELAY A : "30" Ter
6. COOLING FAN RELAY B : "30" Ter
7. DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
8. GROUND(G102)
POWER WINDOW RELAY "85" Ter
9. HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter

() : WITHOUT A/C


S102(VIOLET)

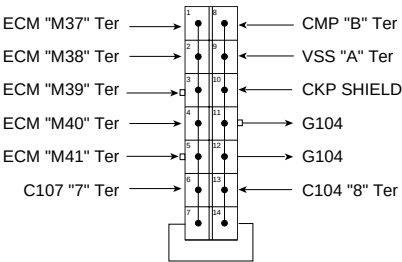


S103(VIOLET)

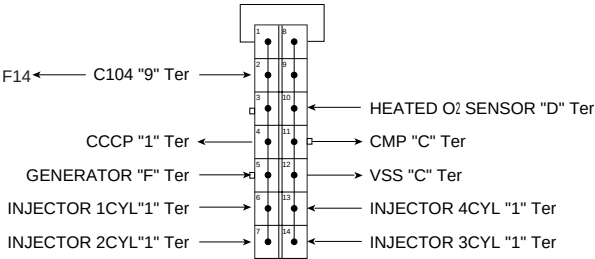


S201(BLUE) - LHD

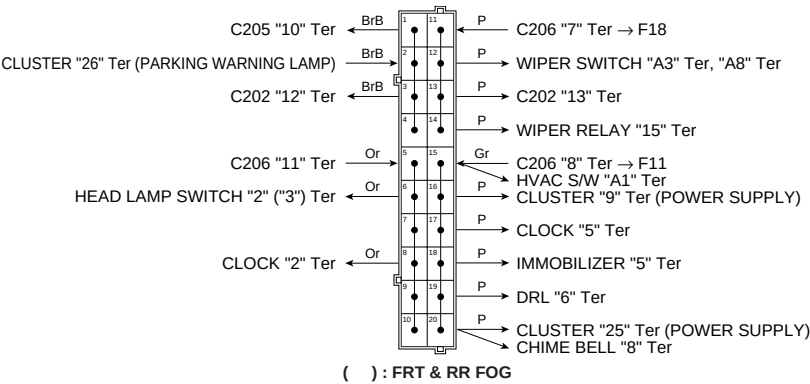


S201(BLUE) - RHD

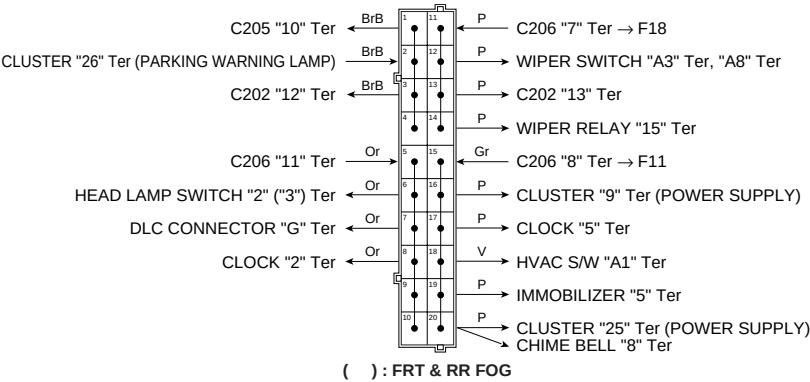


S202(ORANGE) - LHD

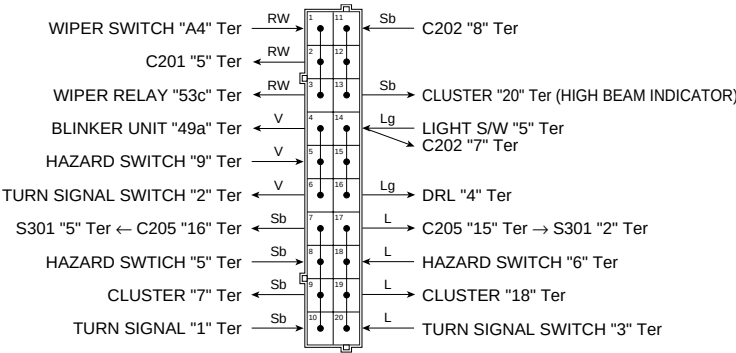


S203(RED) - LHD

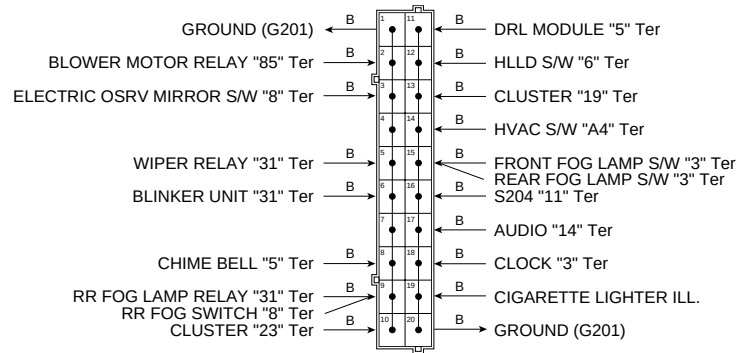


S203(RED) - RHD

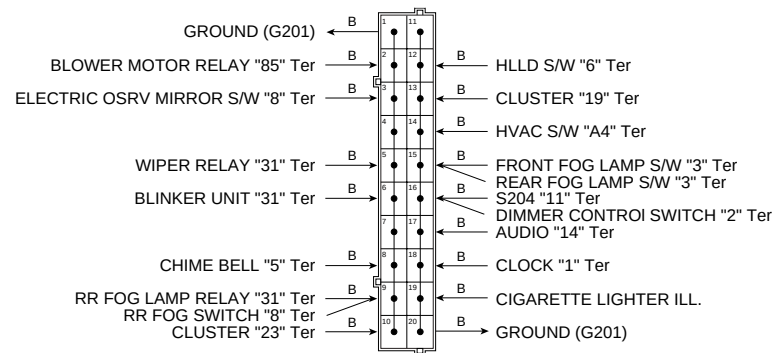


S204(RED) - LHD

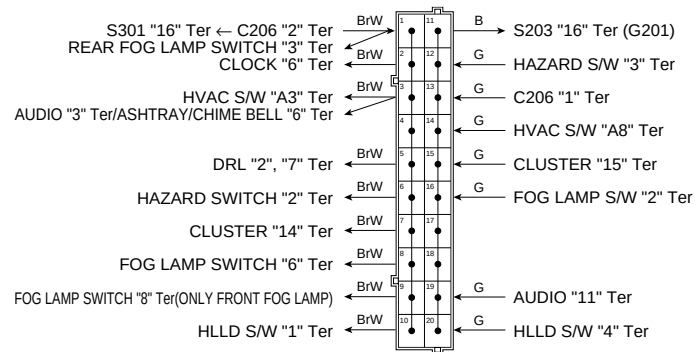

S204(RED) - RHD

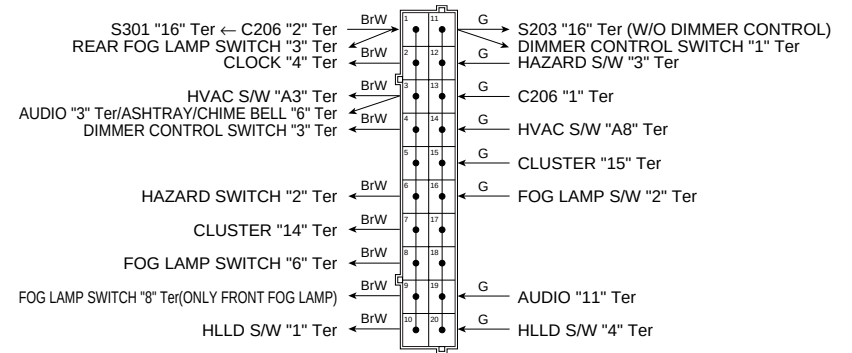

S301(ORANGE) - NOTCH BACK

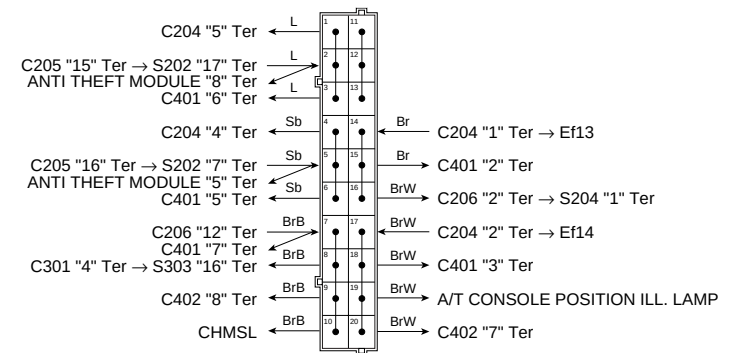

S301(ORANGE) - HATCH BACK

