

SECTION 5

ELECTRICAL WIRING DIAGRAMS

TABLE OF CONTENTS

1. STARTING & CHARGE SYSTEM

- 1) BATTERY, IGNITION SWITCH, STARTER MOTOR, GENERATOR CIRCUIT 5-8

2. ECM (ENGINE CONTROL MODULE) : IEFI-6

- 1) BATTERY POWER SUPPLY & GROUND, EI SYSTEM, CKP CIRCUIT - IEFI-6 5-10
- 2) FUEL PUMP, INJECTOR, O2 SENSOR CIRCUIT - IEFI-6 5-12
 - 2-1) W/AIR CONDITIONER (UNLEADED) - LHD 5-12
 - 2-2) W/O AIR CONDITIONER (UNLEADED) - LHD 5-14
 - 2-3) RHD (UNLEADED) 5-16
- 3) FUEL PUMP, INJECTOR, CO POTENTIOMETER CIRCUIT - IEFI-6 5-18
 - 3-1) W/AIR CONDITIONER (LEADED) - LHD 5-18
 - 3-2) W/O AIR CONDITIONER (LEADED) - LHD 5-20
 - 3-3) RHD (LEADED) 5-22
- 4) IAC, ECT, TP SENSOR, MAP, ACP, IAT CIRCUIT - IEFI-6 5-24
 - 4-1) W/AIR CONDITIONER - LHD 5-24
 - 4-2) W/O AIR CONDITIONER - LHD 5-26
 - 4-3) RHD 5-28
- 5) EGR, CCCP, VGIS, VSS CIRCUIT (ONLY M/T) - IEFI-6 5-30
- 6) EGR, CCCP, VGIS, VSS CIRCUIT (ONLY A/T) - IEFI-6 5-32
- 7) MIL LAMP, PNP SWITCH, DLC CONNECTOR CIRCUIT - IEFI-6 (LHD) 5-34

8) MIL LAMP, PNP SWITCH, DLC CONNECTOR CIRCUIT - IEFI-6 (RHD)	5-36
---	------

3. ECM (ENGINE CONTROL MODULE) : ITMS-6F

1) BATTERY POWER SUPPLY & GROUND, EI SYSTEM, CKP CIRCUIT - ITMS-6F	5-38
2) FUEL PUMP, INJECTOR, O2 SENSOR CIRCUIT - ITMS-6F	5-40
2-1) W/AIR CONDITIONER (UNLEADED) - LHD	5-40
2-2) W/O AIR CONDITIONER (UNLEADED) - LHD	5-42
2-3) RHD (UNLEADED)	5-44
3) FUEL PUMP, INJECTOR, CO POTENTIOMETER CIRCUIT - ITMS-6F	5-46
3-1) W/AIR CONDITIONER (LEADED) - LHD	5-46
3-2) W/O AIR CONDITIONER (LEADED) - LHD	5-48
3-3) RHD (LEADED)	5-50
4) IAC, ECT, TP SENSOR, MAP, ACP, IAT, KS CIRCUIT - ITMS-6F	5-52
4-1) W/AIR CONDITIONER - LHD	5-52
4-2) W/O AIR CONDITIONER - LHD	5-54
4-3) RHD	5-56
5) EGR, CCCP, VGIS, VSS CIRCUIT (ONLY M/T) - ITMS-6F	5-58
6) EGR, CCCP, VGIS, VSS CIRCUIT (ONLY A/T) - ITMS-6F	5-60
7) MIL LAMP, PNP SWITCH, DLC CONNECTOR CIRCUIT - ITMS-6F (LHD)	5-62
8) MIL LAMP, PNP SWITCH, DLC CONNECTOR CIRCUIT - ITMS-6F (RHD)	5-64

4. ECM (ENGINE CONTROL MODULE) : MR-140

1) BATTERY POWER SUPPLY & GROUND, EI SYSTEM, CKP CIRCUIT	5-66
2) FUEL PUMP, INJECTOR, O2 SENSOR CIRCUIT	5-68
2-1) W/AIR CONDITIONER	5-68
2-2) W/O AIR CONDITIONER	5-70
3) IAC, ECT, TP SENSOR, MAP, ACP, IAT, LEGR, ROUGH ROAD CIRCUIT	5-72
4) VSS CIRCUIT	5-74
4-1) W/AIR CONDITIONER	5-74
4-2) W/O AIR CONDITIONER	5-76
5) FUEL LEVEL UNIT CIRCUIT	5-78
6) MIL LAMP, DLC CIRCUIT	5-80

5. PCM (POWERTRAIN CONTROL MODULE) APPLICATION (IPCM-6KT)

1) BATTERY POWER SUPPLY & GROUND, EI SYSTEM, CKP CIRCUIT	5-82
2) FUEL PUMP, INJECTOR, IAC CIRCUIT	5-84
3) MAP, ACP, IAT, LEGR, ECT, TP SENSOR, FPS, FUEL GAUGE & SENSOR (TRANSMISSION FLUID TEMP', ROUGH ROAD, KNOCK) CIRCUIT	5-86
4) SENSOR (CMP, HEATED O2, O2), VGIS (DOHC), ESDS, CCCP CIRCUIT	5-88
5) MIL LAMP, ENGINE HOT WARNING & DLC CIRCUIT	5-90
6) A/T SOLENOID, PRESSURE SWITCH ASSEMBLY CIRCUIT	5-92
7) SENSOR (ENGINE RPM, ISS, VSS) CIRCUIT	5-94
8) POWER LAMP, STOP LAMP, DLC CIRCUIT	5-96

6. TCM (TRANSMISSION CONTROL MODULE)

1) POWER SUPPLY & GROUND CIRCUIT	5-98
2) SOLENOID, PRESSURE SWITCH ASSEMBLY CIRCUIT	5-100
3) SENSOR (TP SENSOR, MAP, ENGINE RPM, ISS, VSS) CIRCUIT	5-102
4) POWER WARNING LAMP, STOP LAMP, DLC CIRCUIT	5-104

7. AIR CONDITIONER

1) AIR CONDITIONER CONTROL SWITCH CIRCUIT	5-106
2) AIR CONDITIONER COMPRESSOR CIRCUIT	5-108
2-1) ITMS-6F, IEFI-6.....	5-108
2-2) MR-140.....	5-110
2-3) IPCM-6KT.....	5-112
3) BLOWER MOTOR CIRCUIT	5-114

8. RADIATOR COOLING FAN

1) COOLING FAN CIRCUIT (W/AIR CONDITIONER) - LHD	5-116
2) COOLING FAN CIRCUIT (W/AIR CONDITIONER) - RHD	5-118
3) COOLING FAN CIRCUIT (W/O AIR CONDITIONER) - LHD	5-120
4) COOLING FAN CIRCUIT (W/O AIR CONDITIONER) - RHD	5-122
5) COOLING FAN CIRCUIT (W/AIR CONDITIONER) - IPCM - 6KT	5-124
6) COOLING FAN CIRCUIT (W/O AIR CONDITIONER) - IPCM - 6KT	5-126

9. HEAD LAMP CIRCUIT

- 1) HEAD LAMP SWITCH, HEAD LAMP RELAY CIRCUIT 5-128
- 2) HEAD LAMP & DRL(DAYTIME RUNNING LIGHT) CIRCUIT - LHD 5-130
- 3) HEAD LAMP LEVELING DEVICE (HLLD) CIRCUIT 5-132

10. PARKING LAMP

- 1) HEAD LAMP SWITCH, ILLUMINATION RELAY CIRCUIT 5-134
- 2) PARKING LAMP (LH) & SWITCH POSITION ILLUMINATION CIRCUIT 5-136
 - 2-1) NOTCH BACK 5-136
 - 2-2) HATCH BACK 5-138
- 3) ILLUMINATION DIMMER CONTROL CIRCUIT - RHD.....5-140
- 4) PARKING LAMP (RH), LICENSE PLATE LAMP, TRUNK LID TAIL LAMP, PARKING LAMP (N/B) 5-142
 - 4-1) NOTCH BACK 5-142
 - 4-2) HATCH BACK 5-144

11. FOG LAMP CIRCUIT

- 1) FRONT & REAR FOG LAMP CIRCUIT (N/B) 5-146
- 2) FRONT & REAR FOG LAMP CIRCUIT (H/B) 5-148
- 3) ONLY FRONT FOG LAMP CIRCUIT 5-150
- 4) ONLY REAR FOG LAMP CIRCUIT (N/B) 5-152
- 5) ONLY REAR FOG LAMP CIRCUIT (H/B) 5-154

12. TURN SIGNAL LAMP, HAZARD LAMP CIRCUIT

- 1) NOTCH BACK - LHD 5-156
- 2) NOTCH BACK - RHD 5-158
- 3) HATCH BACK - LHD.....5-160
- 4) HATCH BACK - RHD 5-162

13. STOP LAMP CIRCUIT

- 1) NOTCH BACK 5-164
- 2) HATCH BACK 5-166

14. CIGARETTE LIGHTER

- 1) CIGARETTE LIGHTER, ASHTRAY ILLUMINATION LAMP CIRCUIT 5-168

15. TRUNK LAMP, ROOM LAMP, DOOR OPENING WARNING LAMP CIRCUIT

- 1) NOTCH BACK 5-170
- 2) HATCH BACK (3 DOOR, 5 DOOR) 5-172

16. REVERSE LAMP CIRCUIT

- 1) NOTCH BACK 5-174
- 2) HATCH BACK..... 5-176

17. HORN CIRCUIT 5-178

18. CHIME BELL, CLOCK CIRCUIT 5-180

19. WIPER CIRCUIT

- 1) NOTCH BACK 5-182
- 2) HATCH BACK (3 DOOR, 5 DOOR) 5-184

20. REAR WINDOW DEFROSTER CIRCUIT

- 1) NOTCH BACK 5-186
- 2) HATCH BACK..... 5-188

21. POWER WINDOW CIRCUIT

- 1) ONLY FRONT POWER WINDOW CIRCUIT 5-190
 - 1-1) NON SPORTY PACK 5-190
 - 1-2) SPORTY PACK..... 5-192
- 2) FRONT & REAR POWER WINDOW CIRCUIT 5-194
 - 2-1) NON SPORTY PACK 5-194
 - 2-2) SPORTY PACK..... 5-196

22. ELECTRIC OSRV (OUTSIDE REAR VIEW) MIRROR CIRCUIT

- 1) LHD 5-198
- 2) RHD 5-200

23. CENTRAL DOOR LOCKING CIRCUIT

- 1) NOTCH BACK - LHD 5-202
- 2) NOTCH BACK - RHD 5-204
- 3) HATCH BACK (5 DOOR) - LHD 5-206
- 4) HATCH BACK (5 DOOR) - RHD 5-208
- 5) HATCH BACK (3 DOOR) - LHD 5-210
- 6) HATCH BACK (3 DOOR) - RHD 5-212

24. AUDIO, AUTO ANTENNA CIRCUIT

- 1) NOTCH BACK 5-214
- 2) HATCH BACK 5-216

25. CLUSTER

- 1) TACHOMETER, TEMPERATURE UNIT, FUEL METER CIRCUIT 5-218
 - 1-1) IEFI-6, ITMS-6F 5-218
 - 1-2) MR-140 5-220
 - 1-3) IPCM-6KT 5-222
- 2) VEHICLE SPEEDOMETER CIRCUIT 5-224
 - 2-1) ITMS-6F, IEFI-6 5-224
 - 2-2) IPCM-6KT 5-226
- 3) WARNING LAMP (OIL PRESSURE, PARKING BRAKE, CHARGING) CIRCUIT 5-228
 - 3-1) LHD 5-228
 - 3-2) RHD 5-230
- 4) WARNING LAMP (AIR BAG, ABS), INDICATOR LAMP (MIL, POWER MODE) CIRCUIT 5-232
 - 4-1) IEFI-6, ITMS-6F, MR-140 5-232
 - 4-2) IPCM-6KT 5-234
- 5) INDICATOR LAMP (TURN SIGNAL, HIGHBEAM, SEAT BELT, FRONT FOG, REAR FOG)
CLUSTER ILLUMINATION LAMP CIRCUIT - LHD 5-236

6) INDICATOR LAMP (TURN SIGNAL, HIGHBEAM, SEAT BELT, FRONT FOG, REAR FOG CLUSTER ILLUMINATION LAMP CIRCUIT - RHD	5-238
---	-------

26. ABS (ANTILOCK BRAKE SYSTEM) CIRCUIT..... 5-240

27. AIR BAG (SDM : SENSING & DIAGNOSTIC MODULE)

1) AIR BAG CONTROL UNIT (SDM), AIR BAG WARNING LAMP CIRCUIT	5-242
---	-------

28. IMMOBILIZER SYSTEM 5-244

29. ANTI-THEFT CIRCUIT

1) NOTCH BACK - LHD	5-246
2) NOTCH BACK - RHD	5-248
3) HATCH BACK - LHD	5-250
4) HATCH BACK - RHD	5-252

30. SUN ROOF CIRCUIT 5-254