


5-18 ELECTRICAL WIRING DIAGRAMS

3) FUEL PUMP, INJECTOR, CO POTENTIOMETER CIRCUIT - IEFI-6











3-1) W/AIR CONDITIONER (LEADED) - LHD

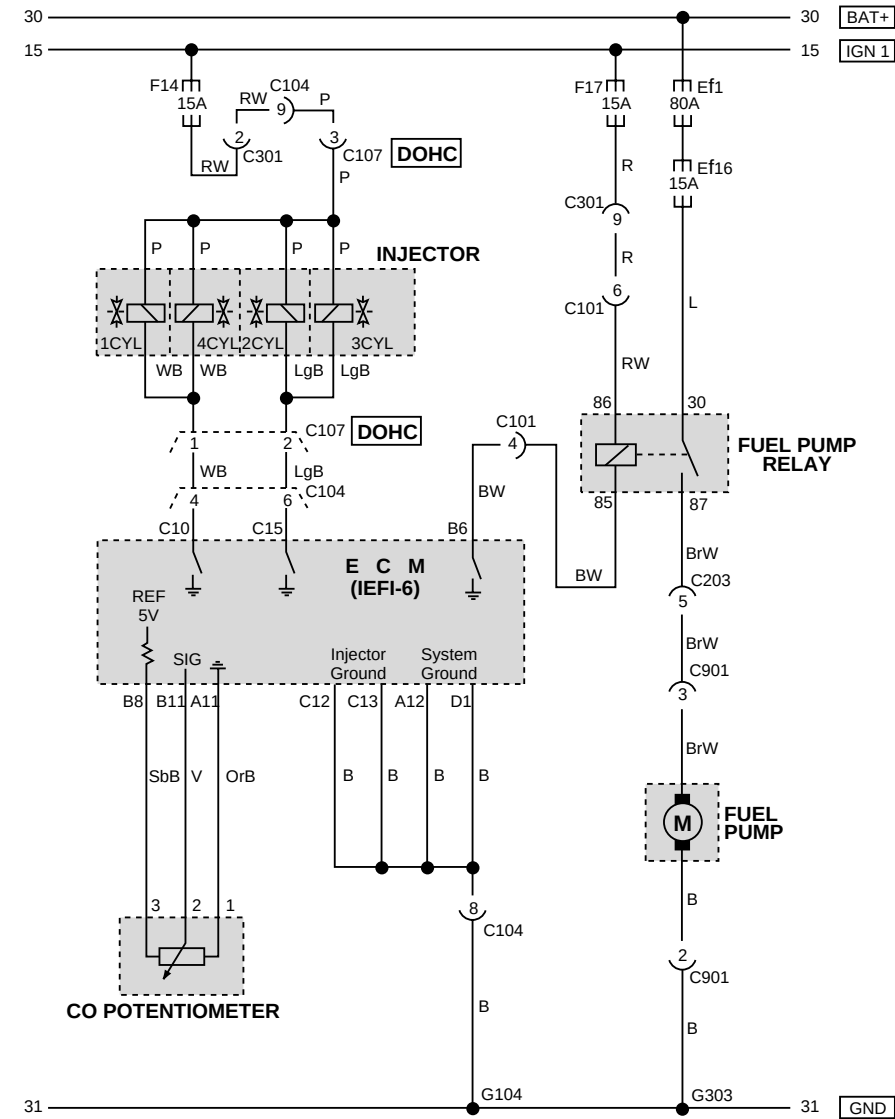

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(6PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Co-Driver Seat

      b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

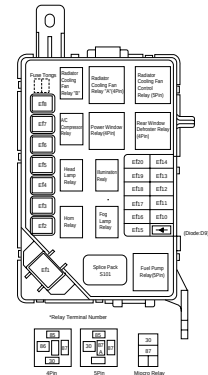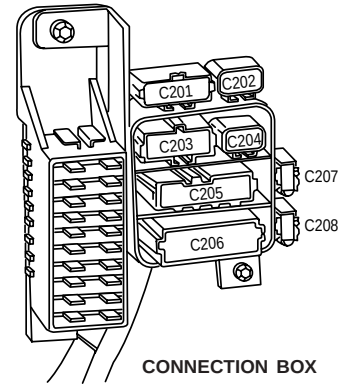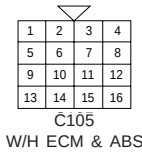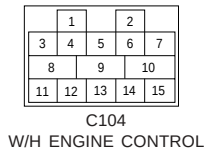


c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

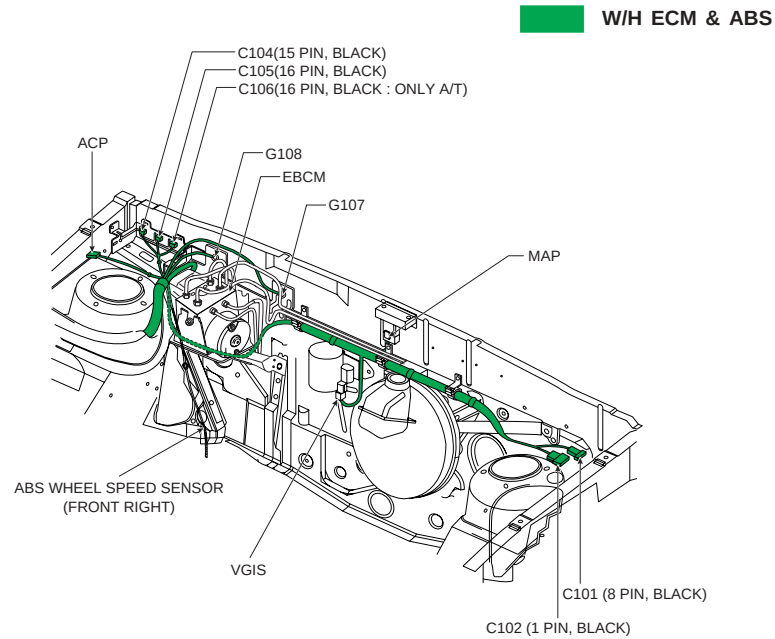


• PASSENGER ROOM RIGHT SIDE PANEL

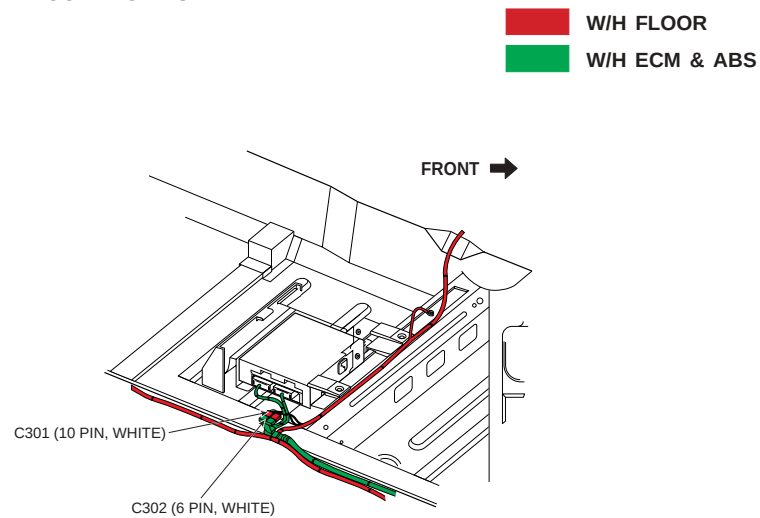


• UNDER BODY

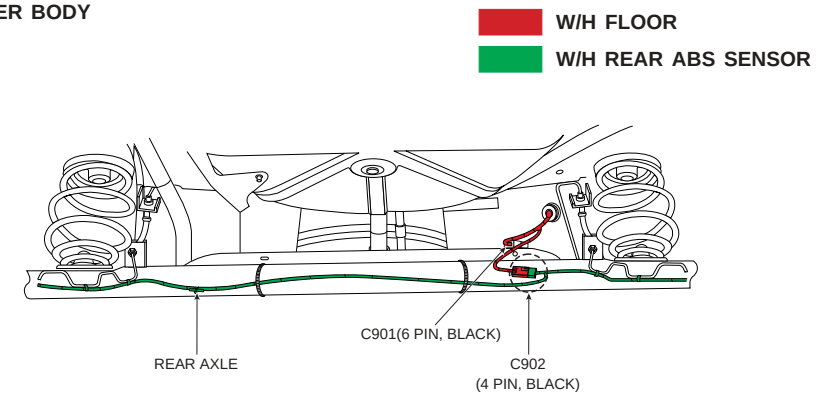

• DOHC ENGINE

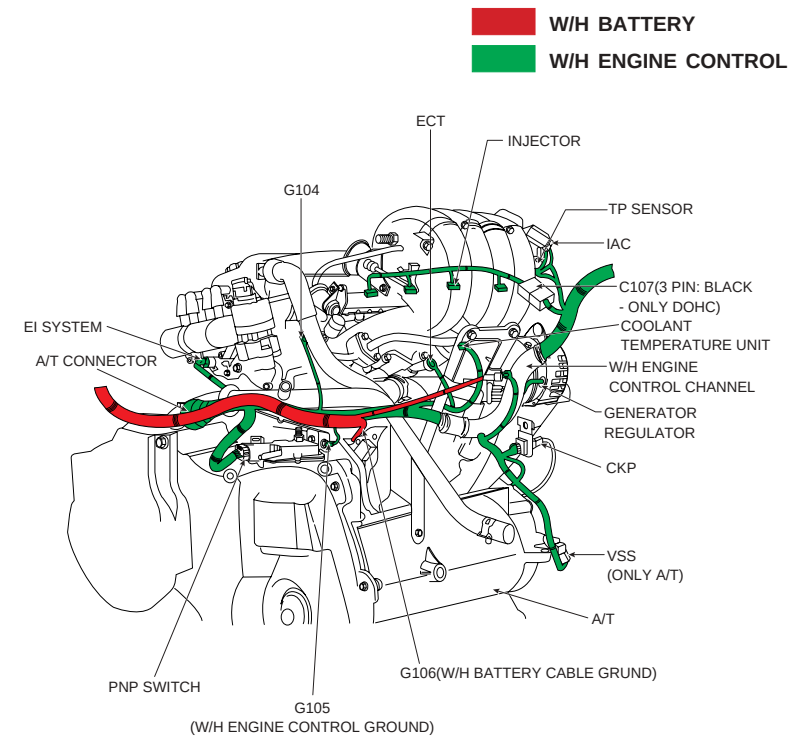


3-2) W/O AIR CONDITIONER (LEADED) - LHD

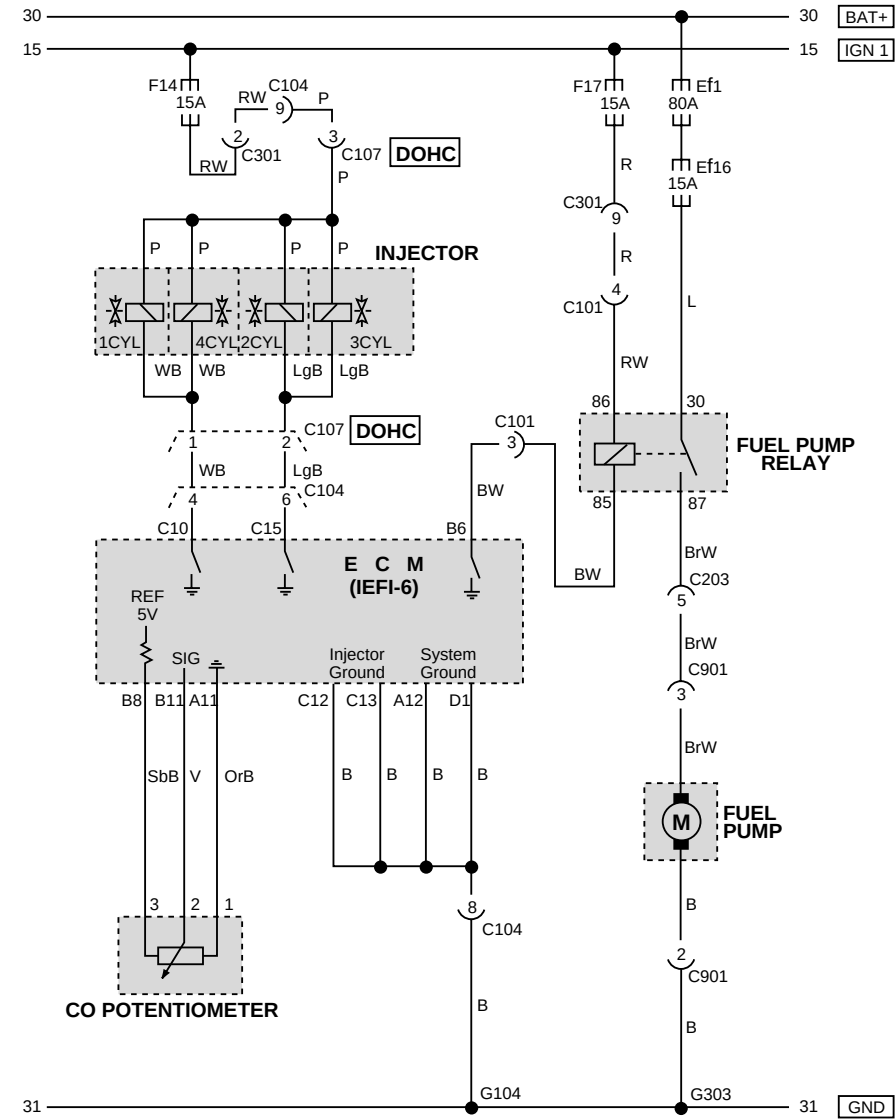

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(4PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Co-Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

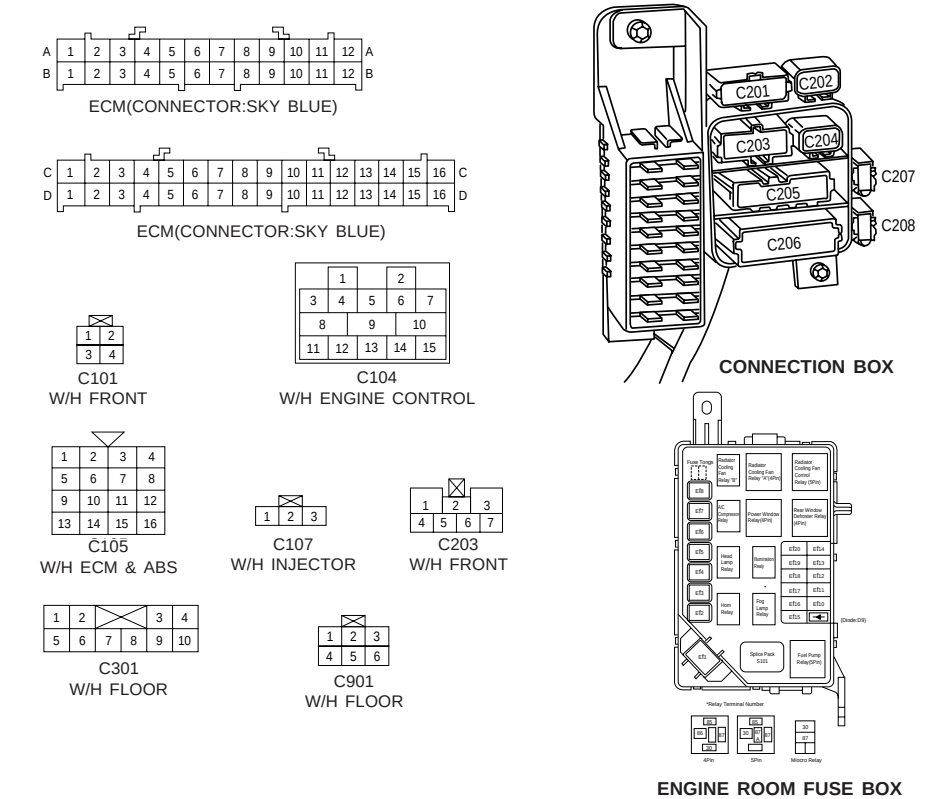


c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

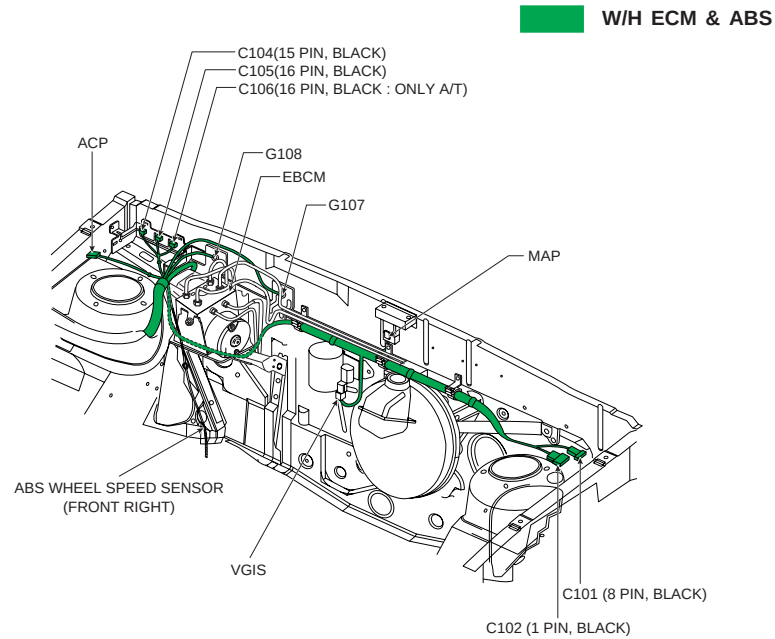


• PASSENGER ROOM RIGHT SIDE PANEL

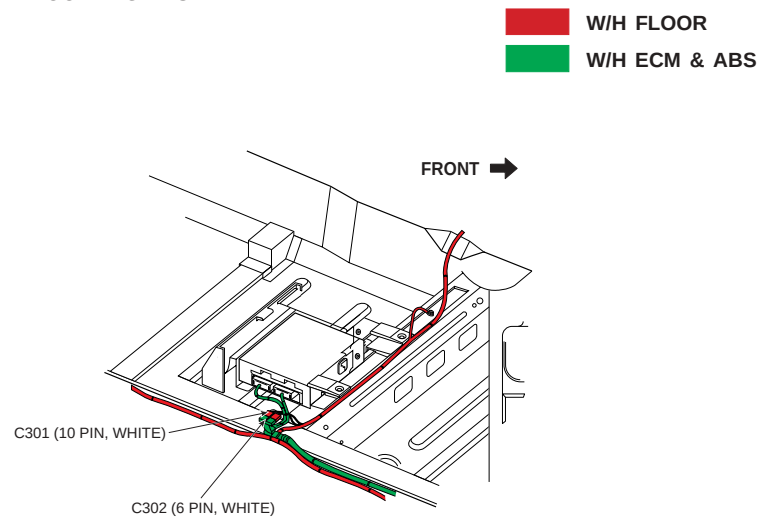


• UNDER BODY

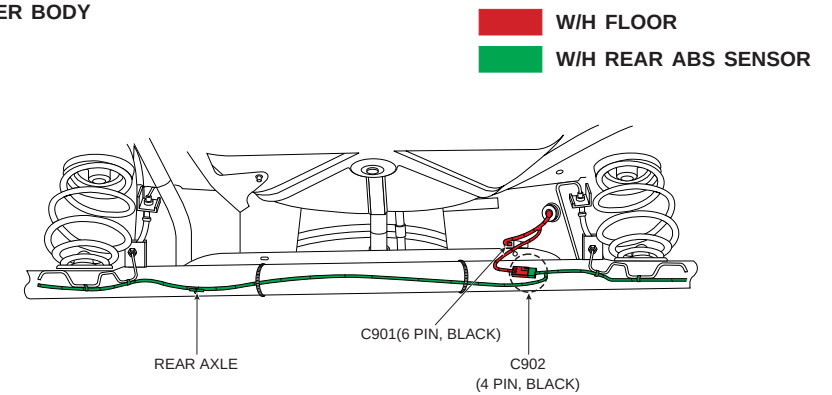

• DOHC ENGINE

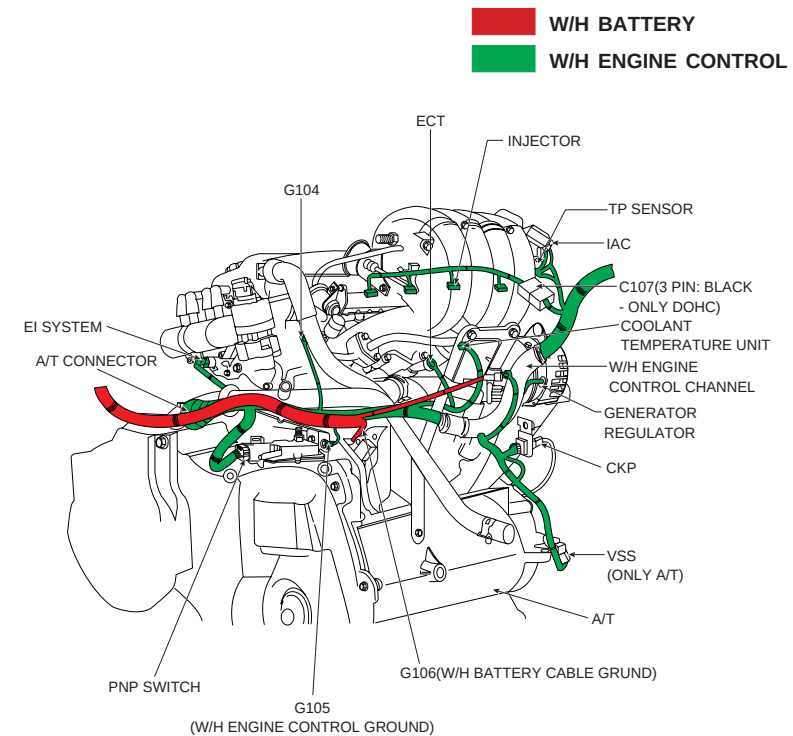









3-3) RHD (LEADED)

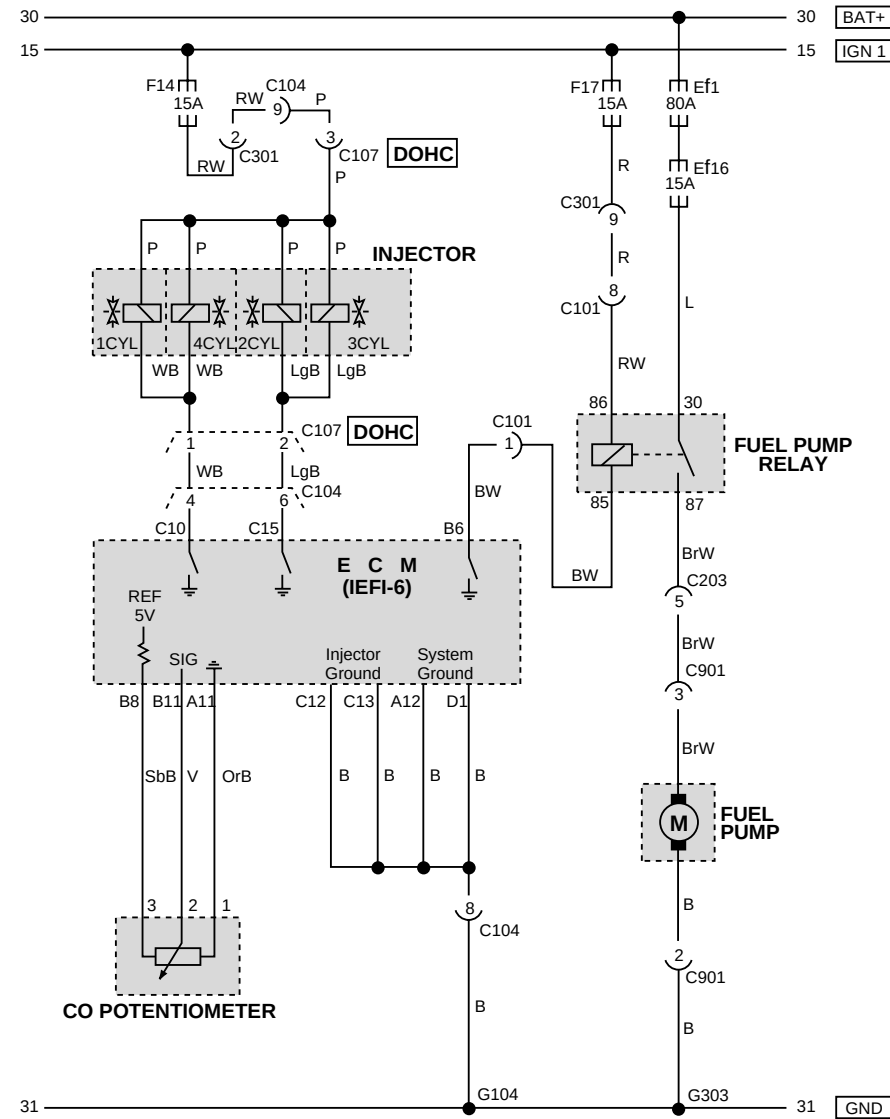

a. CONNECTOR INFORMATION

CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(8PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(3PIN, BLACK)	W/H Engine Control - Injector(DOHC)	Below Throttle Valve Body
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G104	Ground	Intake Manifold '4' Cylinder
G105	Ground	Above Flywheel Housing
G303	Ground	Below Driver Seat

    
b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

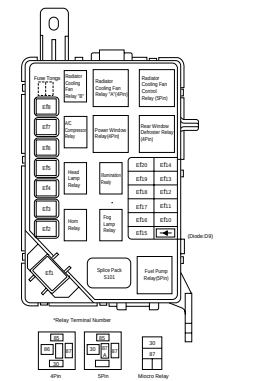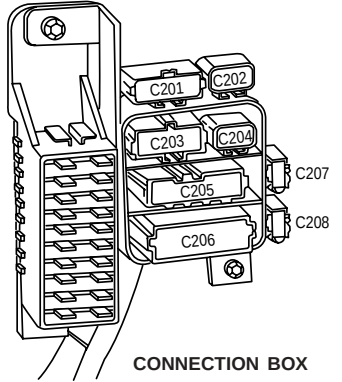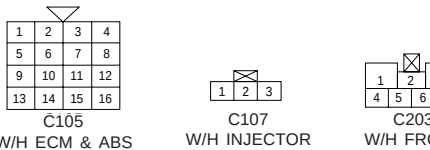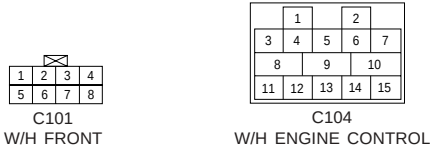


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

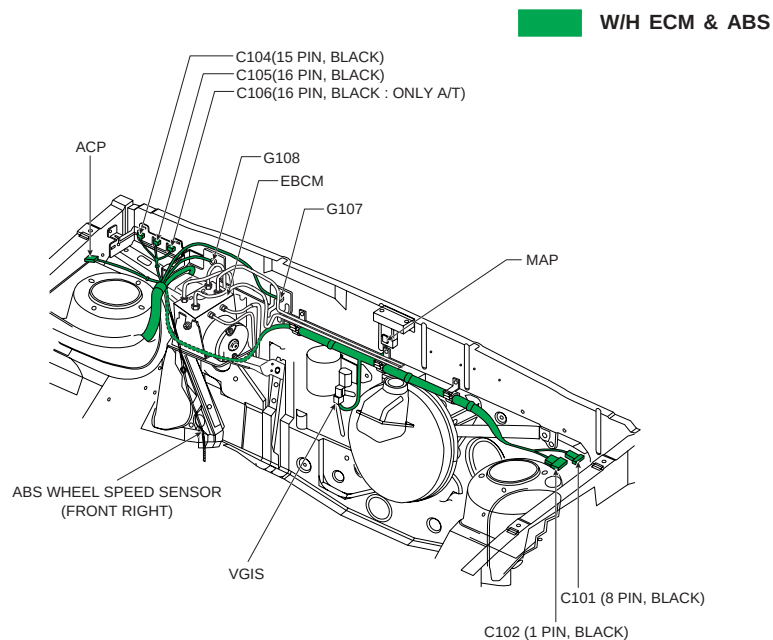


• PASSENGER ROOM RIGHT SIDE PANEL

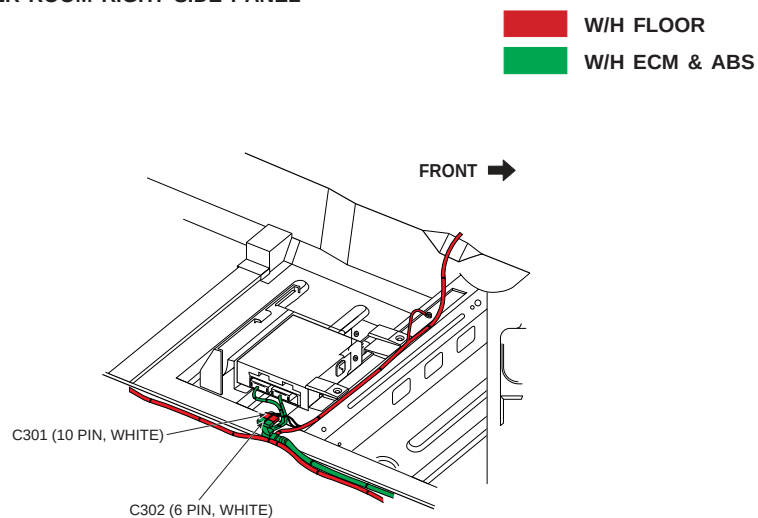


• UNDER BODY

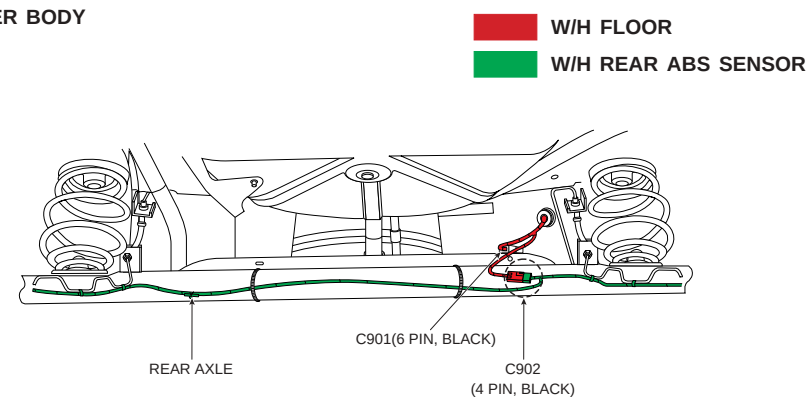

• DOHC ENGINE

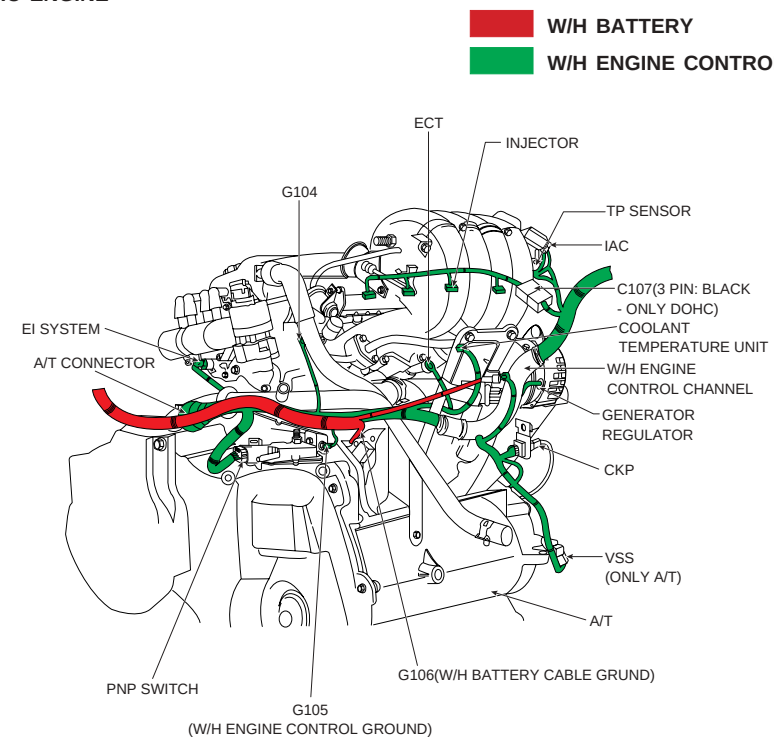


4) IAC, ECT, TP SENSOR, MAP, ACP, IAT CIRCUIT - IEFI-6
4-1) W/AIR CONDITIONER - LHD

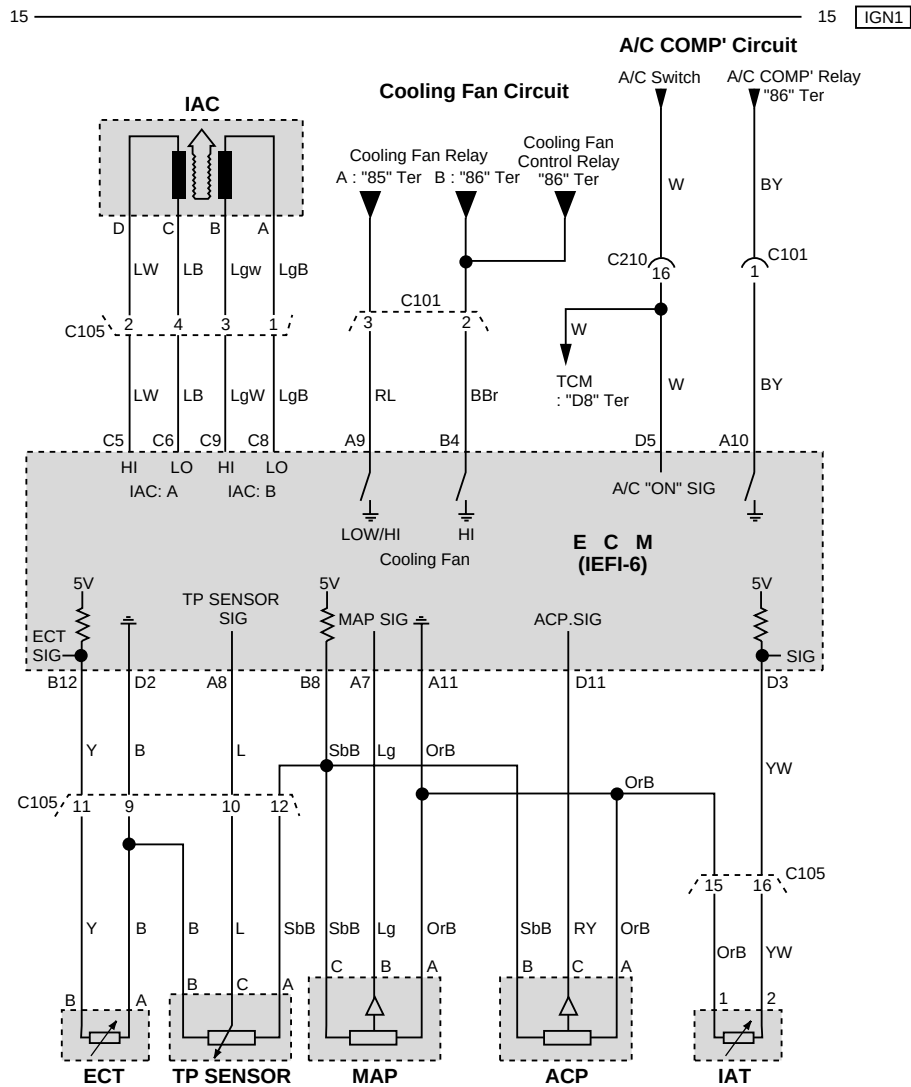

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(6PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C210(20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

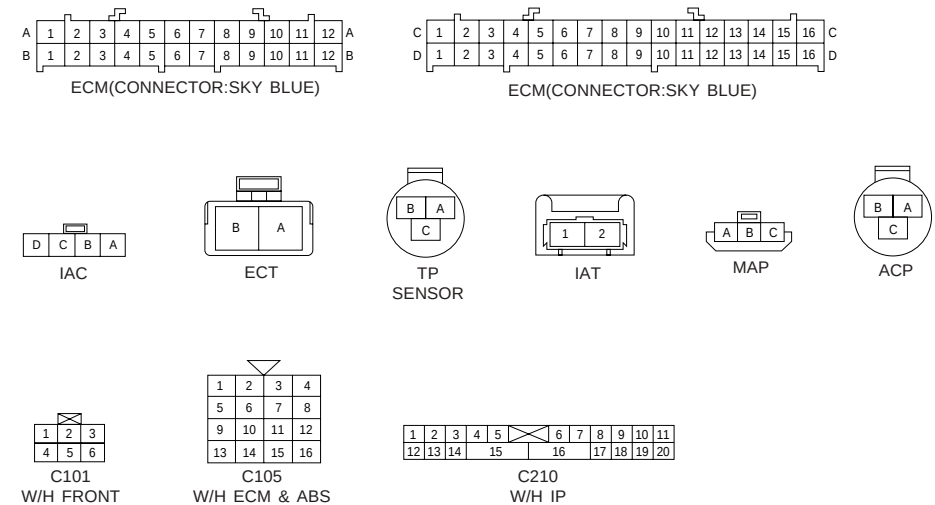

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

 W/H ECM & ABS

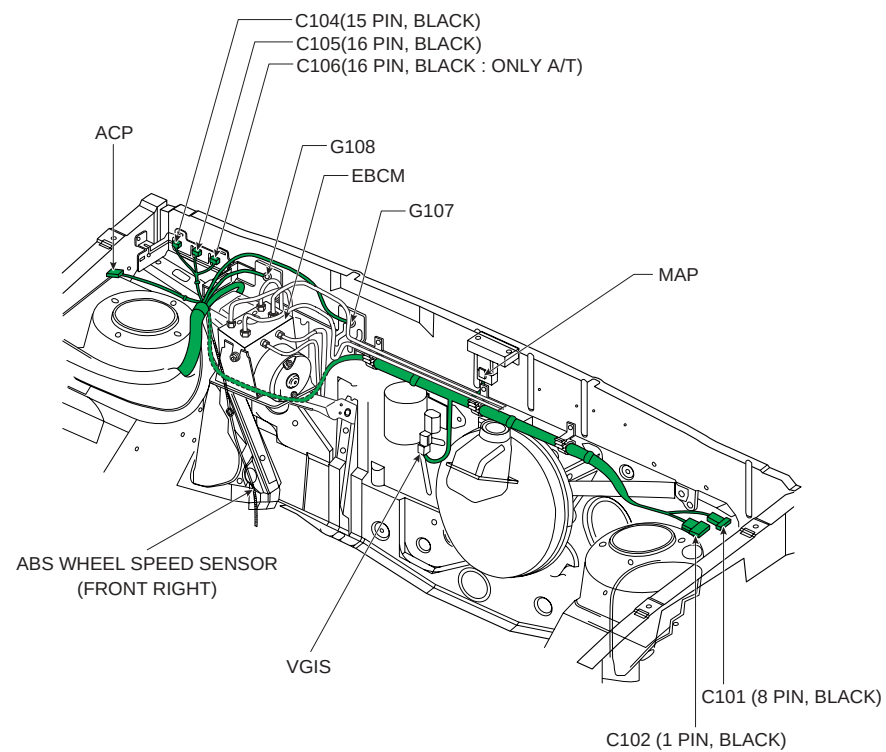


• PASSENGER ROOM RIGHT SIDE PANEL

 W/H FLOOR
 W/H ECM & ABS

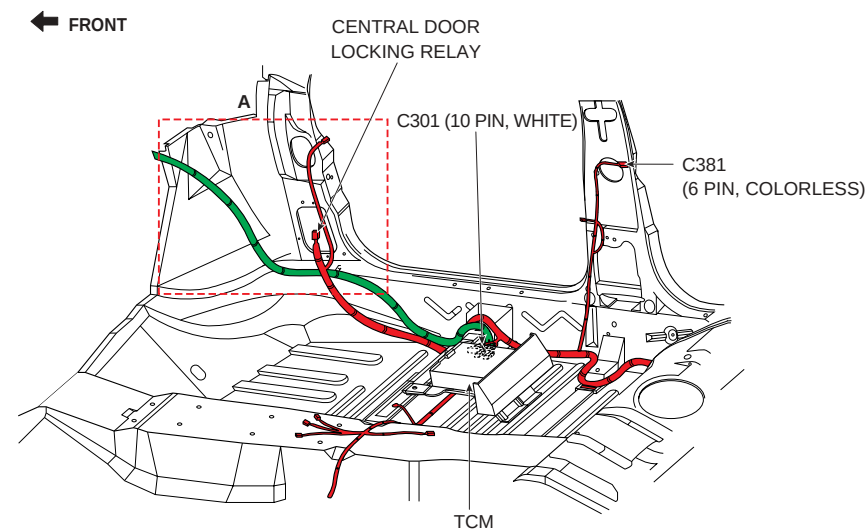


* "A" LOCATION

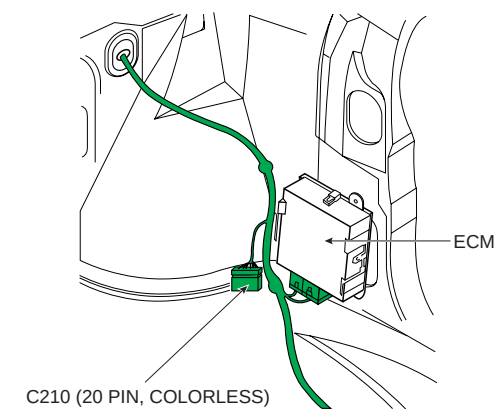

4-2) W/O AIR CONDITIONER - LHD

15 _____ 15 IGN1

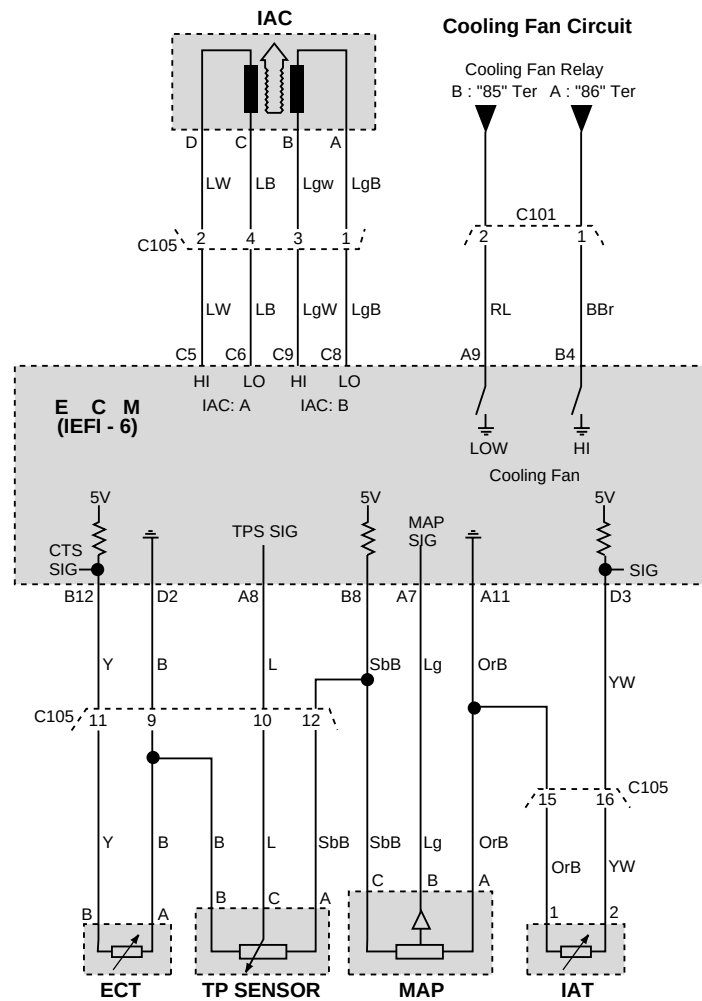


31 _____ 31 GND

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(4PIN, BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C210(20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

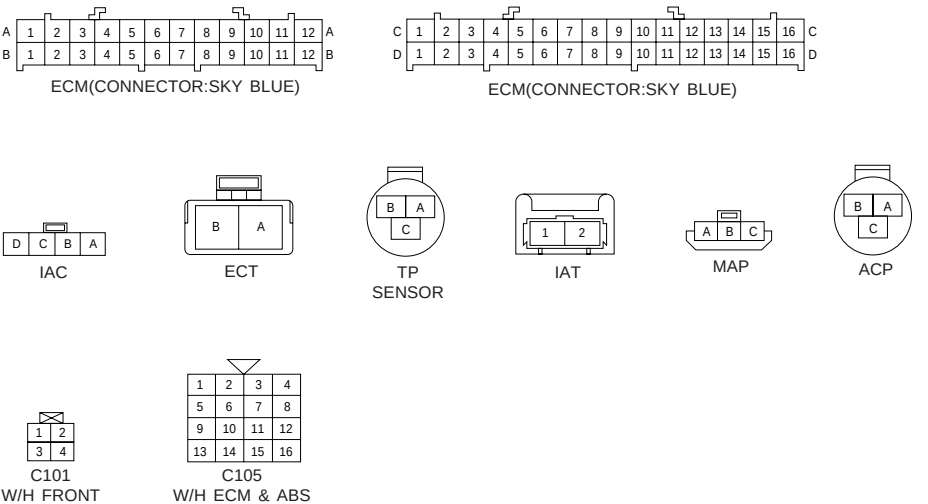

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

 W/H ECM & ABS

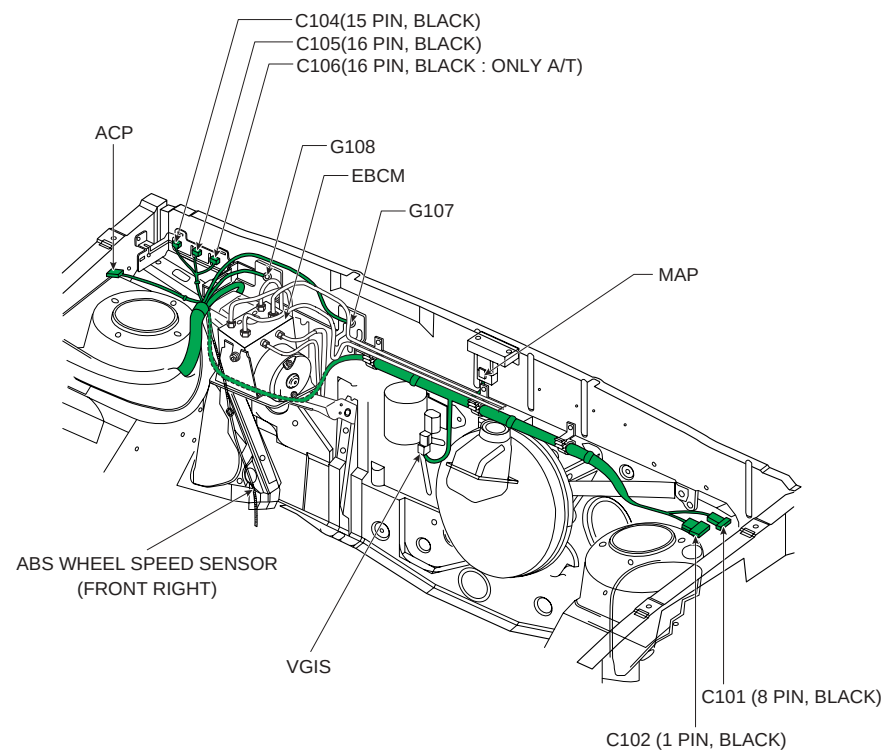

• PASSENGER ROOM RIGHT SIDE PANEL

 W/H FLOOR
 W/H ECM & ABS

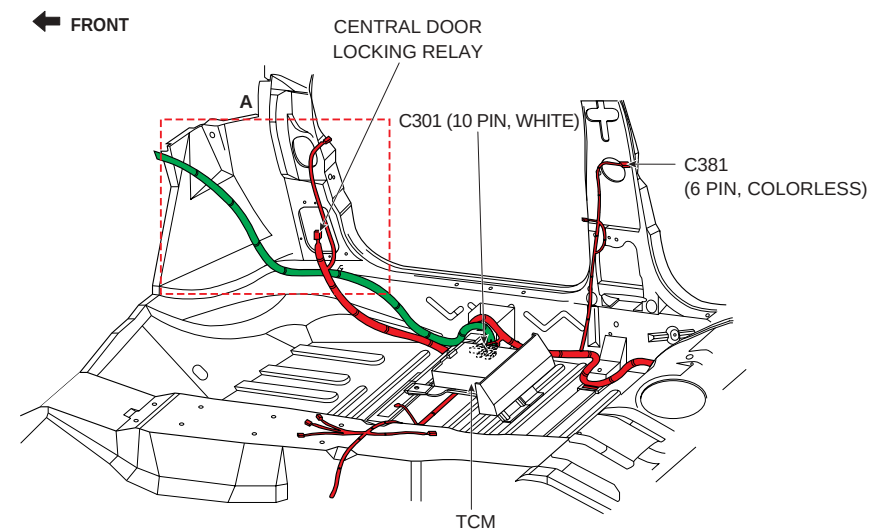

* "A" LOCATION

