




5) EGR, CCCP, VGIS, VSS CIRCUIT (ONLY M/T) - ITMS-6F

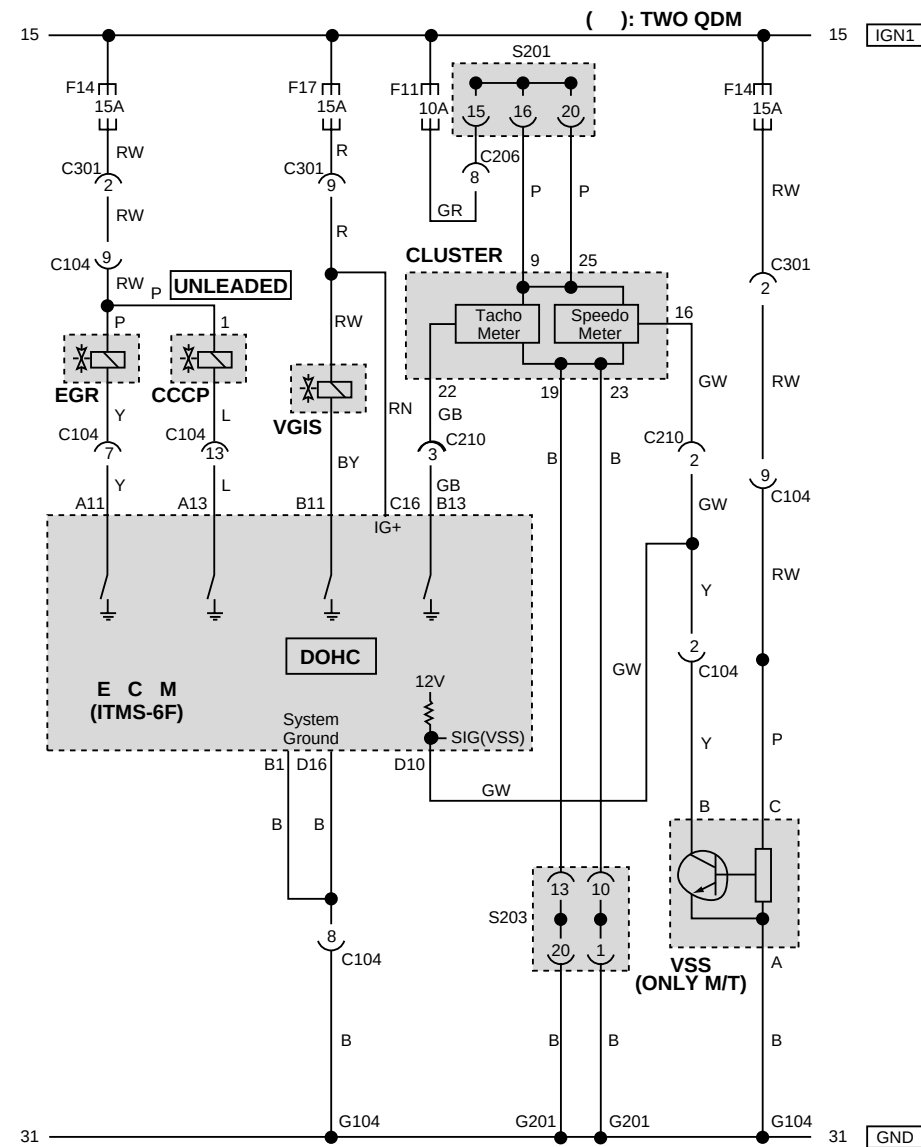

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C206(20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
S201(20PIN, BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203(20PIN, RED)	Splice Pack	Next to Passenger Room Relay Box
G104	Ground	Intake Manifold '#4' Cylinder
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

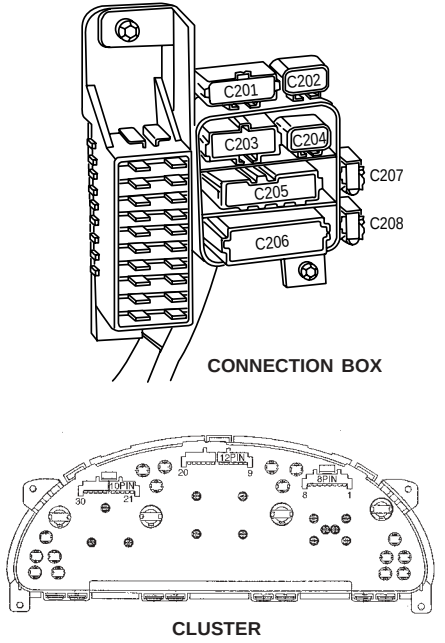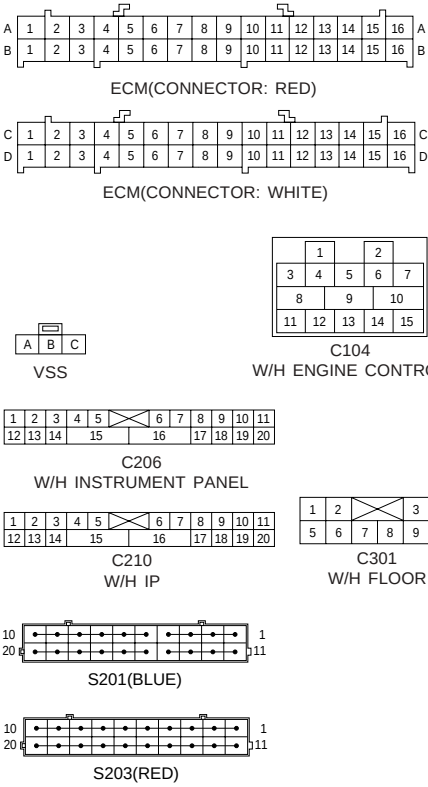


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

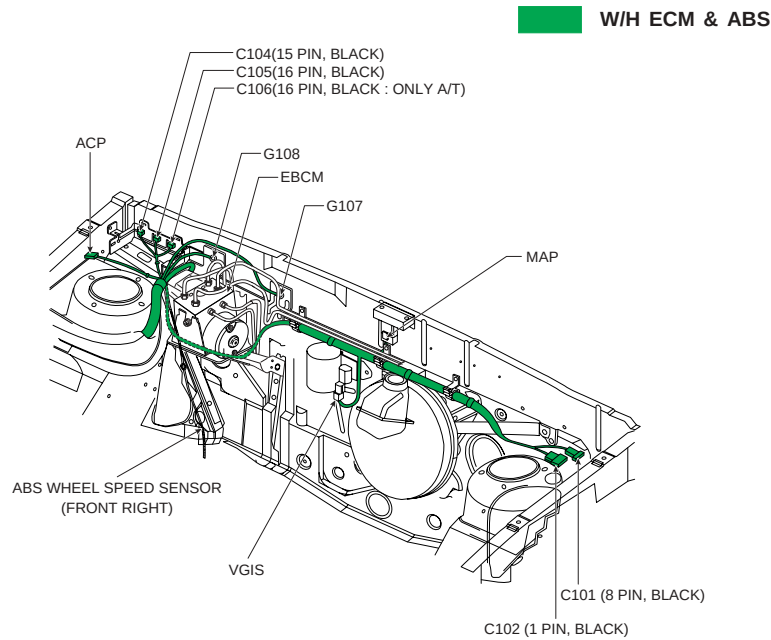


• PASSENGER ROOM RIGHT SIDE PANEL

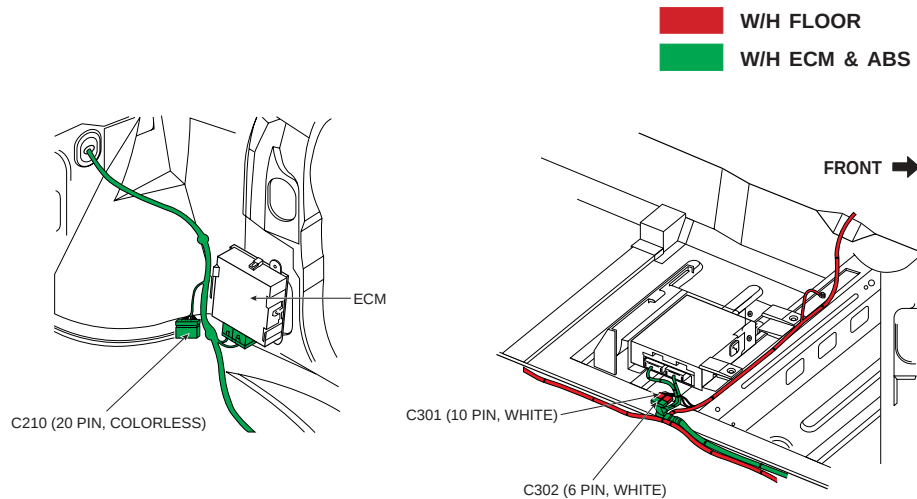


d. SPLICE PACK


S201(BLUE) - LHD

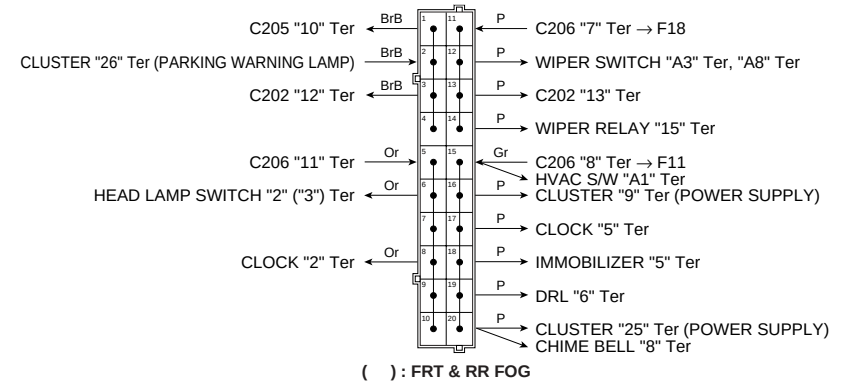

S203(RED) - LHD

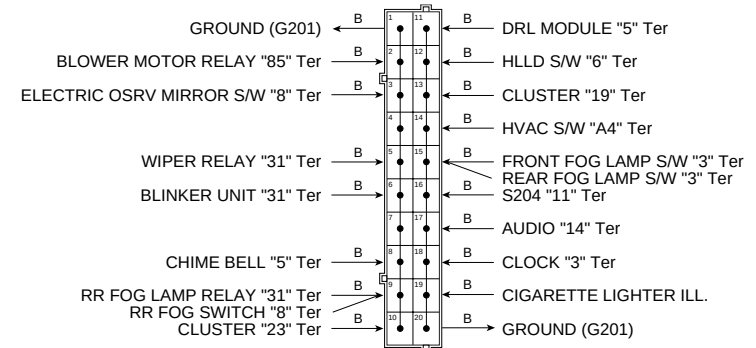


6) EGR, CCCP, VGIS, VSS CIRCUIT (ONLY A/T) - ITMS-6F

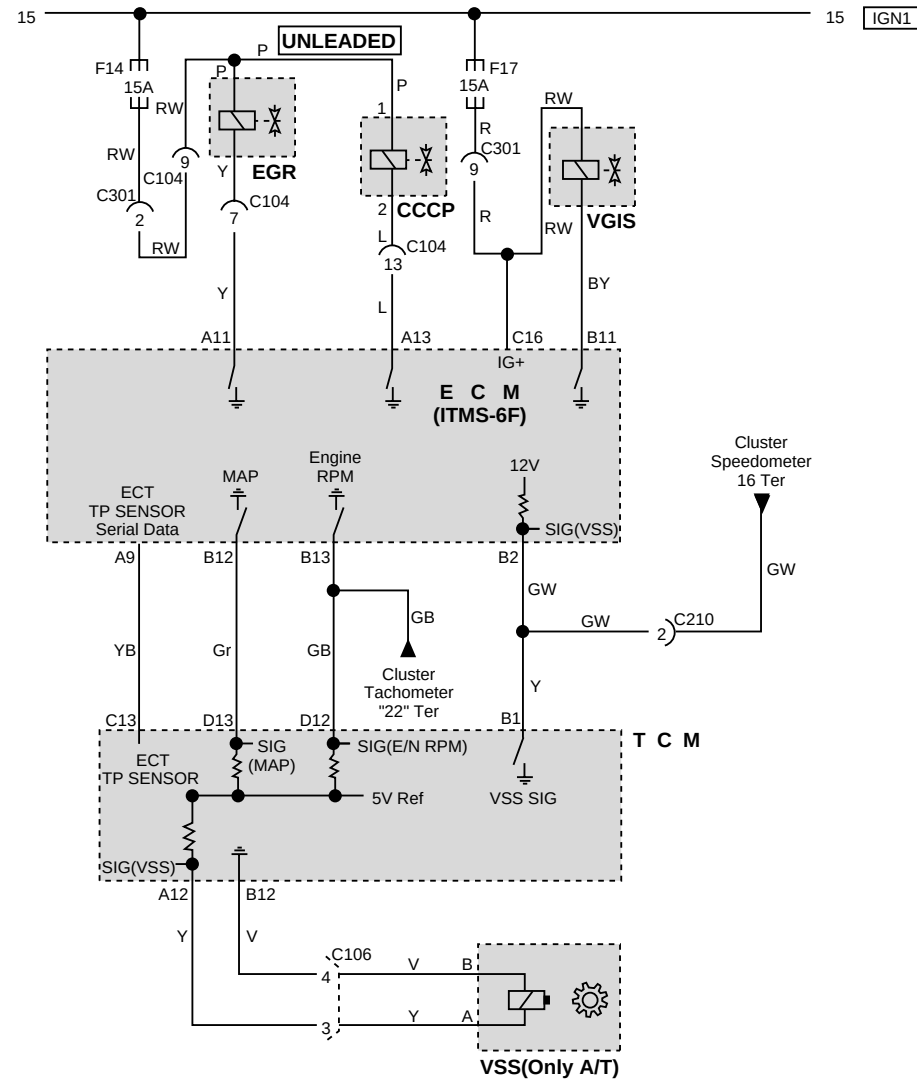

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C106 (16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C210 (20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
C301 (10PIN, WHITE)	W/H ECM & ABS -Floor	Below Co-Driver Seat

 b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




ECM(CONNECTOR: RED)

 ECM(CONNECTOR: WHITE)




TCM(CONNECTOR: PINK)

 
TCM(CONNECTOR: PINK)




C104
W/H ENGINE CONTROL

 

C106
W/H ENGINE CONTROL

 


C210
W/H IP

 


C301
W/H FLOOR

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

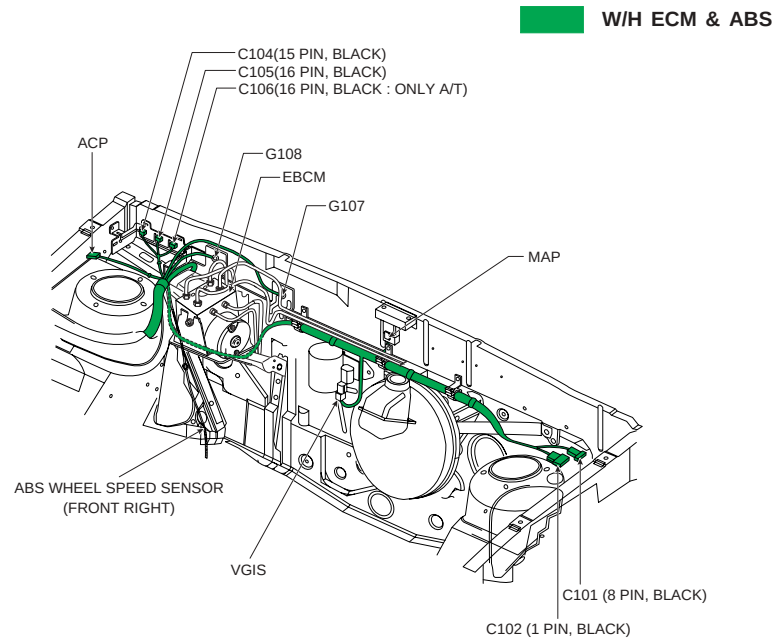


• FLOOR PANEL

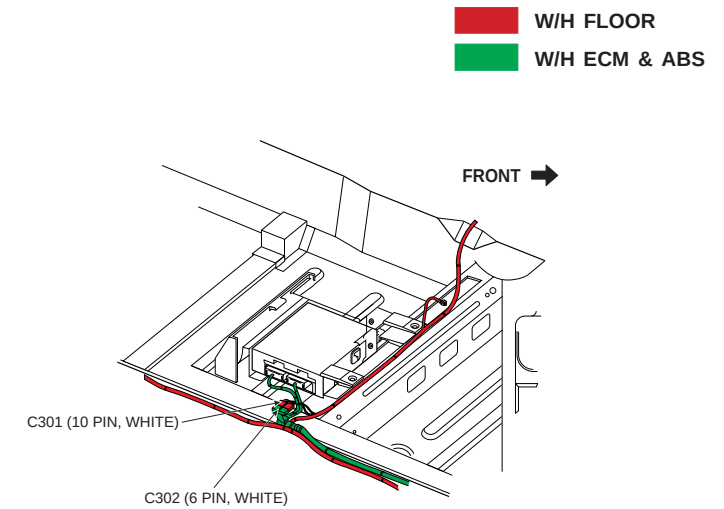

• PASSENGER ROOM RIGHT SIDE PANEL

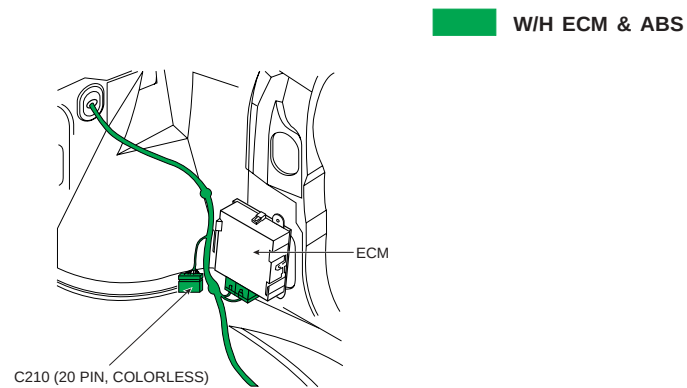


7) MIL LAMP, PNP SWITCH, DLC CONNECTOR CIRCUIT - ITMS-6F (LHD)

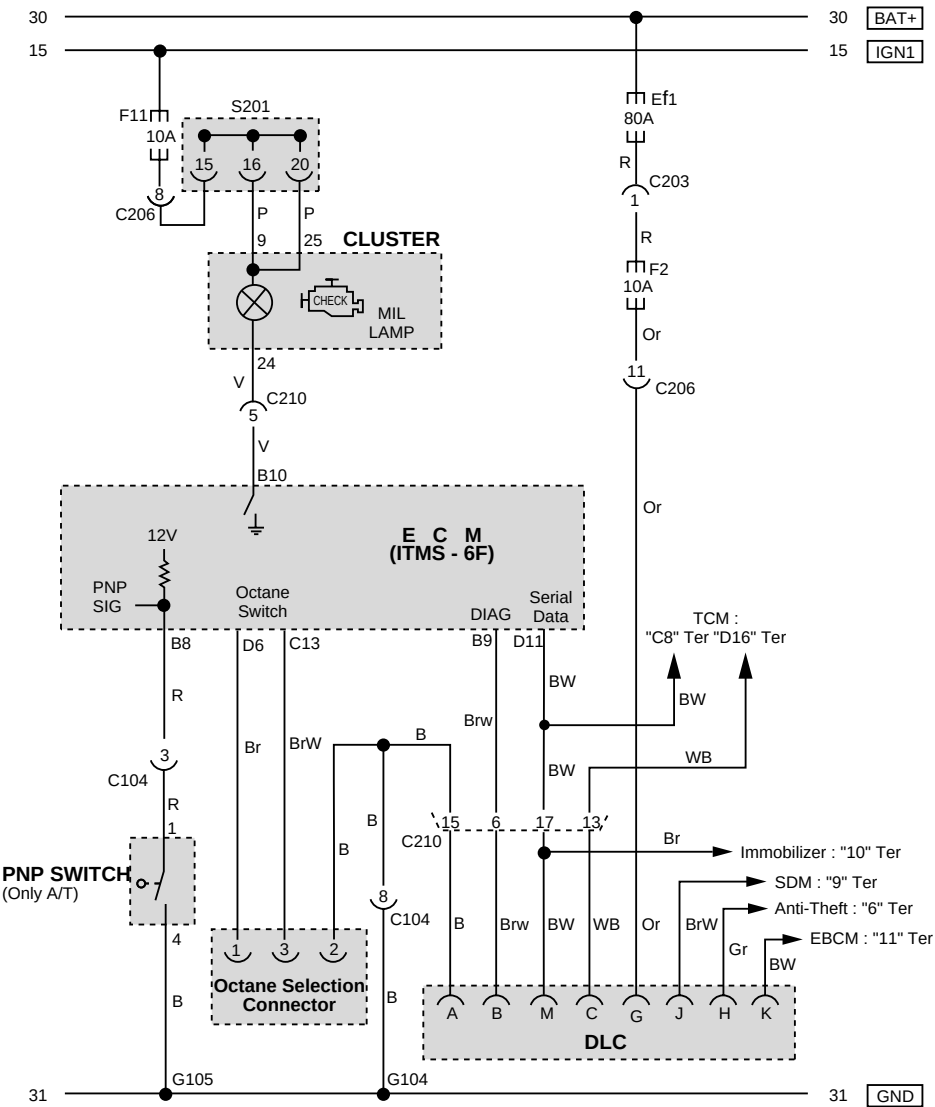

a. CONNECTOR INFORMATION


CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN. BLACK)	W/H ECM & ABS -Engine Control	Behind Right Strut Mousing
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Realy Box
G104	Ground	Intake Manifold '#4' Cylinder
G105	Ground	Above Flywheel Mousing

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

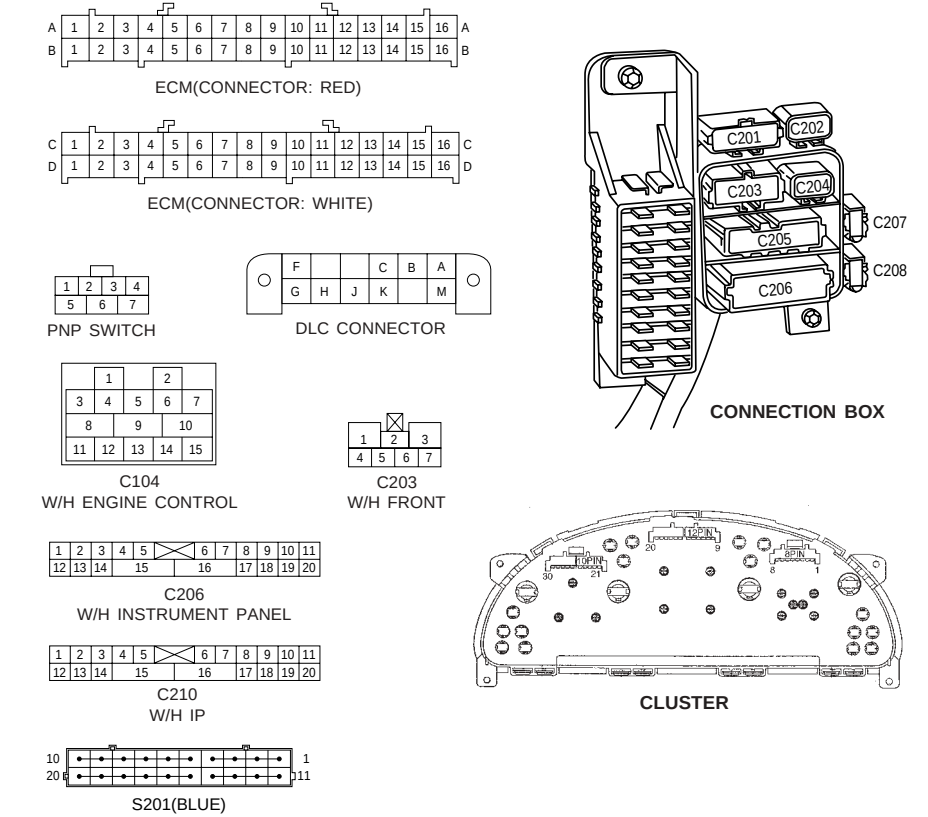


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

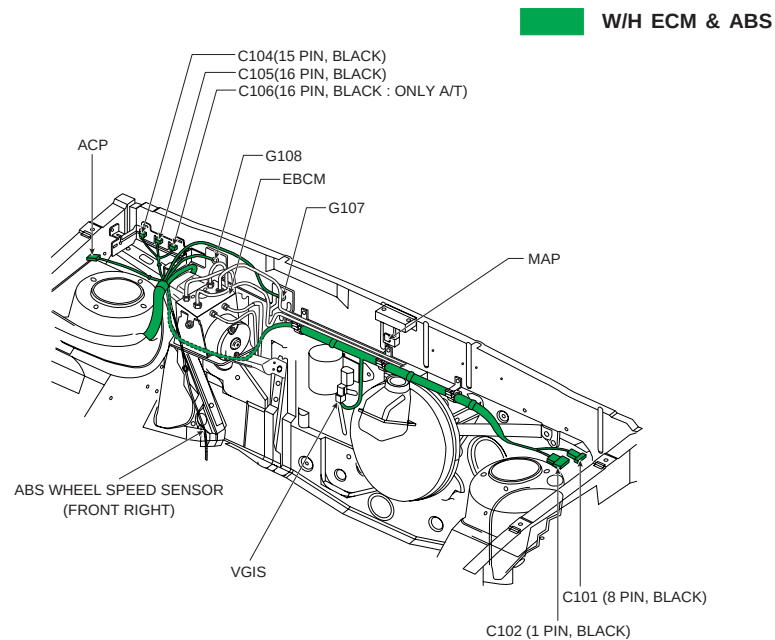


• PASSENGER ROOM RIGHT SIDE PANEL

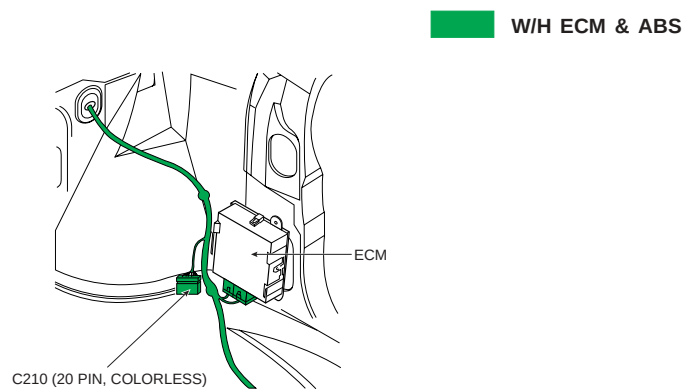


d. SPLICE PACK

S201(BLUE) - LHD

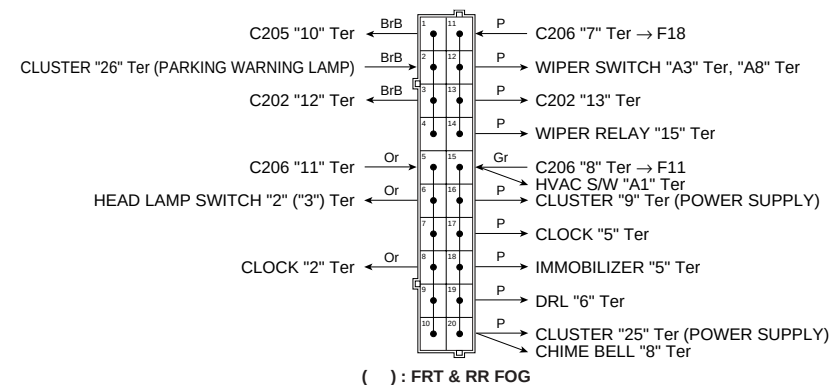


8) MIL LAMP, PNP SWITCH, DLC CONNECTOR CIRCUIT - ITMS-6F (RHD)

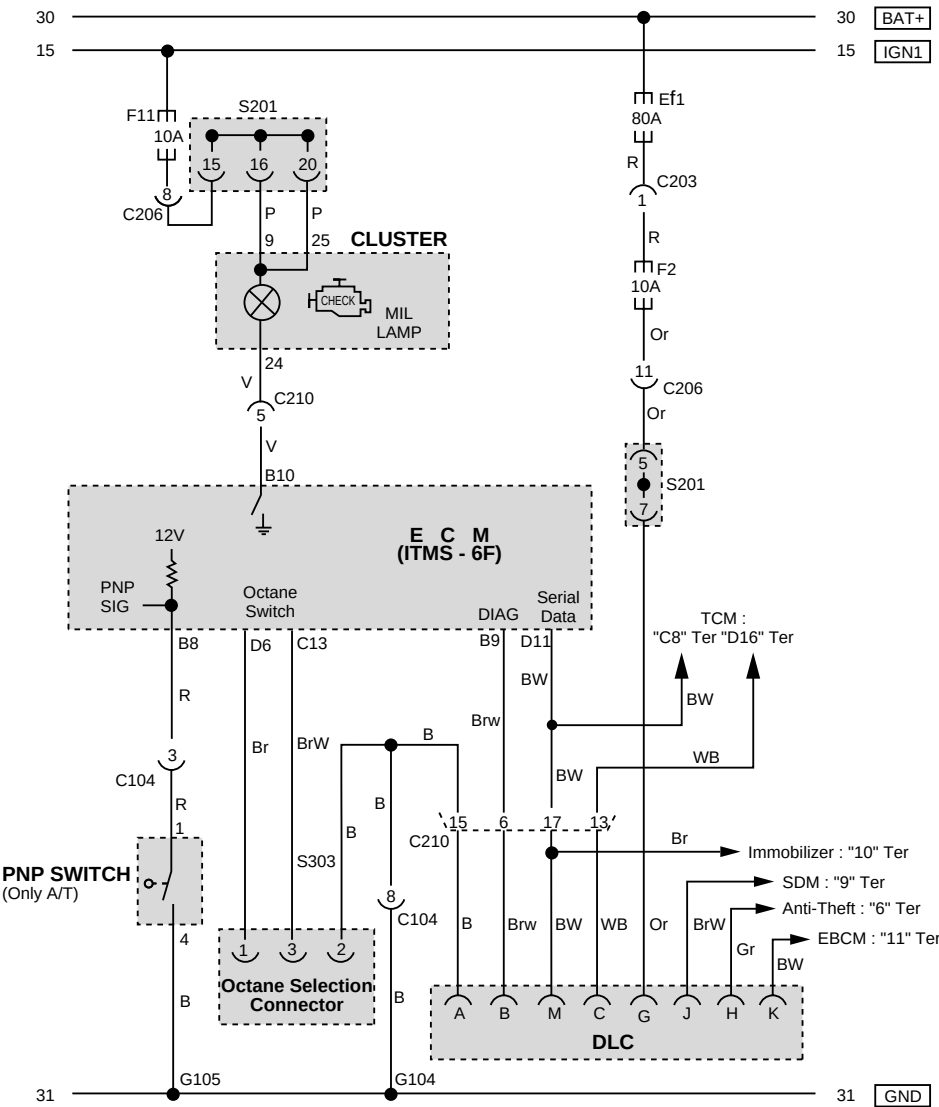

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN. BLACK)	W/H ECM & ABS -Engine Control	Behind Right Strut Mousing
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Realy Box
G104	Ground	Intake Manifold '#4' Cylinder
G105	Ground	Above Flywheel Mousing

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

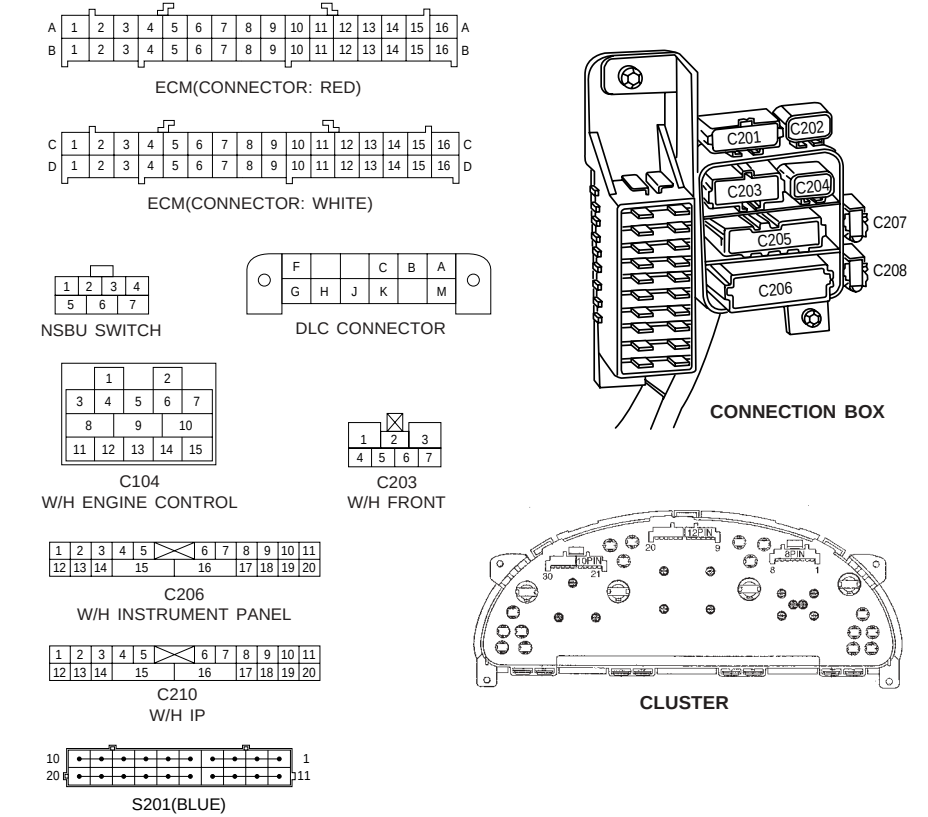


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

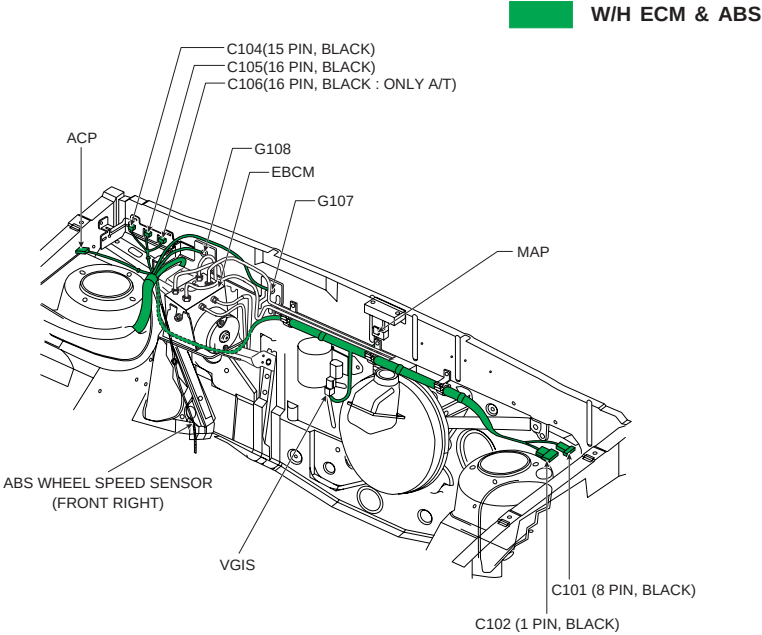


• PASSENGER ROOM RIGHT SIDE PANEL

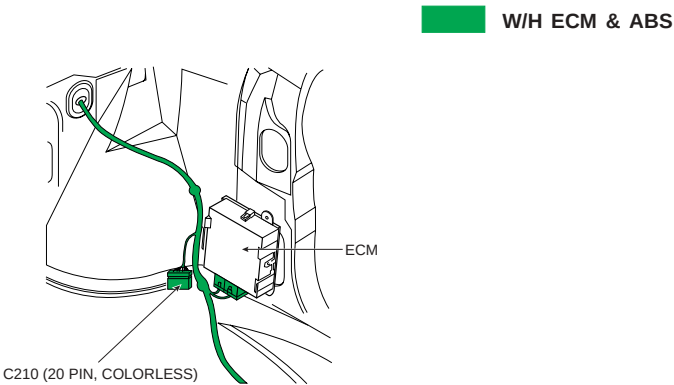


d. SPLICE PACK

S201(BLUE) - RHD

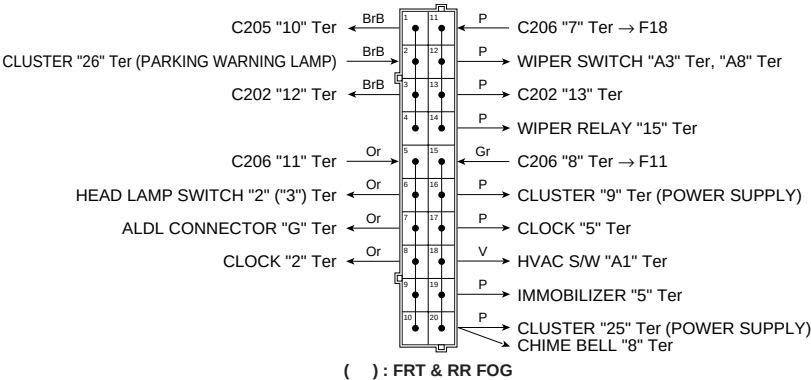

4. ECM (ENGINE CONTROL MODULE) : MR-140


1) BATTERY POWER SUPPLY & GROUND, EI SYSTEM, CKP, CMP CIRCUIT

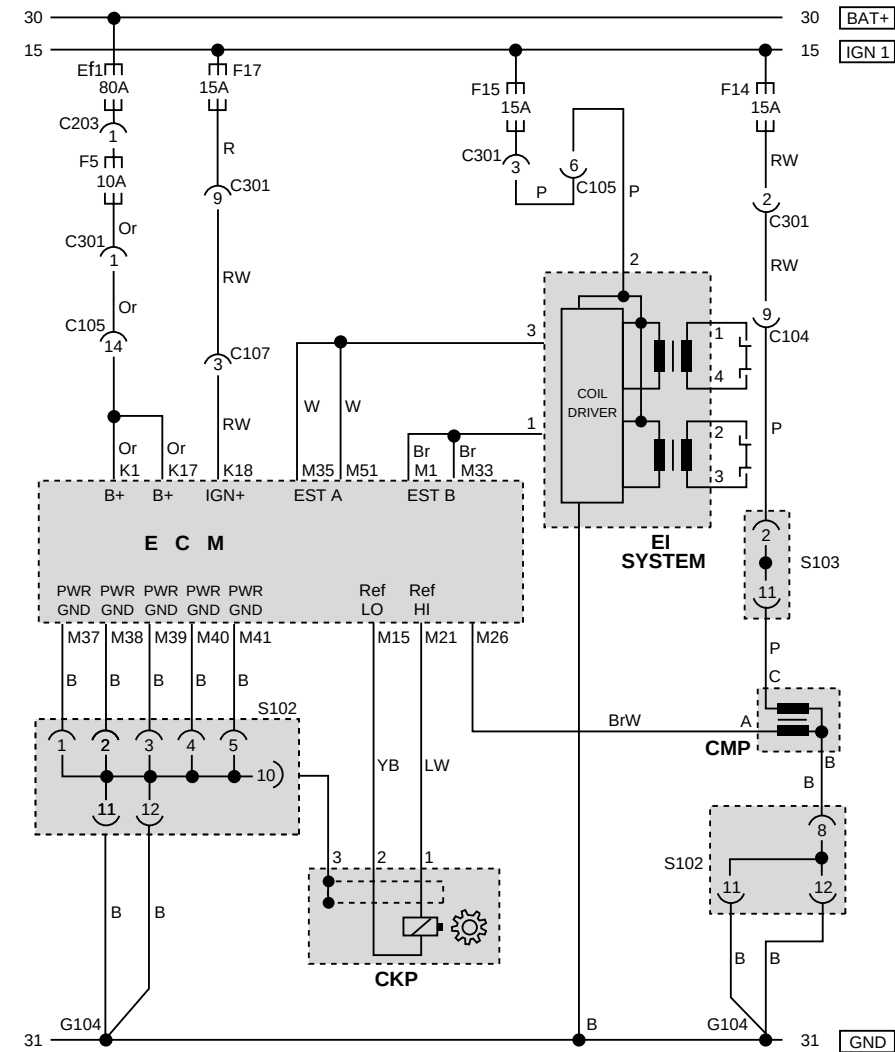

a. CONNECTOR INFORMATION


CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C107(10PIN, BLACK)	W/H Engine Control - Injector	Behind Right Strut Mounting
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C301(10PIN, WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
S102(14PIN, VIOLET)	W/H Engine Control	Under the intake Manifold
S103(14PIN, VIOLET)	W/H Engine Control	Behind Intake Manifold
G104	Ground	Intake Manifold '#4' Cylinder

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

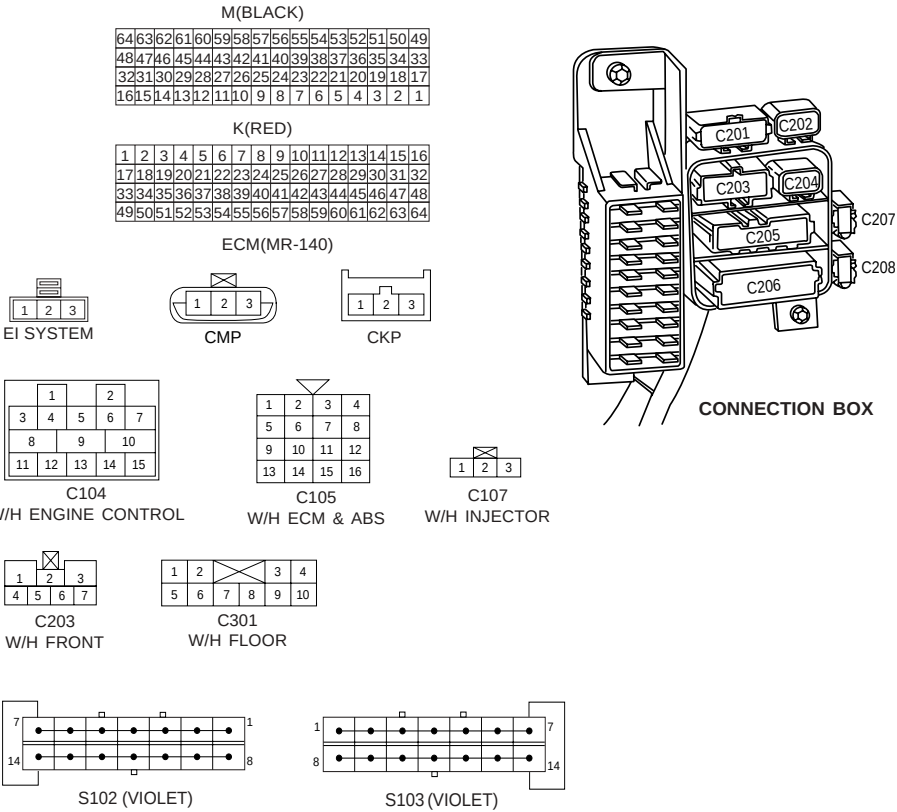


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

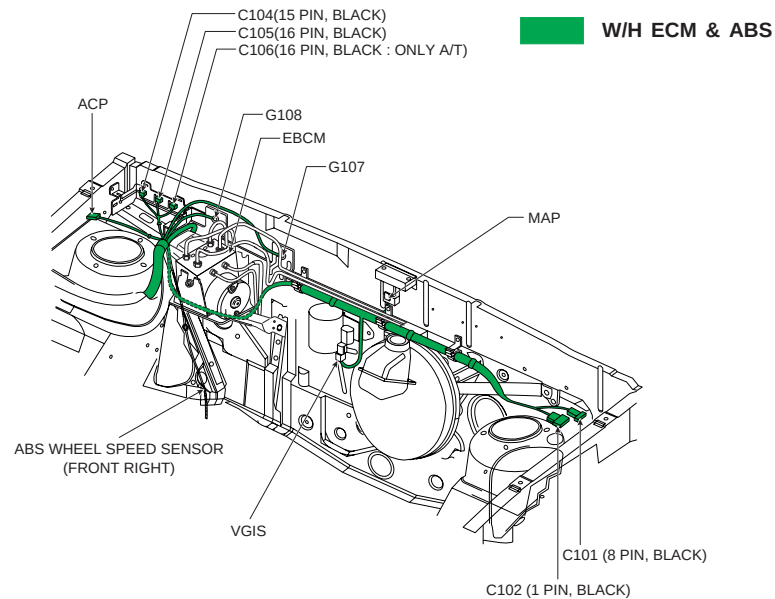


• SOHC ENGINE

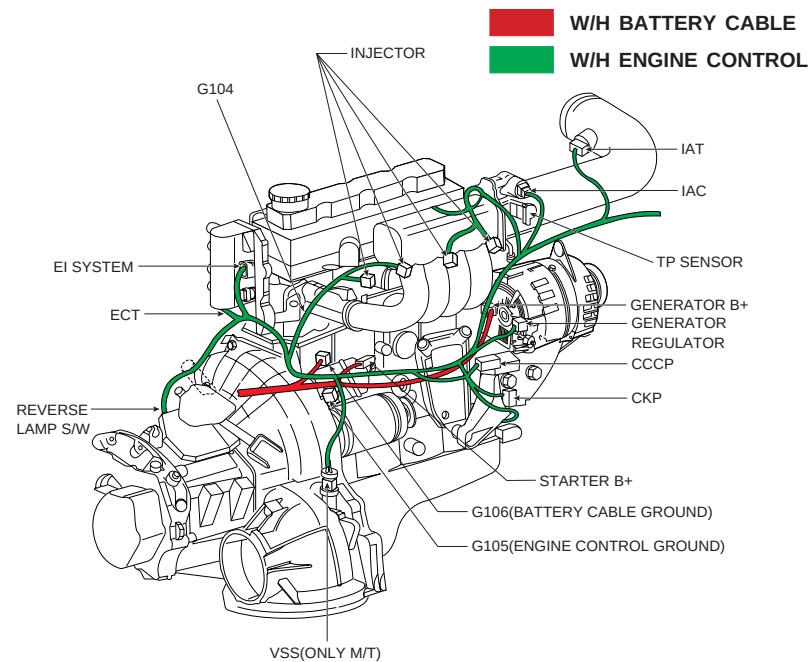

d. SPLICE PACK

S102(VIOLET)

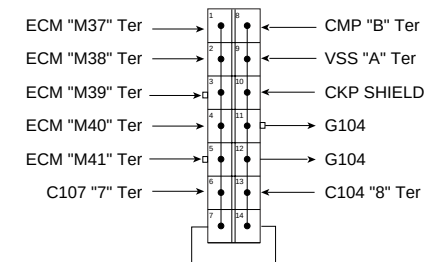

S103(VIOLET)

