



5) FUEL LEVEL UNIT CIRCUIT

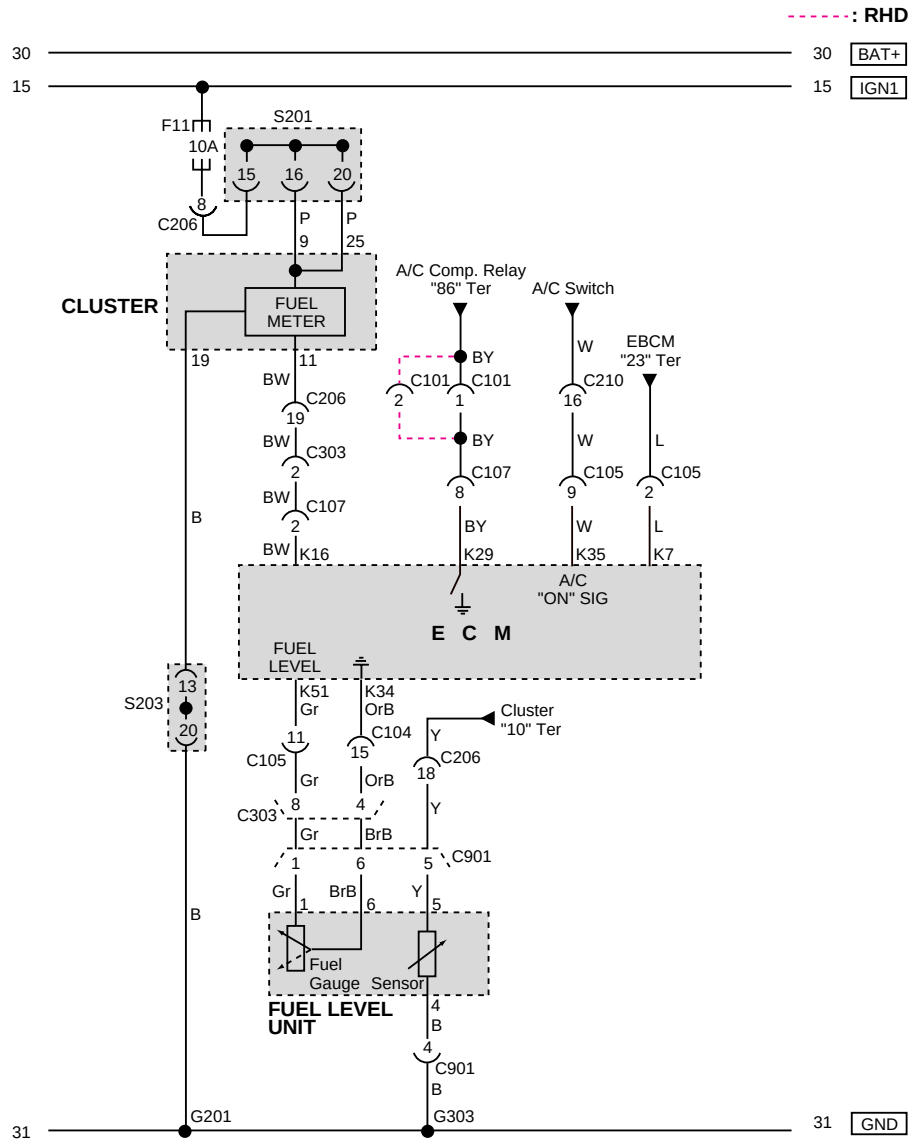

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101(6PIN, BLACK)	W/H ECM & ABS - Front	Behind Right Strut Mounting
C104(15PIN, BLACK)	W/H ECM & ABS - Front	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Front	Behind Right Strut Mounting
C107(10PIN, BLACK)	W/H Engine Control - Injector	Behind Right Strut Mounting
C206(20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next To Passenger Room Fuse Box
C210(20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)
C303(8PIN, WHITHE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
C901(6PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
S102(14PIN, VIOLET)	W/H Engine Control	Under the intake Manifold
S103(14PIN, VIOLET)	W/H Front	Behind Intake Manifold
S201(20PIN, BLUE)	W/H IP	Next to Passenger Room Relay Box
S203(20PIN, RED)	W/H IP	Next to Passenger Room Relay Box
G104	W/H Engine Control	Intake Manifold '4' Cylinder
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

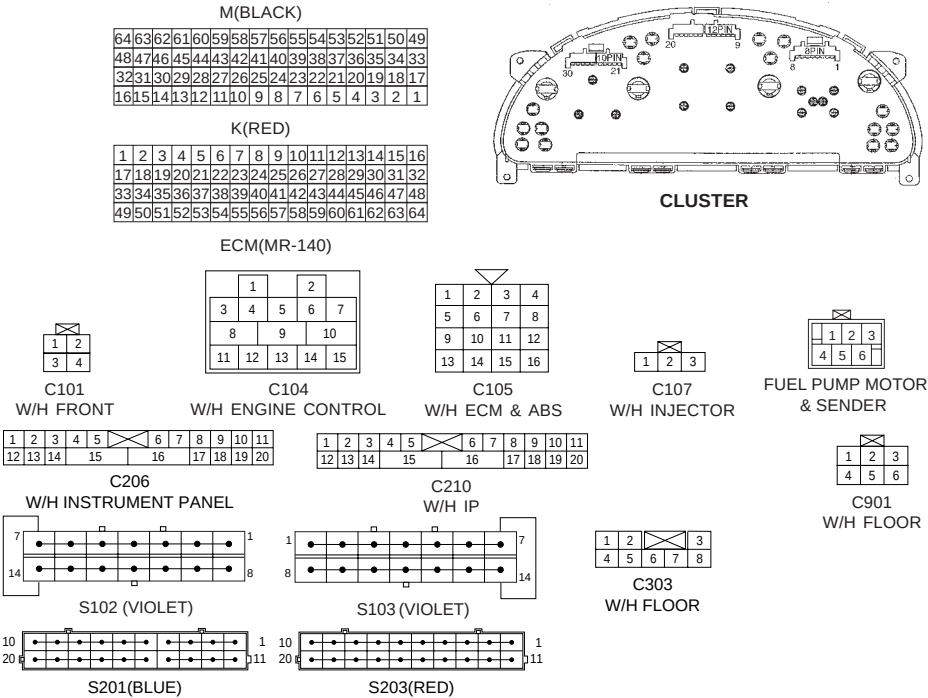


c. POSITION OF CONNECTORS AND GROUNDS

- **UNDER BODY**

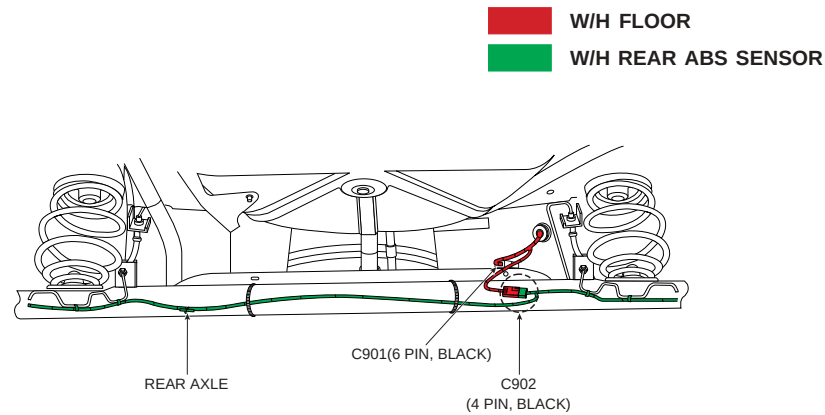


d. SPLICE PACK


S102(VIOLET)

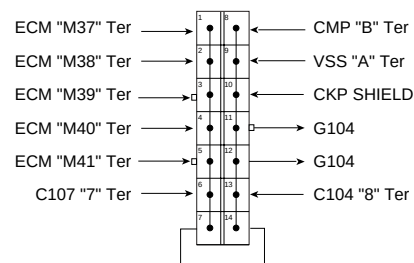


S103(VIOLET)

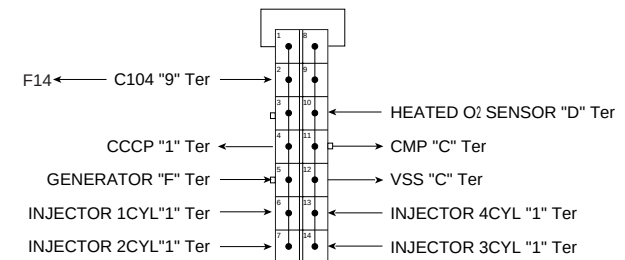


S201(BLUE) - LHD

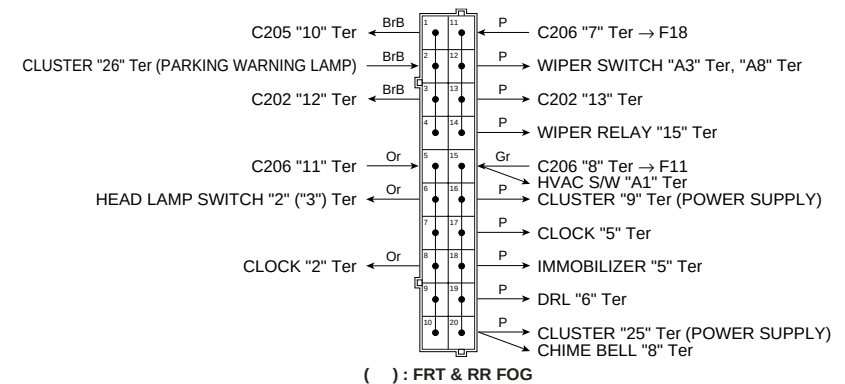

S203(RED) - LHD

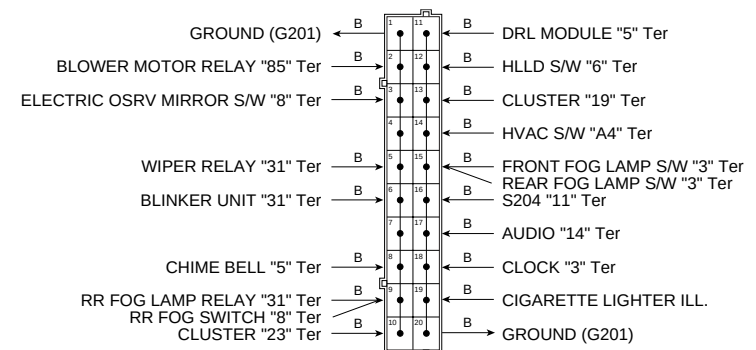


6) MIL, DLC CIRCUIT

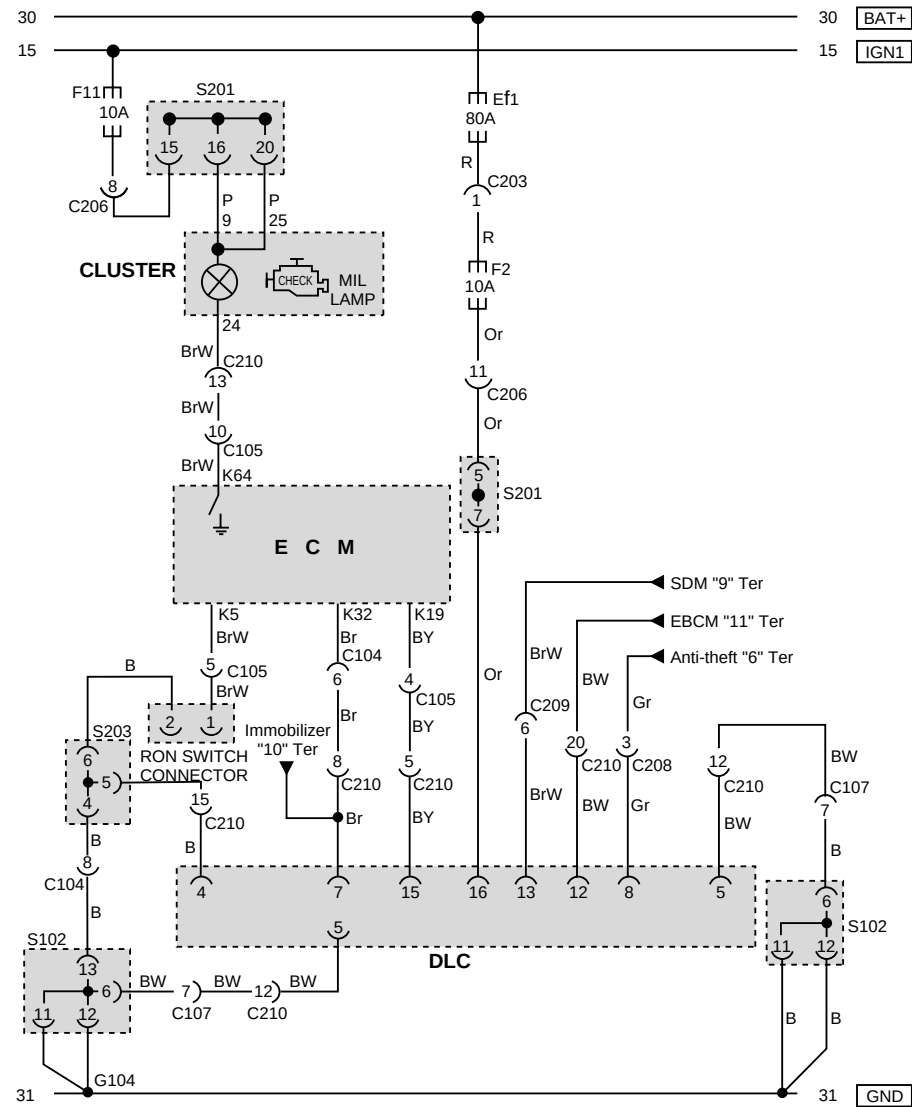

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN, BLACK)	W/H ECM & ABS - Front	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Front	Behind Right Strut Mounting
C107(10PIN, BLACK)	W/H Engine Control - Injector	Behind Right Strut Mounting
C203(7PIN, BROWN)	W/H Front - Floor	Connection Box Next To Passenger Room Fuse Box
C206(20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next To Passenger Room Fuse Box
C208(8PIN, WHITHE)	W/H Floor - IP	Connection Box Next To Passenger Room Fuse Box
C209(6PIN, WHITHE)	W/H Air Bag - IP	Behind Left Front Console
C210(20PIN, COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)
S102(14PIN, VIOLET)	W/H Engine Control	
S201(20PIN, BLUE)	W/H IP	Next to Passenger Room Relay Box
S203(20PIN, RED)	W/H IP	Next to Passenger Room Relay Box
G104	W/H Engine Control	Intake Manifold '4' Cylinder

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

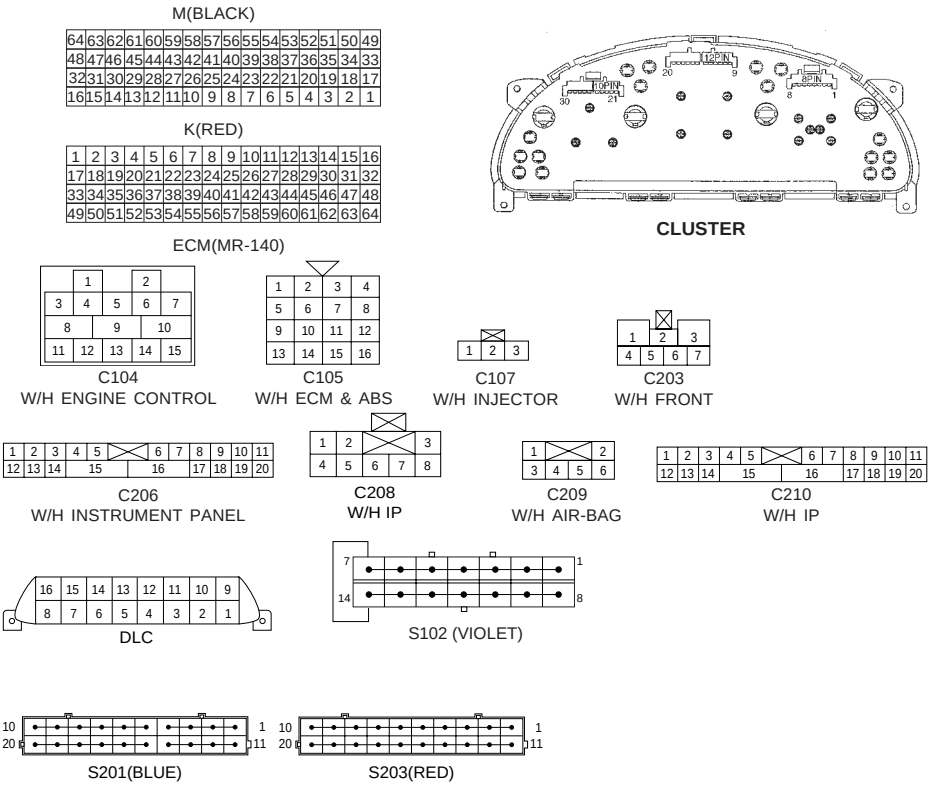


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

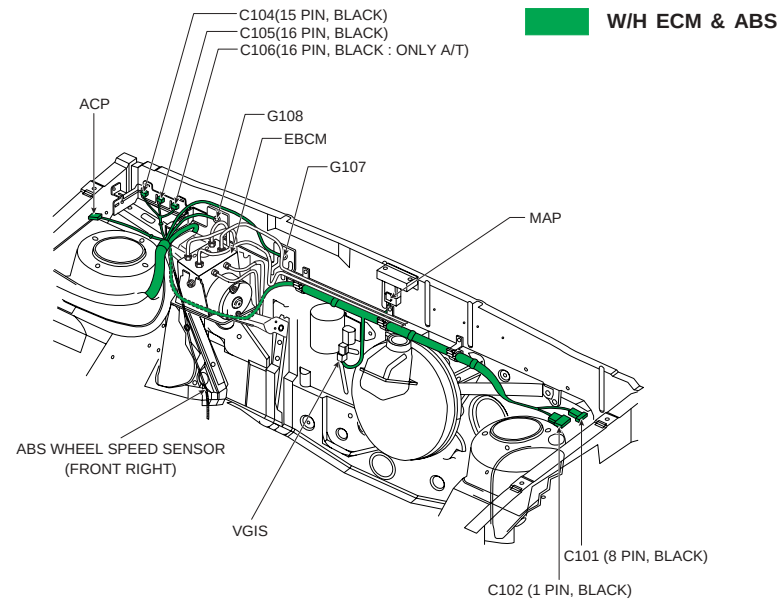


• SOHC ENGINE

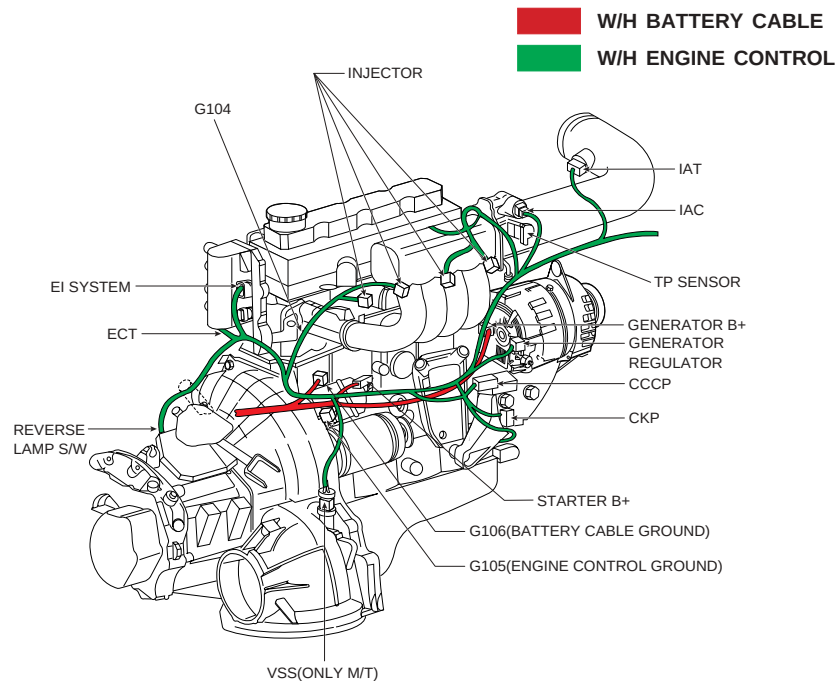


d. SPLICE PACK


S102(VIOLET)

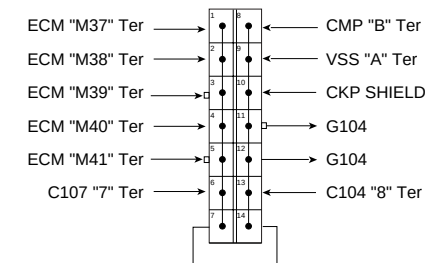

S201(BLUE) - LHD

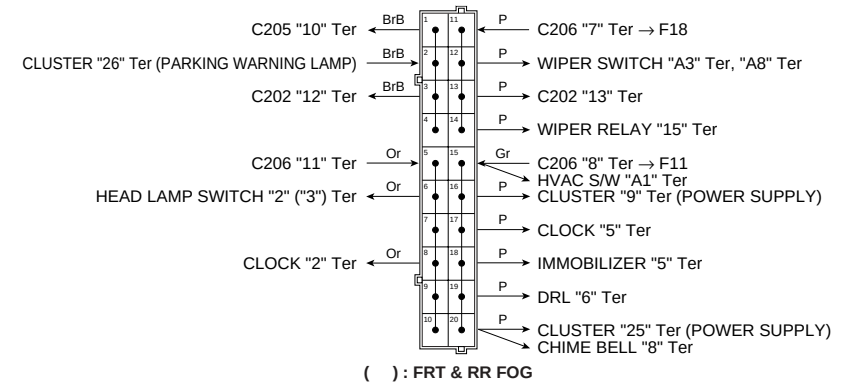


S203(RED) - LHD

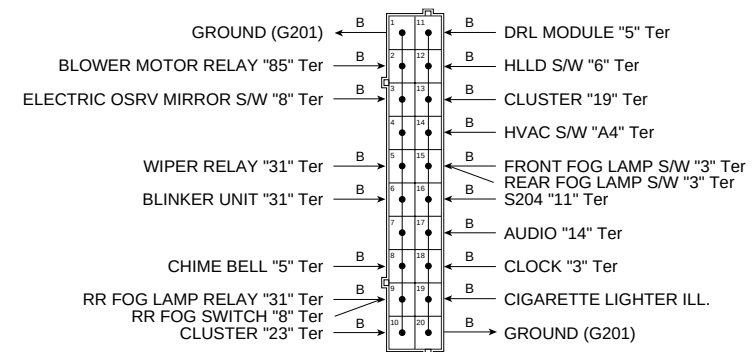

5. PCM (POWERTRAIN CONTROL MODULE) APPLICATION (IPCM-6KT)


1) BATTERY POWER SUPPLY, GROUND, EI SYSTEM & CKP CIRCUIT

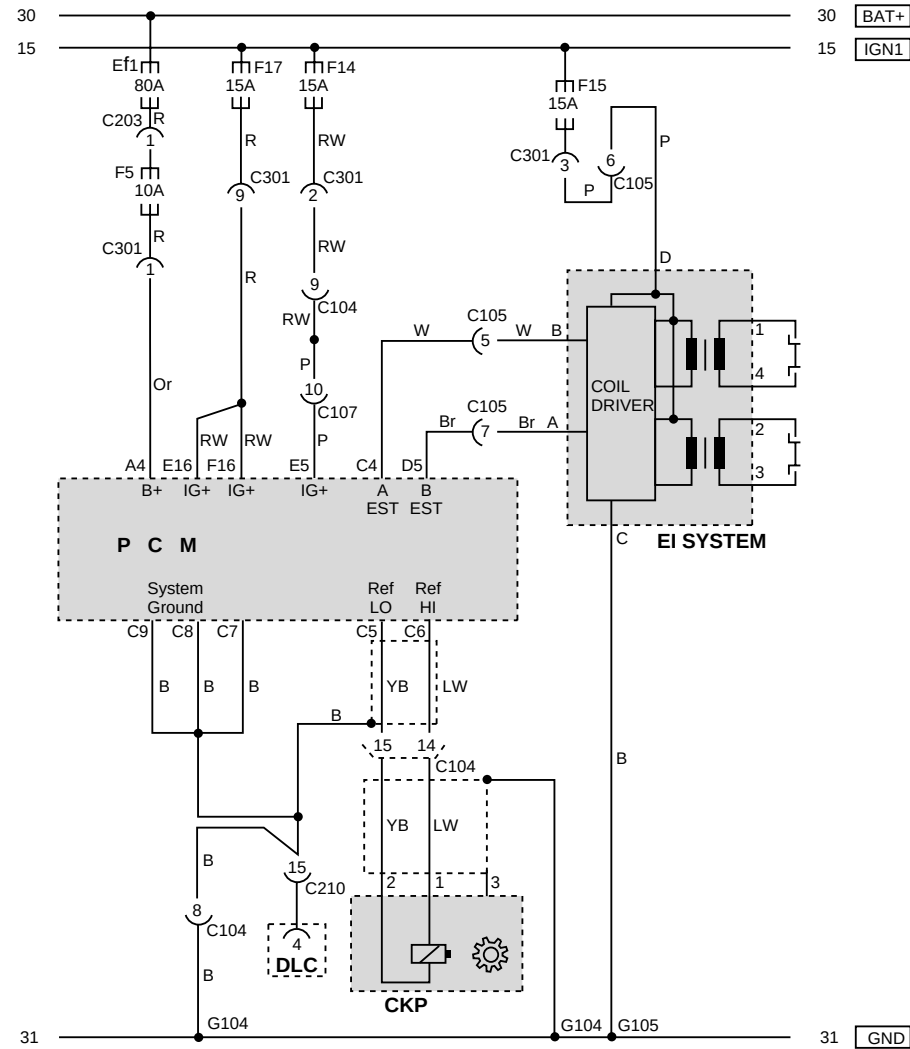

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C105 (16PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C107 (10PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C203 (7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN, COLORLESS)	W/H PCM & ABS - IP	Below Glove Box(Right Side Panel)
C301 (10PIN, WHITE)	W/H PCM & ABS - Floor	Below Co-driver Seat
G104	W/H Engine Control	Intake Manifold '4' Cylinder
G105	W/H Engine Control	Above Flywheel Housing

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

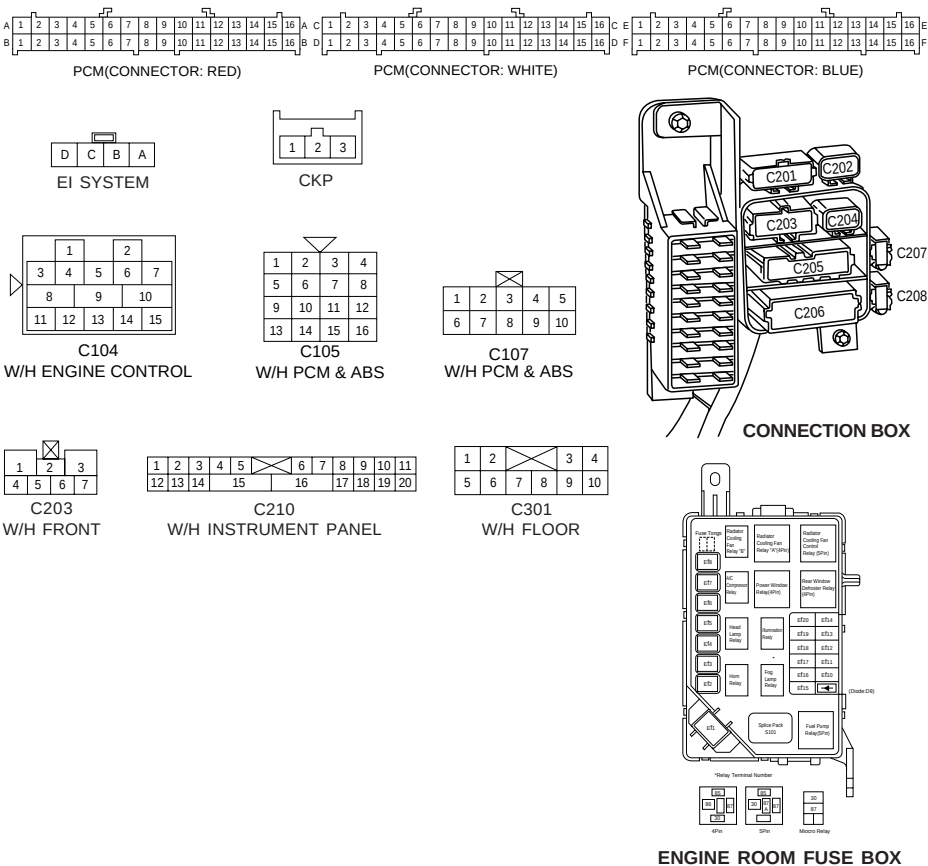


c. POSITION OF CONNECTORS AND GROUNDS


• DOHC ENGINE

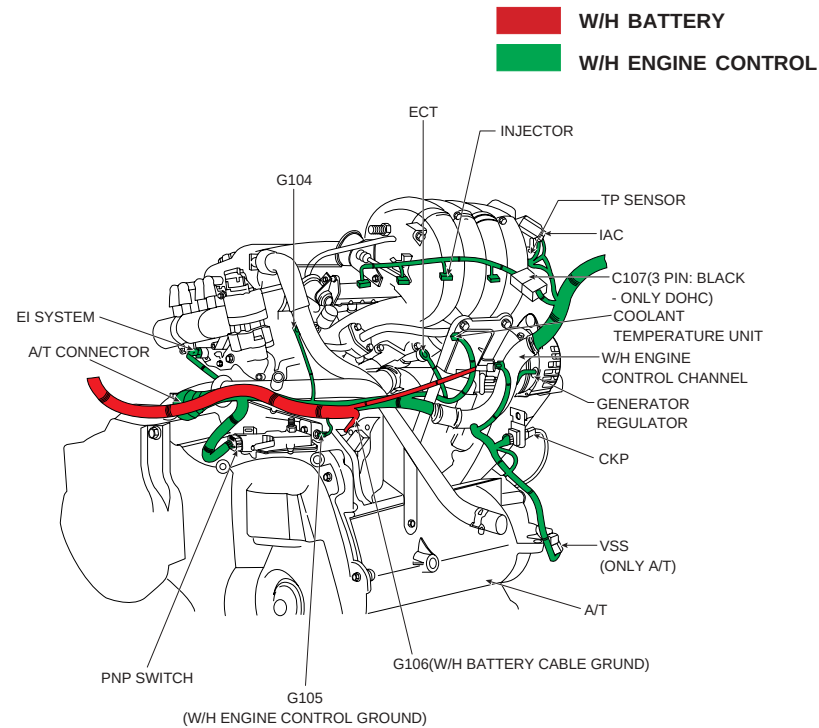


• ENGINE ROOM INSIDE

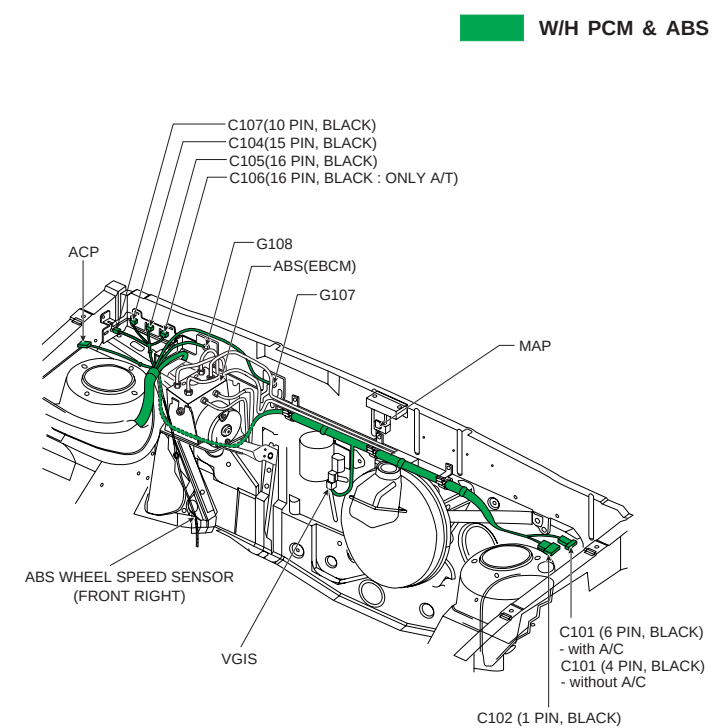

• PASSENGER ROOM RIGHT SIDE PANEL

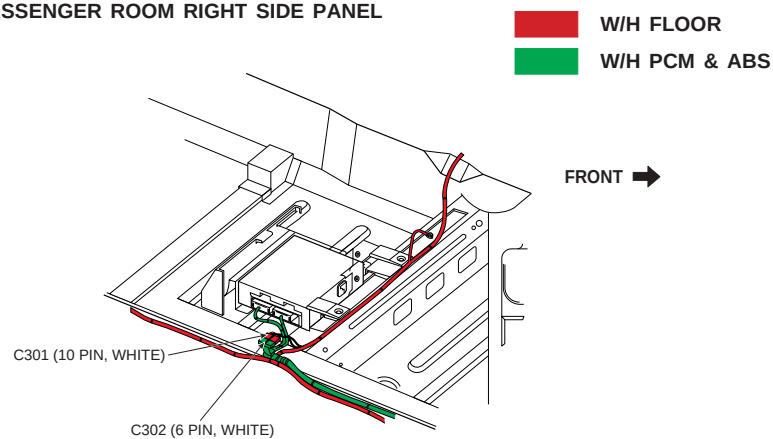


2) FUEL PUMP, INJECTOR & IAC CIRCUIT

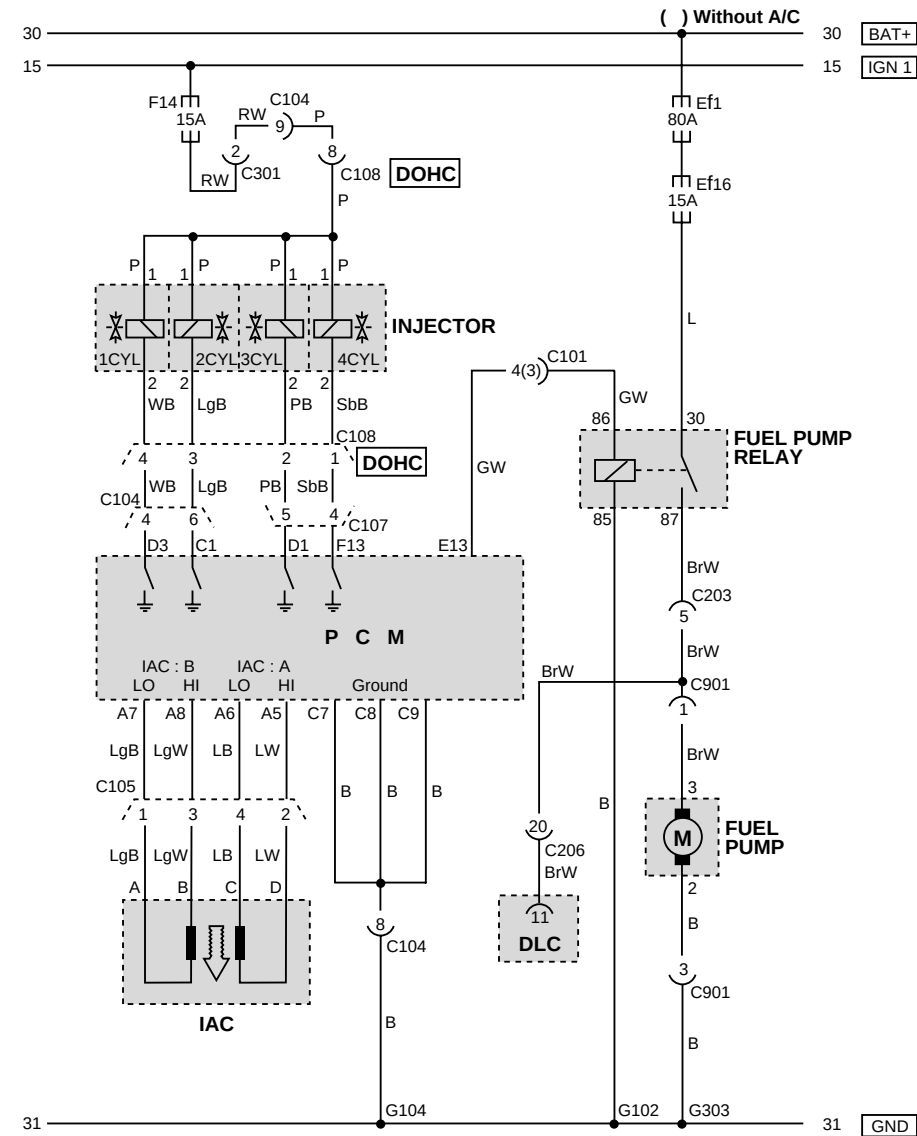

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (6PIN, BLACK)	W/H PCM & ABS - Front (with A/C)	Below Engine Coolant Surge Tank
C101 (4PIN, BLACK)	W/H PCM & ABS - Front (without A/C)	Below Engine Coolant Surge Tank
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C105 (16PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C107 (10PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C108 (8PIN, BLACK)	W/H Engine Control - Injector (DOHC Only)	Below Throttle Valve Body
C203 (7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C301 (10PIN, WHITE)	W/H PCM & ABS - Floor	Below Co-driver Seat
C901 (10PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank
G102	W/H Front	Fender Below Engine Room Fuse Box
G104	W/H Engine Control	Intake Manifold '#4' Cylinder
G303	W/H Floor	Below Co-driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

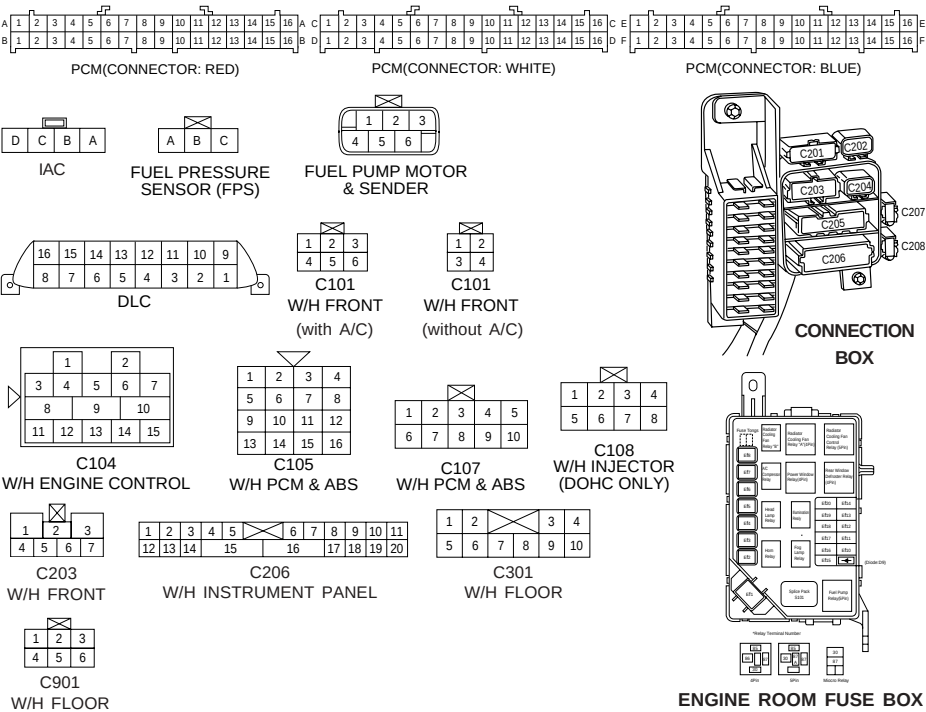


c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

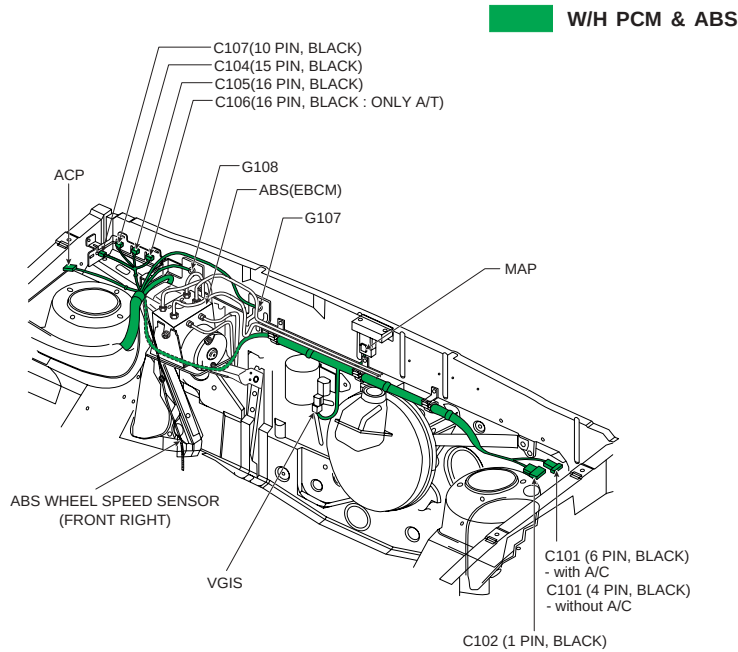

• W/H FLOOR, FUEL TANK

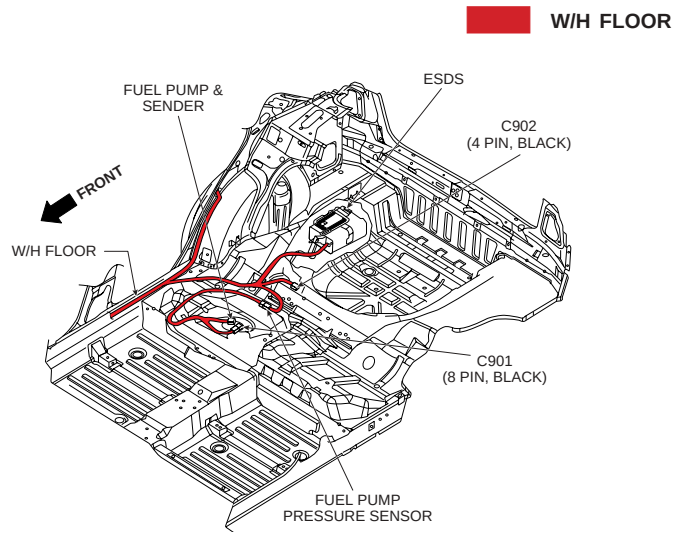

• DOHC ENGINE

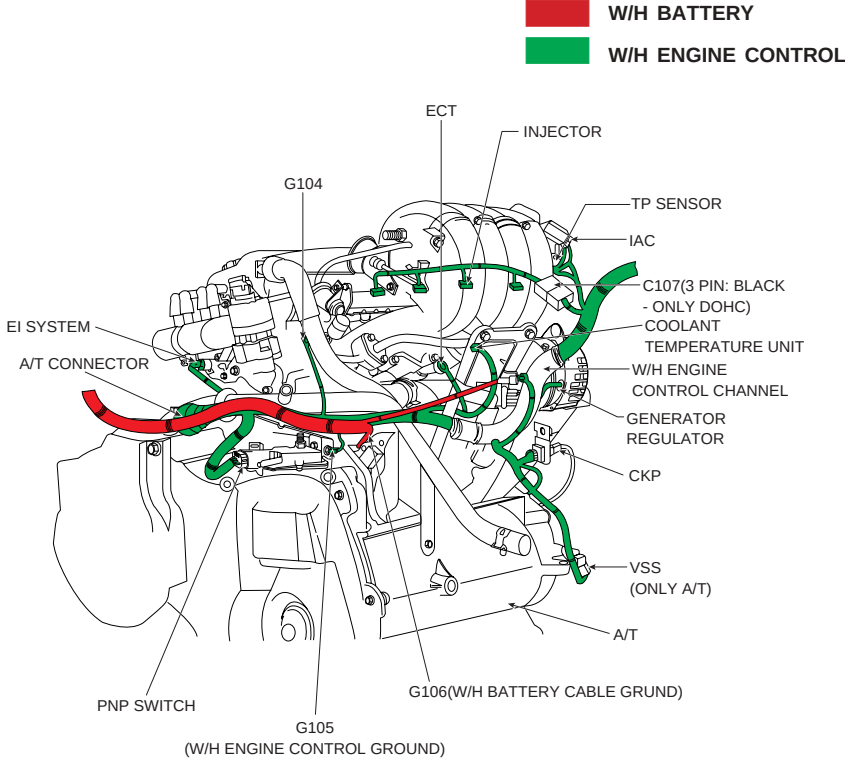


d. SPLICE PACK

S101 (BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)

- C204 "3" Ter (I/G(15A) F19:POWER SUPPLY)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY (E14)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9 : ENGINE ROOM FUSE BOX)
POWER WINDOW RELAY "85" Ter (Without A/C)
- GROUND (G102)
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter


3) MAP, ACP, IAT, LEGR, ECT, TP SENSOR, FPS, FUEL GAUGE & SENSOR
(TRANSMISSION FLUID TEMP', ROUGH ROAD, KNOCK) CIRCUIT

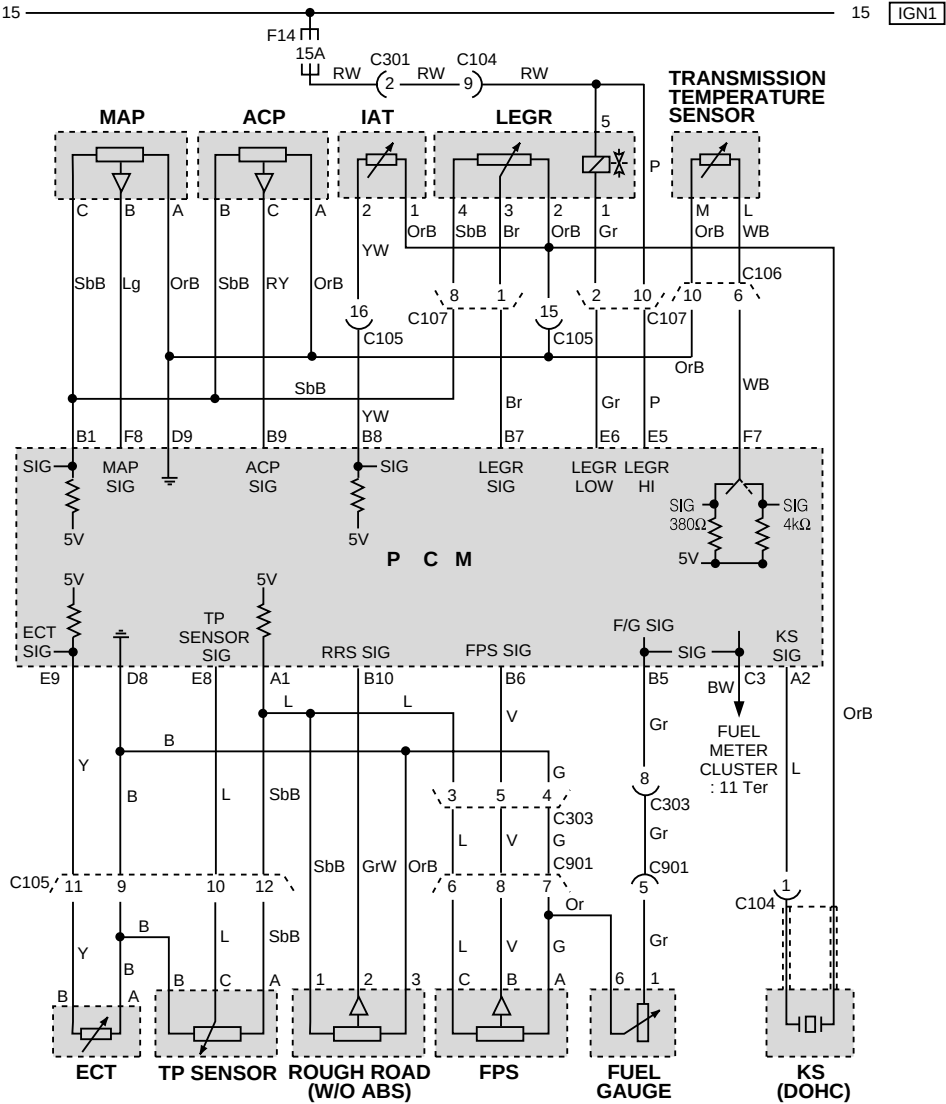

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C105 (16PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C106 (16PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C107 (10PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C301 (10PIN, WHITE)	W/H PCM & ABS - Floor	Below Co-driver Seat
C303 (8PIN, WHITE)	W/H PCM & ABS - Floor	Below Co-driver Seat
C901 (8PIN, BLACK)	W/H Floor - Fuel Tank	Behind Fuel Tank

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

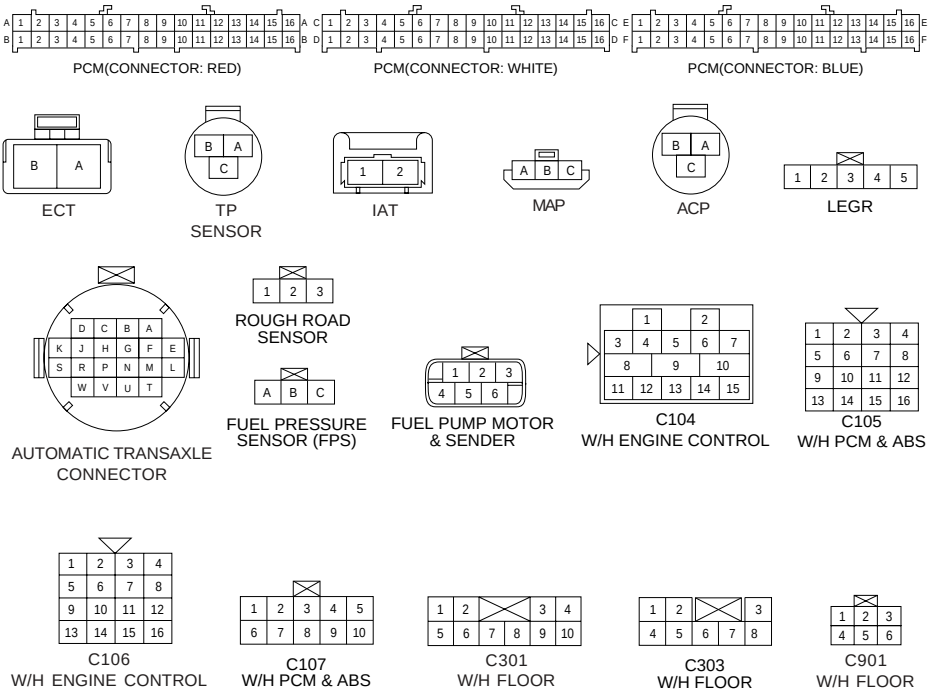


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

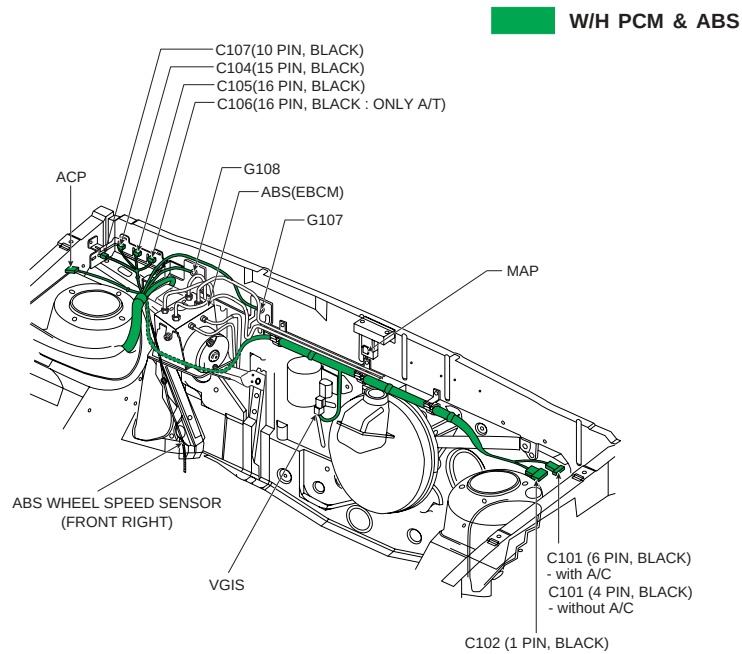

• PASSENGER ROOM RIGHT SIDE PANEL

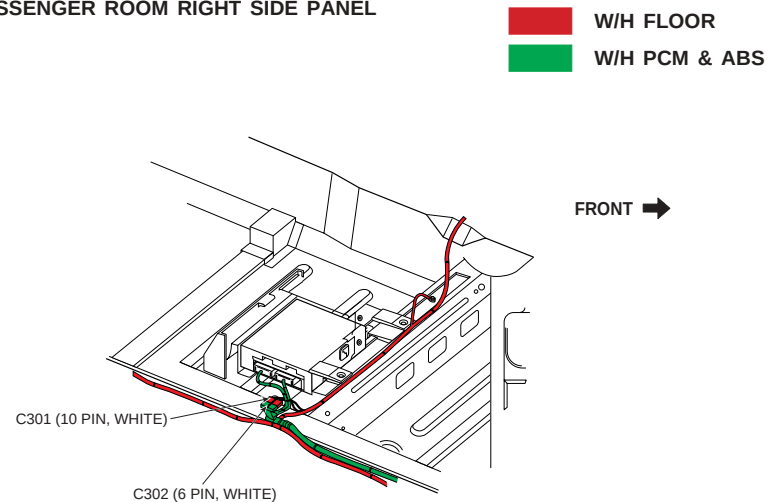

• DOHC ENGINE

