



4) SENSOR (CMP, HEATED O₂, O₂), VGIS (DOHC), ESDS & CCCP CIRCUIT

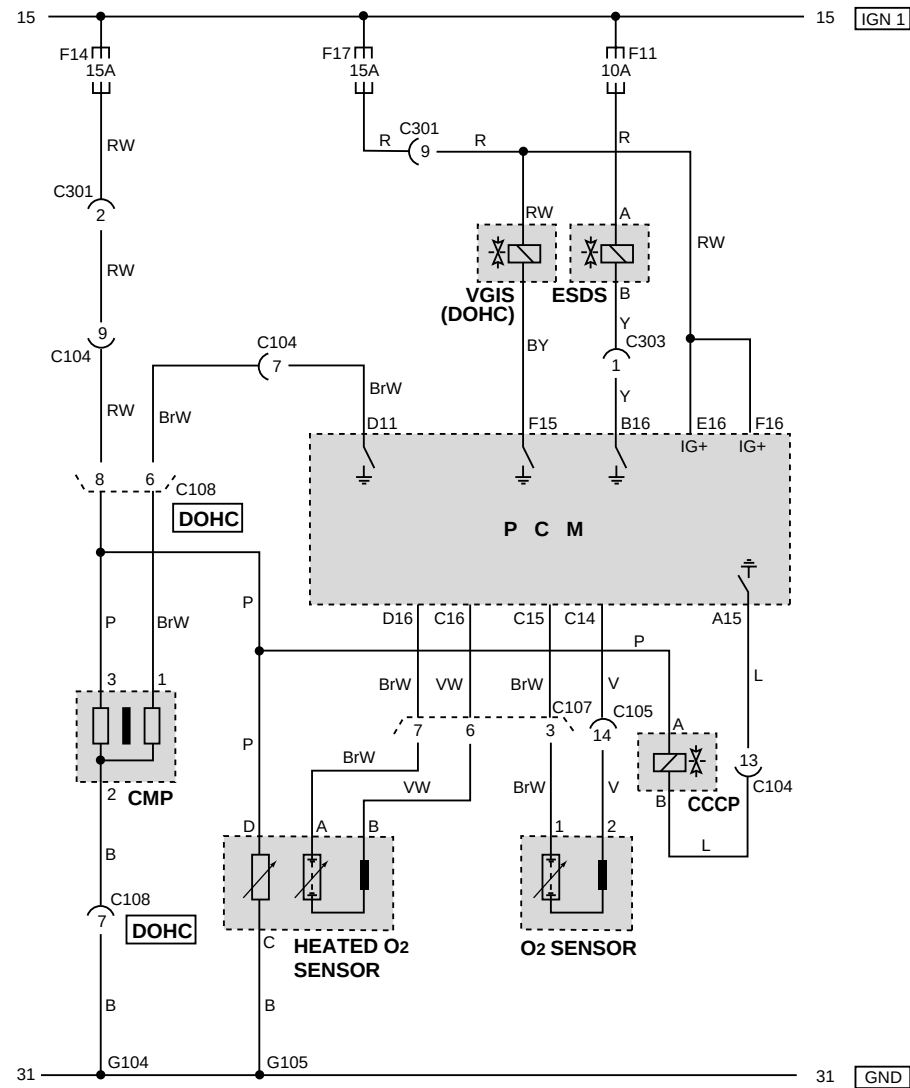

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C105 (16PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C107 (10PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C108 (8PIN, BLACK)	W/H Engine Control - Injector (DOHC Only)	Below Throttle Valve Body
C301 (10PIN, WHITE)	W/H PCM & ABS - Floor	Below Co-driver Seat
G104	W/H Engine Control	Intake Manifold '4' Cylinder
G105	W/H Engine Control	Above Flywheel Housing

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

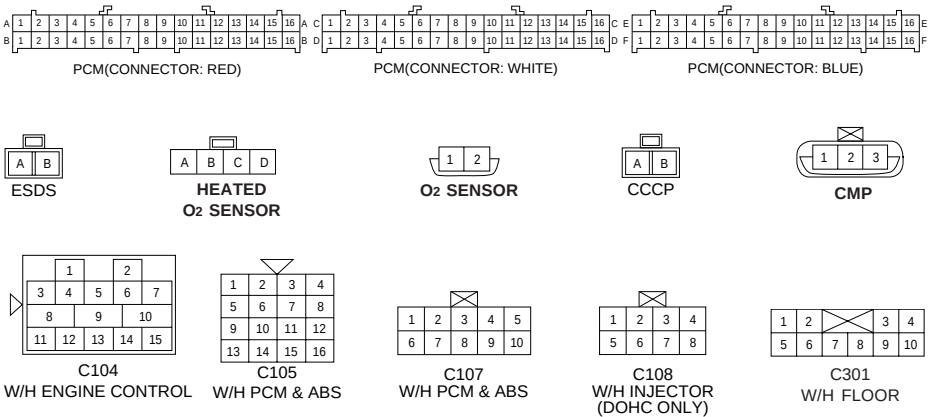


c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

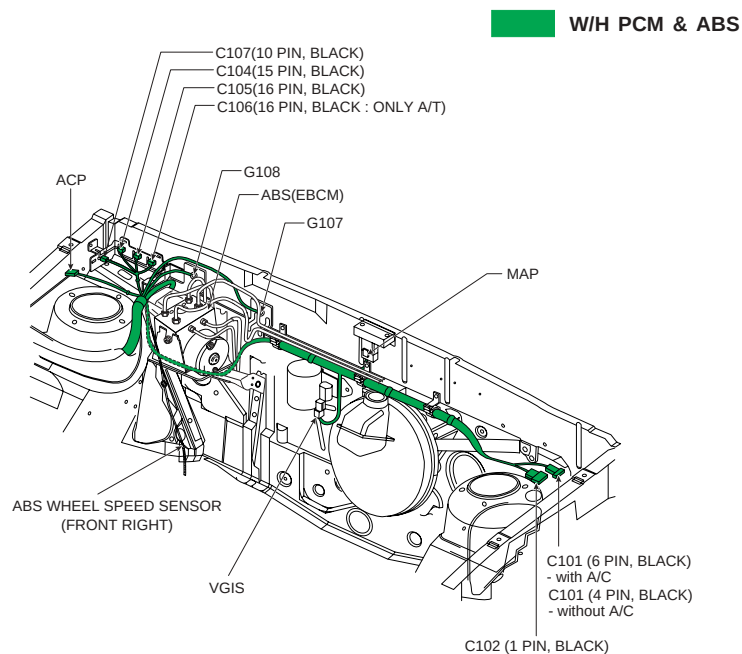


• W/H FLOOR, FUEL TANK

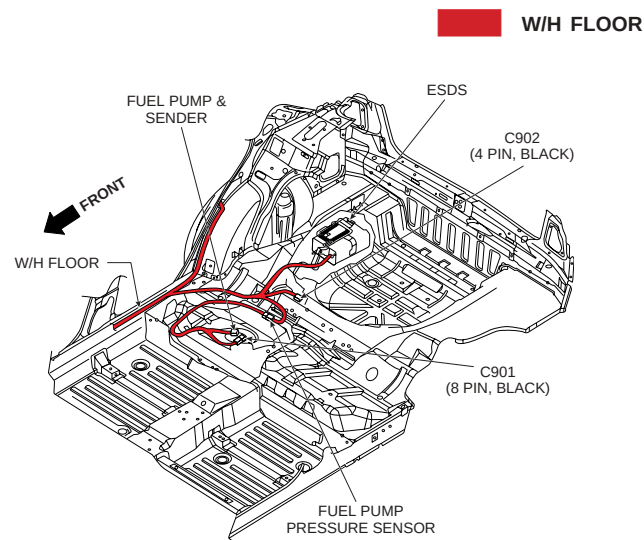

• DOHC ENGINE

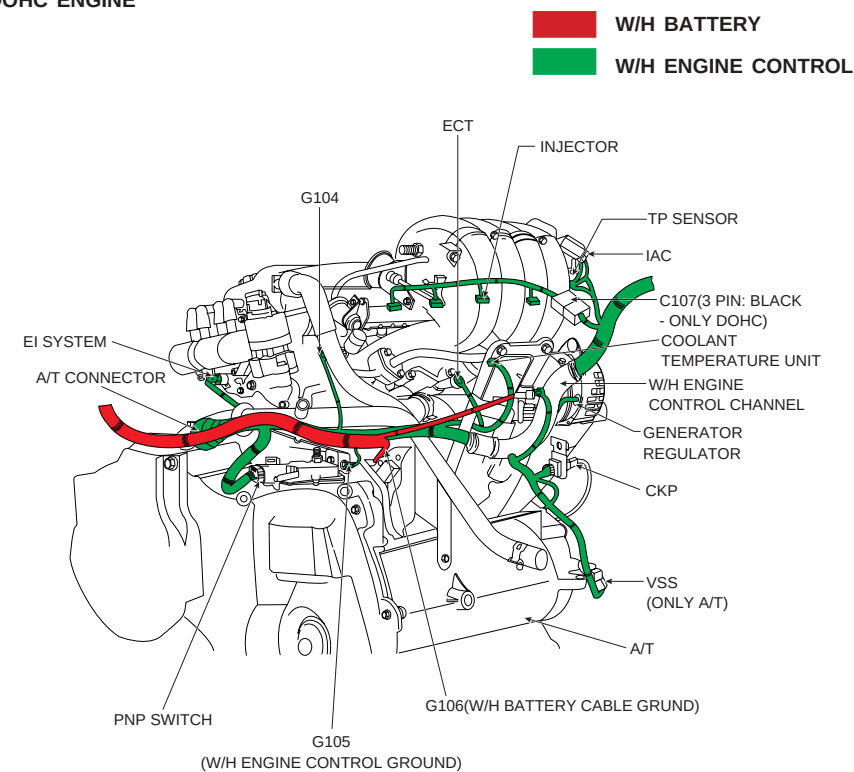


5) MIL LAMP, ENGINE HOT WARNING & DLC CIRCUIT

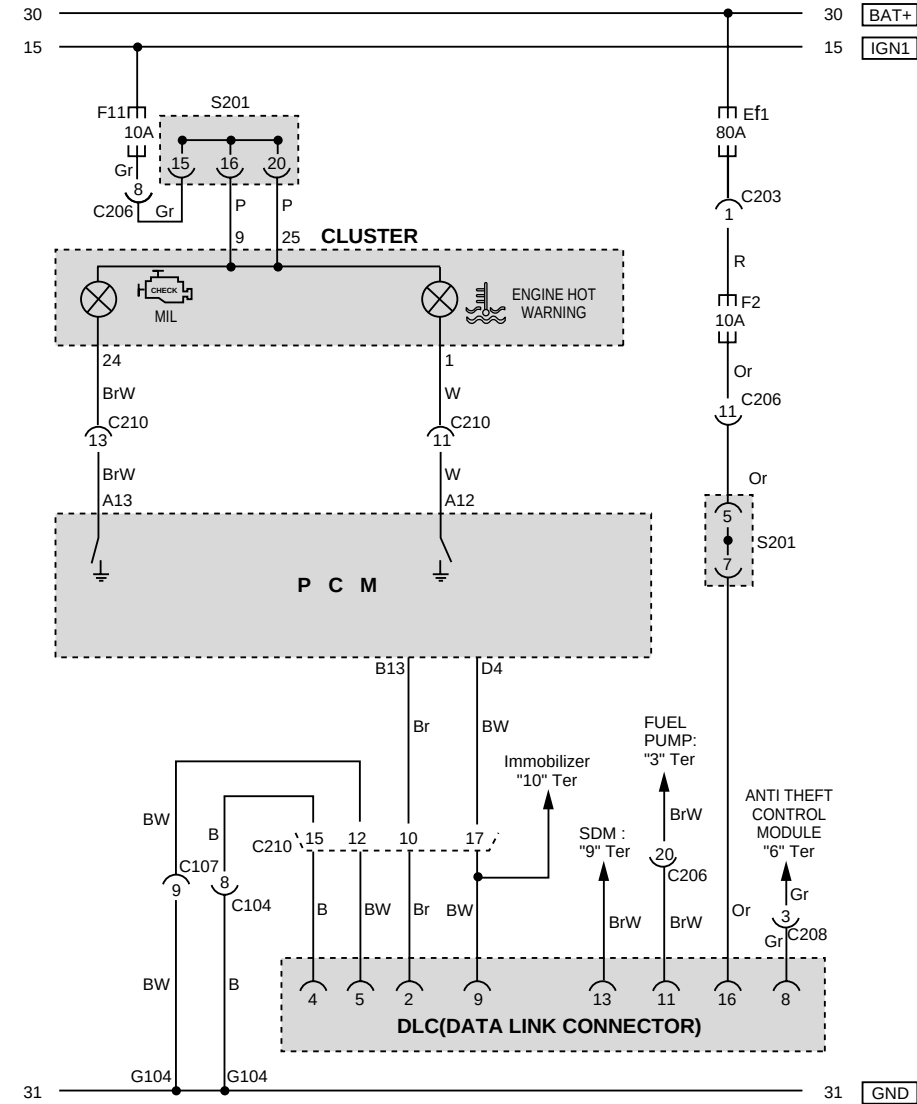

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C107 (10PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C203 (7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C208 (8PIN, WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN, COLORLESS)	W/H PCM & ABS - IP	Below Glove Box (Right Side Panel)
S201 (20PIN, BLUE)	W/H IP	Next to Passenger Room Relay Box
G104	W/H Engine Control	Intake Manifold '#4' Cylinder.

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

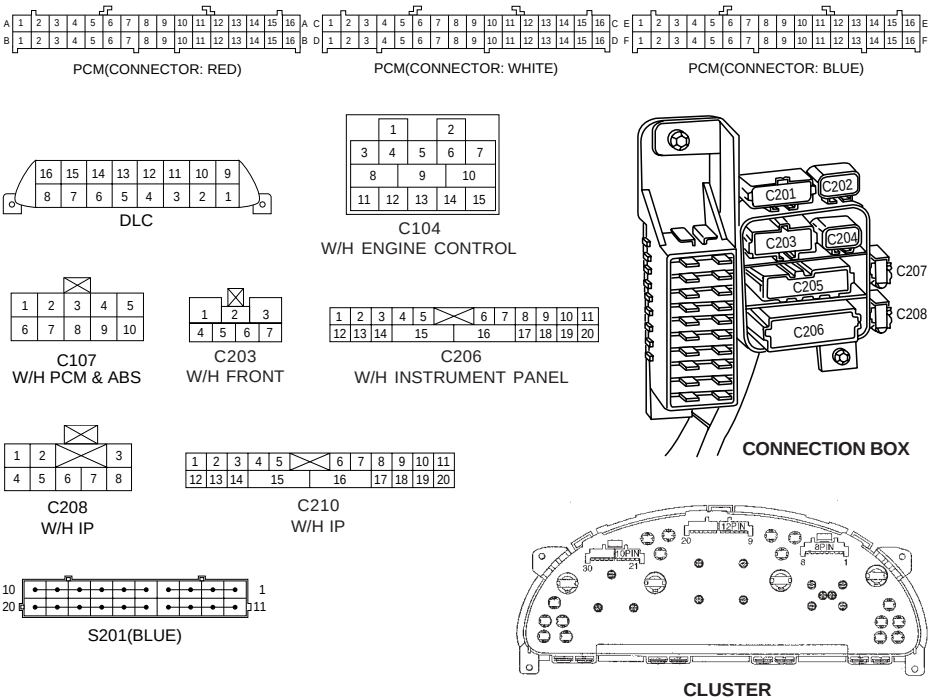


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

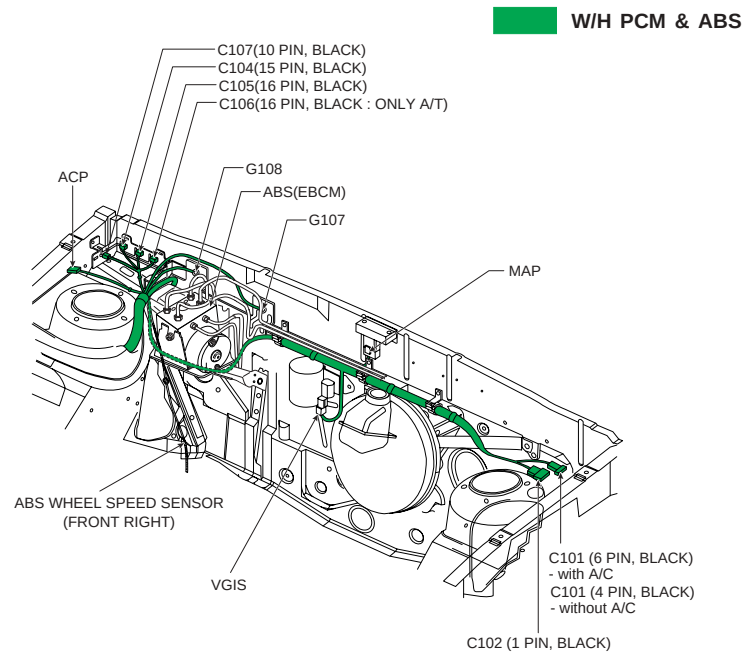


d. SPLICE PACK


S201 (BLUE)

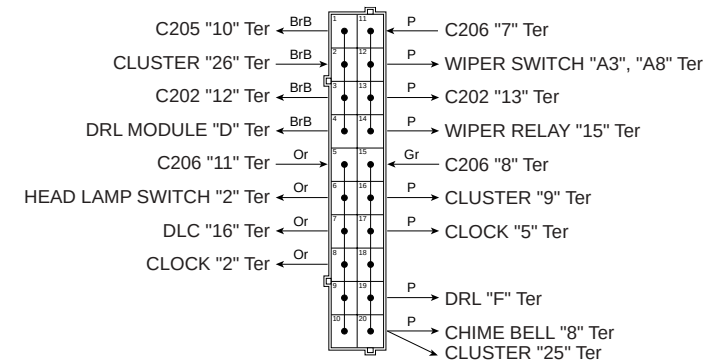

• PASSENGER ROOM RIGHT SIDE PANEL

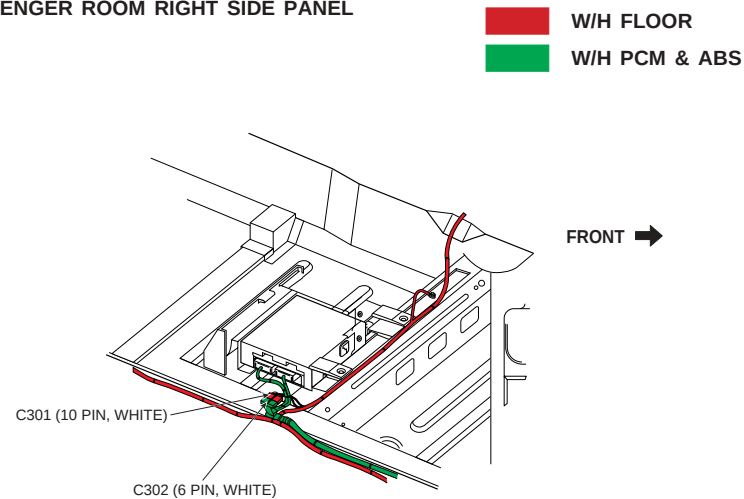

6) A/T SOLENOID & PRESSURE SWITCH ASSEMBLY CIRCUIT

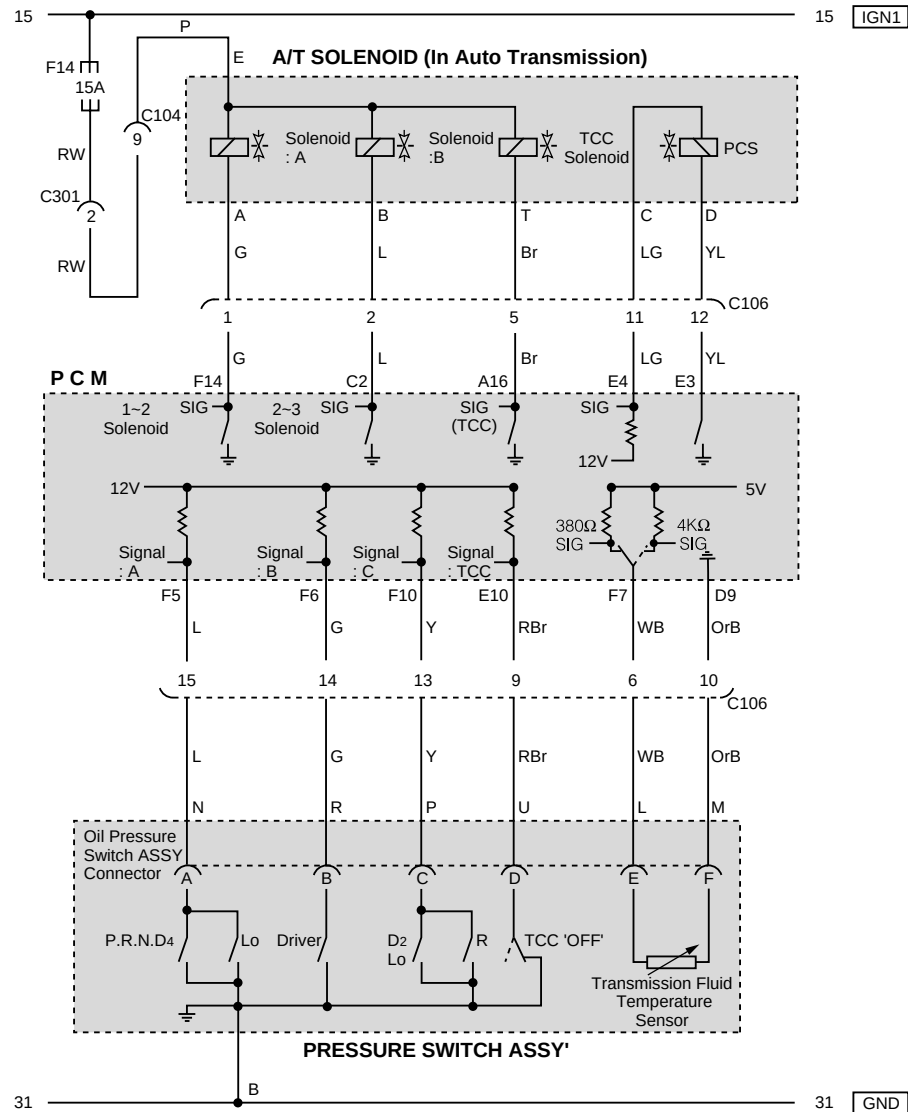


a. CONNECTOR INFORMATION

CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C106 (16PIN, BLACK)	W/H PCM & ABS -Engine Control	Behind Right Strut Mounting
C301 (10PIN, WHITE)	W/H PCM & ABS - Floor	Below Co-Driver Seat



b. SHIFTING SOLENOID OPERATING

GEAR	SOLENOID 1~2 (A)	SOLENOID 2~3 (B)
First	ON	OFF
Second	OFF	OFF
Third	OFF	ON
Fourth	ON	ON
Park. Reverse. Neutral	ON	OFF


c. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

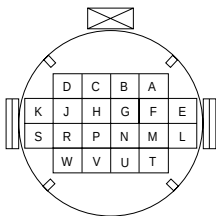


AUTOMATIC TRANSAXLE CONNECTOR

  

C104
W/H ENGINE CONTROL

 


C106
W/H ENGINE CONTROL

 


C301
W/H FLOOR

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

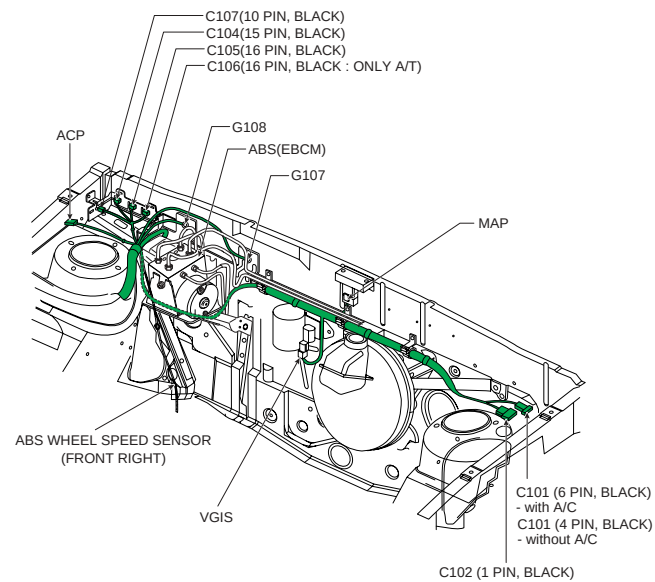 W/H PCM & ABS


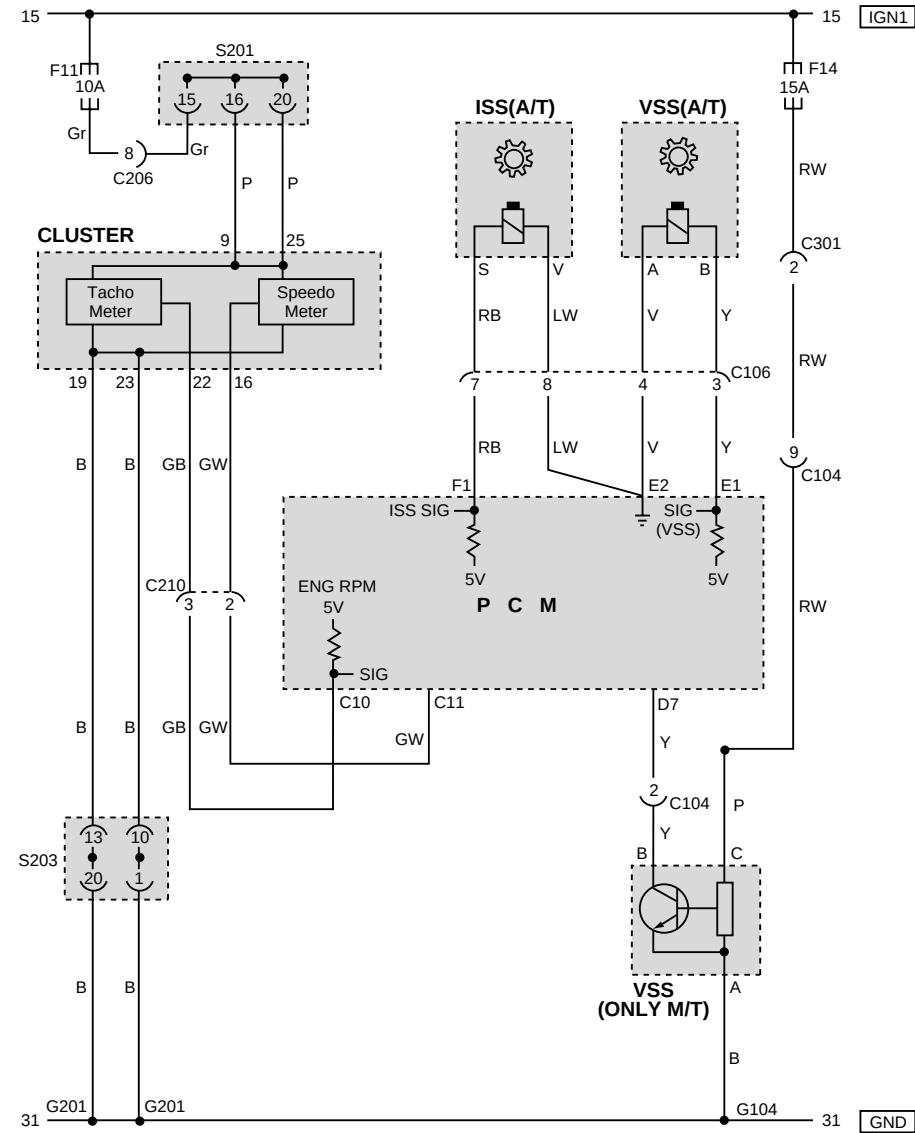
• PASSENGER ROOM RIGHT SIDE PANEL

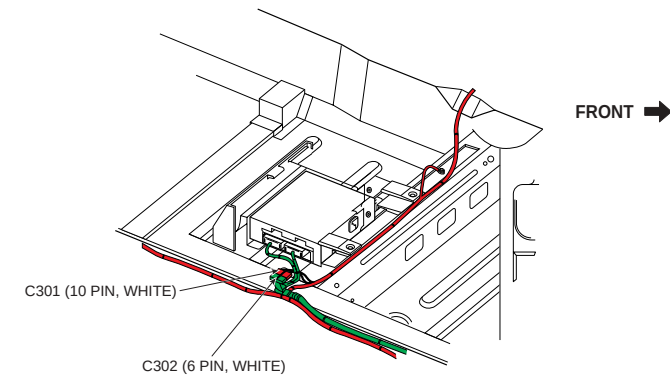 W/H FLOOR
 W/H PCM & ABS


• DOHC ENGINE

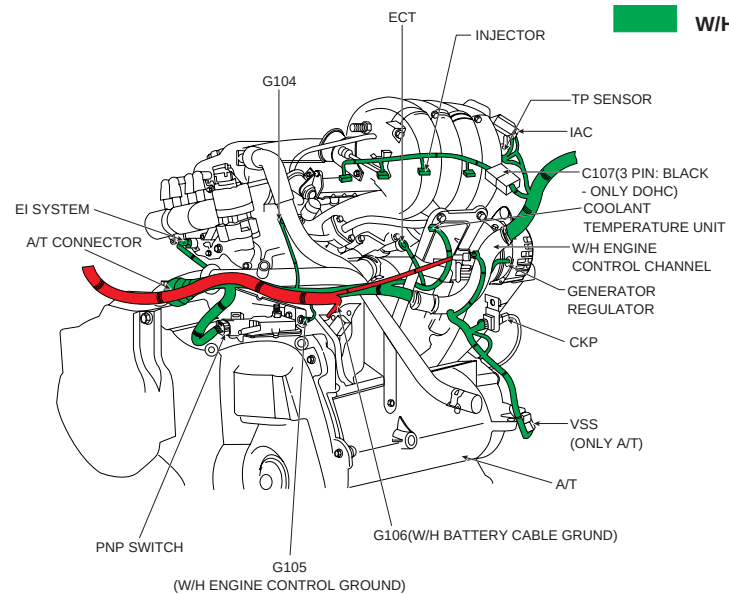 W/H BATTERY
 W/H ENGINE CONTROL


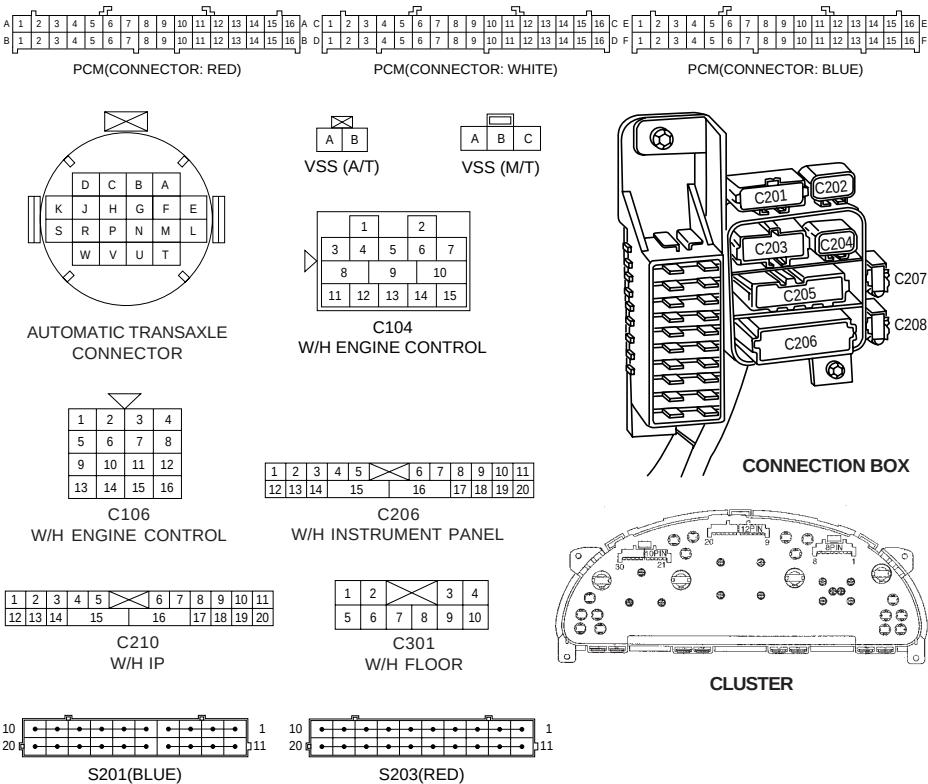
7) SENSOR (ENGINE RPM, ISS, VSS) CIRCUIT



a. CONNECTOR INFORMATION


CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C106 (16PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C206 (20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN, COLORLESS)	W/H PCM & ABS - IP	Below Glove Box(Right Side Panel)
C301 (10PIN, WHITE)	W/H PCM & ABS - Floor	Below Co-driver Seat
S201 (20PIN, BLUE)	W/H IP	Next to Passenger Room Relay Box
S203 (20PIN, RED)	W/H IP	Next to Passenger Room Relay Box
G104	W/H Engine Control	Intake Manifold #4 Cylinder
G201	W/H IP	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

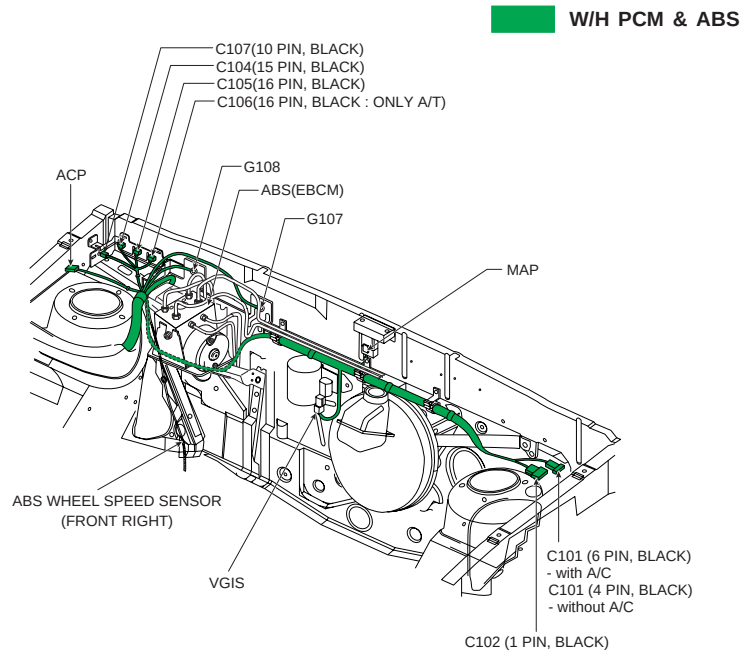


• PASSENGER ROOM RIGHT SIDE PANEL

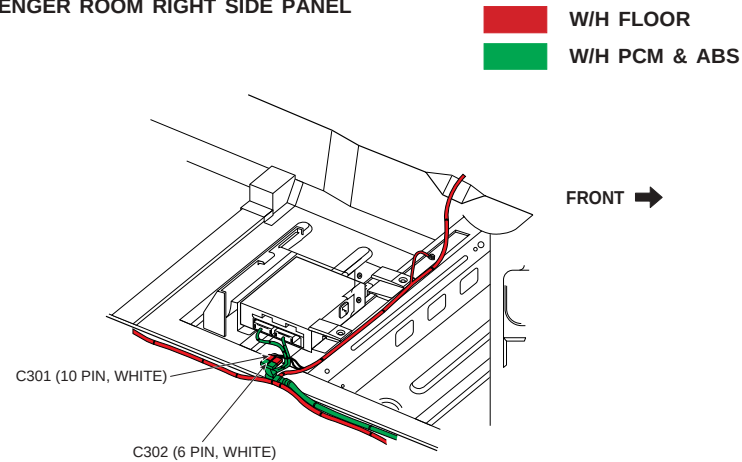


d. SPLICE PACK


S201 (BLUE)

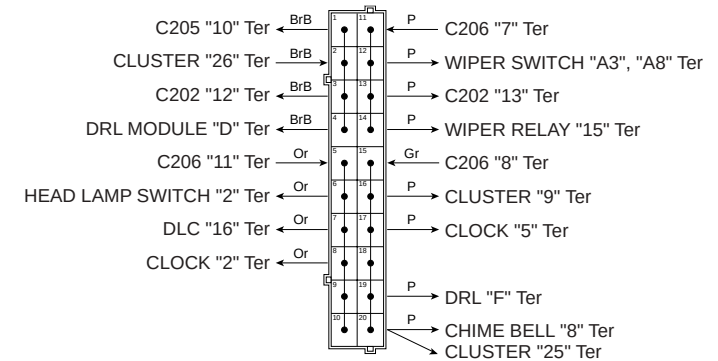

S203 (RED)

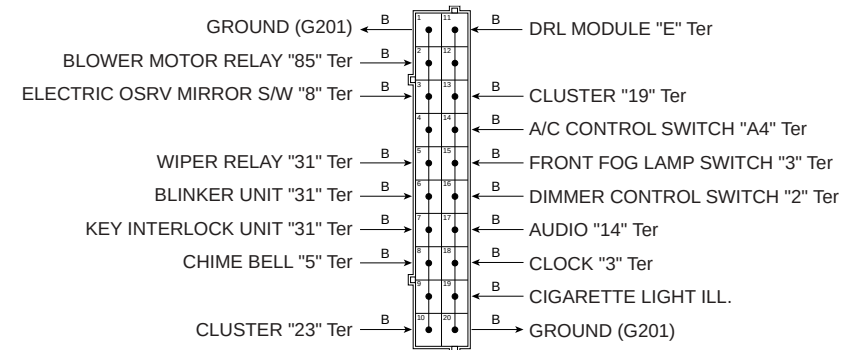


8) POWER LAMP, STOP LAMP & DLC CIRCUIT

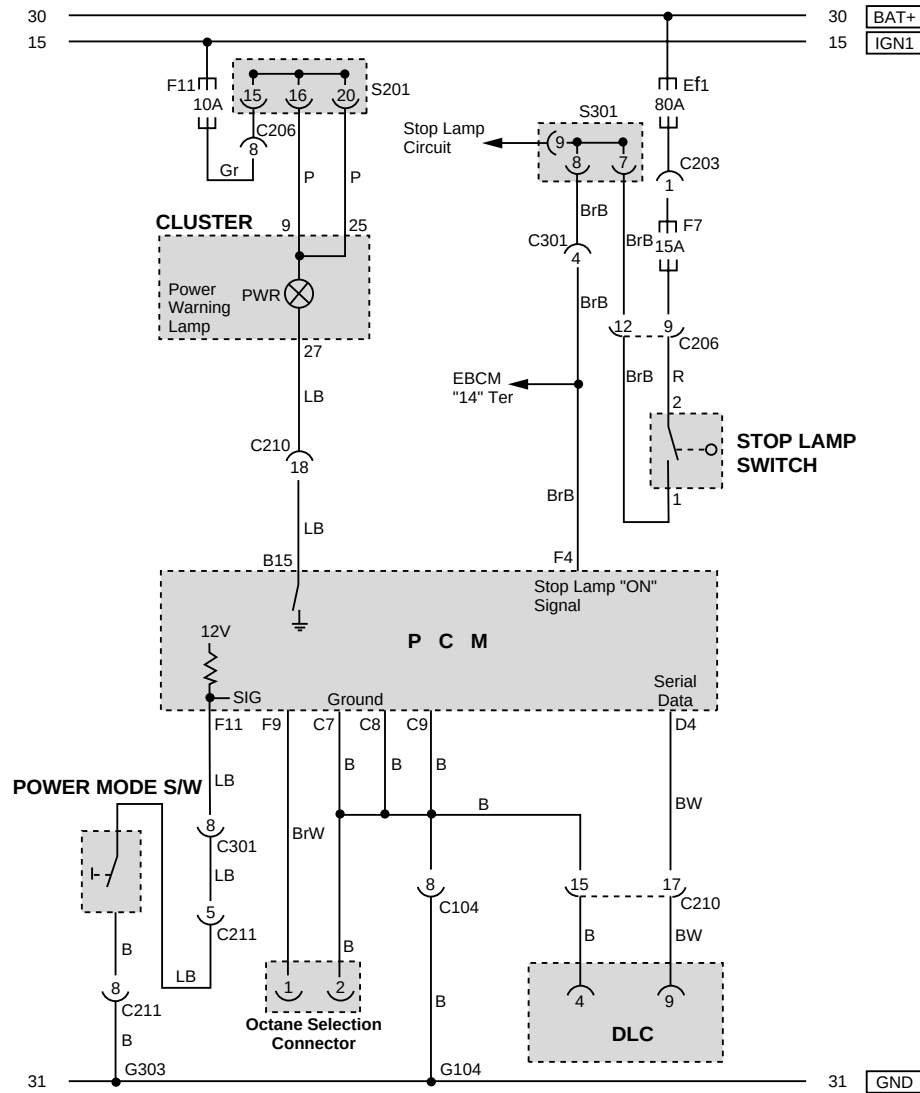

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine control	Behind Right Strut Mounting
C203 (7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN, COLORLESS)	W/H PCM & ABS - IP	Below Glove Box (Right Side Panel)
C211 (6PIN, WHITE)	W/H Extention A/T - Floor	Inside Center Console
C301 (10PIN, WHITE)	W/H PCM & ABS - Floor	Below Co-driver Seat
S201 (20PIN, BLUE)	W/H IP	Next to Passenger Room Relay Box
S301 (20PIN, ORANGE)	W/H Floor	Below Driver Seat
G104	W/H Engine Control	Intake Manifold '#4' Cylinder
G303	W/H Floor	Below Co-driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

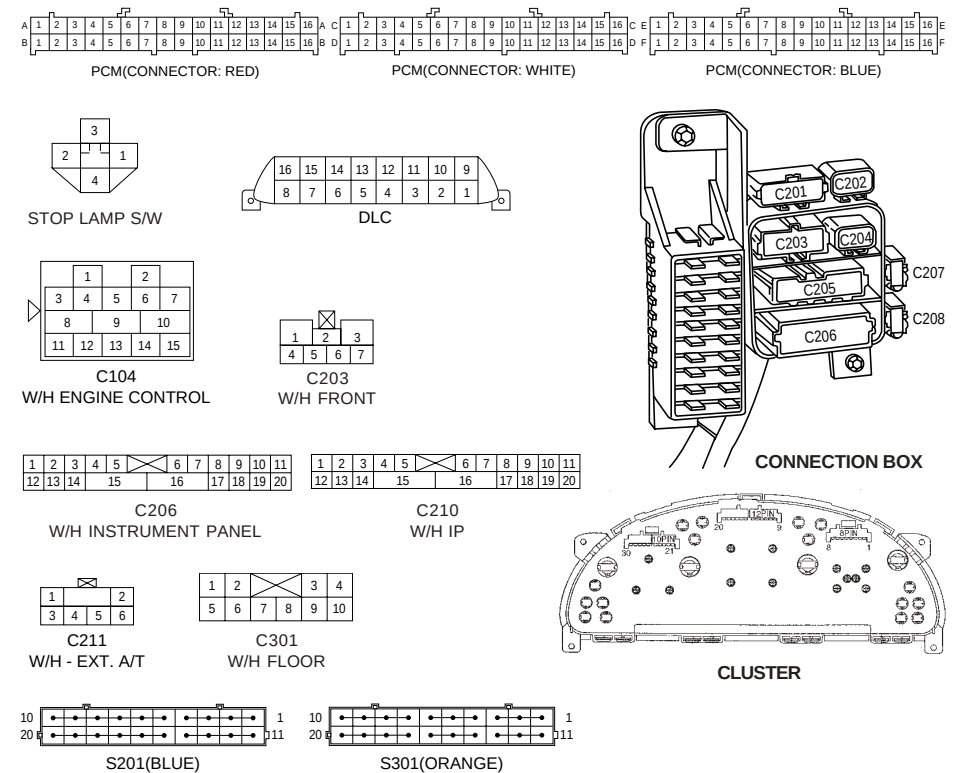


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

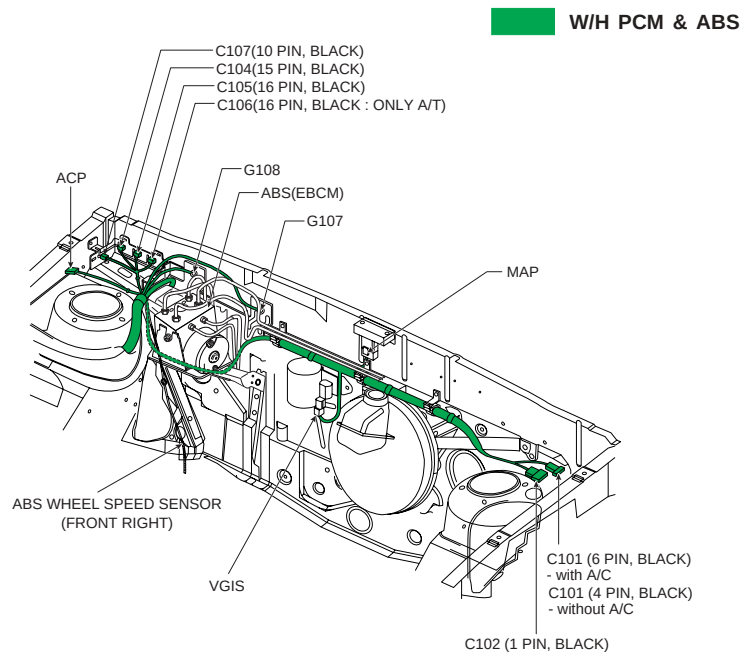


• PASSENGER ROOM RIGHT SIDE PANEL

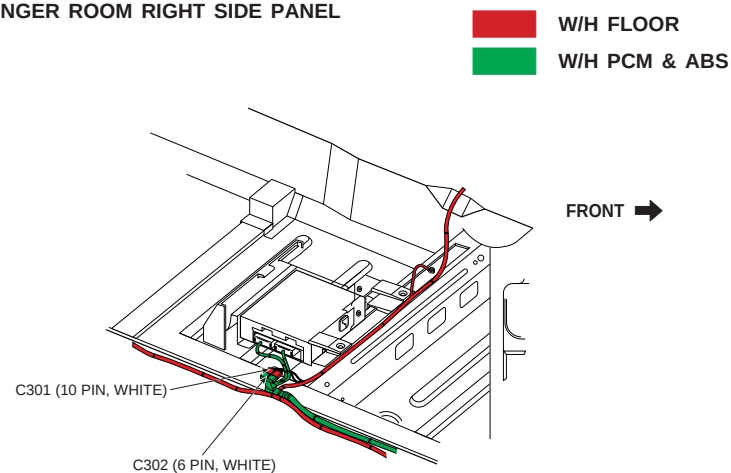

d. SPLICE PACK

S201 (BLUE)

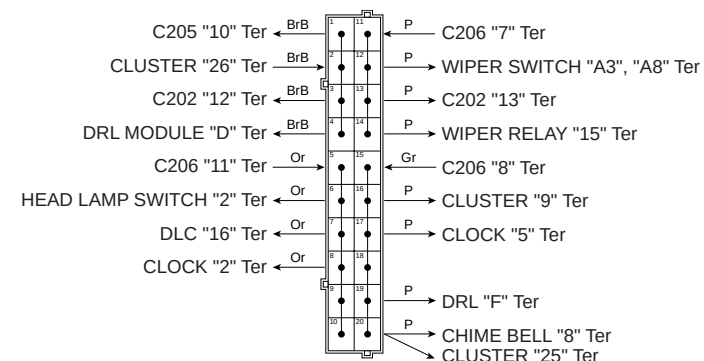

S301 (ORANGE) - NOTCH BACK

