


6. TCM (TRANSMISSION CONTROL MODULE)







1) POWER SUPPLY & GROUND CIRCUIT

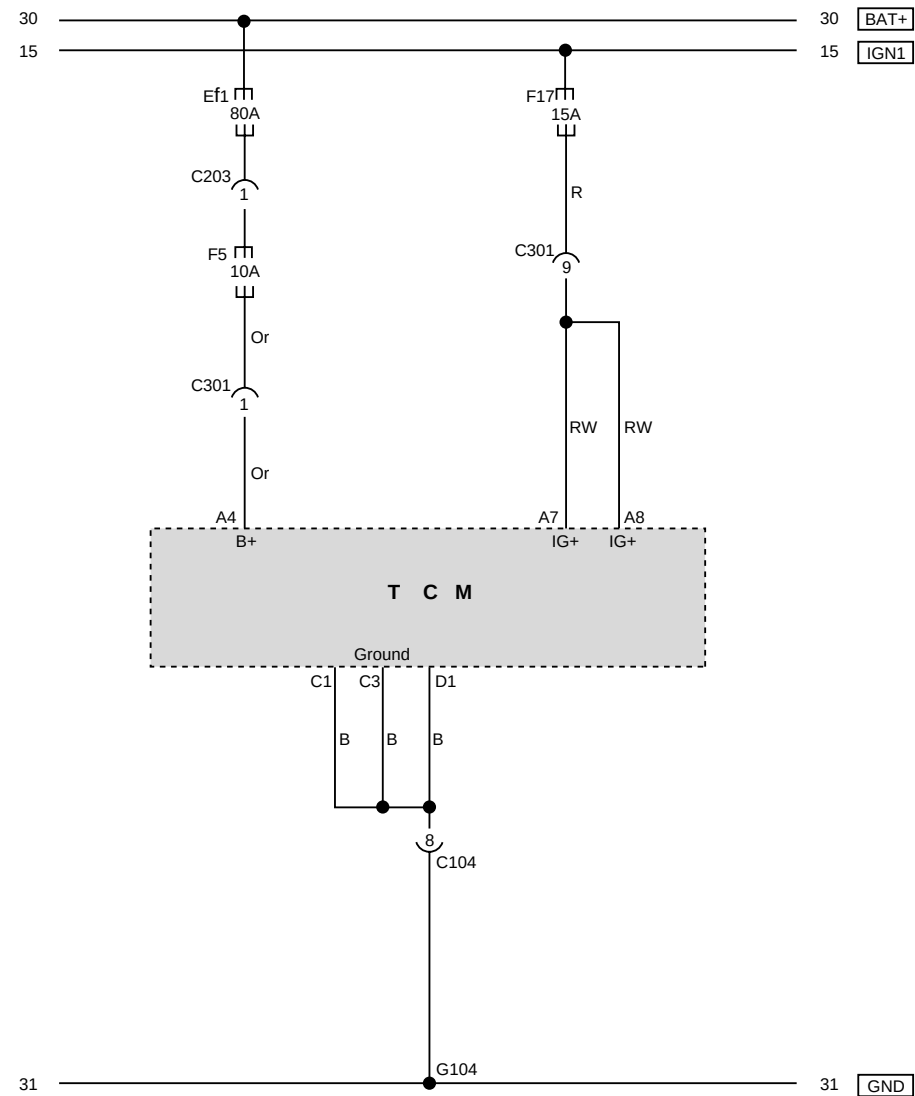

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C301(10PIN. WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
G104	Ground	Intake Manifold '#4' Cylinder

    b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

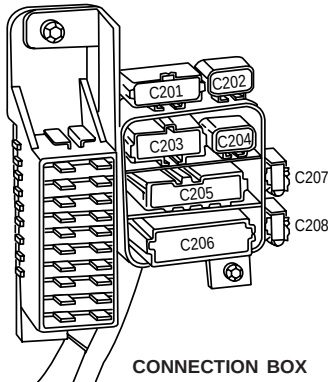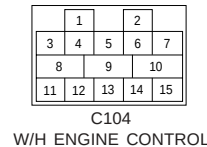


c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

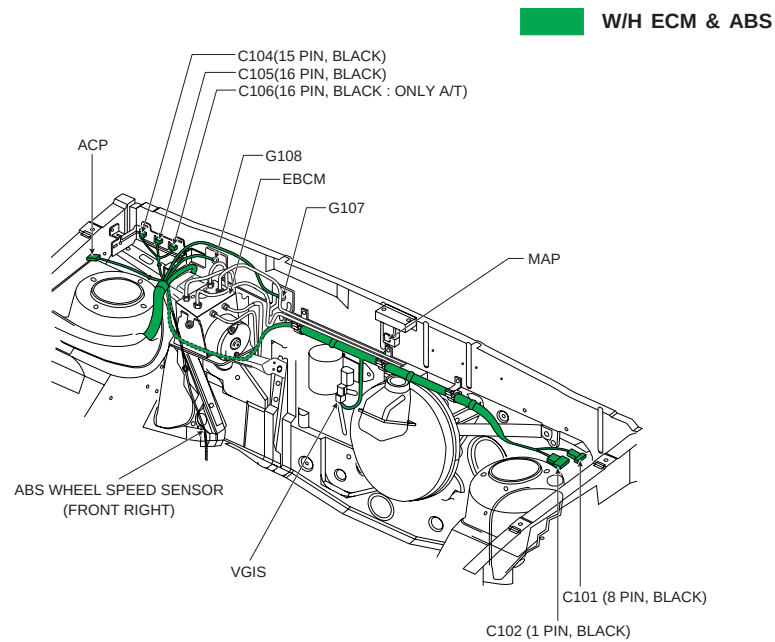


• FLOOR PANEL

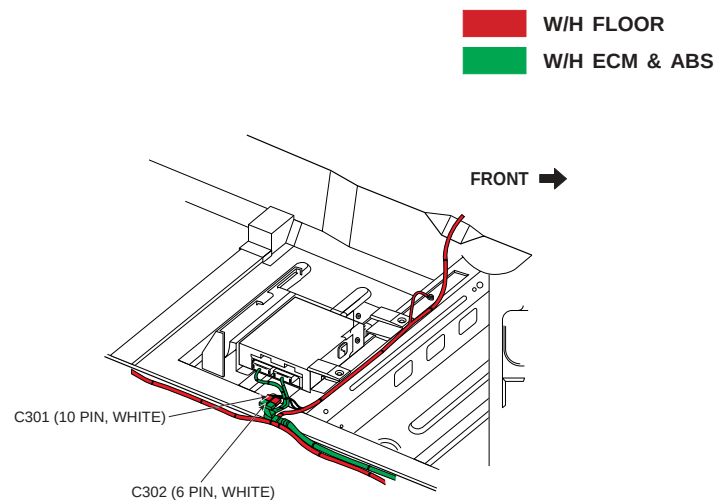

• DOHC ENGINE

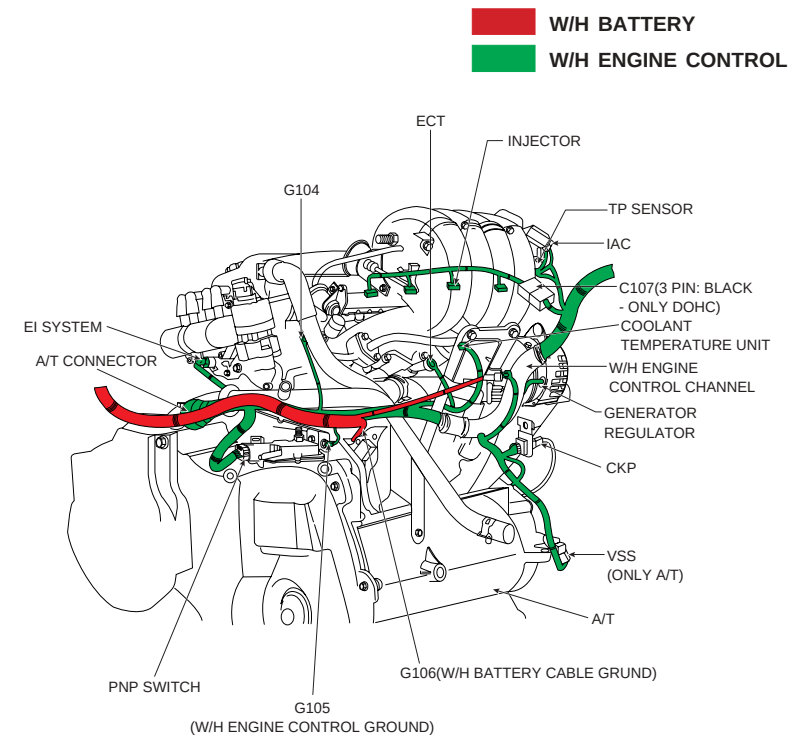

2) SOLENOID, PRESSURE SWITCH ASSEMBLY CIRCUIT

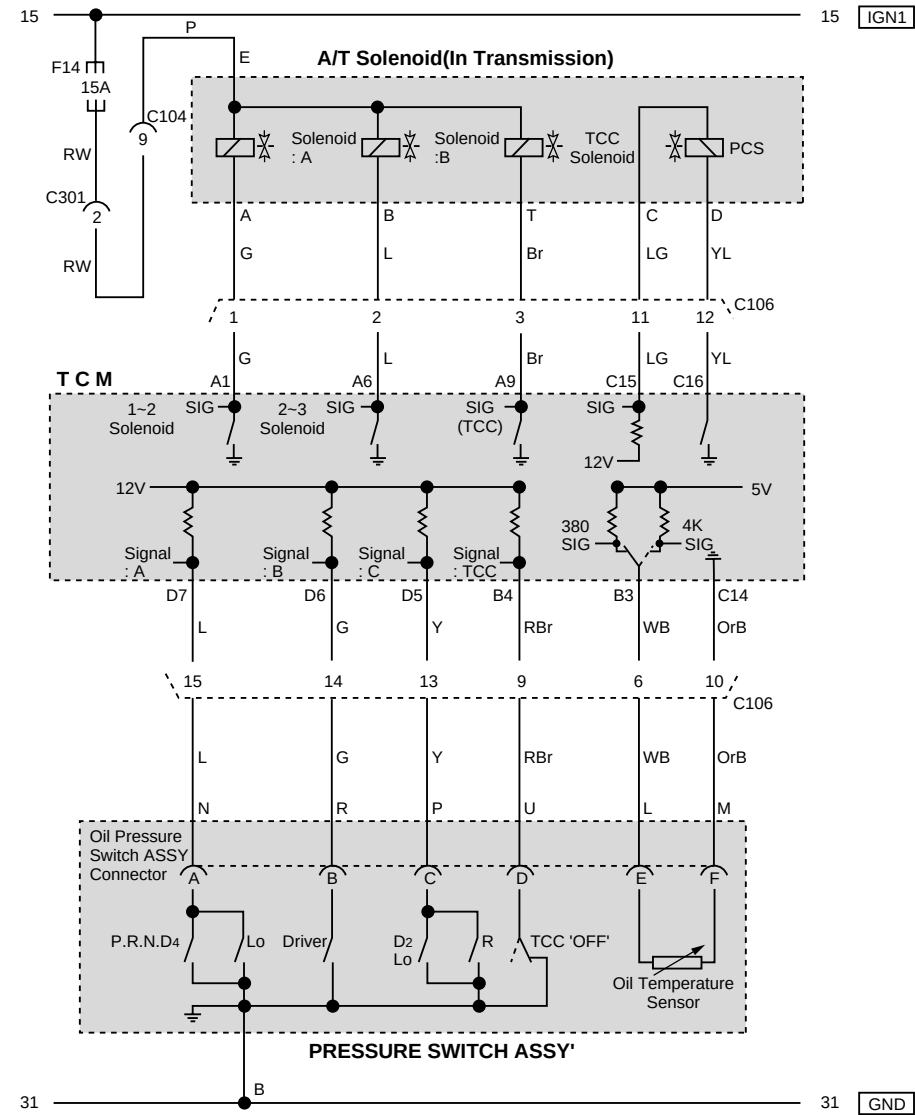


a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C106(16PIN. BLACK)	W/H ECM & ABS -Engine Control	Behind Right Strut Mounting
C301(10PIN. WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat

b. SHIFTING SOLENOID OPERATING

GEAR	SOLENOID 1-2(A)	SOLENOID 2-3(B)
First	ON	OFF
Second	OFF	OFF
Third	OFF	ON
Fourth	ON	ON
Park. Reverse. Neutral	ON	OFF


c. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

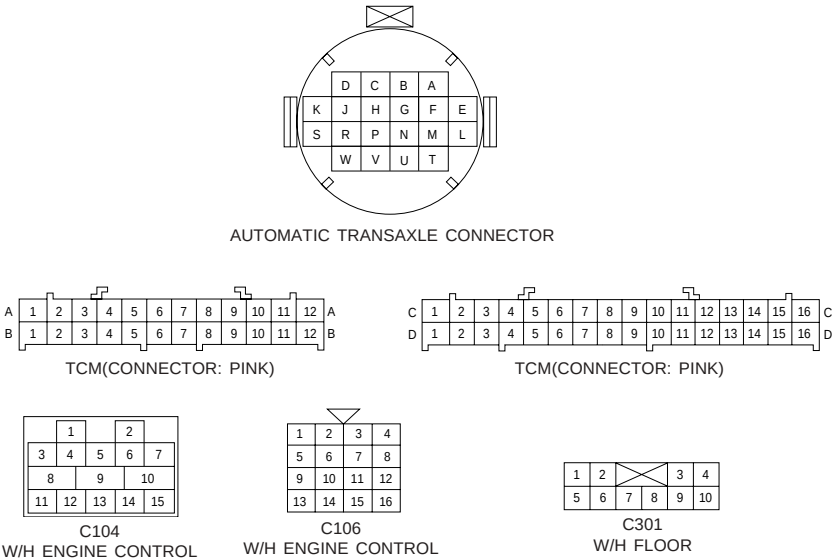

c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE


■ W/H ECM & ABS

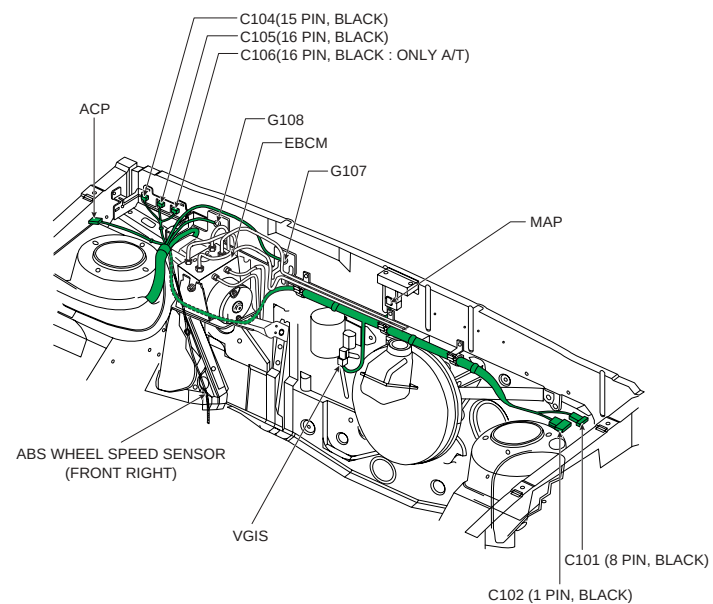

• PASSENGER ROOM RIGHT SIDE PANEL


■ W/H FLOOR
■ W/H ECM & ABS

← FRONT

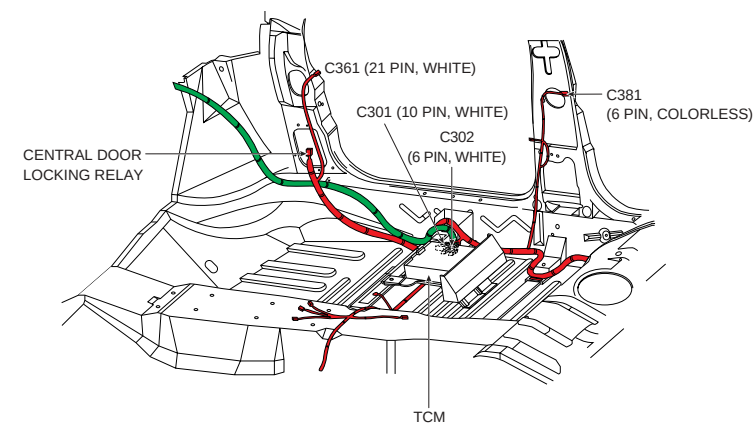


■ W/H FLOOR
■ W/H ECM & ABS

FRONT →

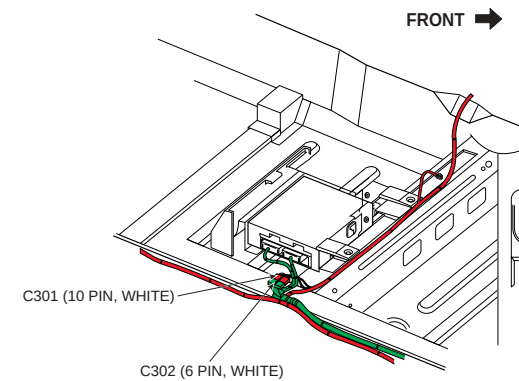


3) SENSOR (TP SENSOR, MAP, ENGINE RPM, ISS, VSS) CIRCUIT

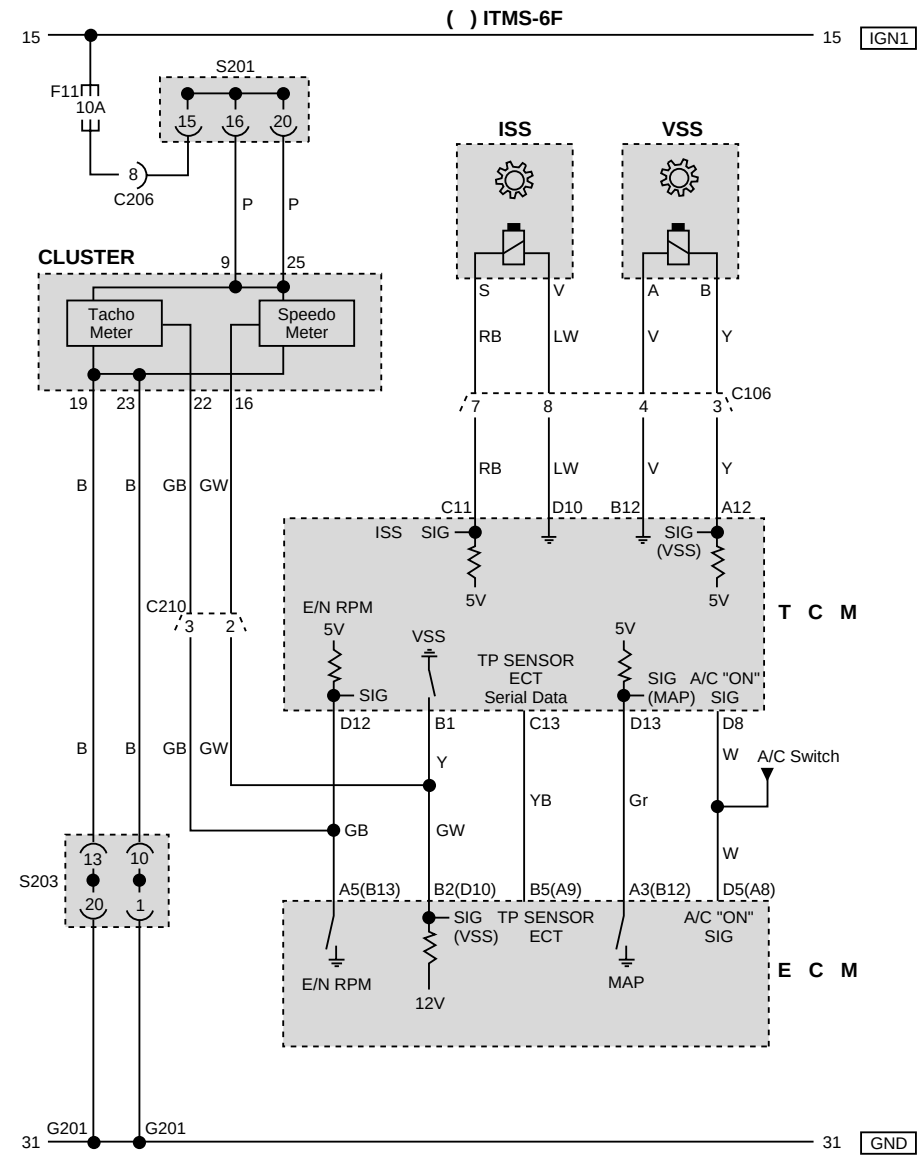

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C106(16PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

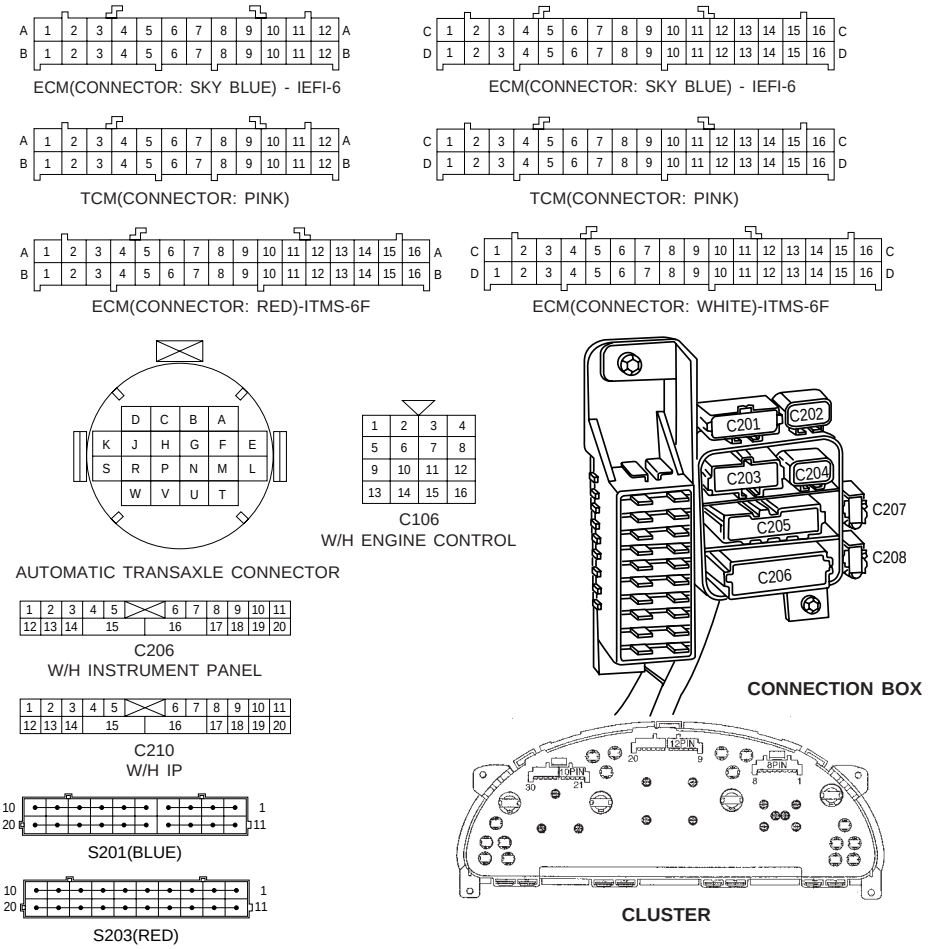


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

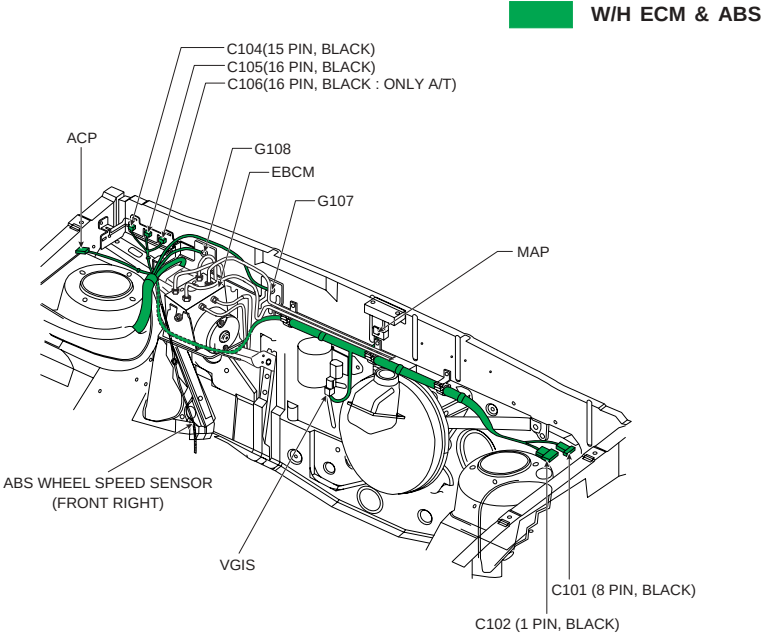


• PASSENGER ROOM RIGHT SIDE PANEL

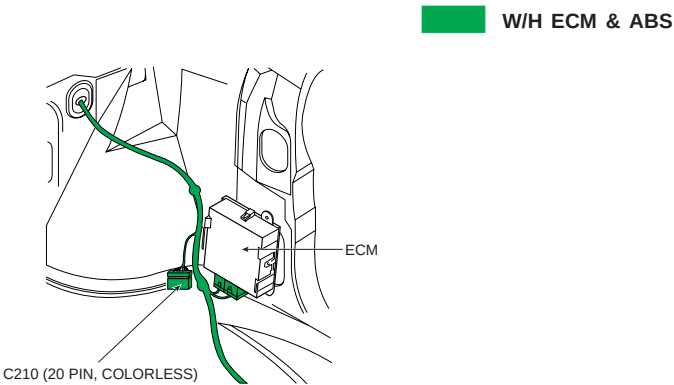


d. SPLICE PACK


S201(BLUE) - LHD

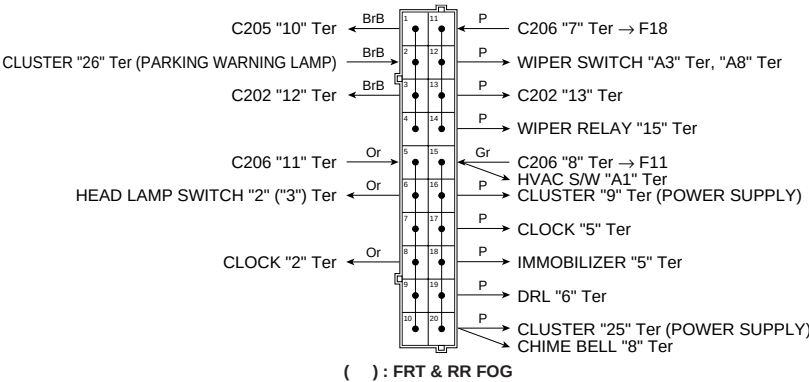

S203(RED) - LHD

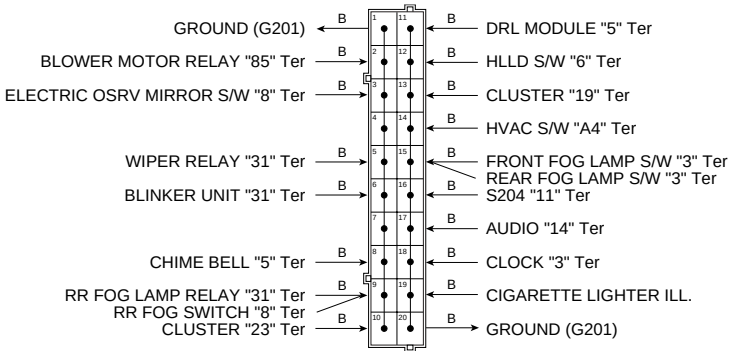


4) POWER WARNING LAMP, STOP LAMP, DLC CIRCUIT

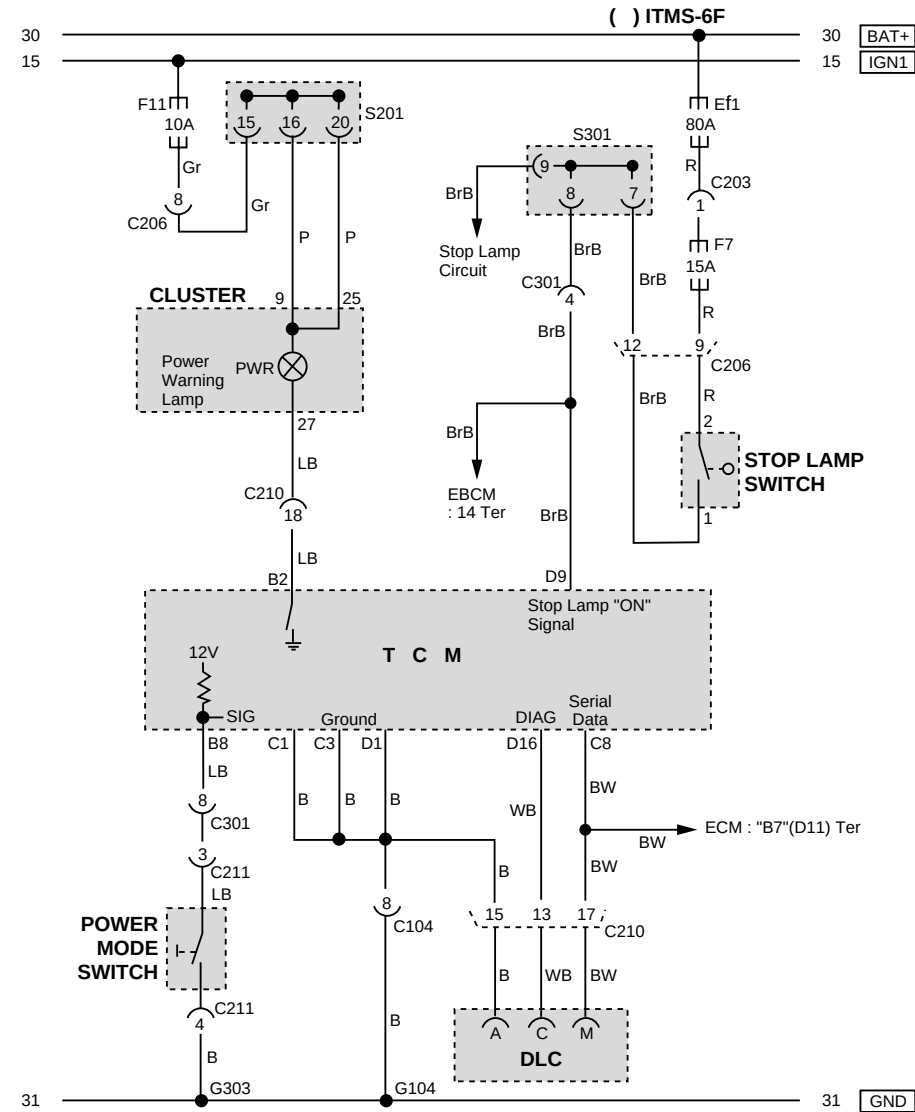

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104(15PIN. BLACK)	W/H ECM & ABS - Engine control	Behind Right Strut Mounting
C203(7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
C211(4PIN. WHITE)	W/H EXT. A/T - Floor	Inside Center Console
C301(10PIN. WHITE)	W/H ECM & ABS - Floor	Below Co-Driver Seat
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G104	Ground	Intake Manifold '#4' Cylinder
G303	Ground	Below Co-Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

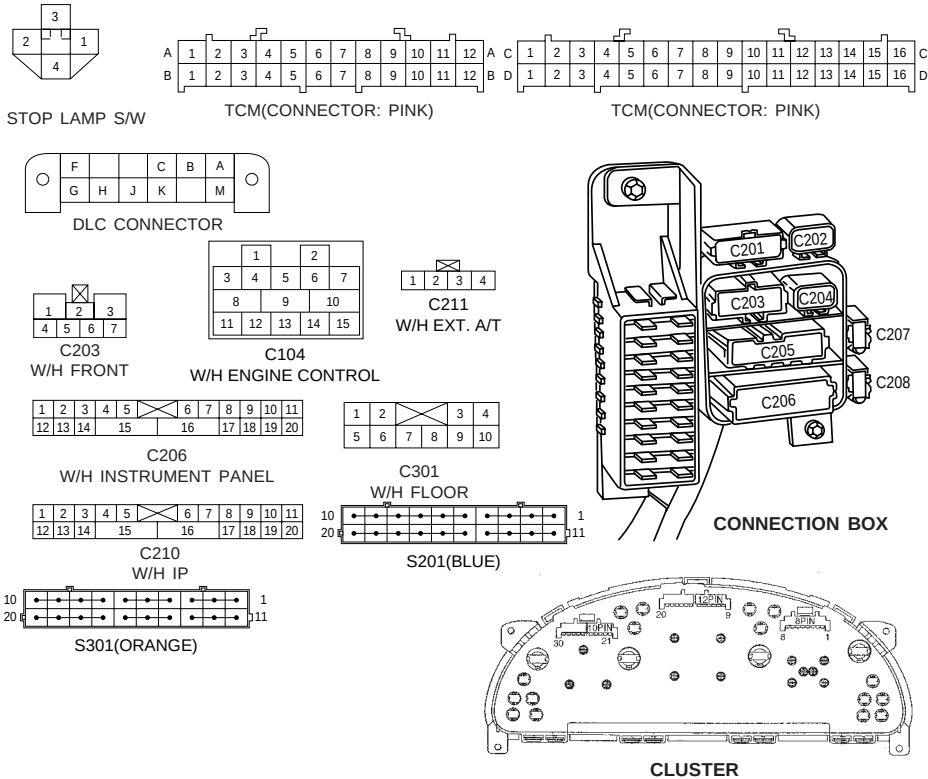


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

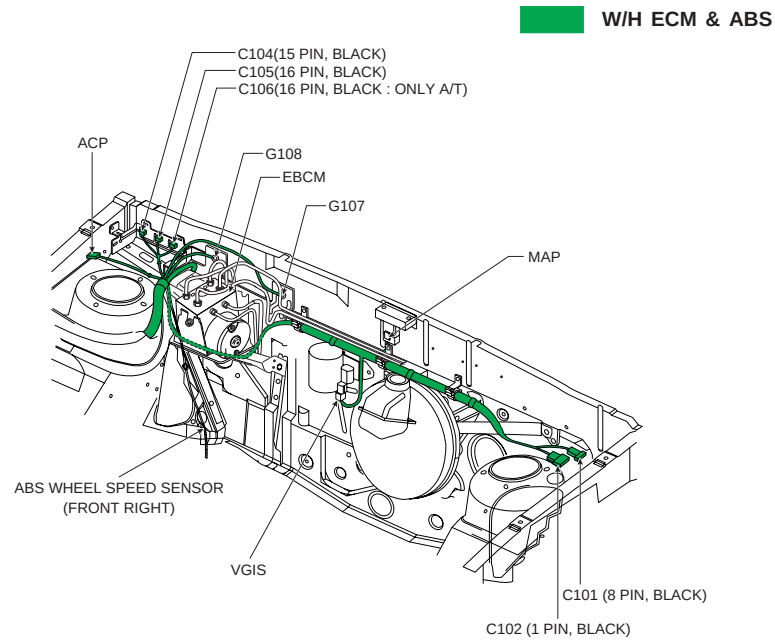


• PASSENGER ROOM RIGHT SIDE PANEL

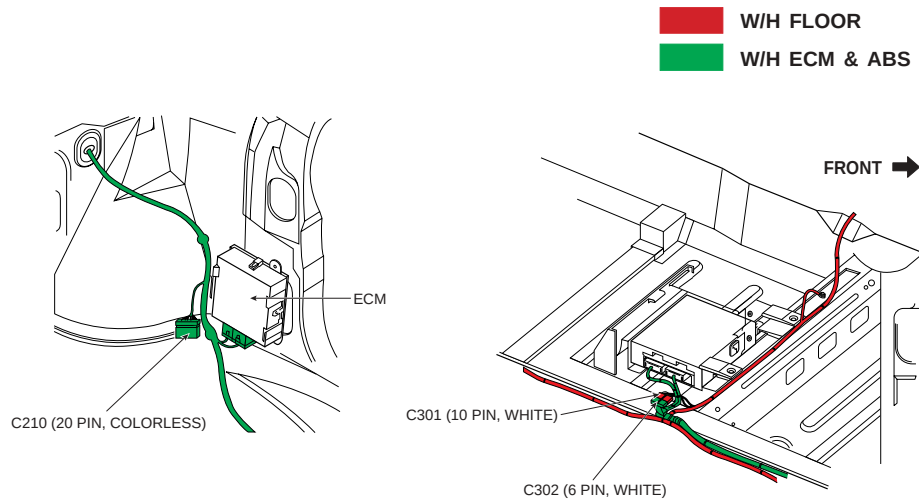


d. SPLICE PACK

S201(BLUE) - LHD

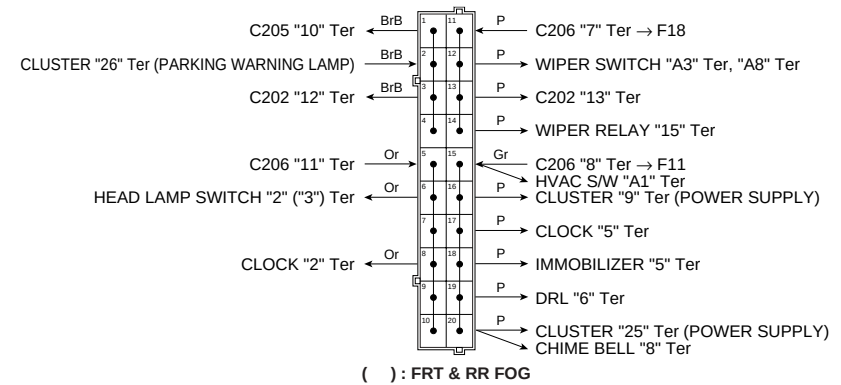


S301(ORANGE) - NOTCH BACK

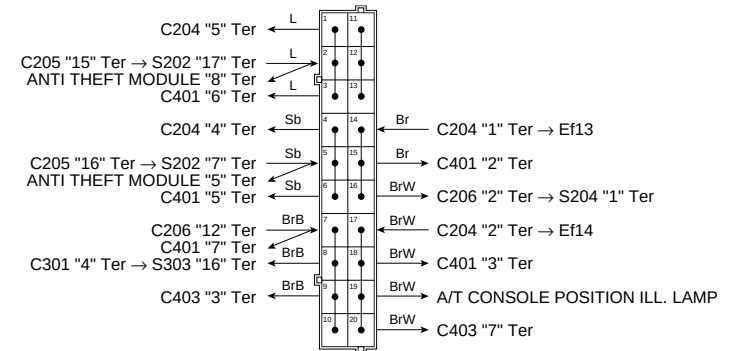

7. AIR CONDITIONER


1) AIR CONDITIONER CONTROL SWITCH CIRCUIT

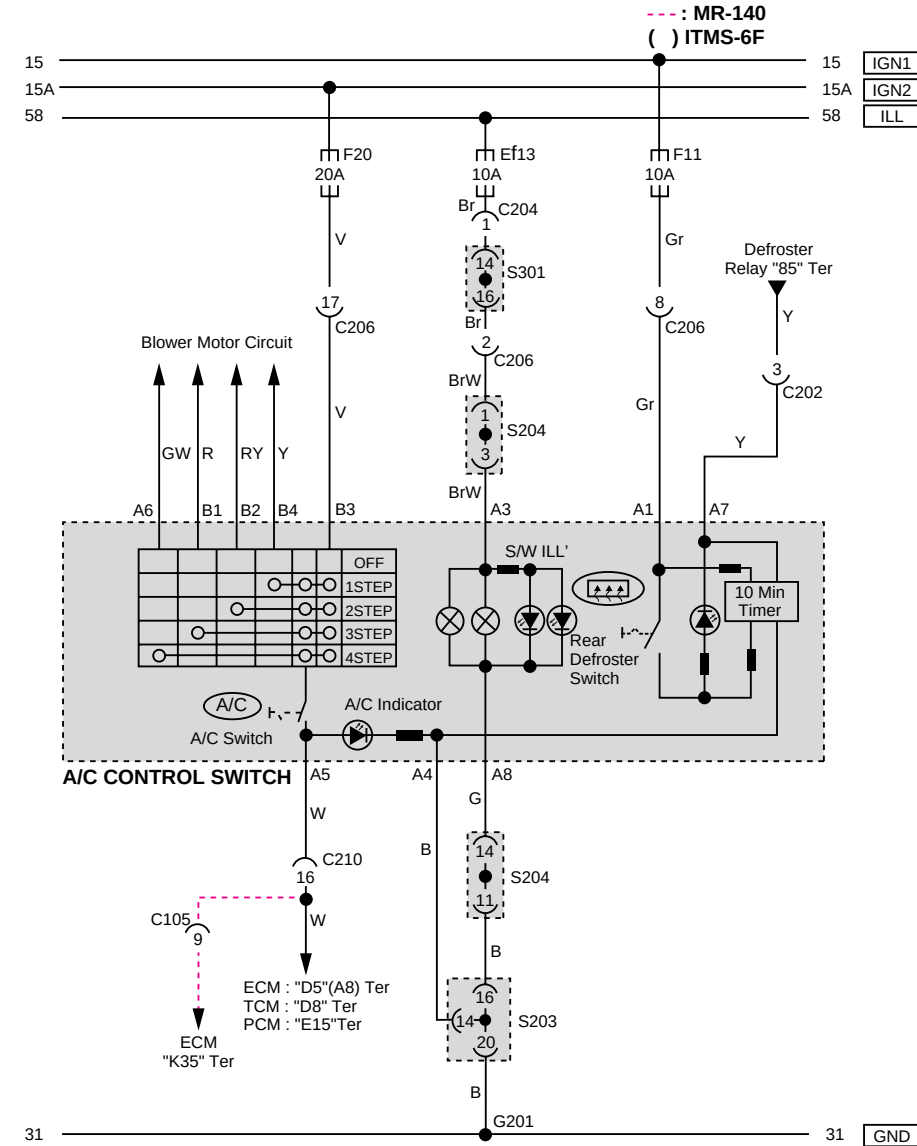


a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202(18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C204(6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206(20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210(20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
S203(20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204(20PIN. RED)	Splice Pack	Above Glove Box
S301(20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box

 
b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




A/C CONTROL SWITCH

 


W/H IP

 

W/H FRONT

 

W/H INSTRUMENT PANEL

 

W/H IP




S203(RED)



S204(RED)




S301(ORANGE)

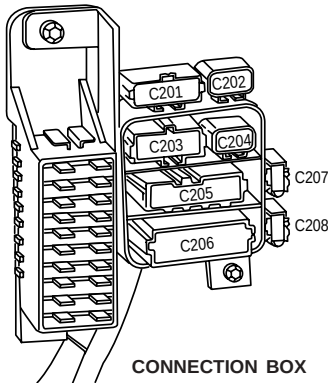


c. POSITION OF CONNECTORS AND GROUNDS

- ENGINE PANEL INSIDE

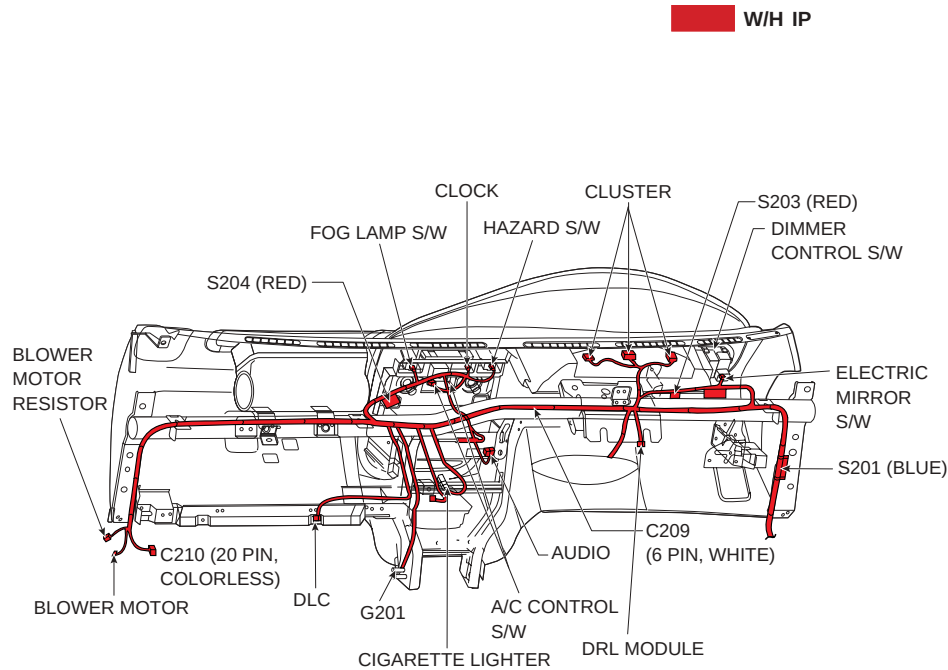


d. SPLICE PACK

S203(RED) - LHD

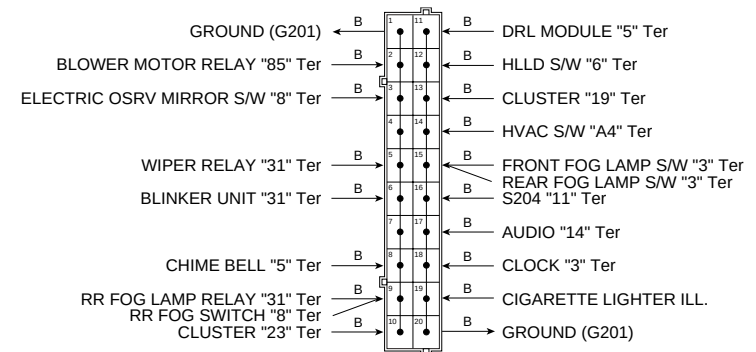

S204(RED) - LHD

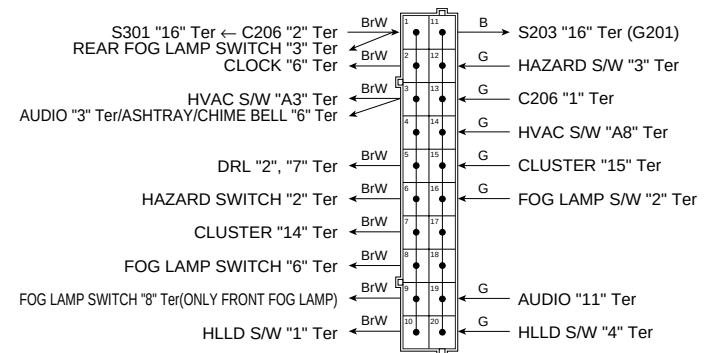

S301(ORANGE) - NOTCH BACK

