



2) AIR CONDITIONER COMPRESSOR CIRCUIT  
2-1) ITMS-6F, IEFI-6

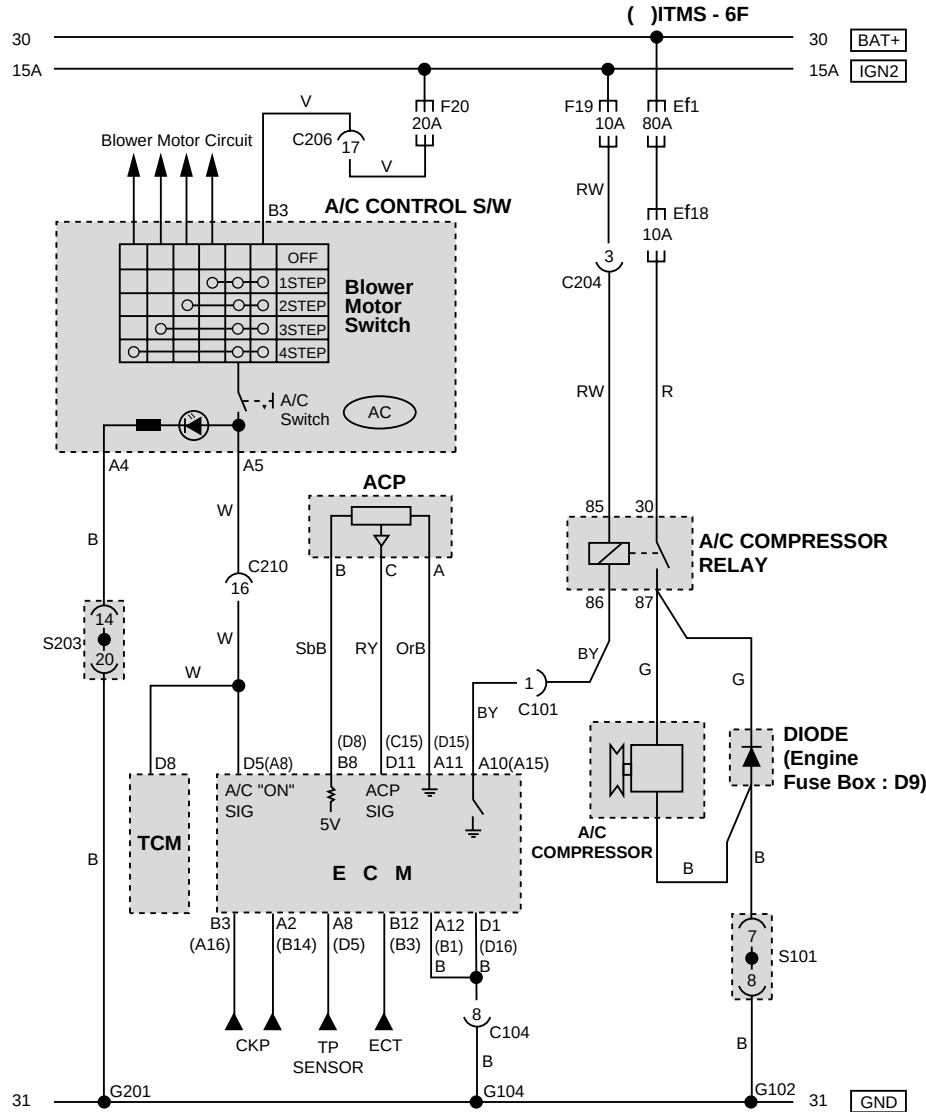

a. CONNECTOR INFORMATION


| CONNECTOR(NO)<br>(PIN NO. COLOR) | CONNECTING. WIRING HARNESS     | CONNECTOR POSITION                             |
|----------------------------------|--------------------------------|------------------------------------------------|
| C101(6PIN. BLACK)                | W/H ECM & ABS - Front          | Below Engine Coolant Surge Tank                |
| C104(15PIN. BLACK)               | W/H ECM & ABS - Engine Control | Behind Right Strut mounting                    |
| C204(6PIN. WHITE)                | W/H Front - Floor              | Connection Box Next to Passenger Room Fuse Box |
| C206(20PIN. COLORLESS)           | W/H Floor - IP                 | Connection Box Next to Passenger Room Fuse Box |
| C210(20PIN. COLORLESS)           | W/H ECM & ABS - IP             | Below Glove Box(Right Side Panel)              |
| S101(9PIN. BLACK)                | Splice Pack                    | Engine Room Relay And Fuse Box                 |
| S203(20PIN. RED)                 | Splice Pack                    | Next to Passenger Room Relay Box               |
| G102                             | Ground                         | Fender Below Engine Room Fuse Box              |
| G104                             | Ground                         | Intake Mainfold '#4' Cylinder                  |
| G201                             | Ground                         | Below Right Front Console Box                  |

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

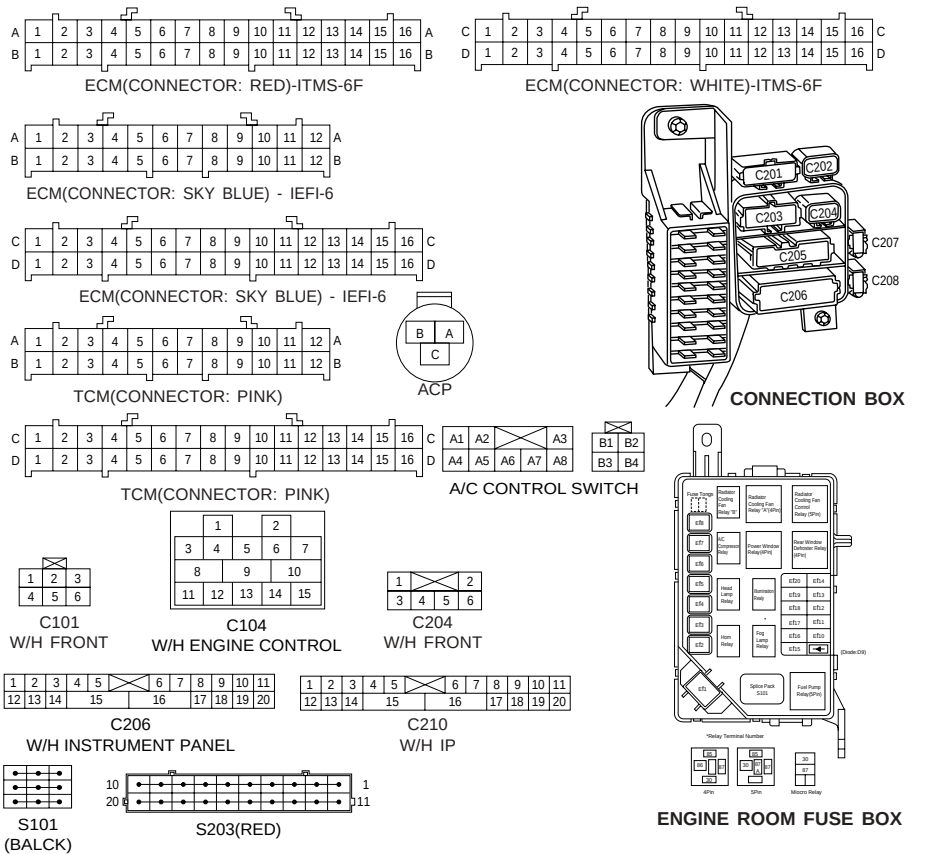


c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

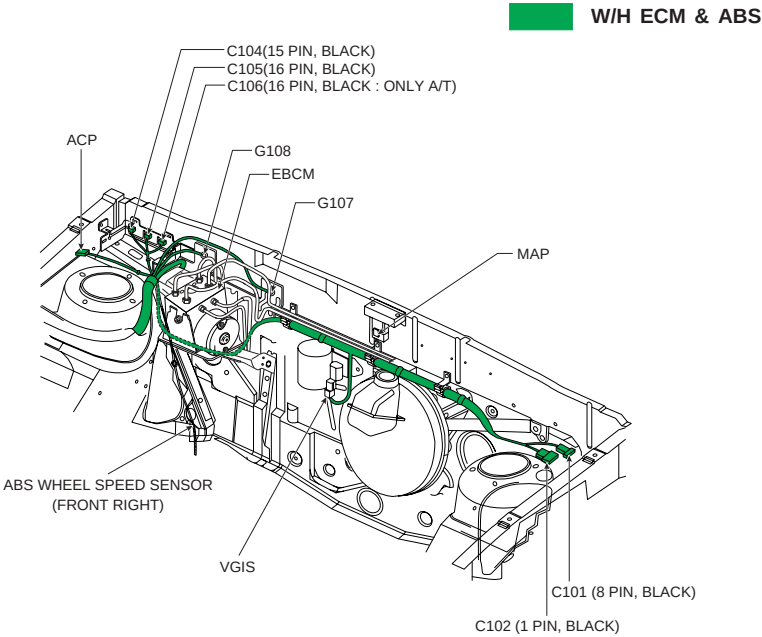

• PASSENGER ROOM RIGHT SIDE PANEL

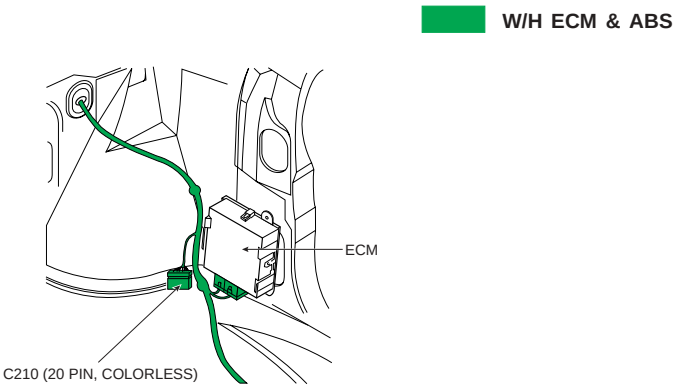

• W/H FRONT, FRONT BUMPER

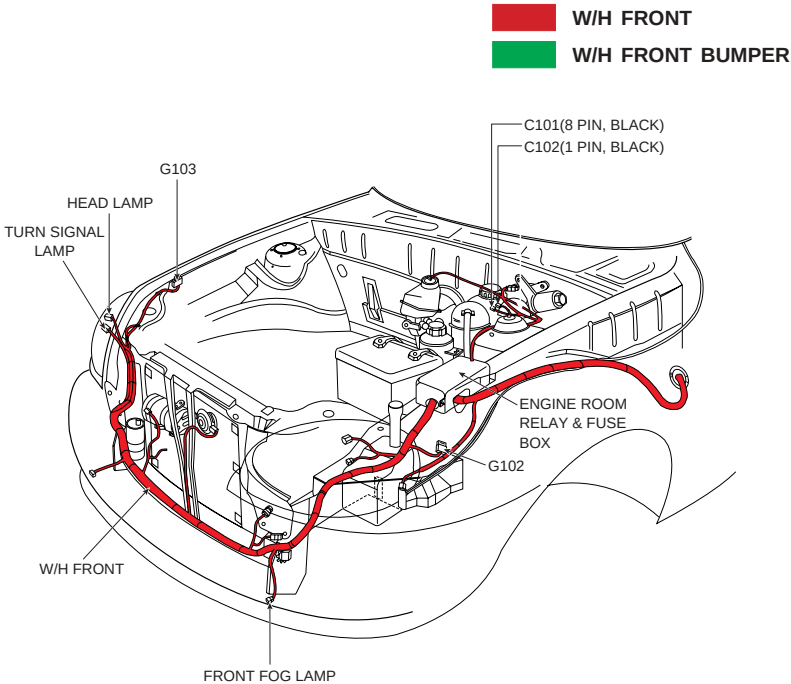

d. SPLICE PACK


S101(BLACK)

|           |          |          |
|-----------|----------|----------|
| 3<br>(RW) | 6<br>(R) | 9<br>(B) |
| 2<br>(RW) | 5<br>(R) | 8<br>(B) |
| 1<br>(RW) | 4<br>(R) | 7<br>(B) |

1. C204 "3" Ter (F19)  
A/C COMP. RELAY "86" Ter  
COOLING FAN CONTROL RELAY "86" Ter
2. COOLING FAN RELAY  
A : "86" Ter  
B : "86" Ter
3. REAR WINDOW DEFROSTER RELAY : "86" Ter  
POWER WINDOW RELAY : "86" Ter
4. BATTERY POWER SUPPLY(Ef4)
5. COOLING FAN RELAY A : "30" Ter
6. COOLING FAN RELAY B : "30" Ter
7. DIODE (D9)  
(POWER WINDOW RELAY "85" Ter)
8. GROUND(G102)  
POWER WINDOW RELAY "85" Ter
9. HEAD LAMP RELAY "85" Ter  
ILLUMINATION RELAY "85" Ter

( ) : WITHOUT A/C




2-3) MR-140

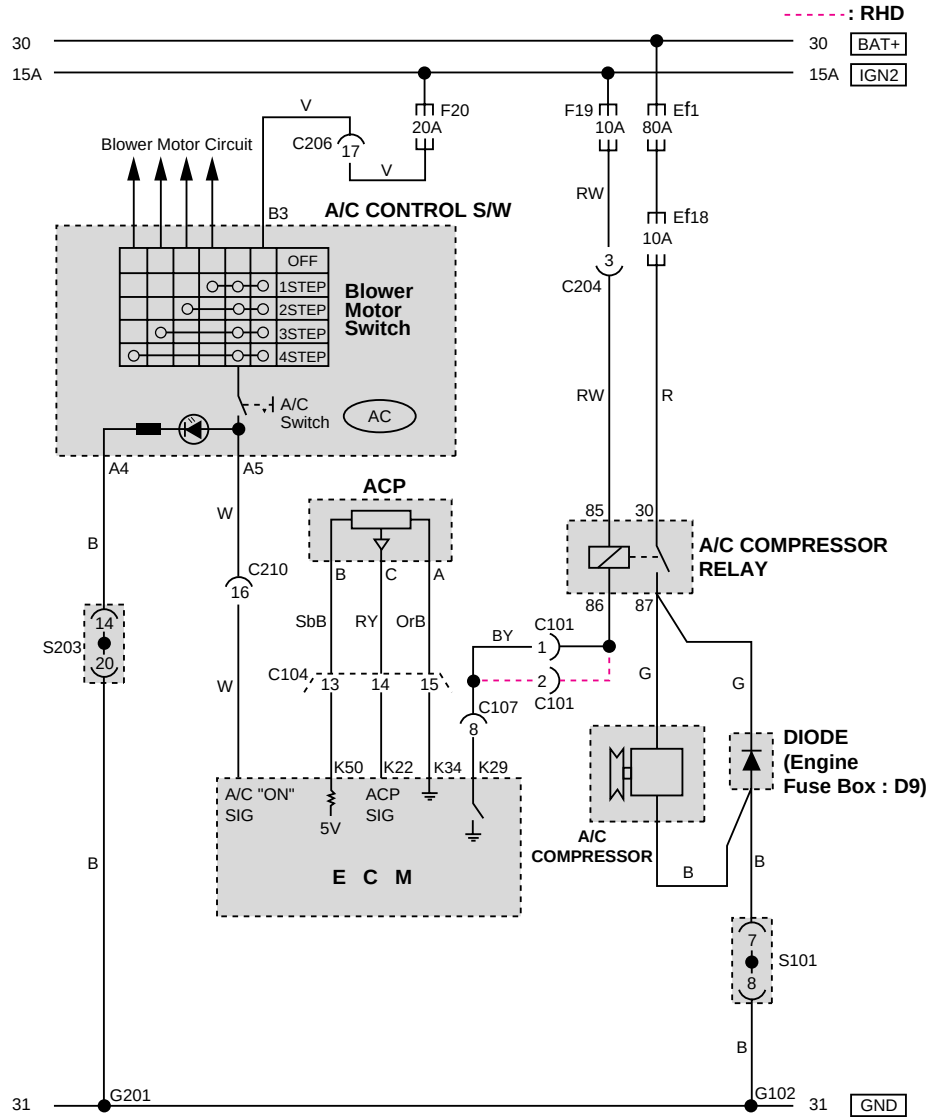

a. CONNECTOR INFORMATION

| CONNECTOR(No)<br>(PIN NO. COLOR) | CONNECTING. WIRING HARNESS     | CONNECTOR POSITION                             |
|----------------------------------|--------------------------------|------------------------------------------------|
| C101(6PIN. BLACK)                | W/H ECM & ABS - Front          | Below Engine Coolant Surge Tank                |
| C104(15PIN. BLACK)               | W/H ECM & ABS - Engine Control | Behind Right Strut mounting                    |
| C107(10PIN. BLACK)               | W/H Engine Control - Injector  | Behind Right Strut Mounting                    |
| C204(6PIN. WHITE)                | W/H Front - Floor              | Connection Box Next to Passenger Room Fuse Box |
| C206(20PIN. COLORLESS)           | W/H Floor - IP                 | Connection Box Next to Passenger Room Fuse Box |
| C210(20PIN. COLORLESS)           | W/H ECM & ABS - IP             | Below Glove Box(Right Side Panel)              |
| S101(9PIN. BLACK)                | Splice Pack                    | Engine Room Relay And Fuse Box                 |
| S203(20PIN. RED)                 | Splice Pack                    | Next to Passenger Room Relay Box               |
| G102                             | Ground                         | Fender Below Engine Room Fuse Box              |
| G104                             | Ground                         | Intake Mainfold '#4' Cylinder                  |
| G201                             | Ground                         | Below Right Front Console Box                  |


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

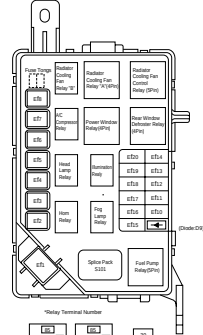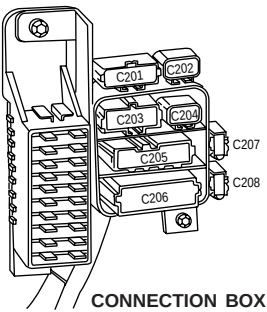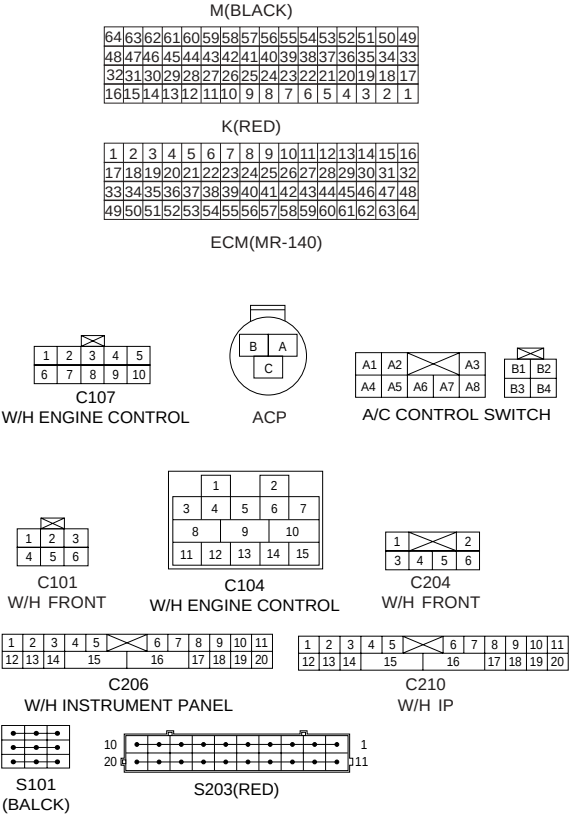


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS


• ENGINE ROOM INSIDE

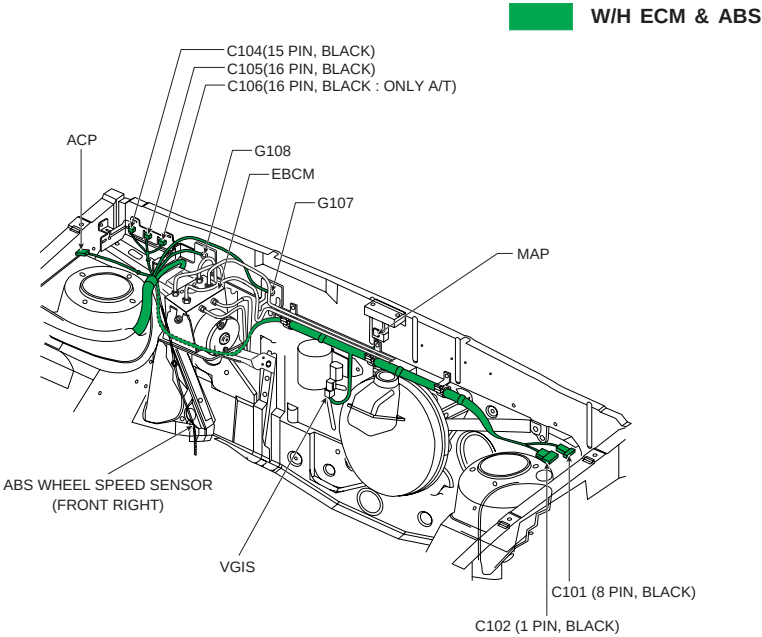

• PASSENGER ROOM RIGHT SIDE PANEL

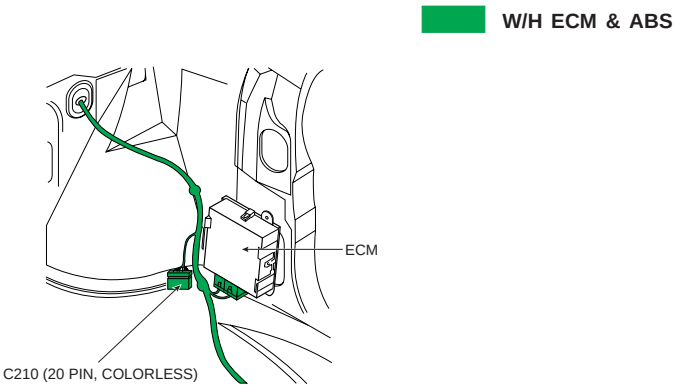

• W/H FRONT, FRONT BUMPER

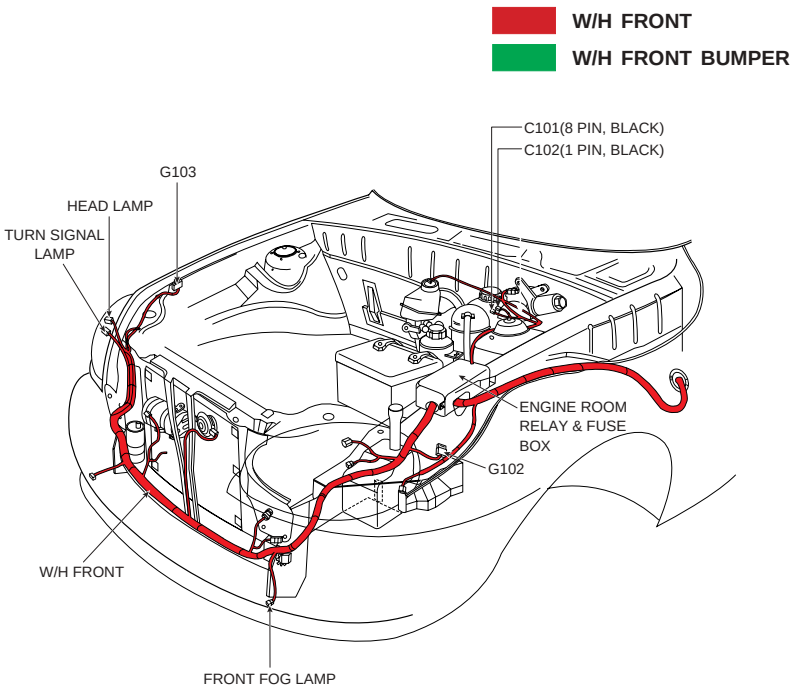

d. SPLICE PACK


S101(BLACK)

|           |          |          |
|-----------|----------|----------|
| 3<br>(RW) | 6<br>(R) | 9<br>(B) |
| 2<br>(RW) | 5<br>(R) | 8<br>(B) |
| 1<br>(RW) | 4<br>(R) | 7<br>(B) |

- C204 "3" Ter (F19)  
A/C COMP. RELAY "86" Ter  
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter  
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter  
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY(Ef4)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9)  
(POWER WINDOW RELAY "85" Ter)
- GROUND(G102)  
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter  
ILLUMINATION RELAY "85" Ter

( ) : WITHOUT A/C


2-3) IPCM-6KT

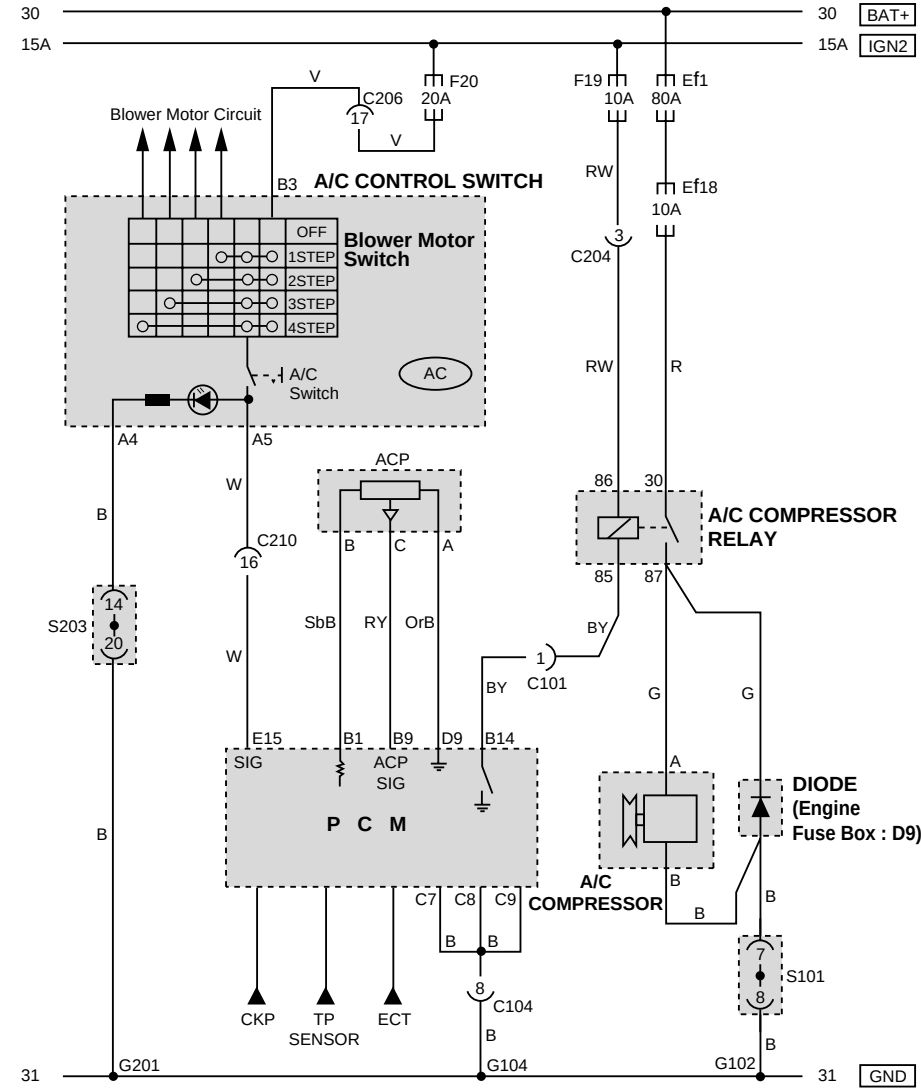

a. CONNECTOR INFORMATION


| CONNECTOR(NO)<br>(PIN NO. COLOR) | CONNECTING. WIRING HARNESS       | CONNECTOR POSITION                             |
|----------------------------------|----------------------------------|------------------------------------------------|
| C101 (6PIN, BLACK)               | W/H PCM & ABS - Front (with A/C) | Below Engine Coolant Surge Tank                |
| C104 (15PIN, BLACK)              | W/H PCM & ABS - Engine Control   | Behind Right Strut Mounting                    |
| C204 (6PIN, WHITE)               | W/H Front - Floor                | Connection Box Next to Passenger Room Fuse Box |
| C206 (20PIN, COLORLESS)          | W/H Floor - IP                   | Connection Box Next to Passenger Room Fuse Box |
| C210 (20PIN, COLORLESS)          | W/H PCM & ABS - IP               | Below Glove Box (Right Side Panel)             |
| S101 (9PIN, BLACK)               | W/H Front                        | Engine Room Relay And Fuse Box                 |
| S203 (20PIN, RED)                | W/H IP                           | Next to Passenger Room Relay Box               |
| G102                             | W/H Front                        | Fender Below Engine Room Fuse Box              |
| G104                             | W/H Engine Control               | Intake Mainfold '#4' Cylinder                  |
| G201                             | W/H IP                           | Below Right Front Console Box                  |

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

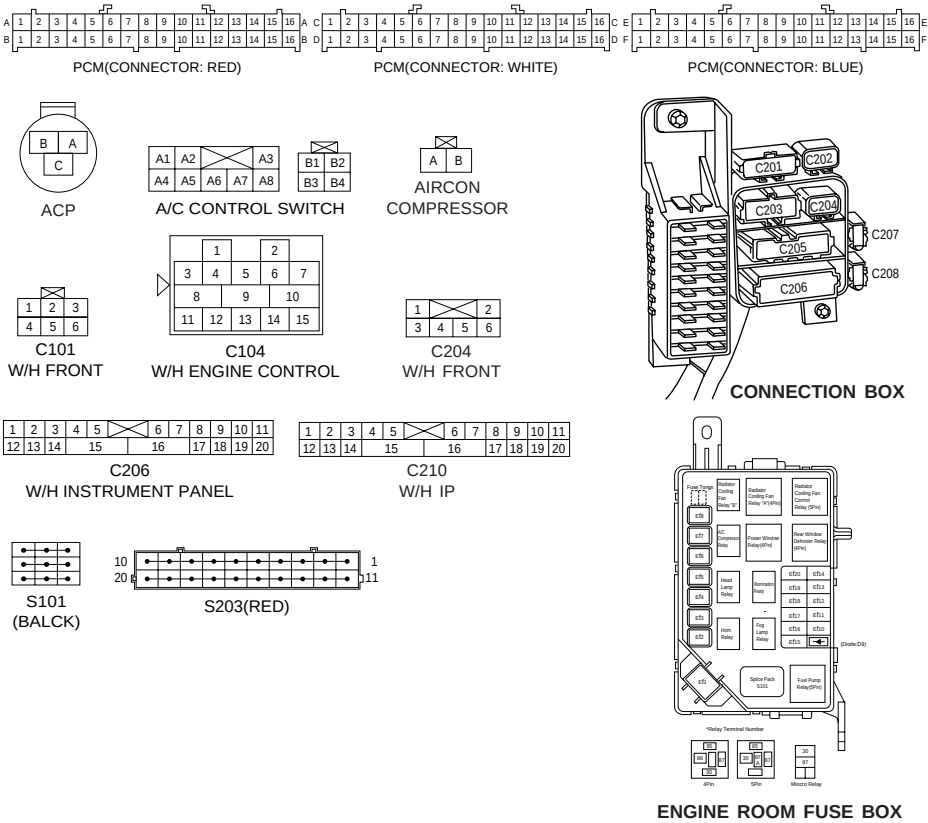


## c. POSITION OF CONNECTORS AND GROUNDS


## • ENGINE ROOM INSIDE

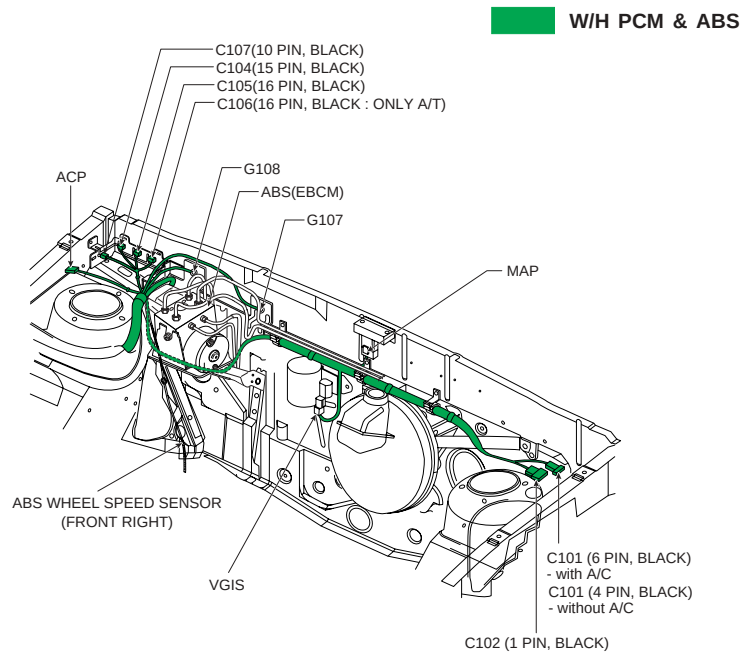

## • PASSENGER ROOM RIGHT SIDE PANEL

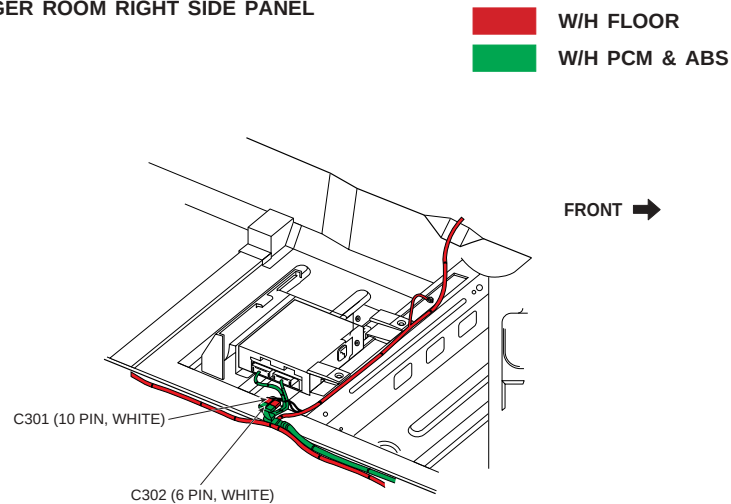


## • W/H FRONT, FRONT BUMPER

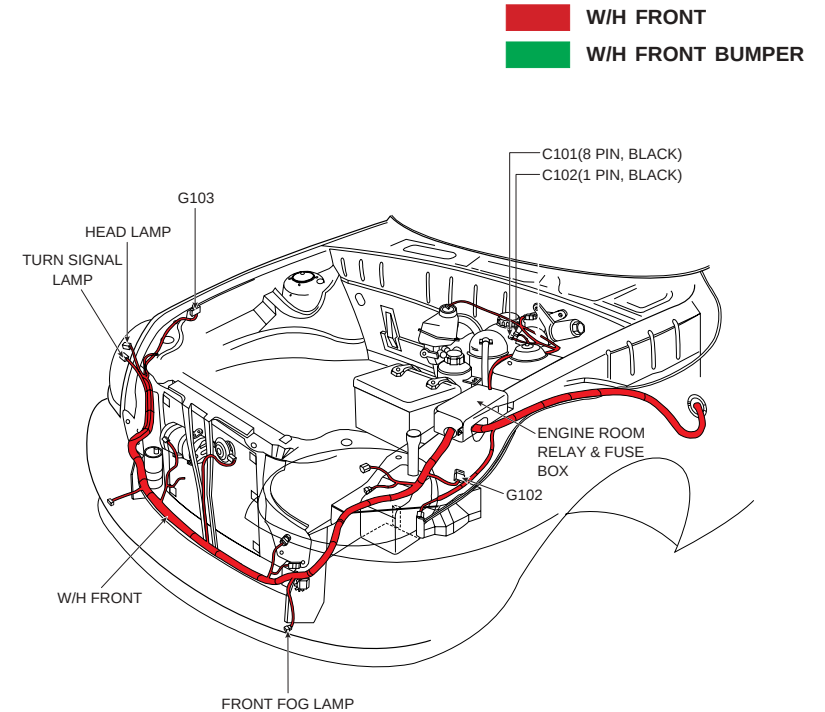


## d. SPLICE PACK

## S203 (RED)

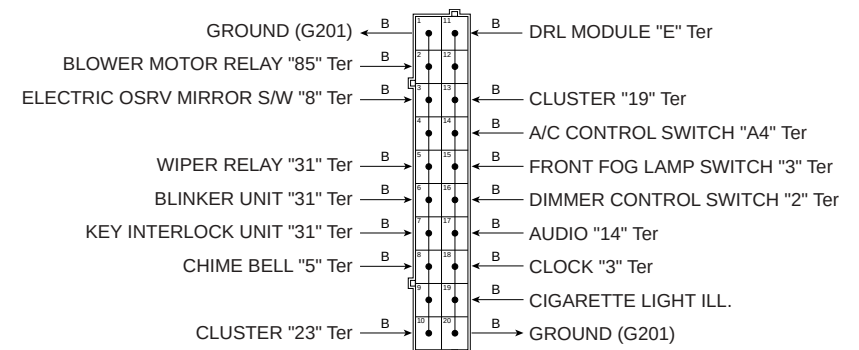


3) BLOWER MOTOR CIRCUIT

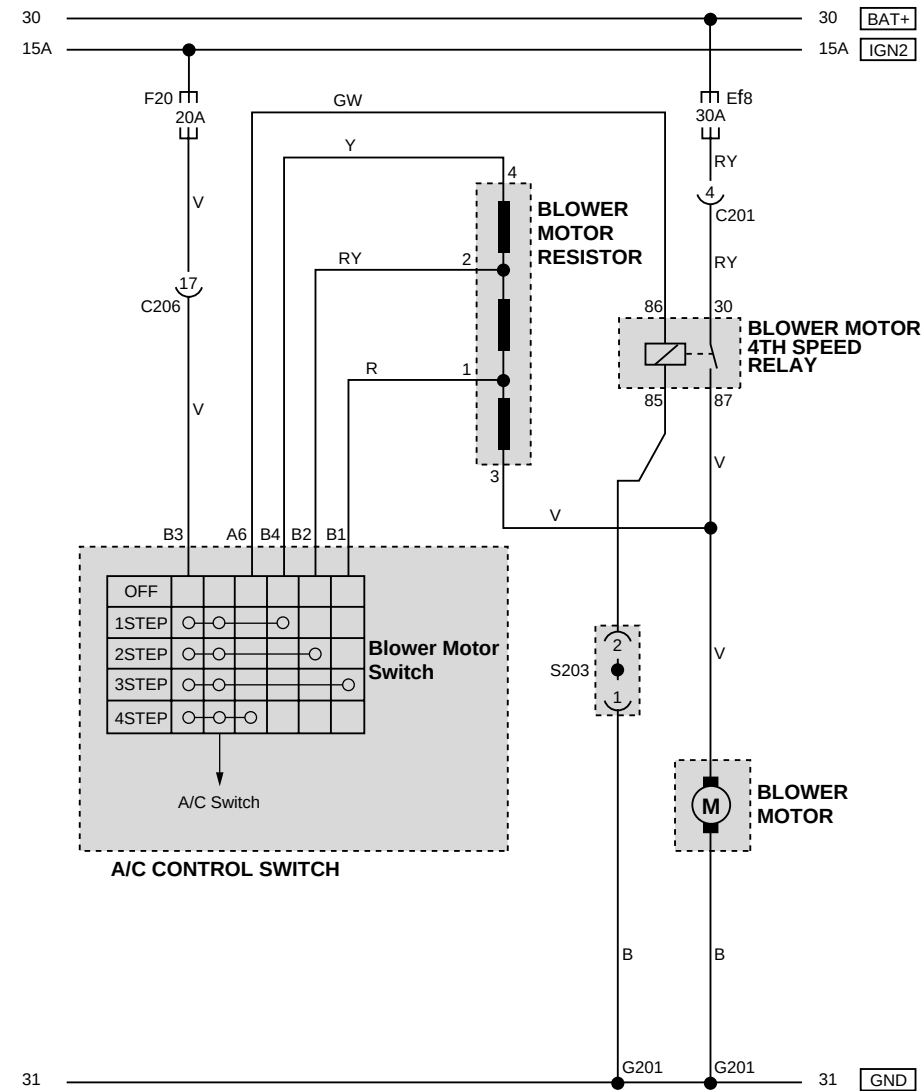

a. CONNECTOR INFORMATION


| CONNECTOR(No)<br>(PIN NO. COLOR) | CONNECTING. WIRING HARNESS | CONNECTOR POSITION                             |
|----------------------------------|----------------------------|------------------------------------------------|
| C201(7PIN. ORANGE)               | W/H Front - IP             | Connection Box Next to Passenger Room Fuse Box |
| C206(20PIN. COLORLESS)           | W/H Floor - IP             | Connection Box Next to Passenger Room Fuse Box |
| S203(20PIN. RED)                 | Splice pack                | Next to Passenger Room Relay Box               |
| G201                             | Ground                     | Below Right Front Console Box                  |

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

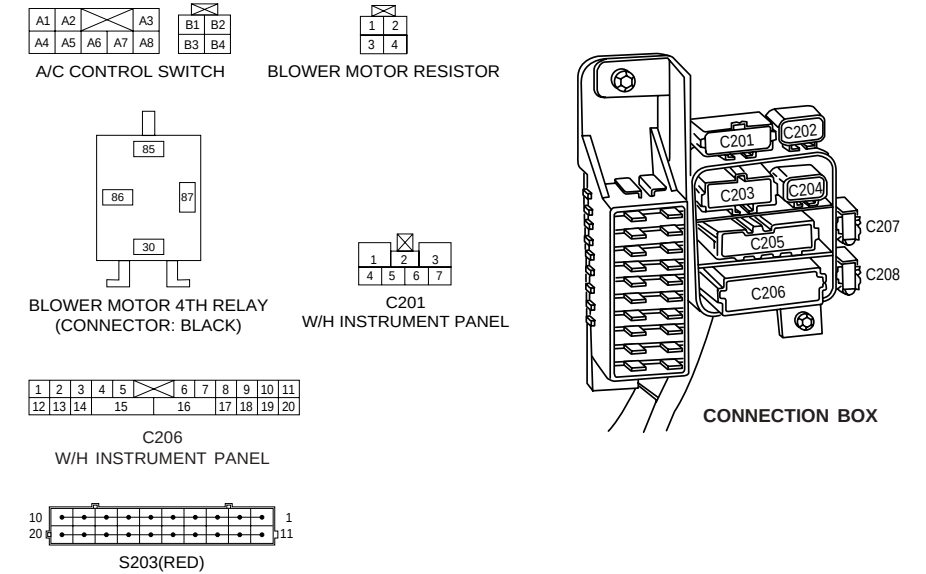


c. POSITION OF CONNECTORS AND GROUNDS

- ENGINE PANEL INSIDE

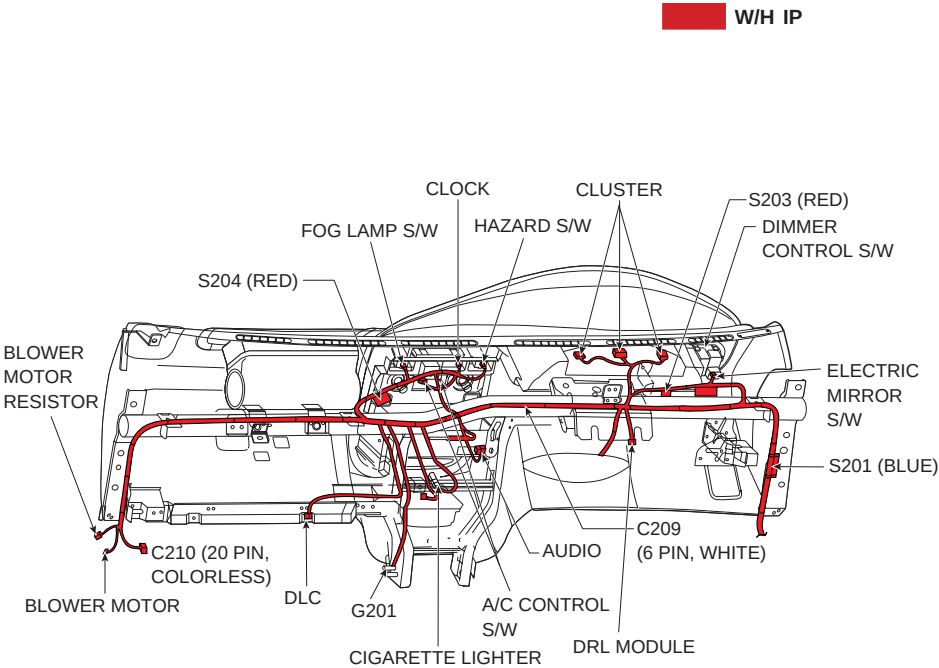


d. SPLICE PACK

S203(RED) - LHD

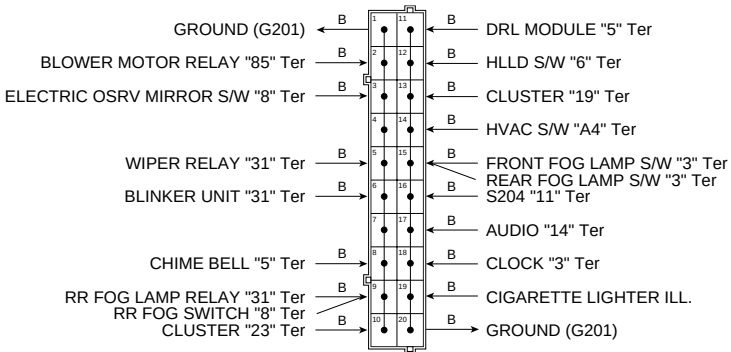


S203(RED) - RHD

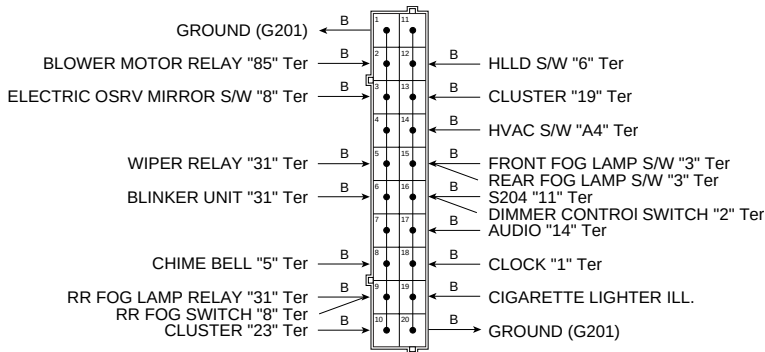

8. RADIATOR COOLING FAN







1) COOLING FAN CIRCUIT (W/AIR CONDITIONER) - LHD

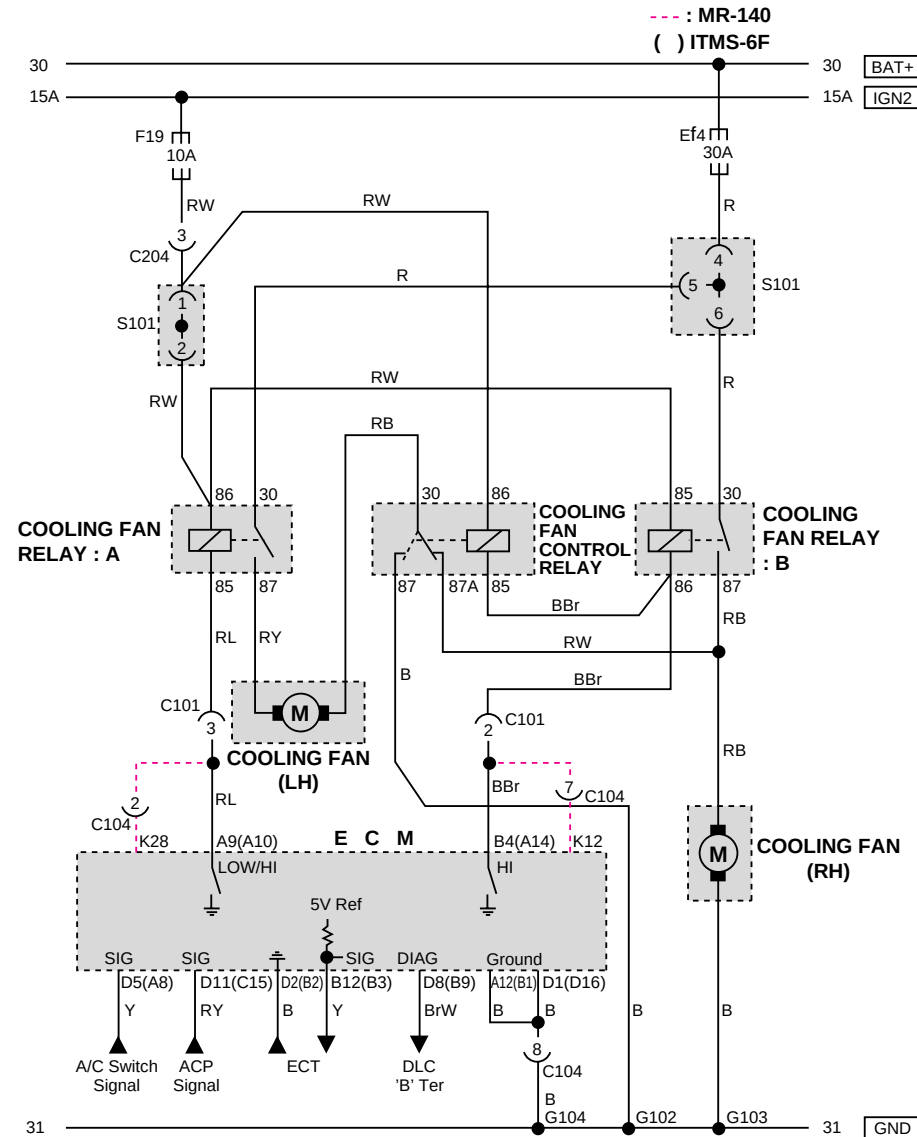




a. CONNECTOR INFORMATION

| CONNECTOR(NO)<br>(PIN NO. COLOR) | CONNECTING. WIRING HARNESS     | CONNECTOR POSITION                             |
|----------------------------------|--------------------------------|------------------------------------------------|
| C101(6PIN, BLACK)                | W/H ECM & ABS - Front          | Below Engine Coolant Surge Tank                |
| C104(15PIN, BLACK)               | W/H ECM & ABS - Engine Control | Behind Right Strut Mounting                    |
| C204(6PIN, WHITE)                | W/H Front - Floor              | Connection Box Next to Passenger Room Fuse Box |
| S101(9PIN, BLACK)                | Splice Pack                    | Engine Room Relay And Fuse Box                 |
| G102                             | Ground                         | Fender Below Engine Room Fuse Box              |
| G103                             | Ground                         | Fender Next to Air cleaner Housing             |
| G104                             | Ground                         | Intake Manifold '4' Cylinder                   |

      b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




ECM(MR-140)

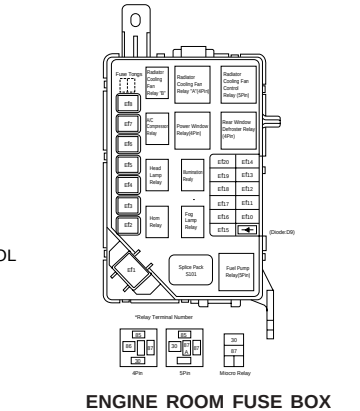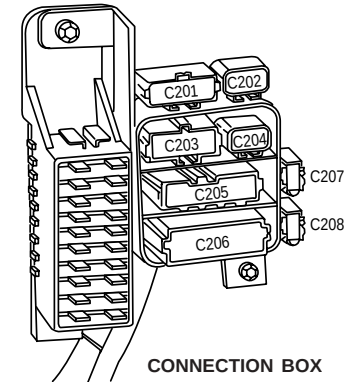 


c. POSITION OF CONNECTORS AND GROUNDS

- ENGINE ROOM INSIDE

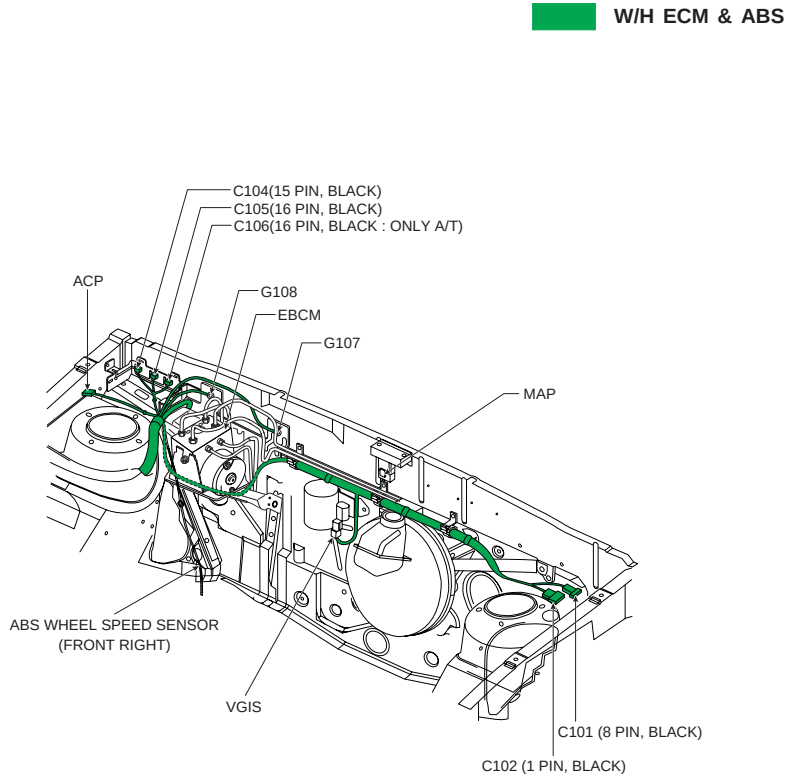

- W/H FRONT, FRONT BUMPER

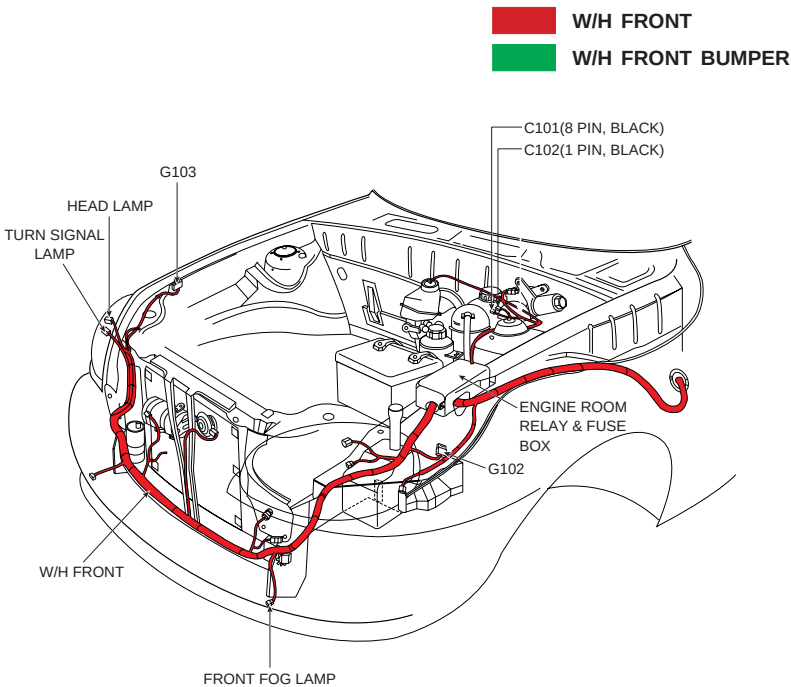

d. SPLICE PACK

S101(BLACK)

|           |          |          |
|-----------|----------|----------|
| 3<br>(RW) | 6<br>(R) | 9<br>(B) |
| 2<br>(RW) | 5<br>(R) | 8<br>(B) |
| 1<br>(RW) | 4<br>(R) | 7<br>(B) |

- C204 "3" Ter (F19)  
A/C COMP. RELAY "86" Ter  
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter  
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter  
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY(Ef4)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9)  
(POWER WINDOW RELAY "85" Ter)
- GROUND(G102)  
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter  
ILLUMINATION RELAY "85" Ter

( ): WITHOUT A/C