


17. HORN CIRCUIT

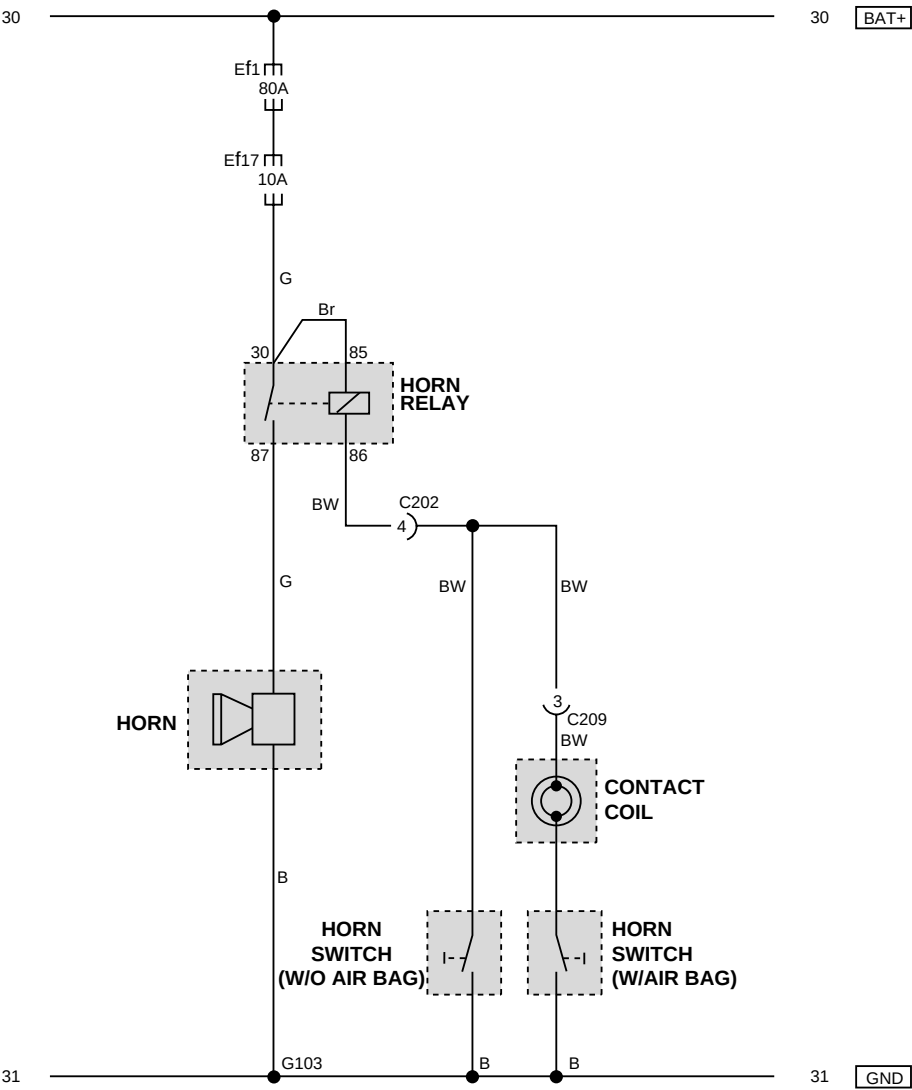

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C209 (6PIN. WHITE)	W/H Air Bag - IP	Behind Left Front Console
G103	Ground	Fender Next to Air Cleaner Housing



b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

1	2	3	4	5	6	7	8
9	10	11	12	13	14	15	16

C202
W/H IP

1	2
3	4


C209
W/H AIR-BAG

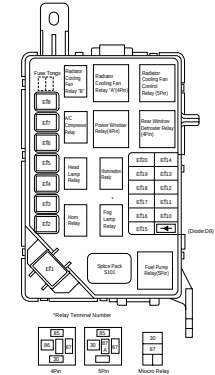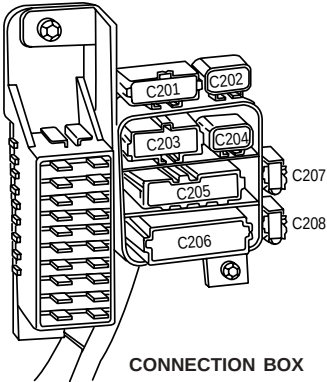


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

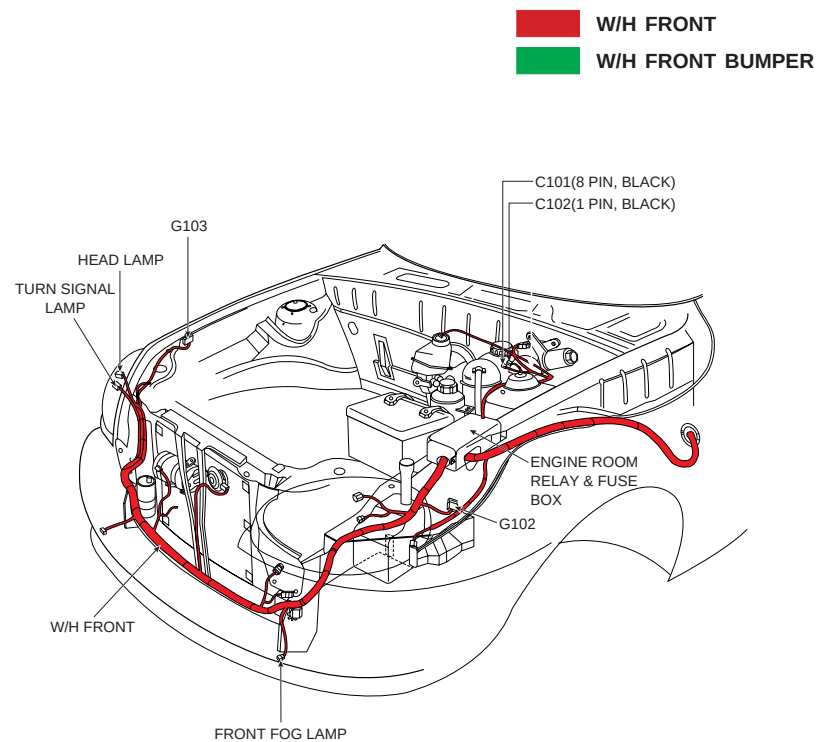




18. CHIME BELL, CLOCK CIRCUIT

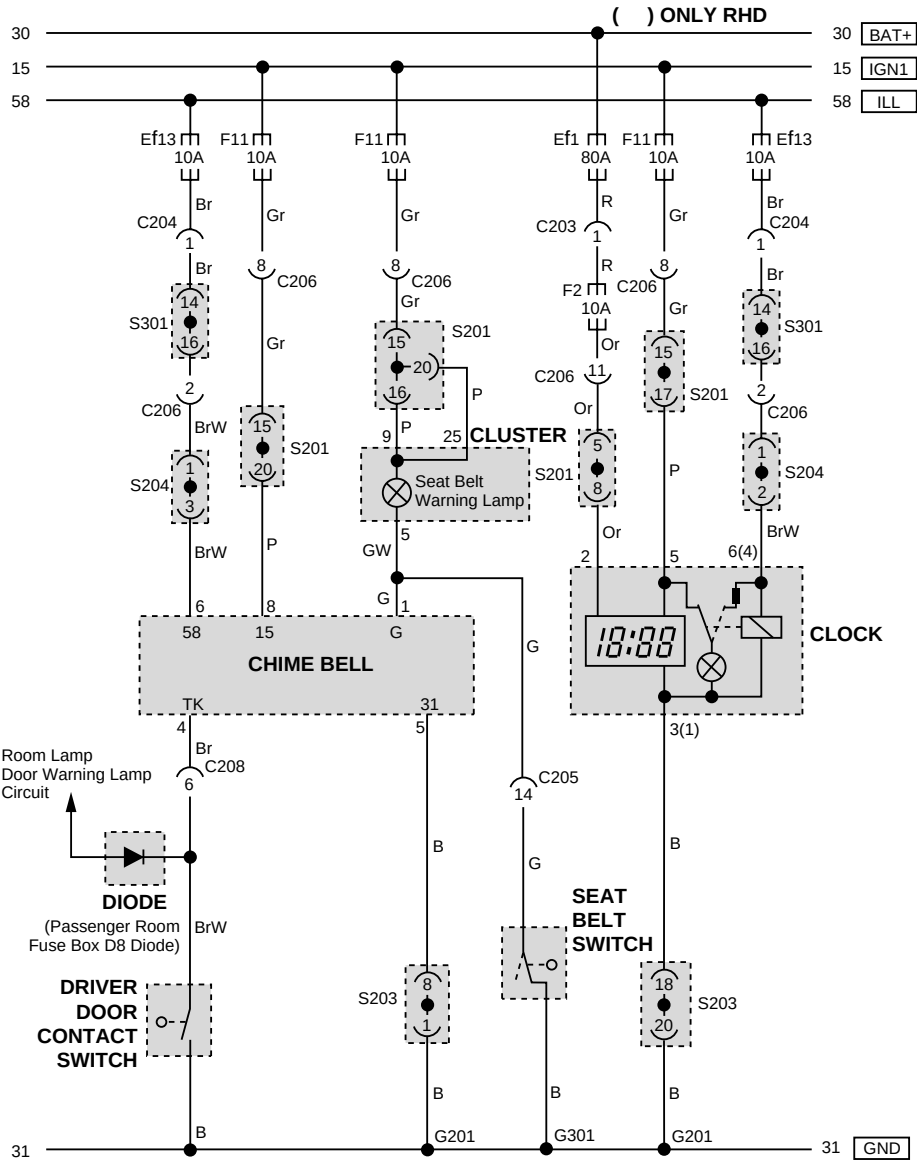

a. CONNECTOR INFORMATION



CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C208 (8PIN. WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box
G301	Ground	Below Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

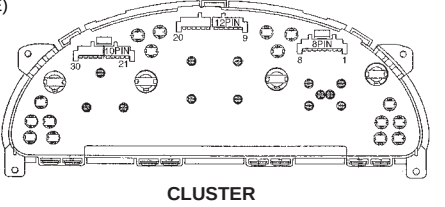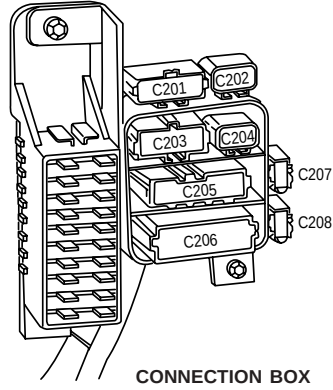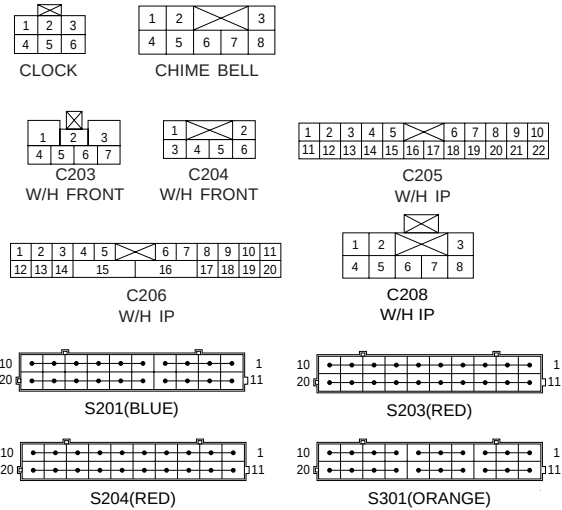

c. POSITION OF CONNECTORS AND GROUNDS


• FLOOR PANEL LEFT

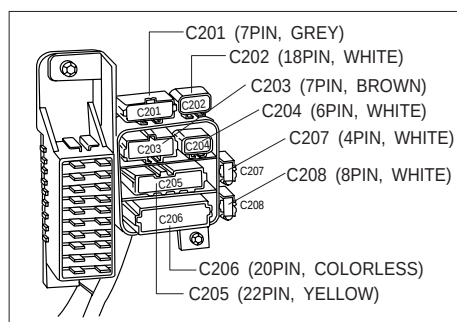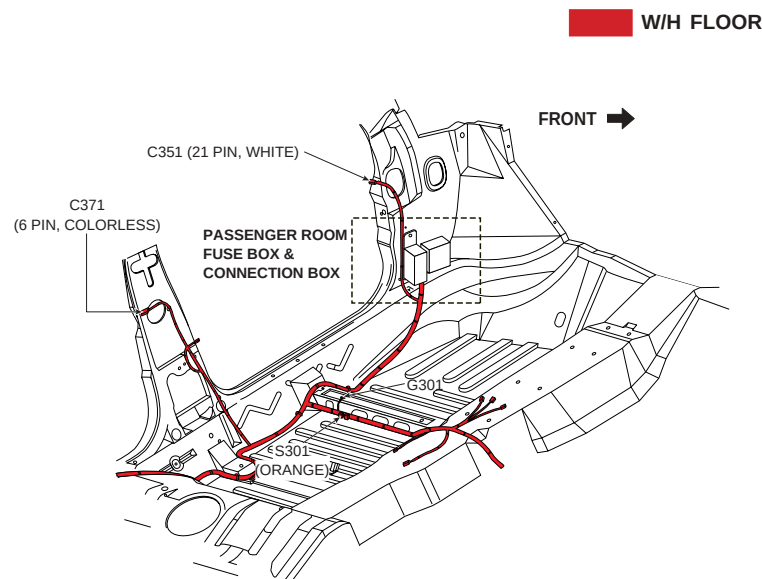


PASSENGER ROOM FUSE & CONNECTION BOX

d. SPLICE PACK


S201(BLUE) - LHD

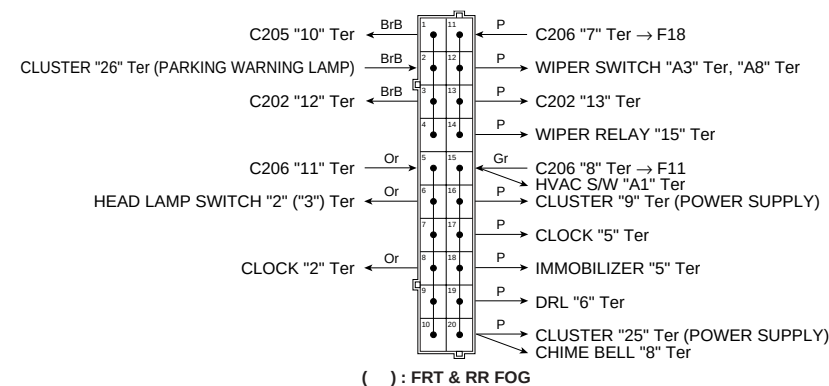

S203(RED) - LHD

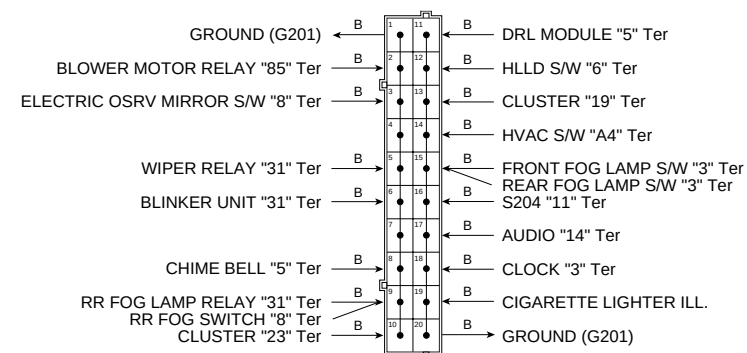


S301(ORANGE) - NOTCH BACK

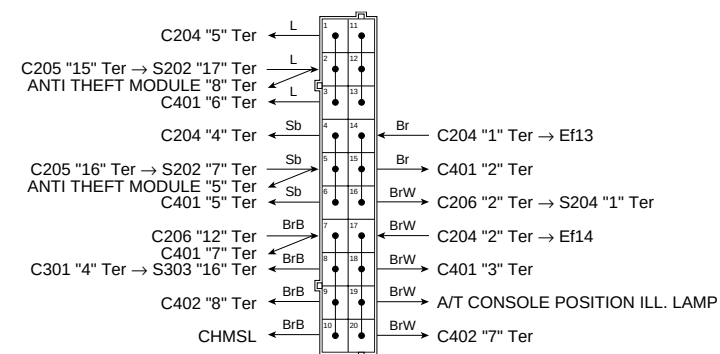

19. WIPER CIRCUIT


1) NOTCH BACK

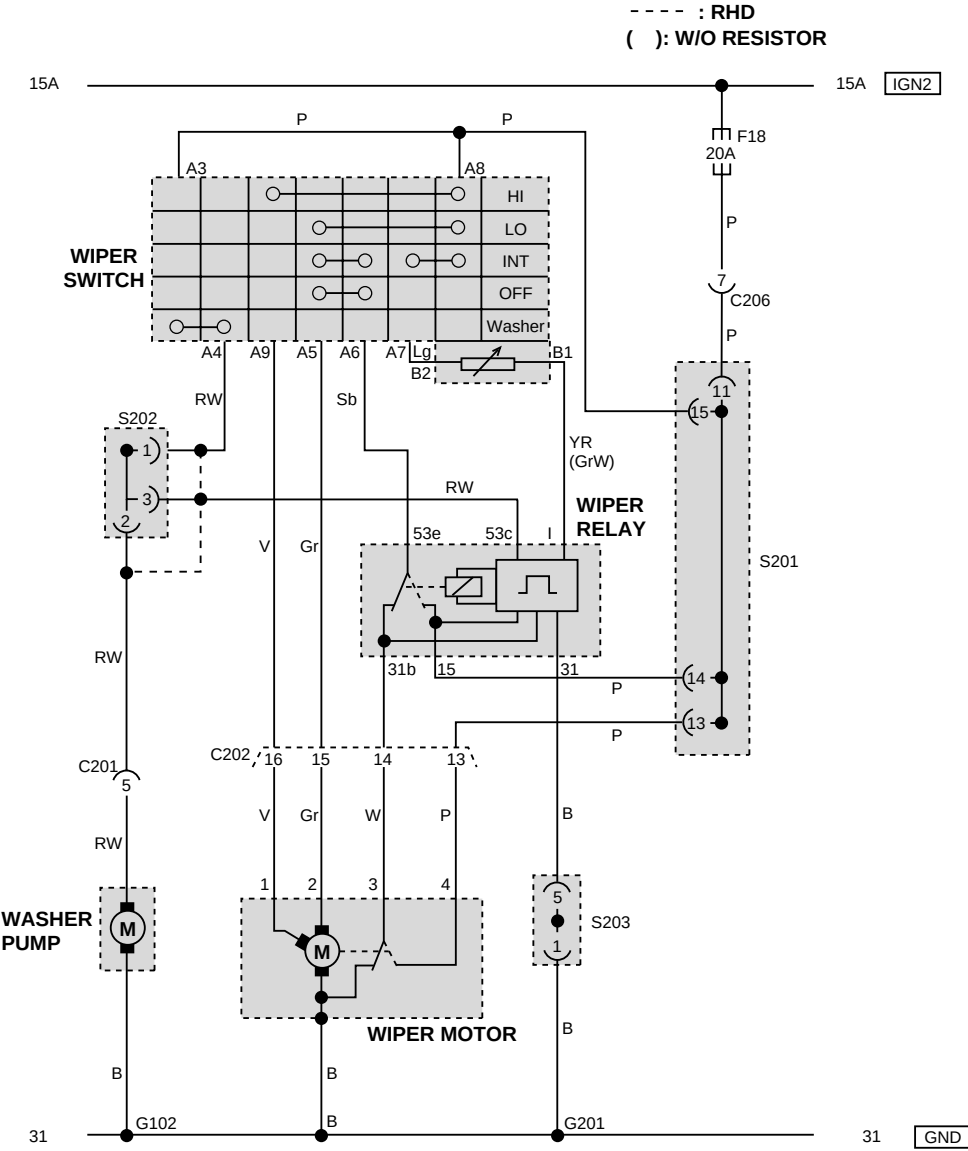

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C201 (7PIN GRAY)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C202 (18PIN WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S202 (20PIN. ORNAGE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
G102	Ground	Fender Below Engine Room Fuse Box
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

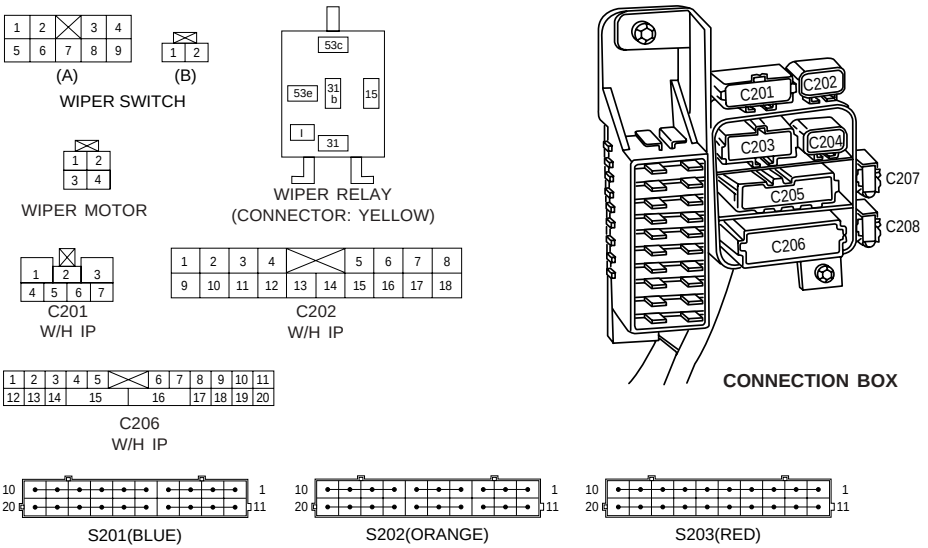


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

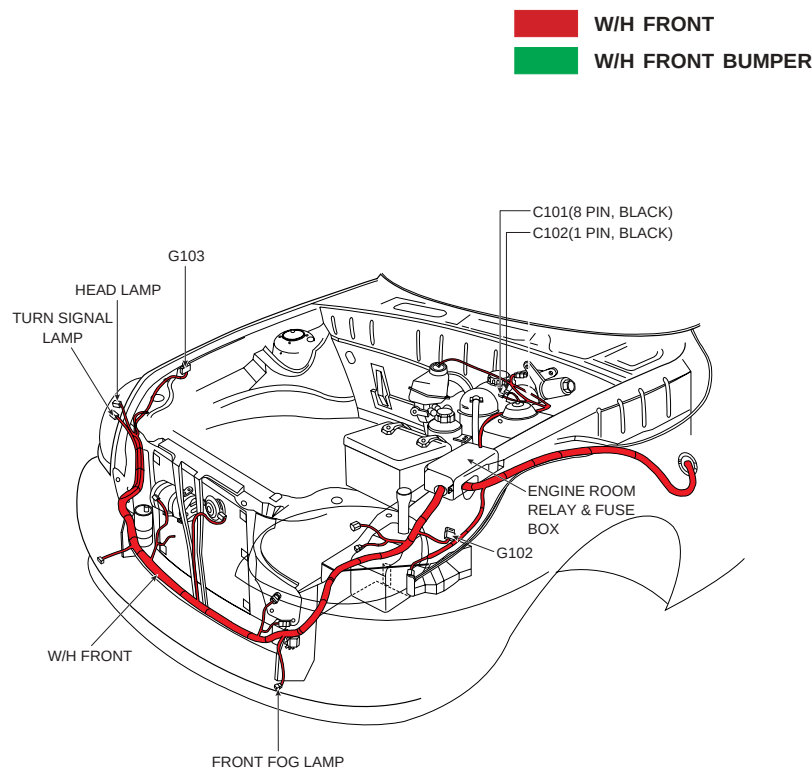


d. SPLICE PACK


S201(BLUE) - LHD

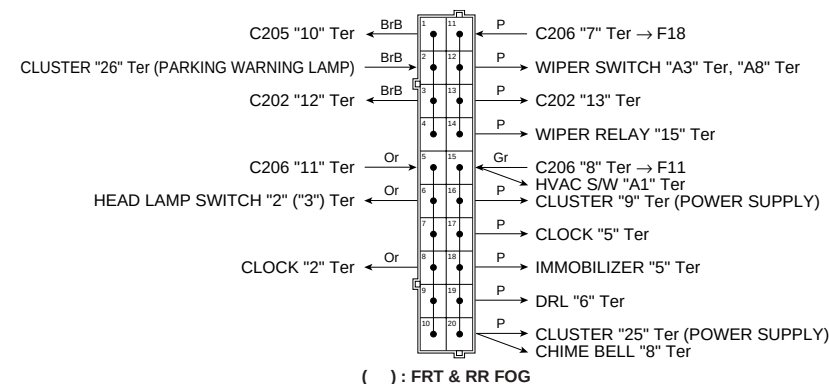


S202(ORANGE)

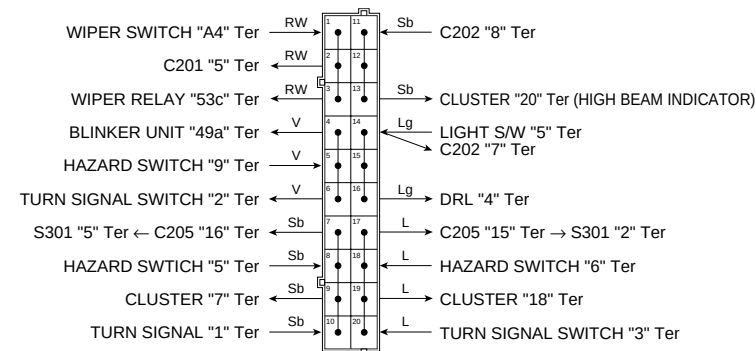

S203(RED) - LHD

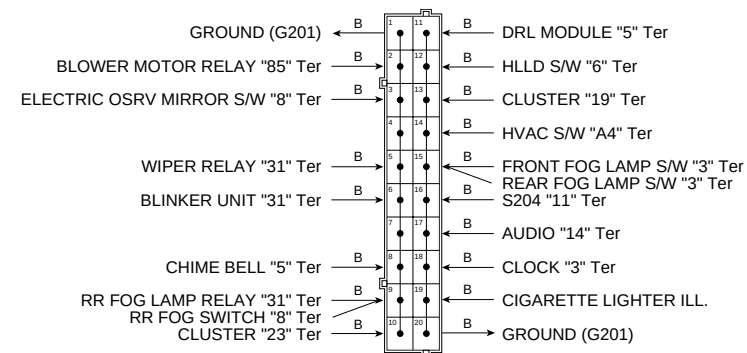


2) HATCH BACK(3 DOOR, 5 DOOR)

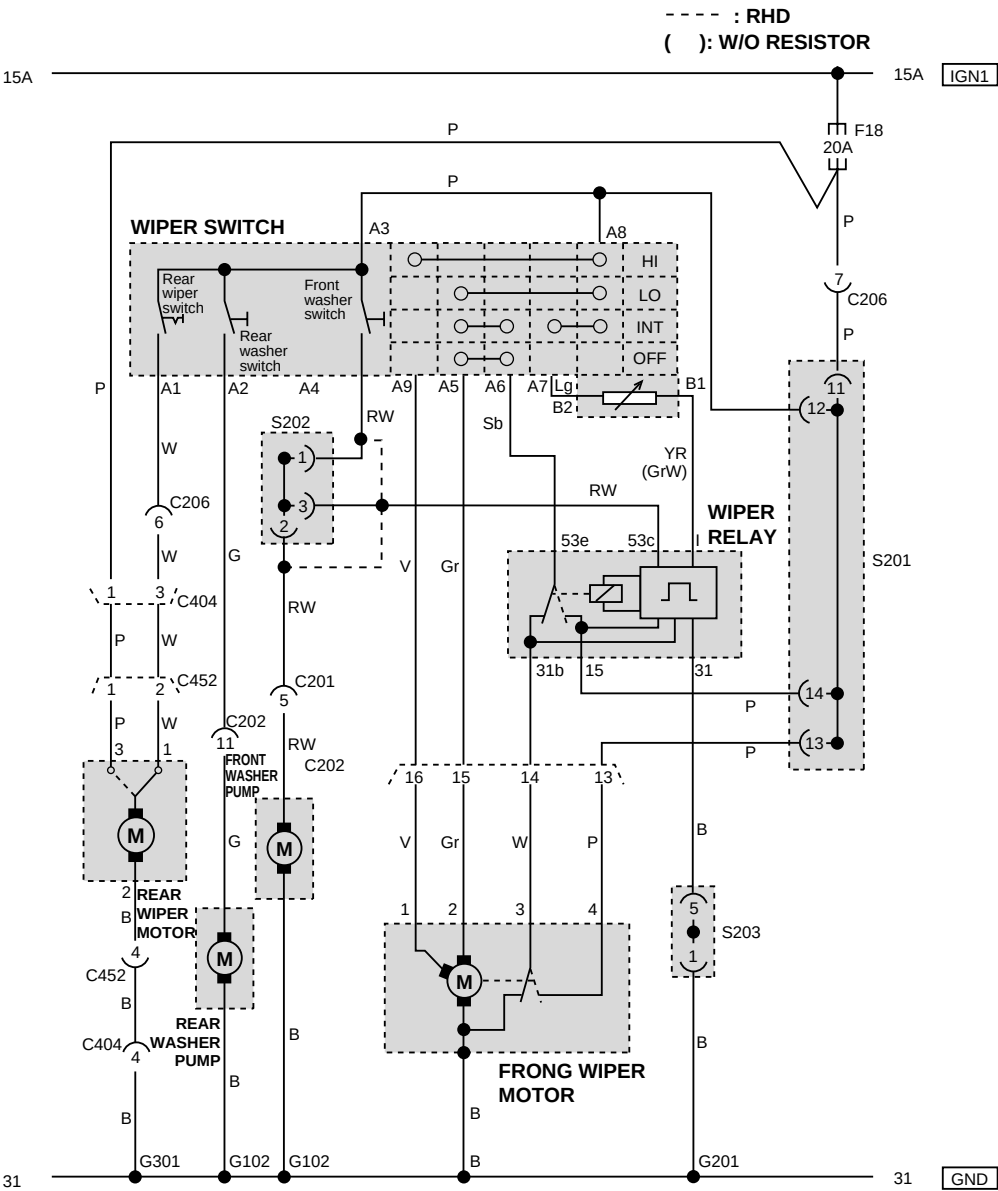

a. CONNECTOR INFORMATION


CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C201 (7PIN. GRAY)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C404 (5PIN WHITE)	W/H Floor - Tail Gate Extension	Inside Trunk
C452 (3PIN WHITE)	W/H Tail Gate Extension - Tail Gate	Inside Tail Gate
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S202 (20PIN. ORNAGE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
G102	Ground	Fender Below Engine Room Fuse Box
G201	Ground	Below Right Front Console Box
G301	Ground	Below Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

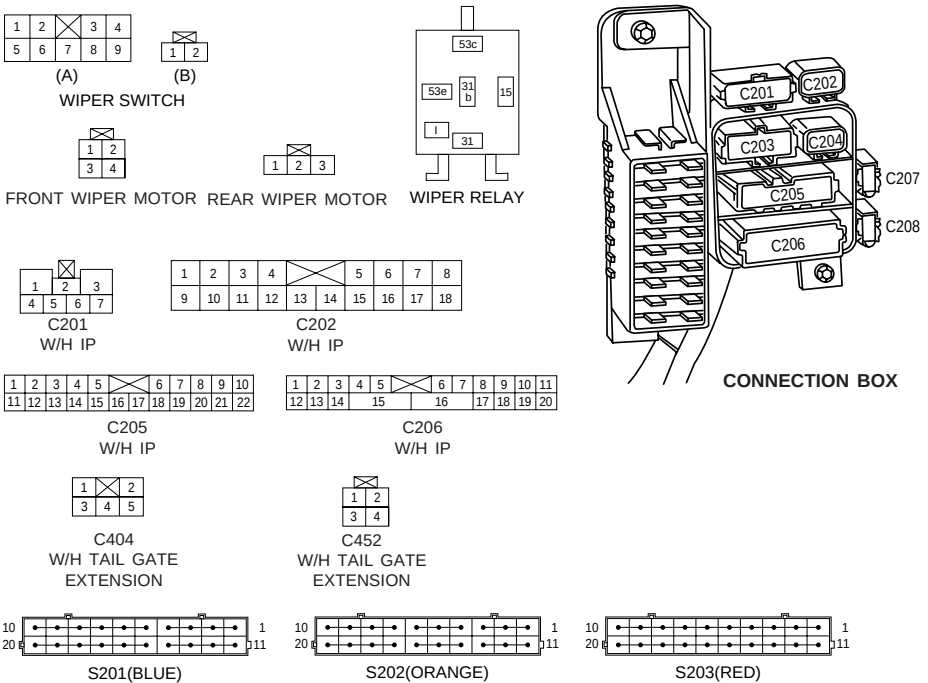


c. POSITION OF CONNECTORS AND GROUNDS

- W/H FRONT, FRONT BUMPER

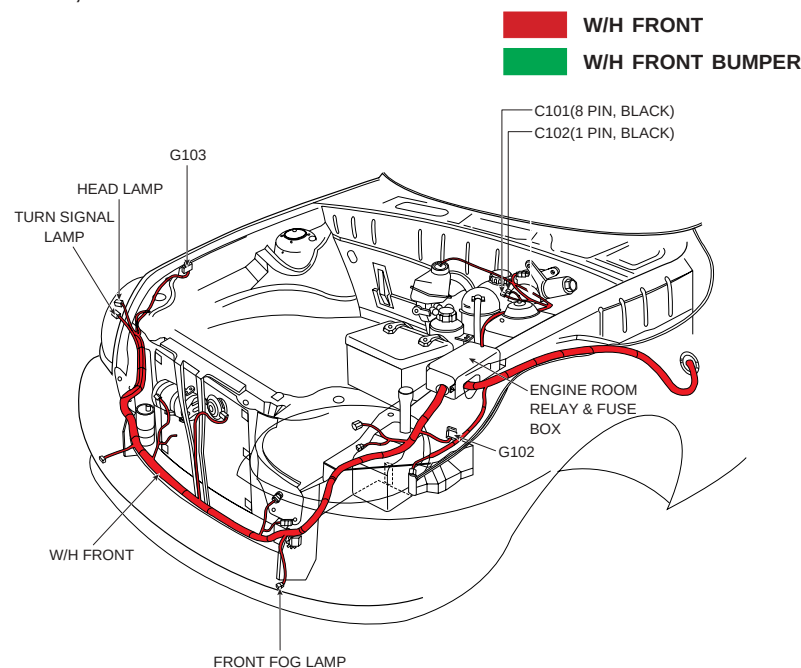


- FLOOR PANEL LEFT

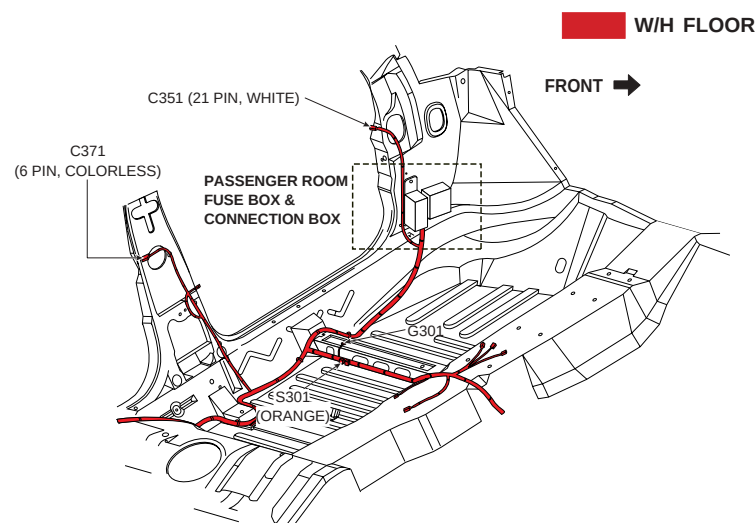


d. SPLICE PACK


S201(BLUE) - LHD

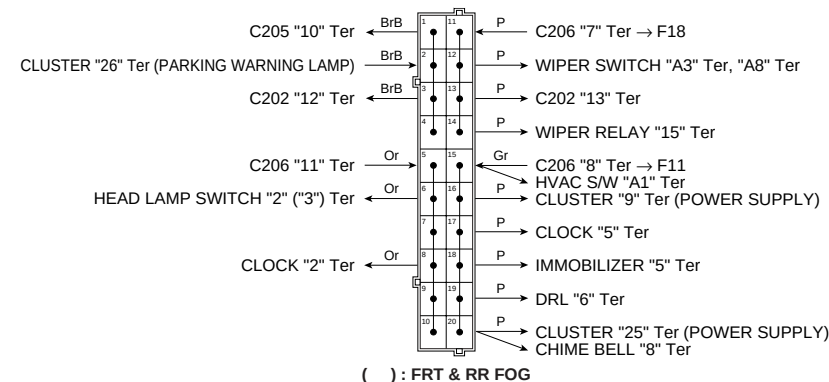

S202(ORANGE)

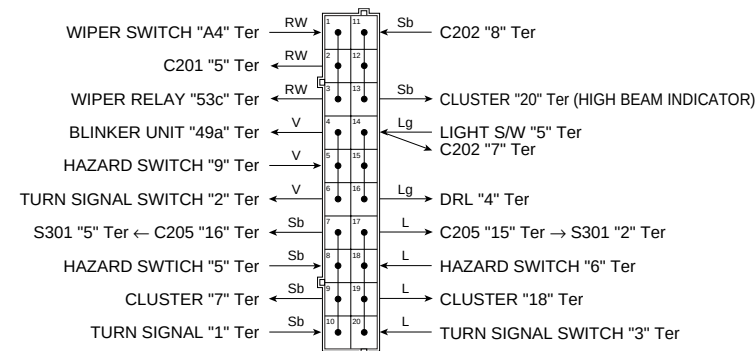


S203(RED) - LHD

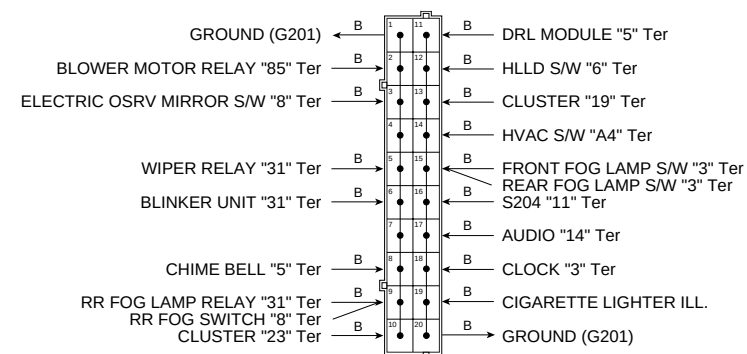

20. REAR WINDOW DEFROSTER CIRCUIT




1) NOTCH BACK

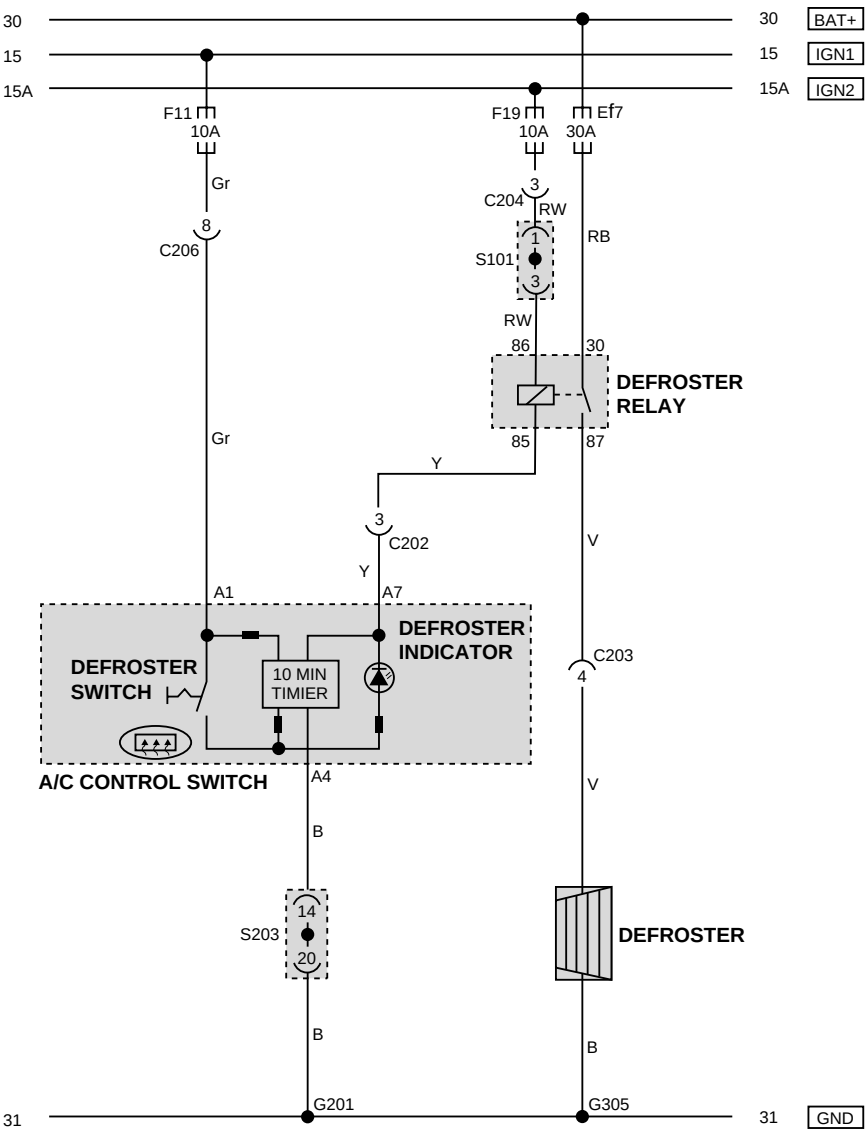

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
S101 (9PIN. BLACK)	Splice Pack	Engine Room Relay And Fuse Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
G201	Ground	Below Right Front Console Box
G305	Ground	Inside Rear Window Right Pillar Trim


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

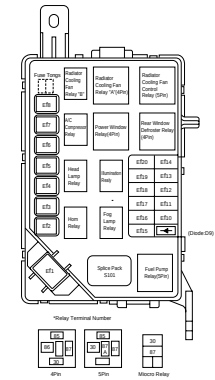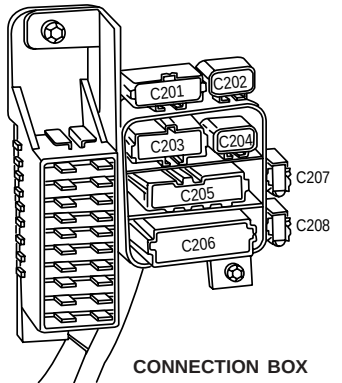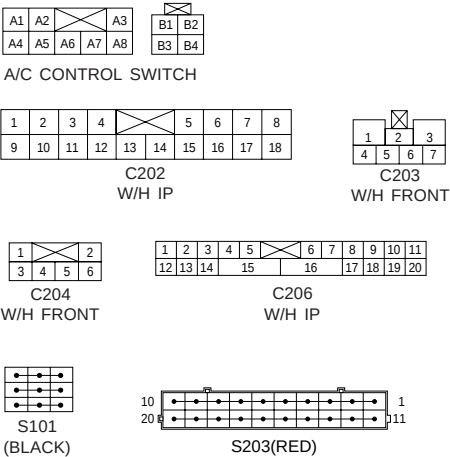

ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS

• FLOOR PANEL

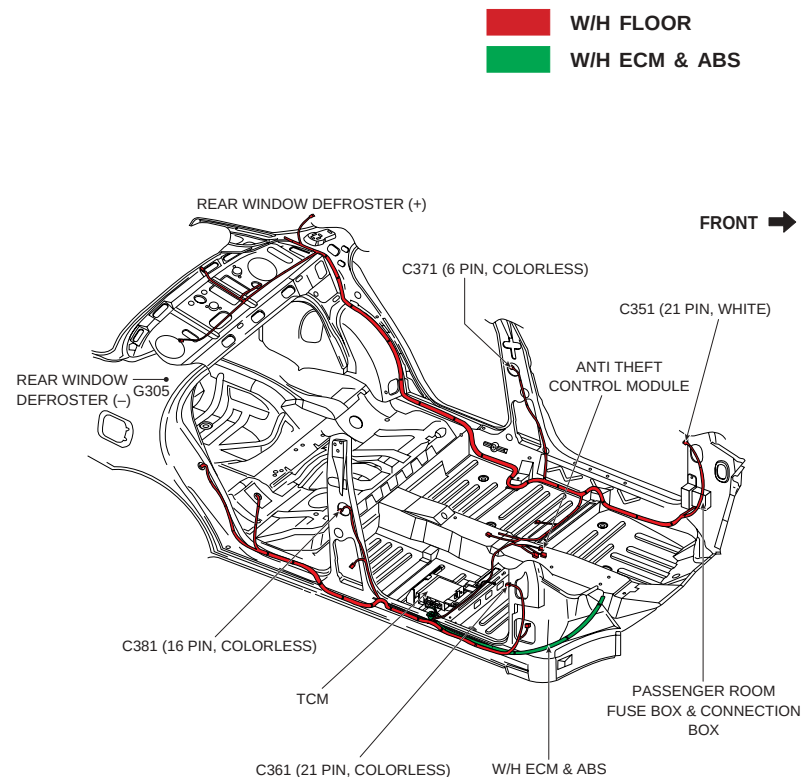

d. SPLICE PACK

S101(BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)

- C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY(Ef4)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
- GROUND(G102)
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter

(): WITHOUT A/C

S203(RED) - LHD

