



2) HATCH BACK

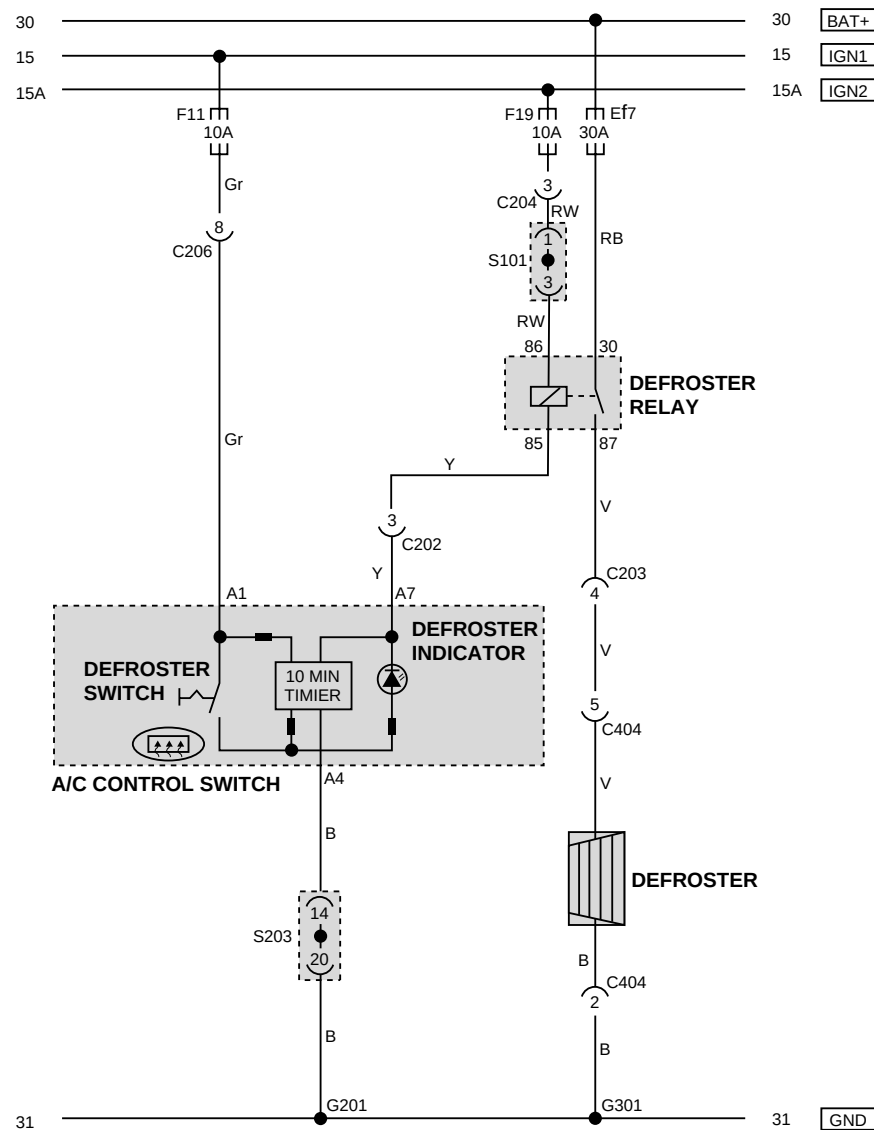

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C404(5PIN.WHITE)	W/H Floor Tail Gate Extension	Inside Trunk
S101 (9PIN. BLACK)	Splice Pack	Engine Room Relay And Fuse Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
G201	Ground	Below Right Front Console Box
G305	Ground	Inside Rear Window Right Pillar Trim

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

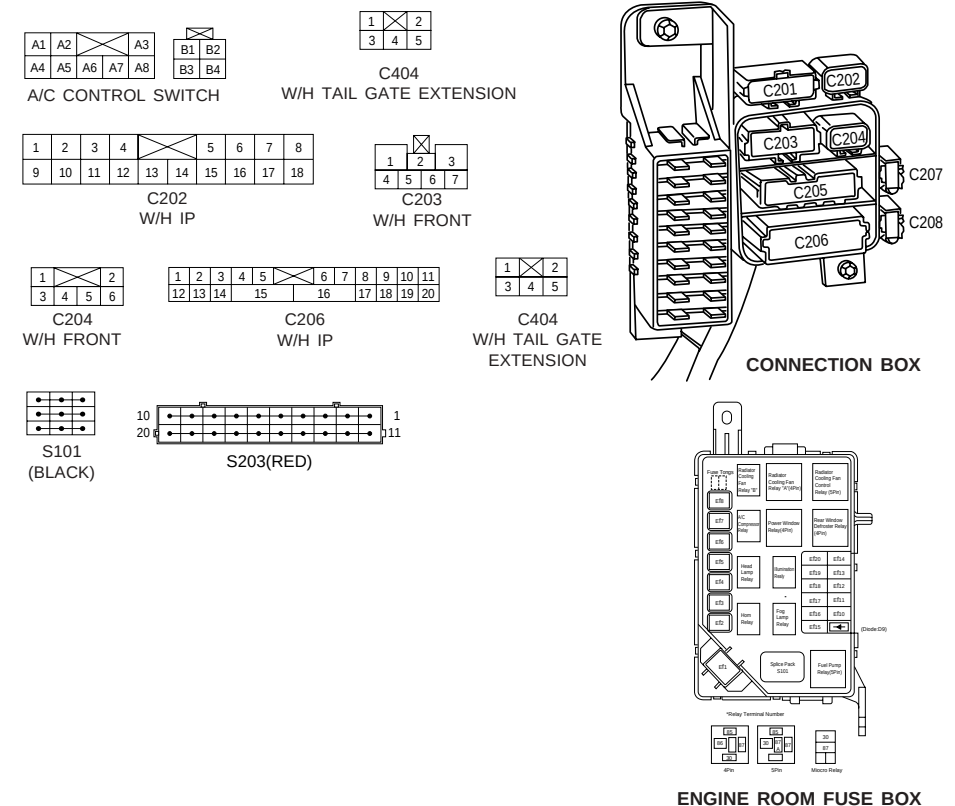

c. POSITION OF CONNECTORS AND GROUNDS

- FLOOR PANEL

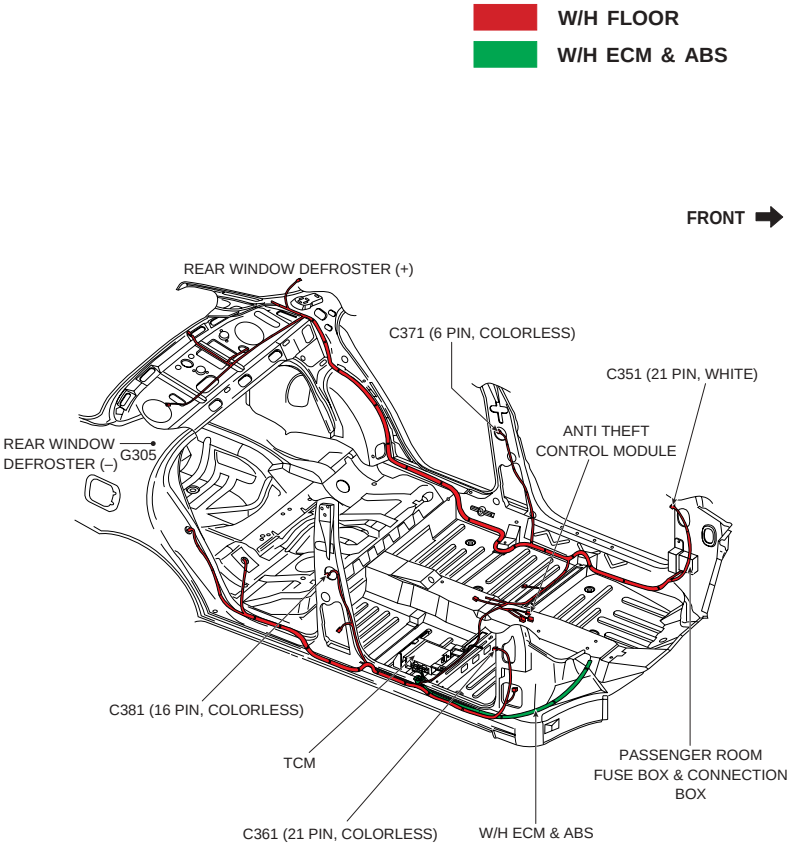

d. SPLICE PACK


S101(BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)

- C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
- COOLING FAN RELAY A : "86" Ter
B : "86" Ter
- REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
- BATTERY POWER SUPPLY(Ef4)
- COOLING FAN RELAY A : "30" Ter
- COOLING FAN RELAY B : "30" Ter
- DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
- GROUND(G102)
POWER WINDOW RELAY "85" Ter
- HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter


() : WITHOUT A/C

S203(RED) - LHD

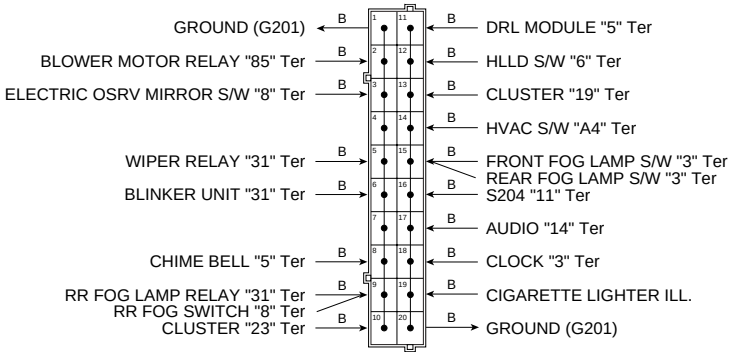

21. POWER WINDOW CIRCUIT




1) ONLY FRONT POWER WINDOW CIRCUIT (NON SPORTY PACK)
1-1) NON SPORTY PACK

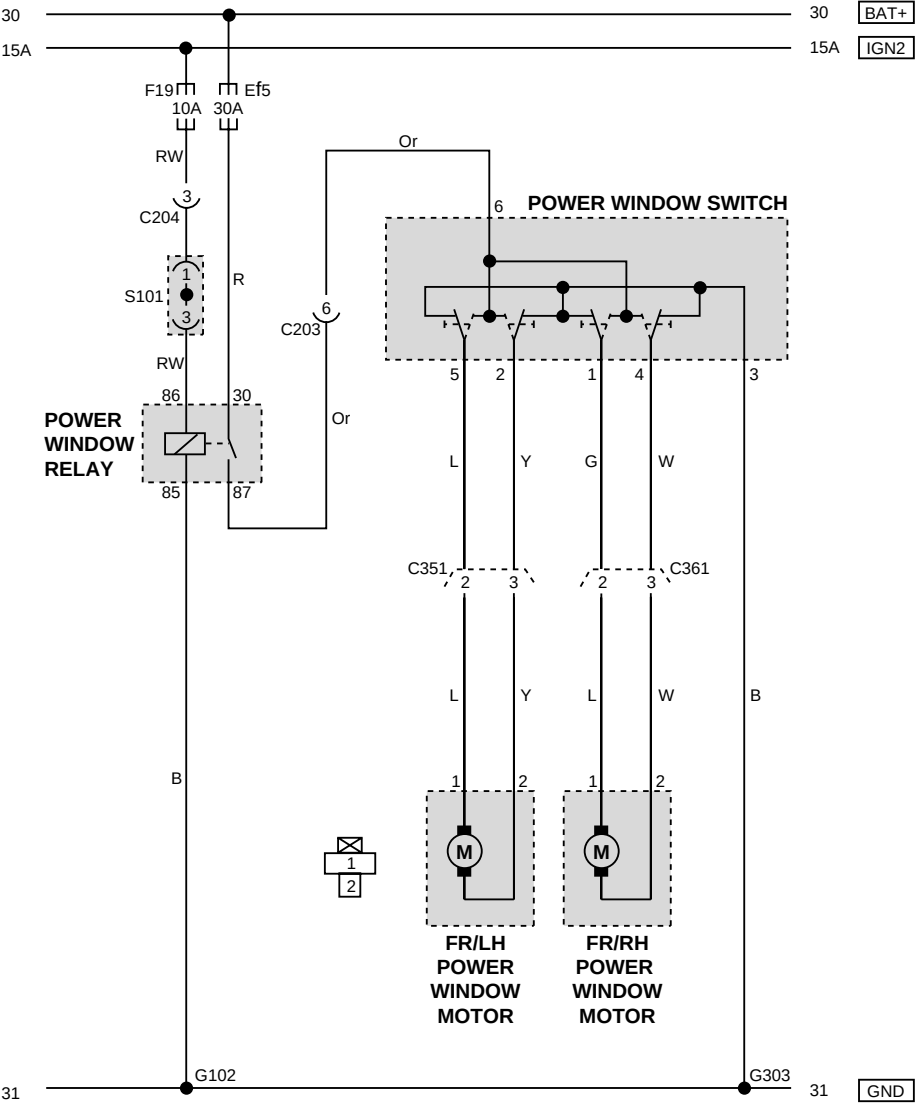

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front right Door Upper Hinge
S101 (9PIN. BLACK)	Splice Pack	EngineRoom Relay And Fuse Box
G102	Ground	Fender Below Engine Room Fuse Box
G303	Ground	Below Co-Driver Seat



b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

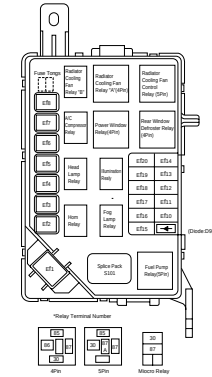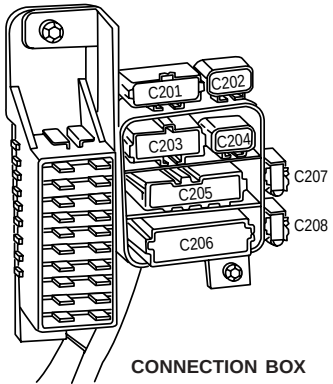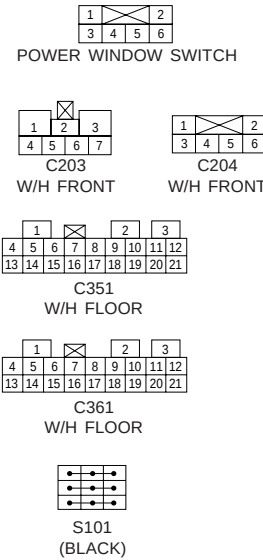


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS

• FRONT DOOR

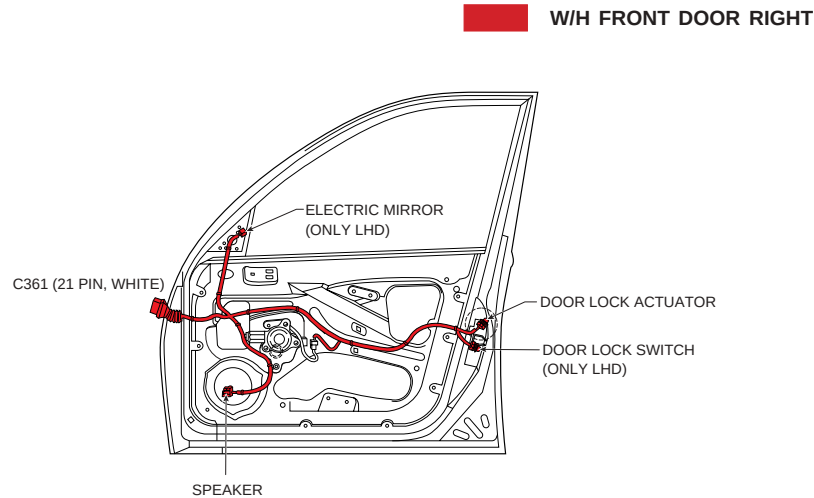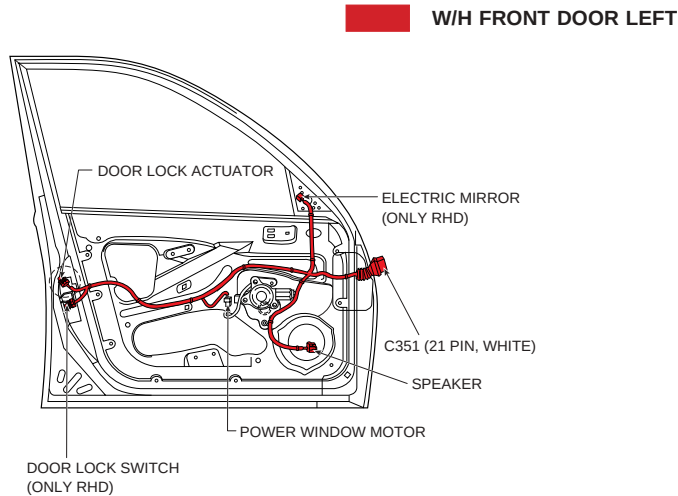

• W/H FRONT, FRONT BUMPER

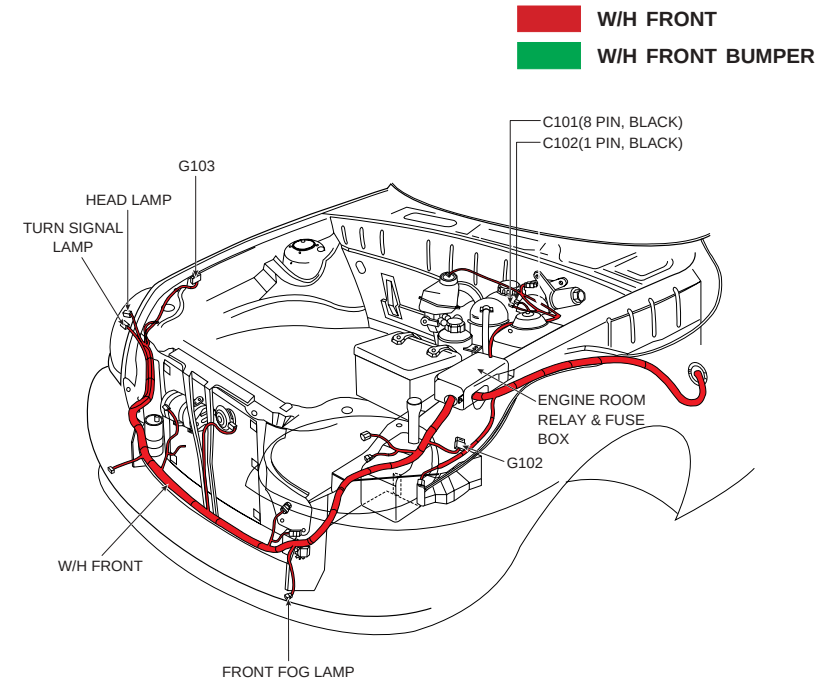

d. SPLICE PACK


S101(BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)

1. C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
2. COOLING FAN RELAY A : "86" Ter
B : "86" Ter
3. REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
4. BATTERY POWER SUPPLY(Ef4)
5. COOLING FAN RELAY A : "30" Ter
6. COOLING FAN RELAY B : "30" Ter
7. DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
8. GROUND(G102)
POWER WINDOW RELAY "85" Ter
9. HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter

(): WITHOUT A/C




1-2) SPORTY PACK

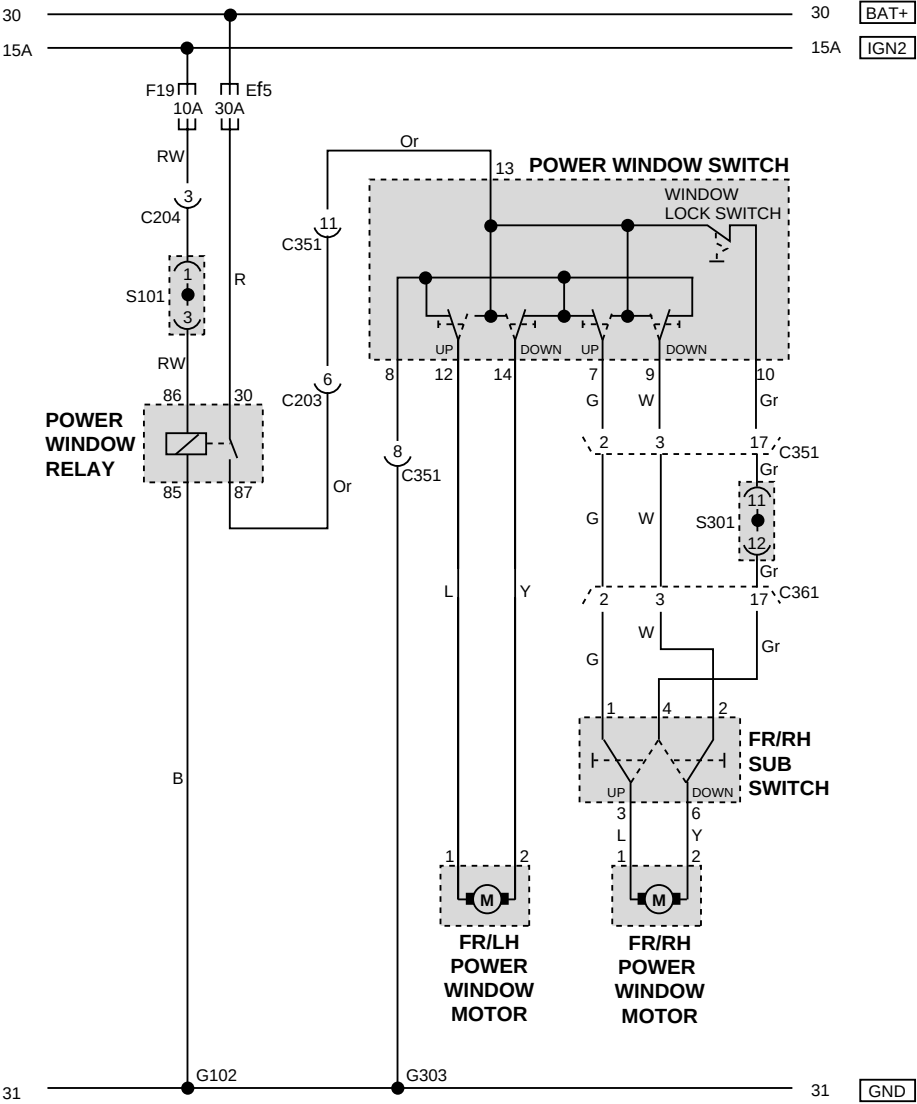

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front right Door Upper Hinge
S101 (9PIN. BLACK)	Splice Pack	EngineRoom Relay And Fuse Box
G102	Ground	Fender Below Engine Room Fuse Box
G303	Ground	Below Co-Driver Seat



b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

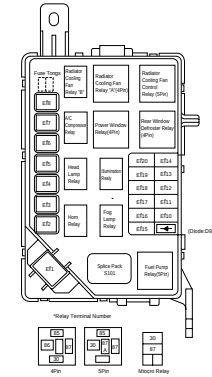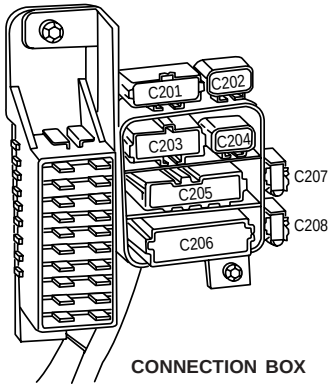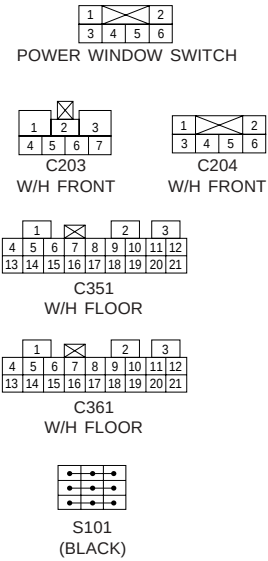


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS

• FRONT DOOR

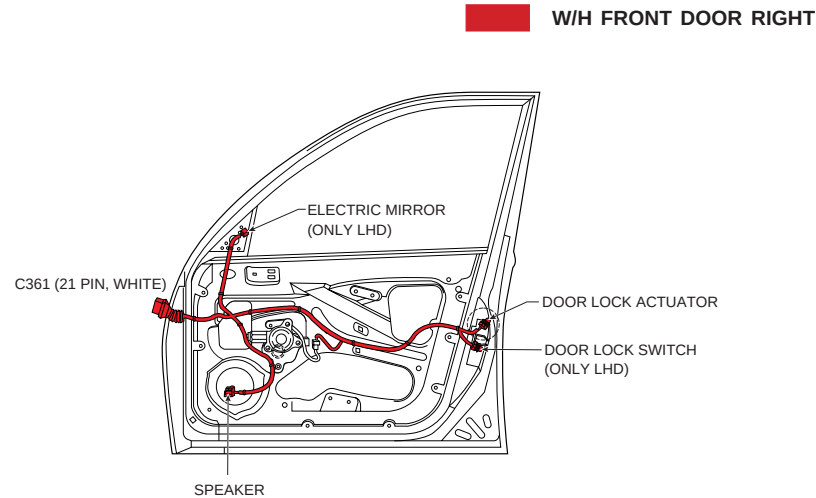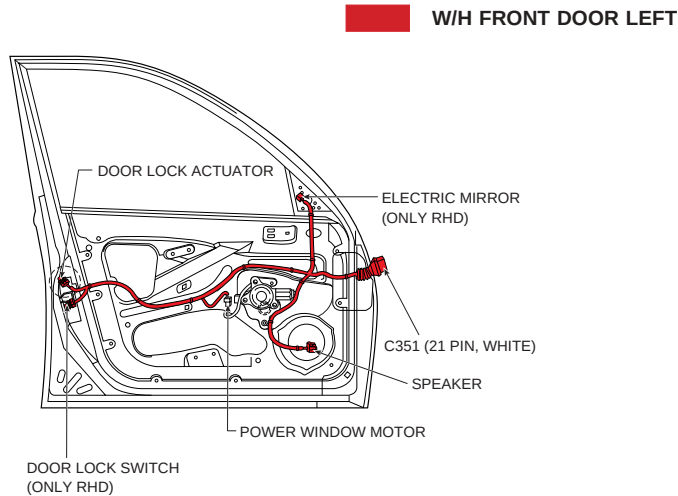

• W/H FRONT, FRONT BUMPER

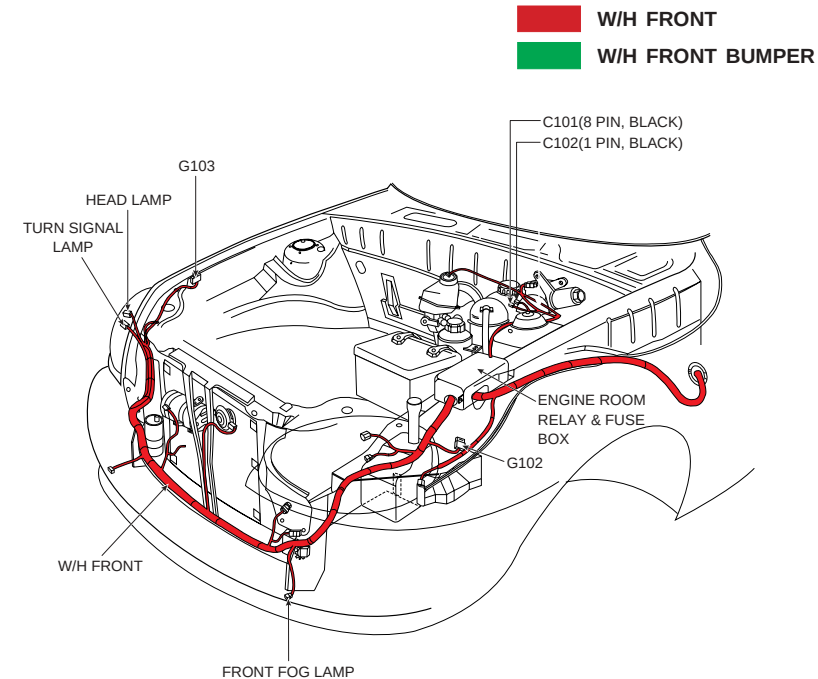

d. SPLICE PACK


S101(BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)

1. C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
2. COOLING FAN RELAY A : "86" Ter
B : "86" Ter
3. REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
4. BATTERY POWER SUPPLY(Ef4)
5. COOLING FAN RELAY A : "30" Ter
6. COOLING FAN RELAY B : "30" Ter
7. DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
8. GROUND(G102)
POWER WINDOW RELAY "85" Ter
9. HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter

(): WITHOUT A/C




2) FRONT & REAR POWER WINDOW CIRCUIT (NON SPORTY PACK)
2-1) NON SPORTY PACK

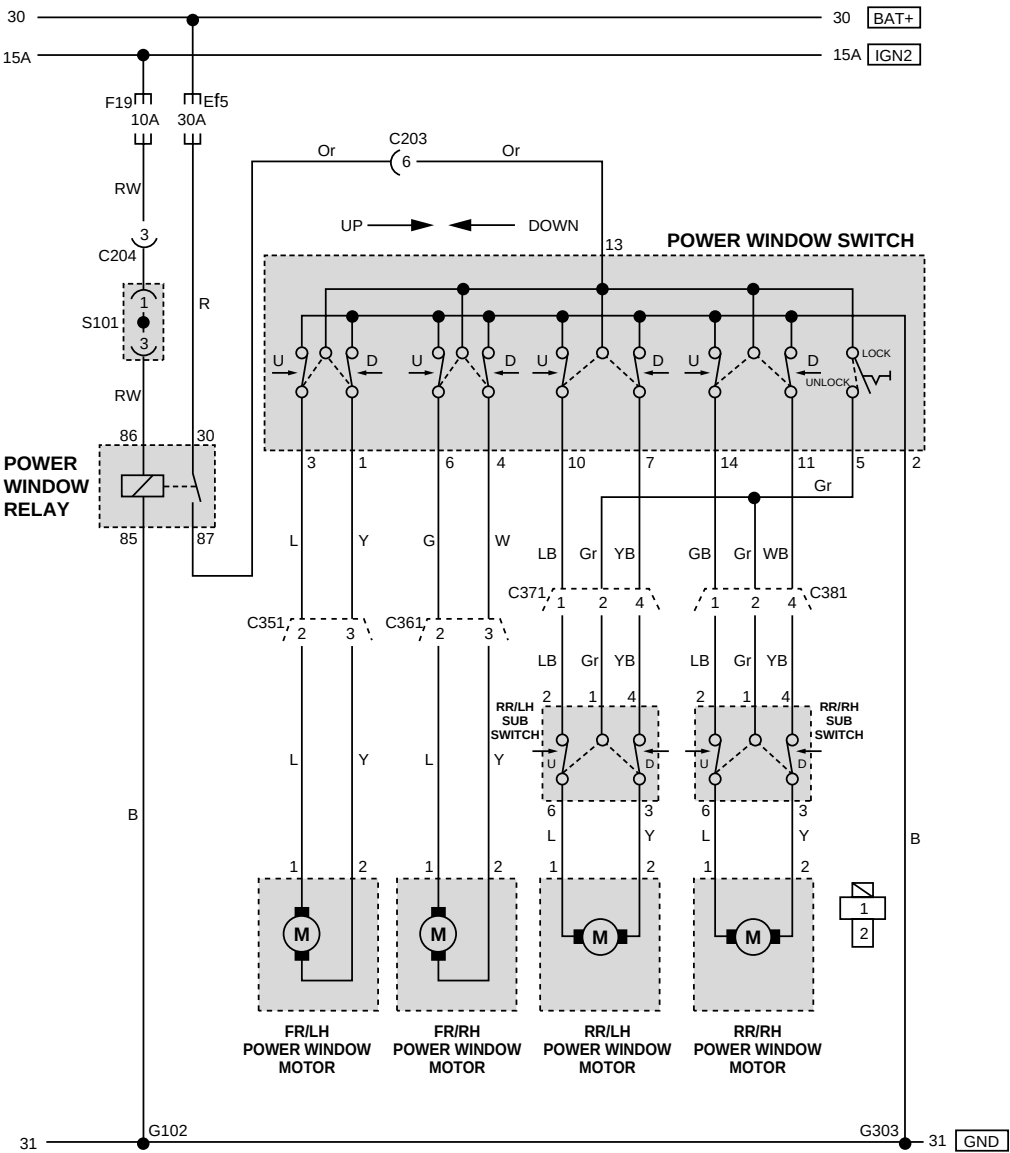

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
C371 (6PIN. COLORLESS)	W/H Floor - Front Left Door	Inside Left Center Pillar
C381 (6PIN. COLORLESS)	W/H Floor - Front Right Door	Inside Right Center Pillar
S101 (9PIN. BLACK)	Splice Pack	EngineRoom relay And Fuse Box
G102	Ground	Fender Below Engine Room Fuse Box
G303	Ground	Below Co-Driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

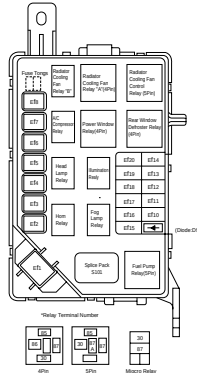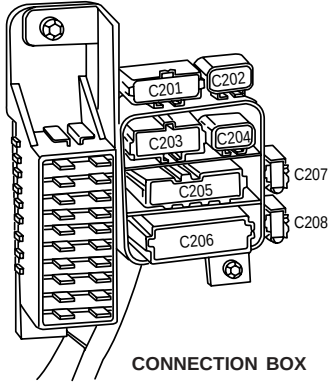
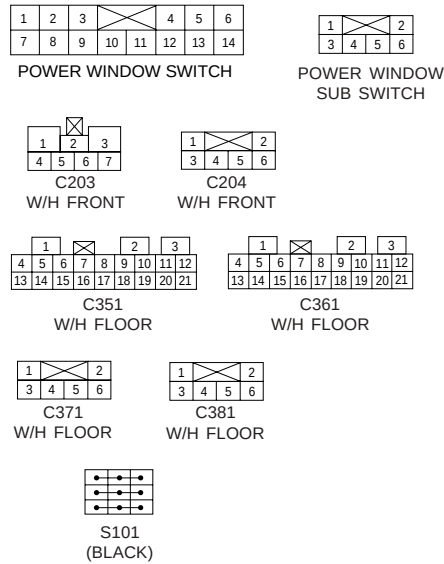


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS

• FRONT DOOR

• REAR DOOR

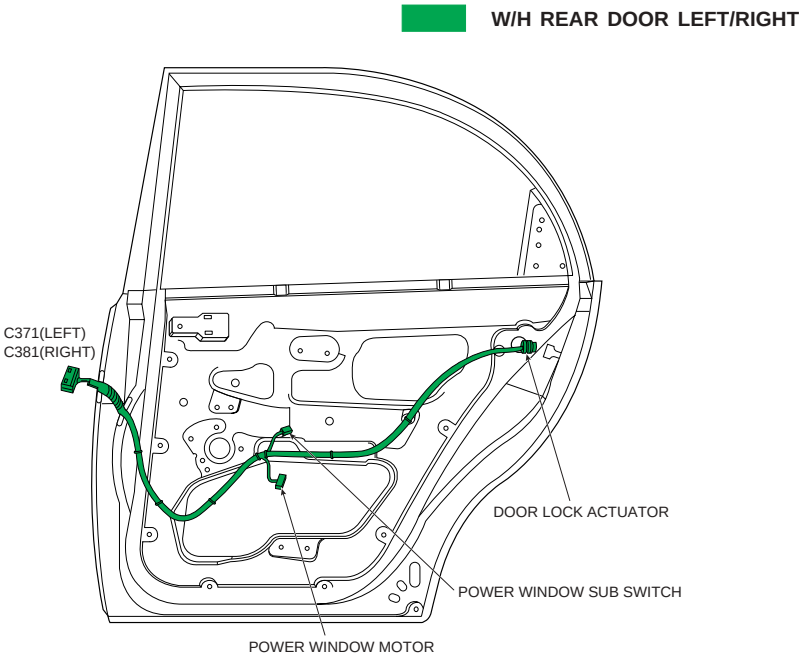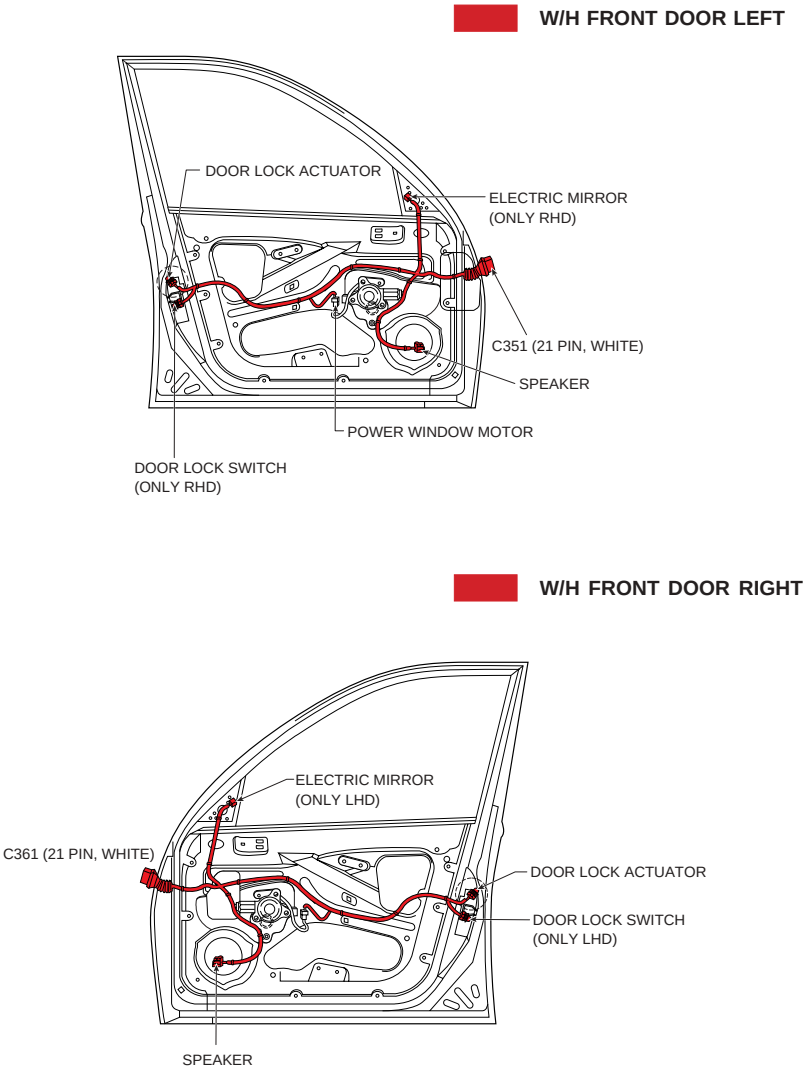


d. SPLICE PACK

S101(BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)

1. C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
 2. COOLING FAN RELAY A : "86" Ter
B : "86" Ter
 3. REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
 4. BATTERY POWER SUPPLY(Ef4)
 5. COOLING FAN RELAY A : "30" Ter
 6. COOLING FAN RELAY B : "30" Ter
 7. DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
 8. GROUND(G102)
POWER WINDOW RELAY "85" Ter
 9. HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter
- (): WITHOUT A/C




2-2) SPORTY PACK

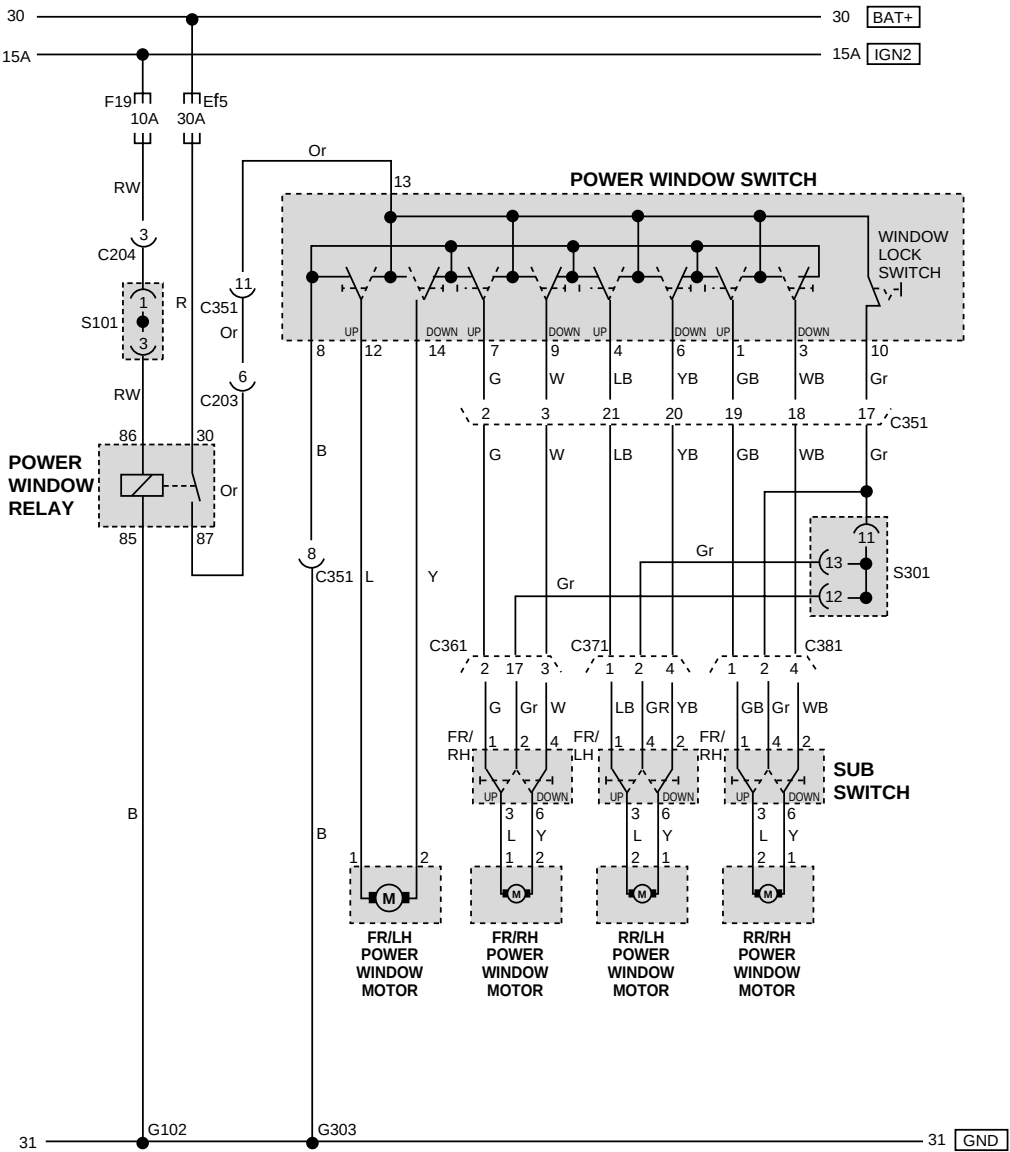

a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN. BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN. WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C361 (21PIN. WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
C371 (6PIN. COLORLESS)	W/H Floor - Front Left Door	Inside Left Center Pillar
C381 (6PIN. COLORLESS)	W/H Floor - Front Right Door	Inside Right Center Pillar
S101 (9PIN. BLACK)	Splice Pack	EngineRoom relay And Fuse Box
G102	Ground	Fender Below Engine Room Fuse Box
G303	Ground	Below Co-Driver Seat


b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

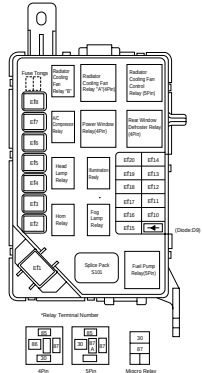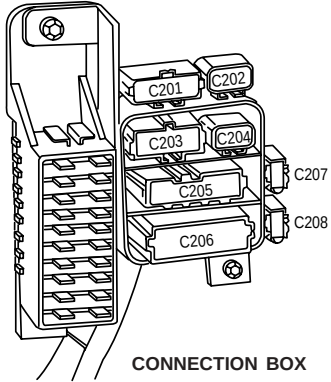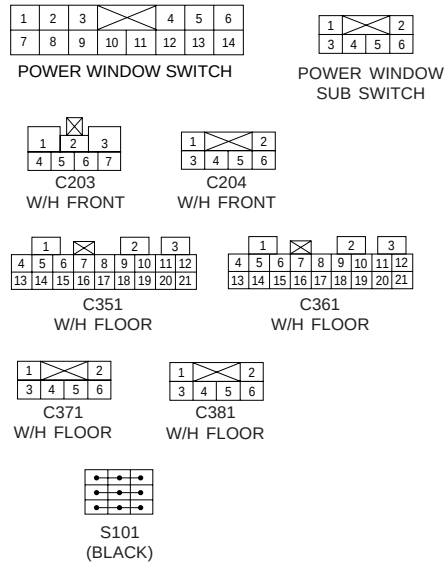


ENGINE ROOM FUSE BOX

c. POSITION OF CONNECTORS AND GROUNDS

• FRONT DOOR

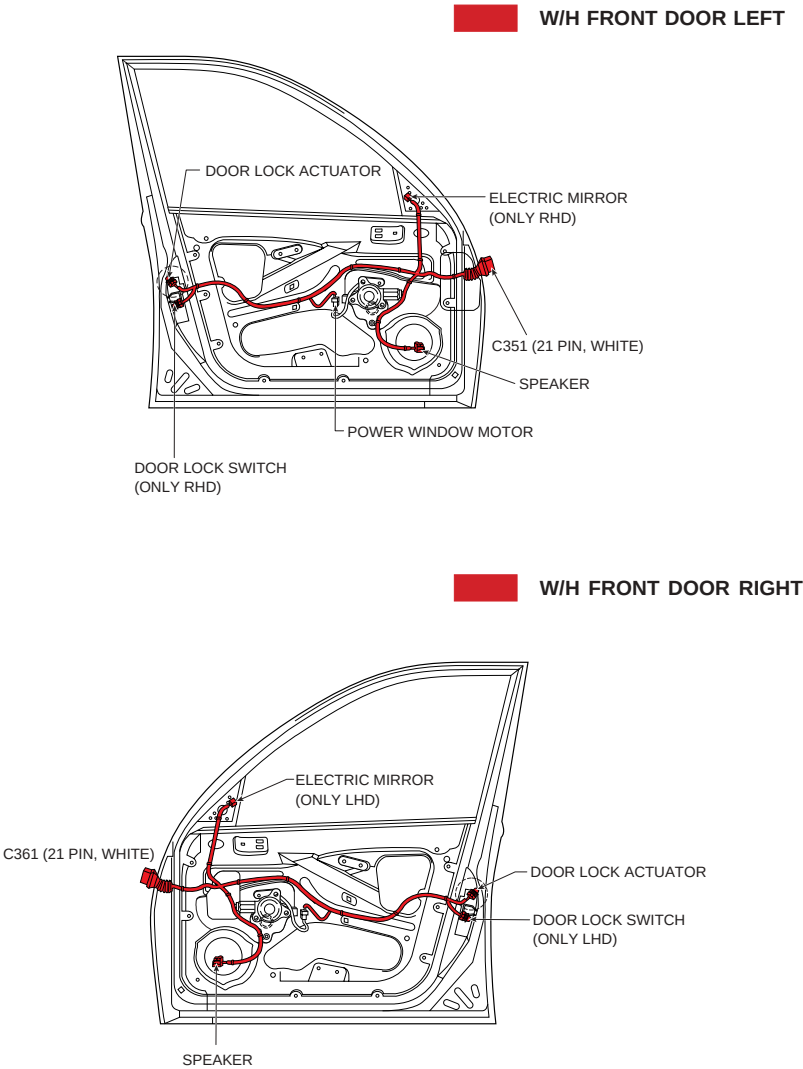

• REAR DOOR

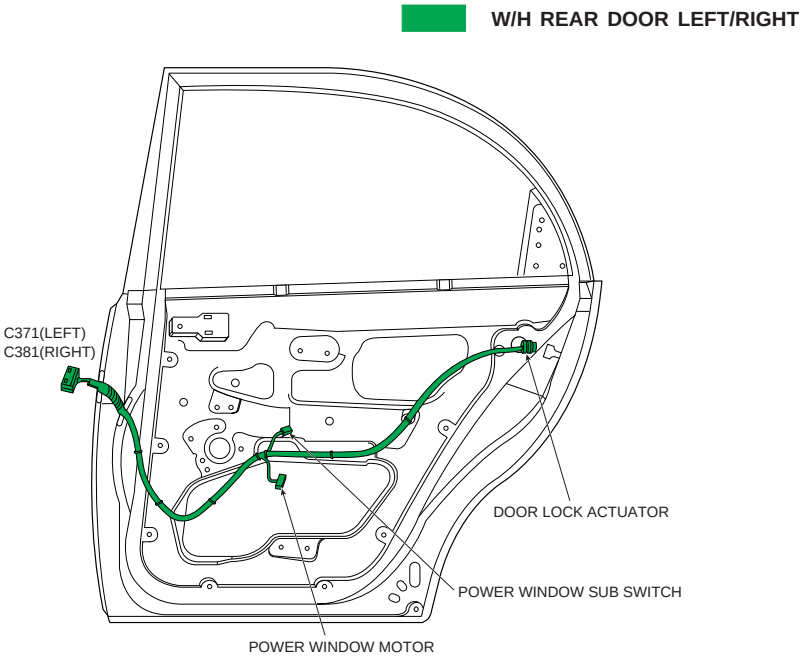

d. SPLICE PACK

S101(BLACK)

3 (RW)	6 (R)	9 (B)
2 (RW)	5 (R)	8 (B)
1 (RW)	4 (R)	7 (B)

1. C204 "3" Ter (F19)
A/C COMP. RELAY "86" Ter
COOLING FAN CONTROL RELAY "86" Ter
 2. COOLING FAN RELAY A : "86" Ter
B : "86" Ter
 3. REAR WINDOW DEFROSTER RELAY : "86" Ter
POWER WINDOW RELAY : "86" Ter
 4. BATTERY POWER SUPPLY(Ef4)
 5. COOLING FAN RELAY A : "30" Ter
 6. COOLING FAN RELAY B : "30" Ter
 7. DIODE (D9)
(POWER WINDOW RELAY "85" Ter)
 8. GROUND(G102)
POWER WINDOW RELAY "85" Ter
 9. HEAD LAMP RELAY "85" Ter
ILLUMINATION RELAY "85" Ter
- (): WITHOUT A/C