



3) WARNING LAMP (OIL PRESSURE, PARKING BRAKE, CHARGING) CIRCUIT
3-1) LHD

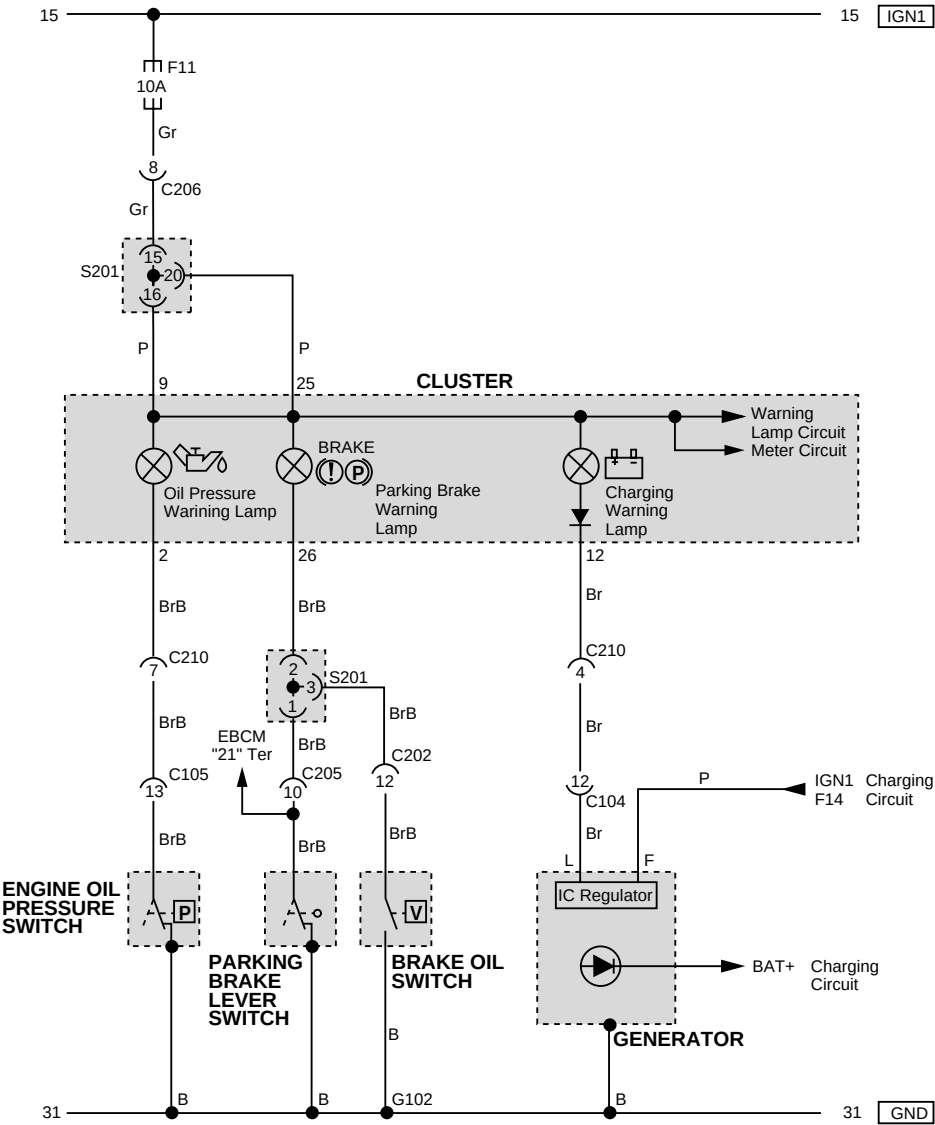

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105 (16PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
G102	Ground	Fender Below Engine Room Fuse Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

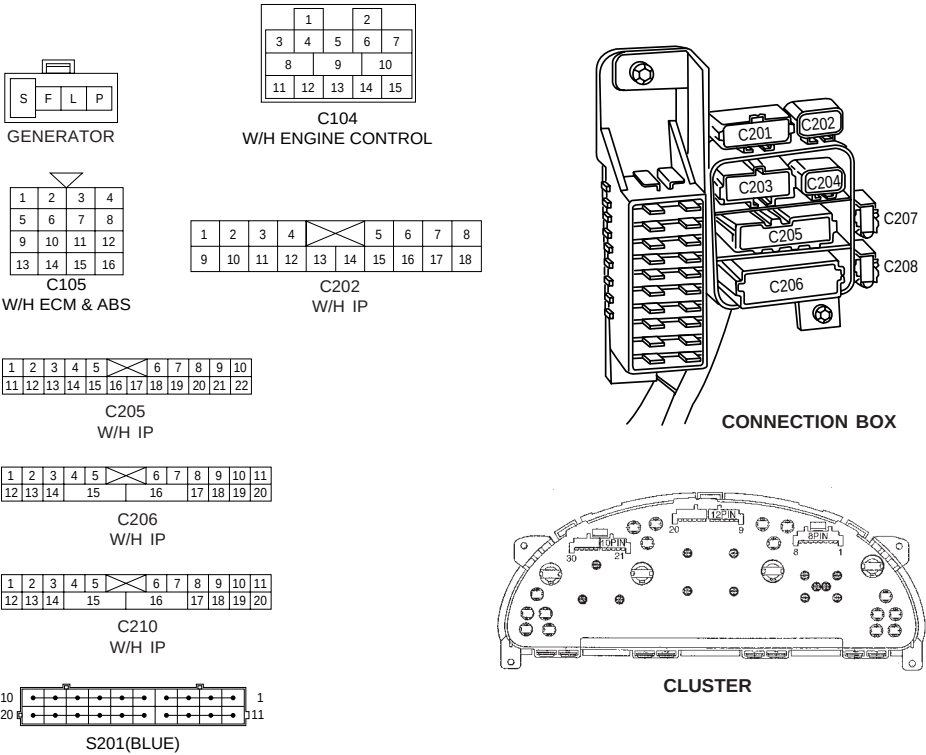


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

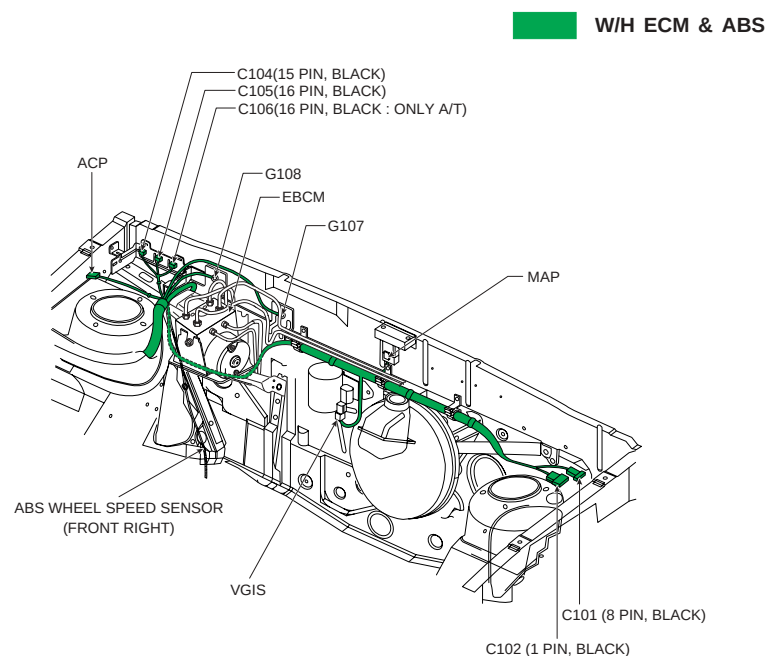


• PASSENGER ROOM RIGHT SIDE PANEL

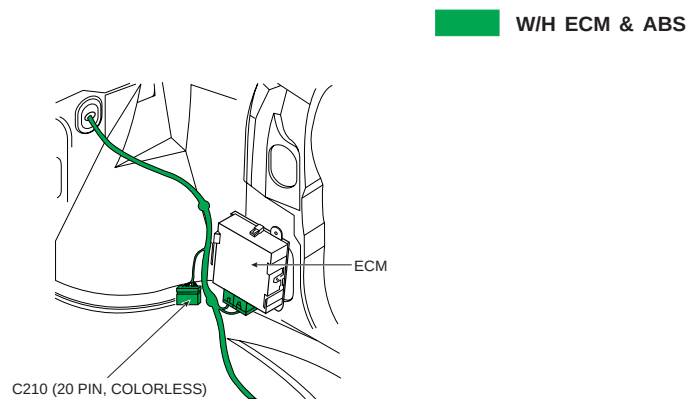


d. SPLICE PACK

S201(BLUE) - LHD

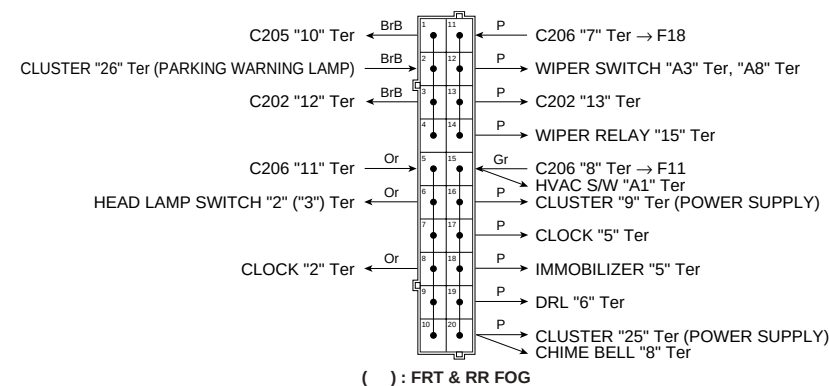


3-2) RHD

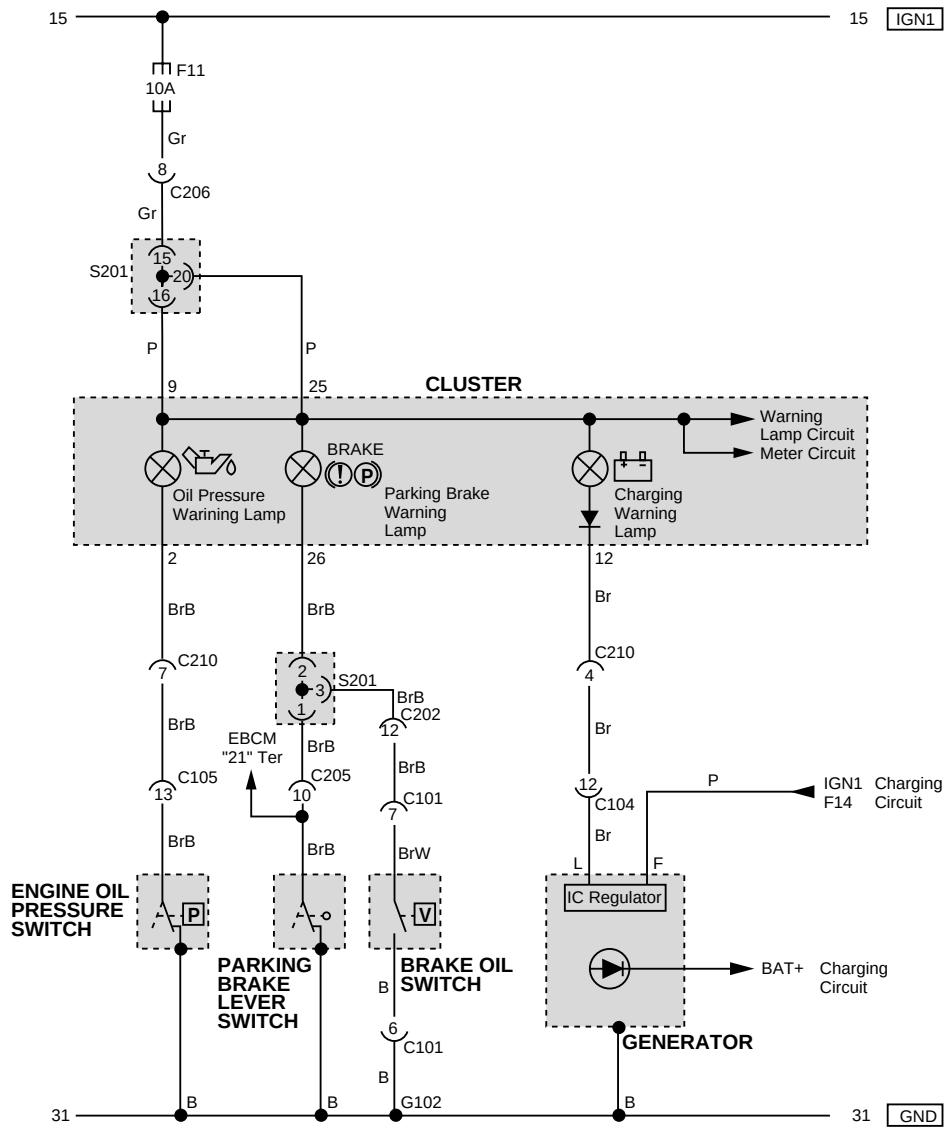

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C101 (8PIN. BLACK)	W/H ECM & ABS - Front	Below Engine Coolant Surge Tank
C104 (15PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105 (16PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C202 (18PIN. WHITE)	W/H Front - IP	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
G102	Ground	Fender Below Engine Room Fuse Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

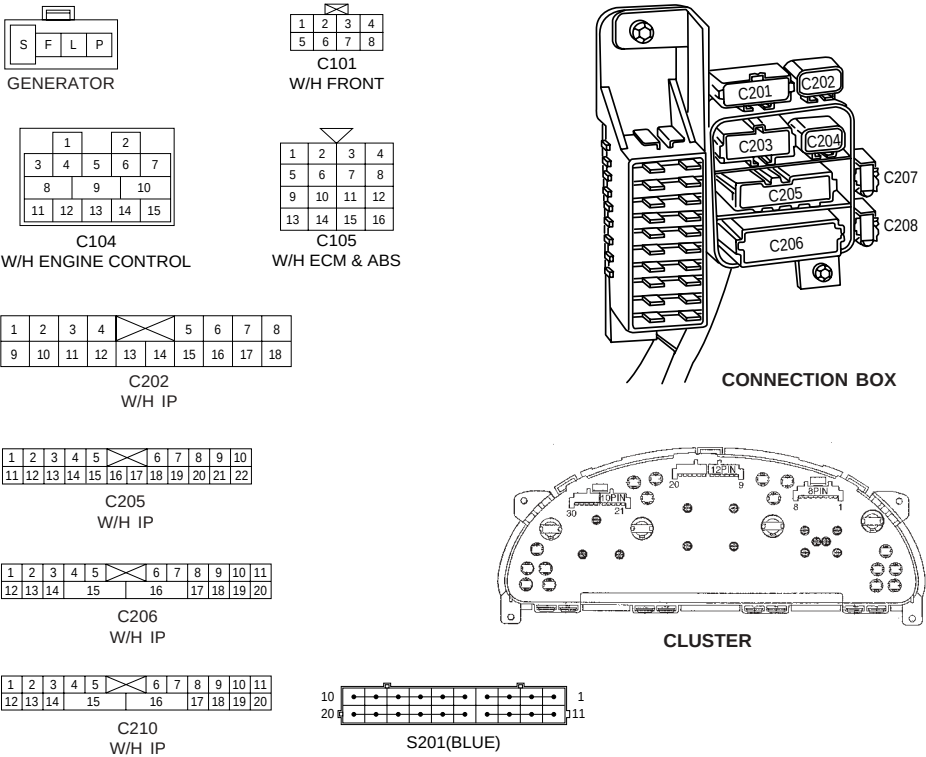


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

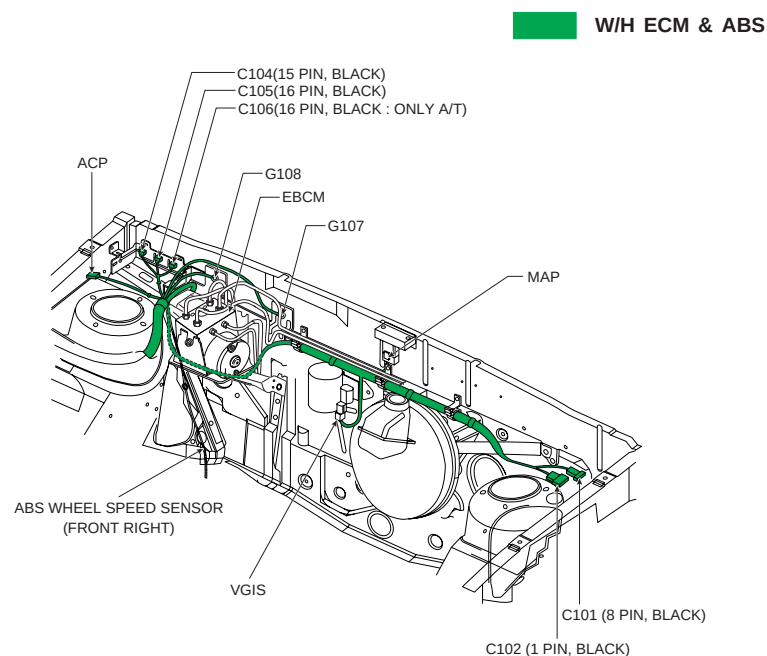


• PASSENGER ROOM RIGHT SIDE PANEL

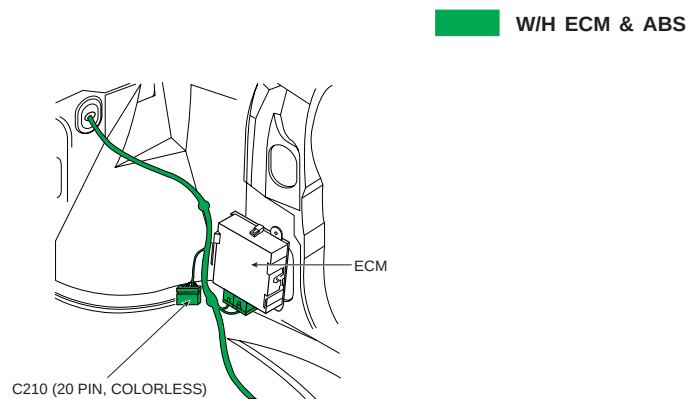


d. SPLICE PACK

S201(BLUE) - RHD

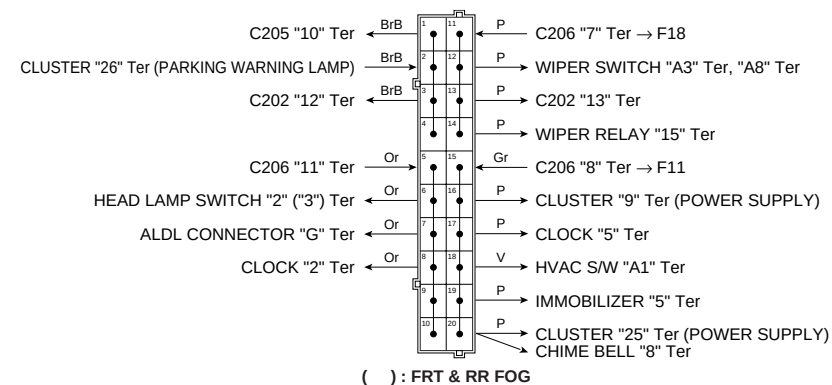


4) WARNING LAMP (AIR BAG, ABS), INDICATOR LAMP (MIL, POWER MODE) CIRCUIT
4-1) IEFI-6, ITMS-6F, MR-140

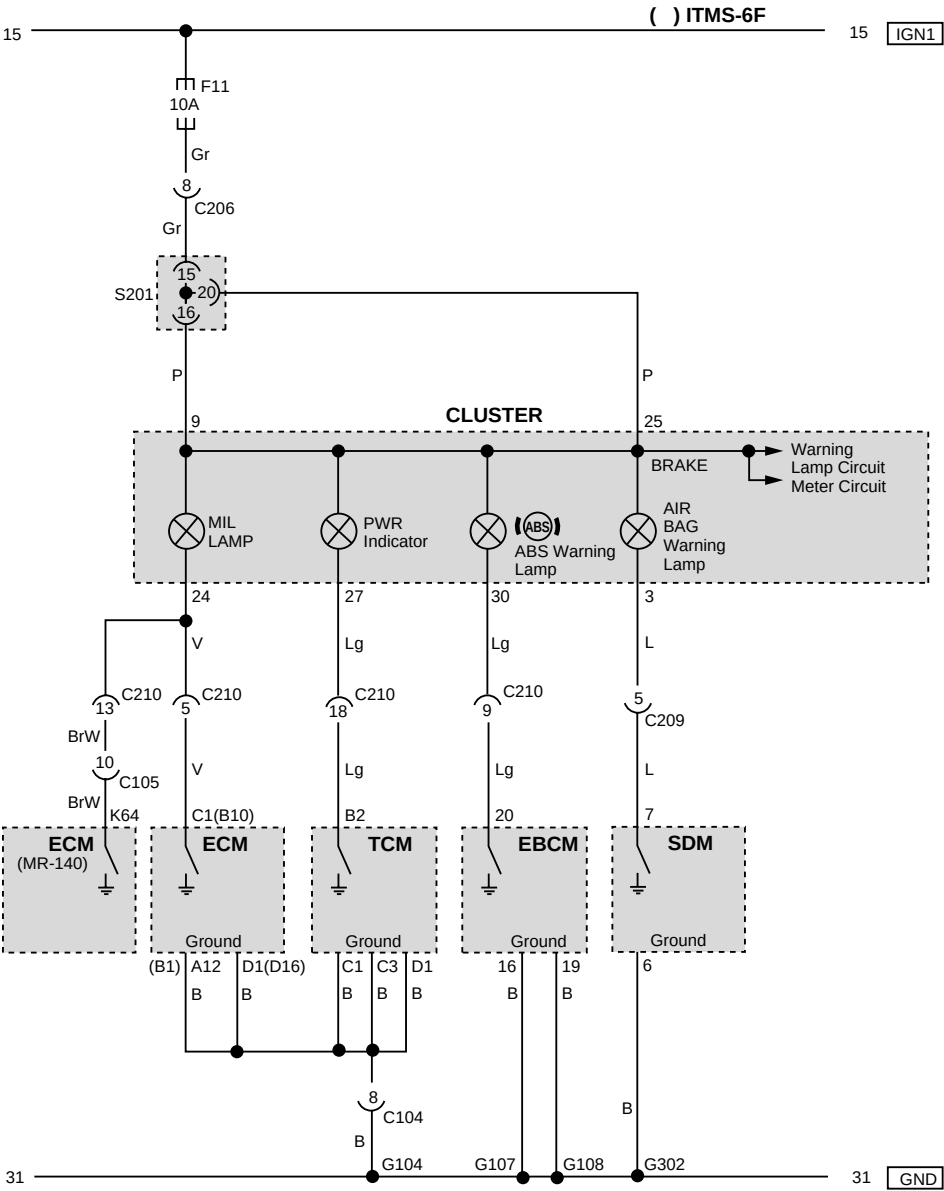

a. CONNECTOR INFORMATION


CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN. BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C105(16PIN, BLACK)	W/H ECM & ABS - Engine Control	Behind Right Strut Mounting
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C209 (6PIN. WHITE)	W/H Air-Bag - IP	Behind Left Front Console
C210(20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box (Right Side Panel)
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
G104	Ground	Intake Manifold '#4' Cylinder
G107	Ground	Next to EBCM
G108	W/H ECM & ABS	Next to EBCM
G302	W/H ECM & ABS	Below Right Fornt Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

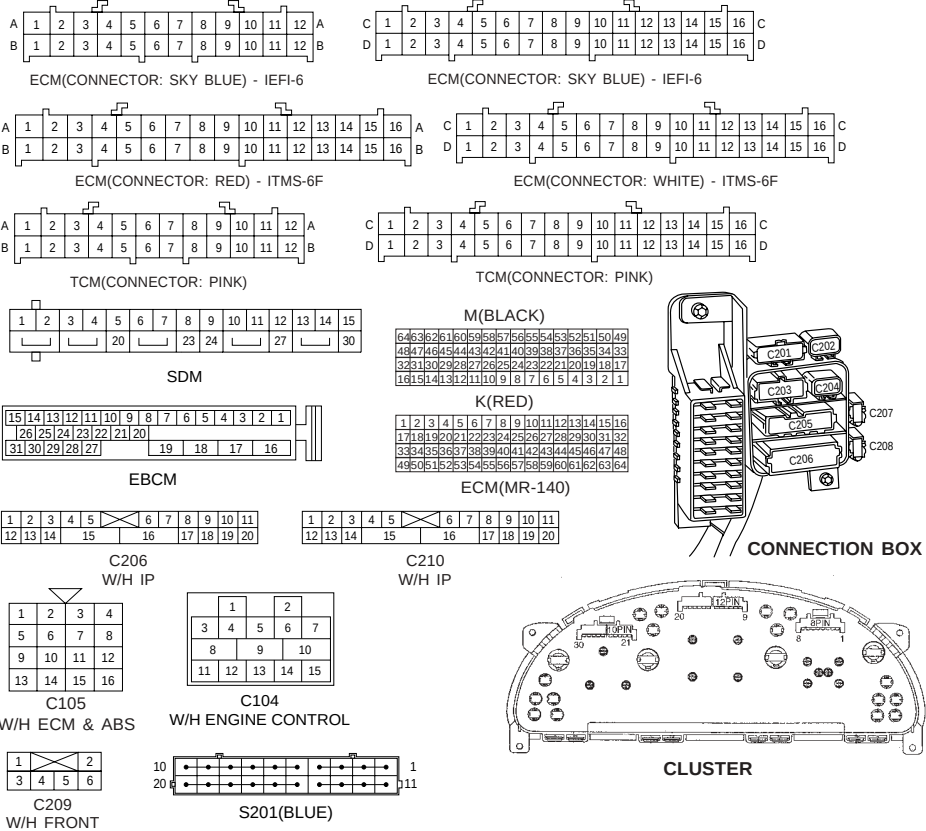


c. POSITION OF CONNECTORS AND GROUNDS

- ENGINE ROOM INSIDE

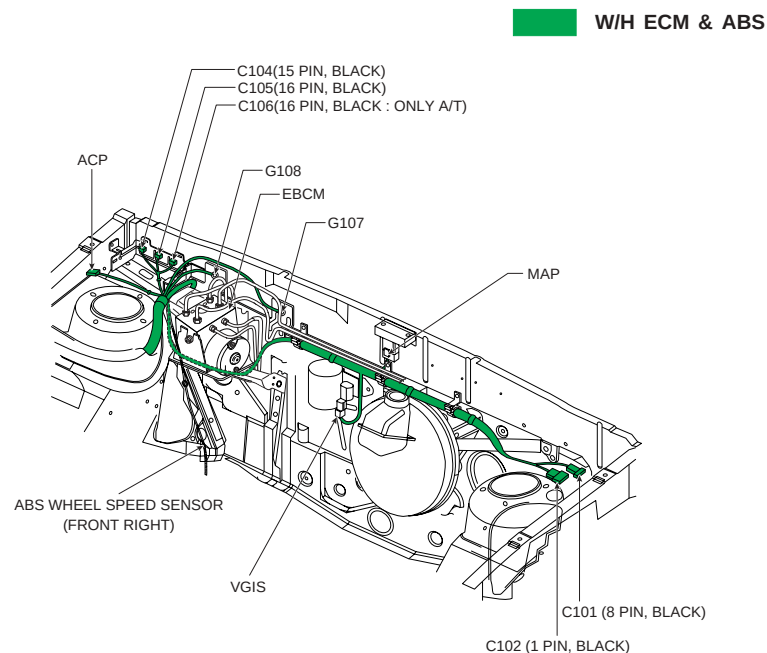


- PASSENGER ROOM RIGHT SIDE PANEL

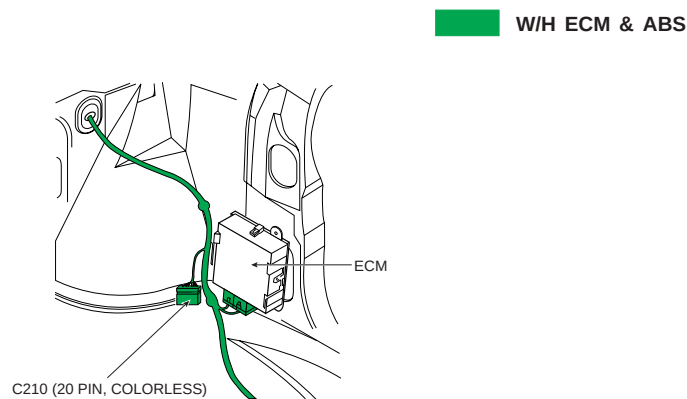


- FLOOR PANEL

W/H FLOOR
W/H ECM & ABS

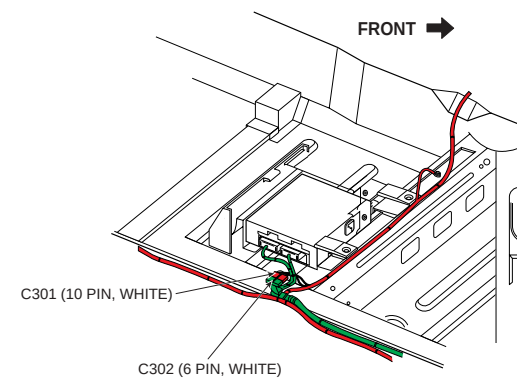


d. SPLICE PACK

S201(BLUE) - LHD

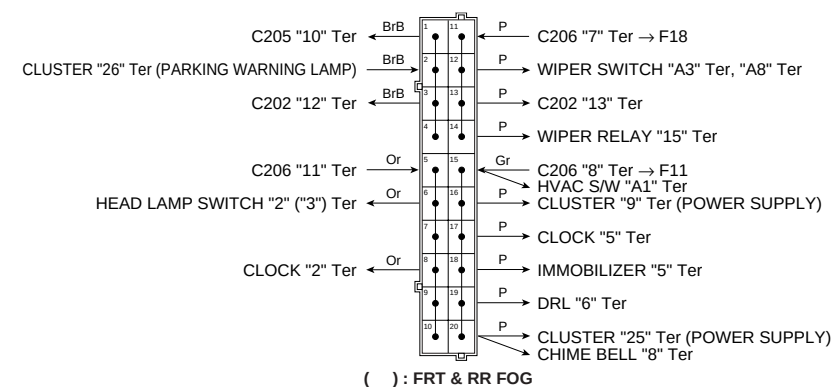


4-2) IPCM-6KT

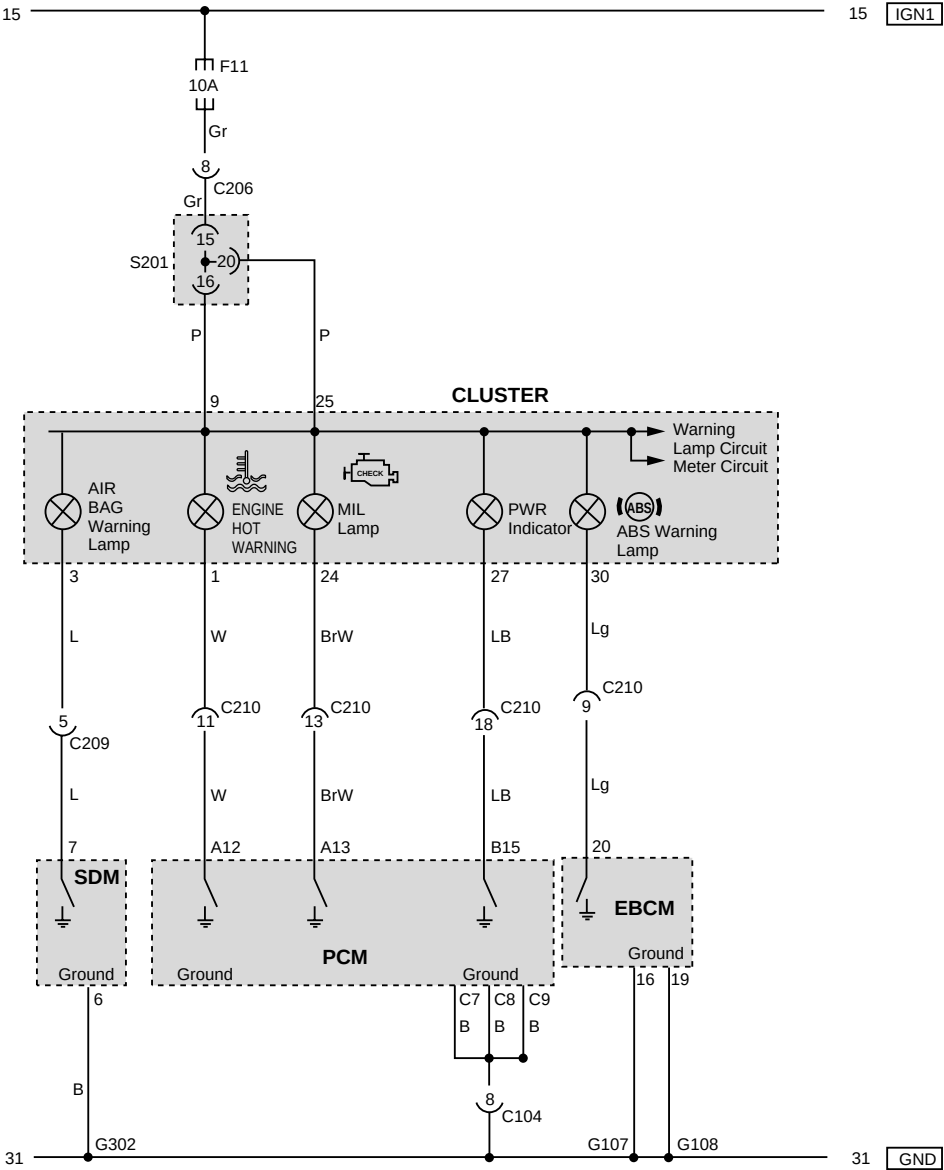

a. CONNECTOR INFORMATION


CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN, BLACK)	W/H PCM & ABS - Engine Control	Behind Right Strut Mounting
C206 (20PIN, COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C209 (6PIN, WHITE)	W/H Air-Bag - IP	Behind Left Front Console
C210(20PIN, COLORLESS)	W/H PCM & ABS - IP	Below Glove Box (Right Side Panel)
S201 (20PIN, BLUE)	W/H IP	Next to Passenger Room Relay Box
G104	W/H Engine Control	Intake Manifold '#4' Cylinder
G107	W/H PCM & ABS	Next to EBCM
G108	W/H PCM & ABS	Next to EBCM
G302	W/H Air Bag	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

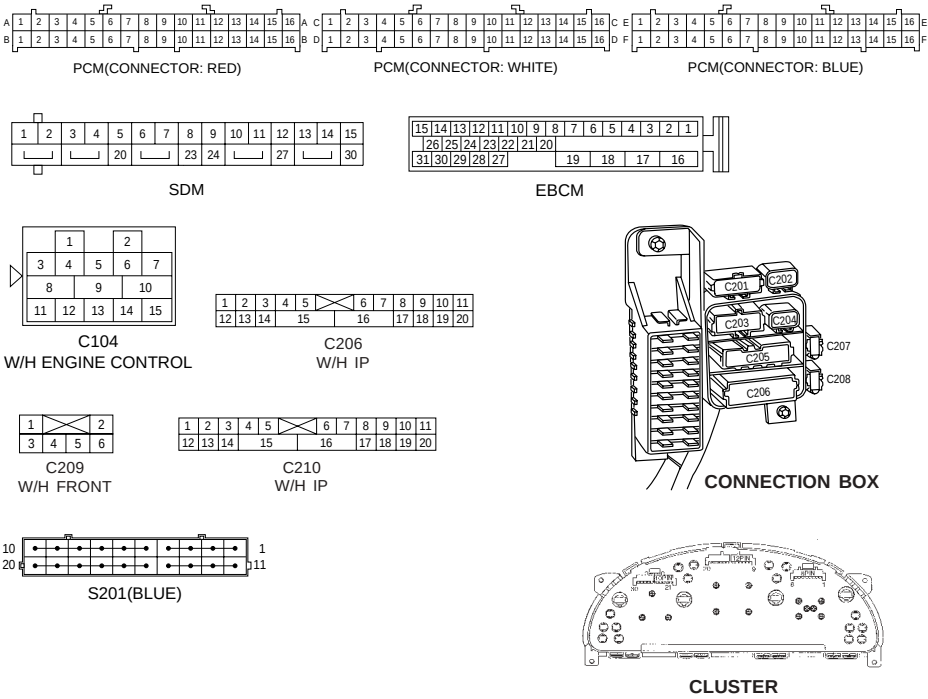


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

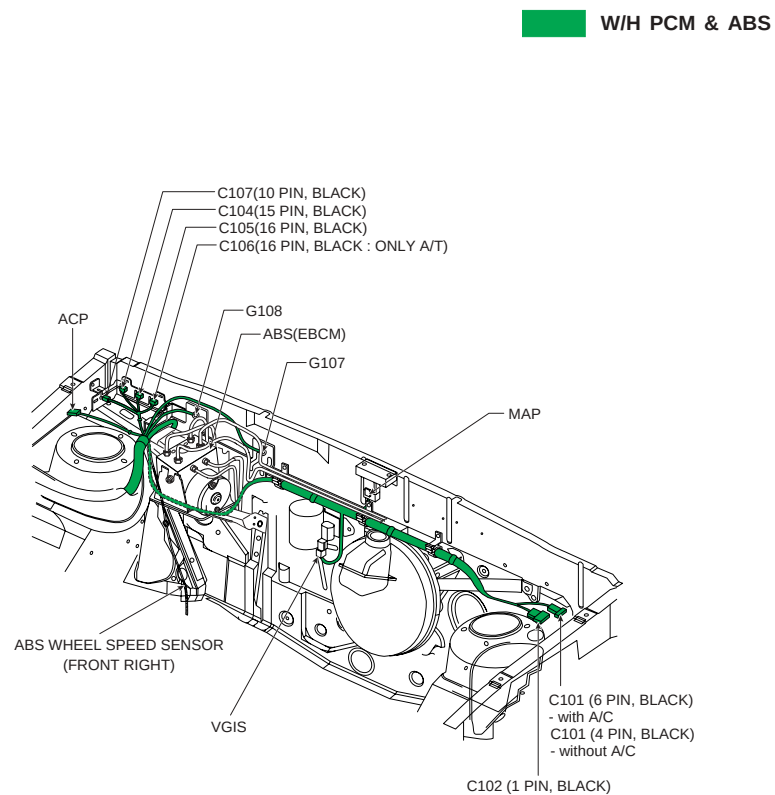


d. SPLICE PACK

S201 (BLUE)

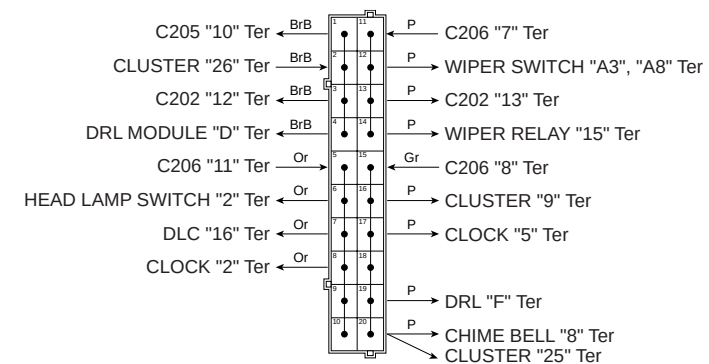



5) INDICATOR LAMP (TURN SIGNAL, HIGHBEAM, SEAT BELT, FRONT FOG, REAR FOG) CLUSTER ILLUMINATION LAMP CIRCUIT: LHD

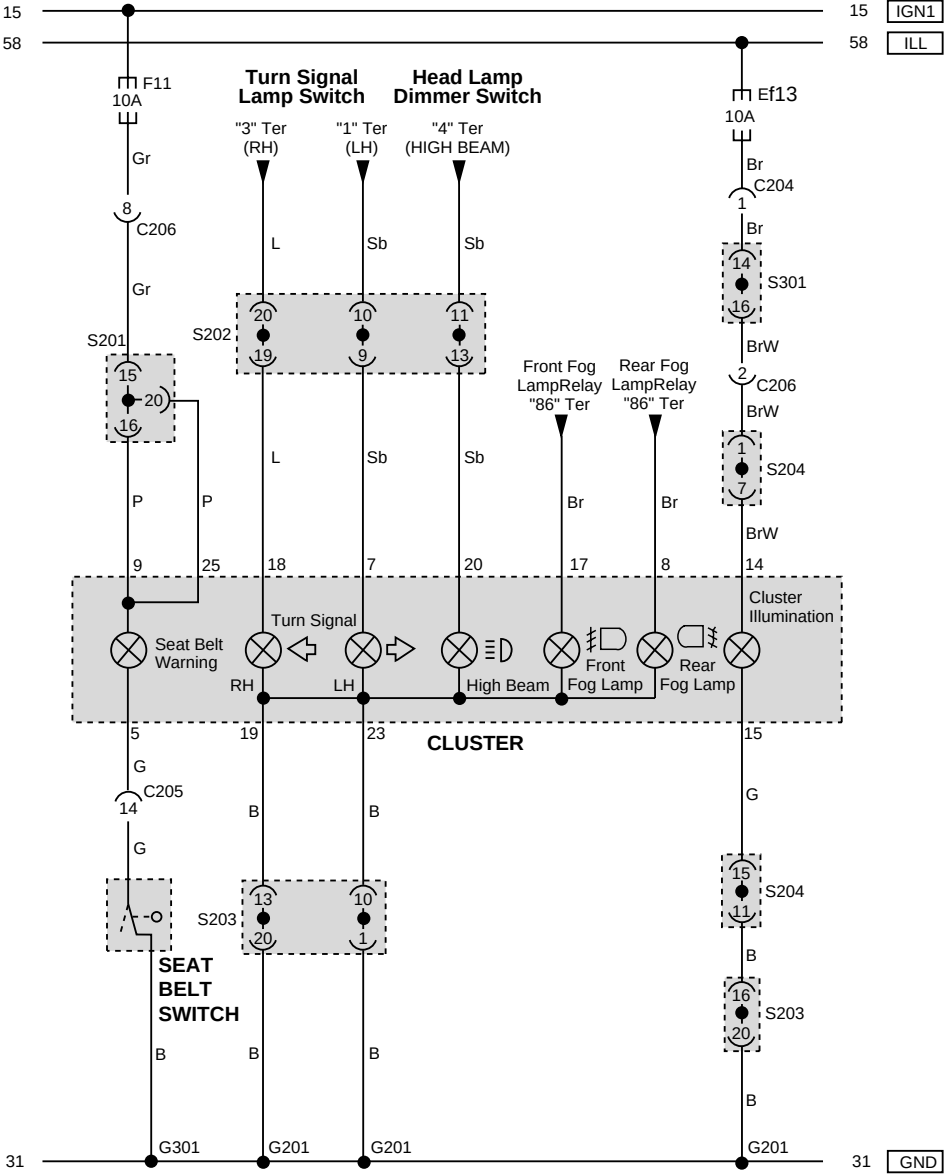

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S202 (20PIN. ORANGE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

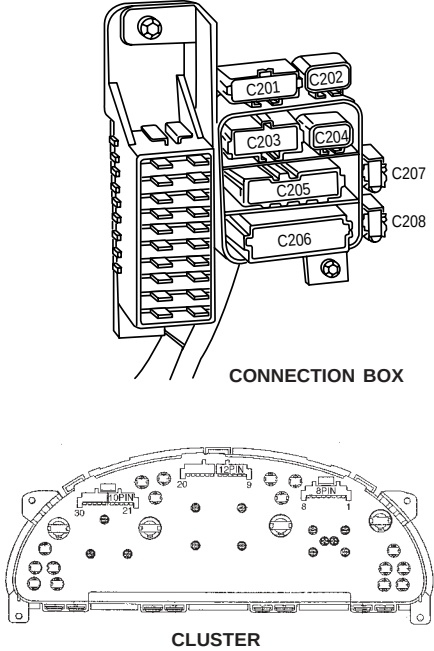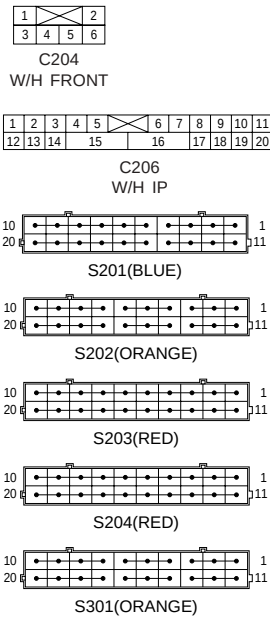


c. POSITION OF CONNECTORS AND GROUNDS

• INSTRUMENT PANEL INSIDE

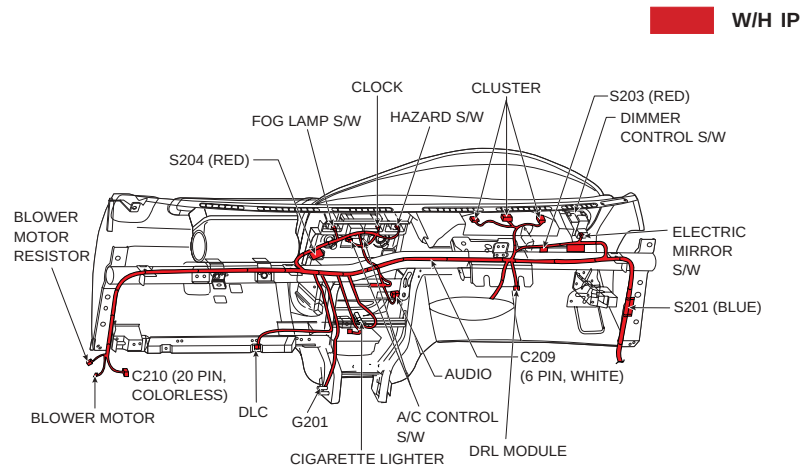


d. SPLICE PACK


S202(ORANGE)

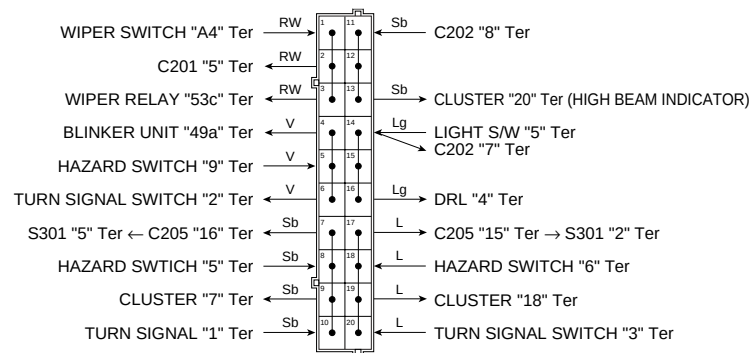

S203(RED) - LHD

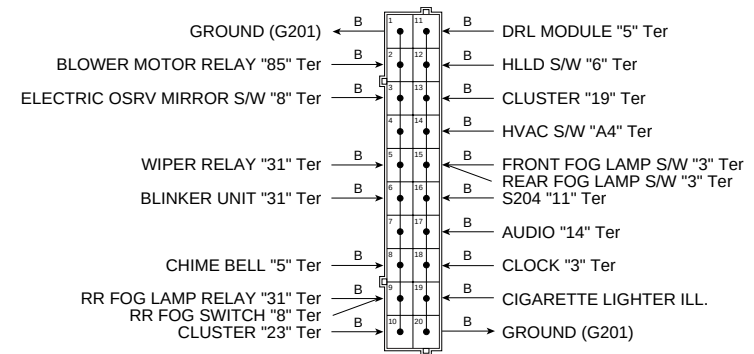

S204(RED) - LHD

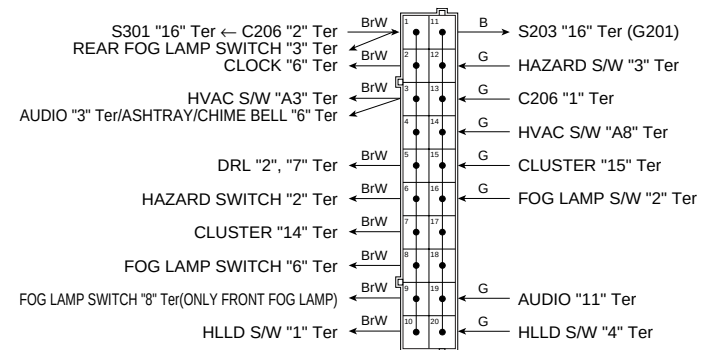

S301(ORANGE) - NOTCH BACK

