



5) INDICATOR LAMP (TURN SIGNAL, HIGHBEAM, SEAT BELT, FRONT FOG, REAR FOG) CLUSTER ILLUMINATION LAMP CIRCUIT: RHD

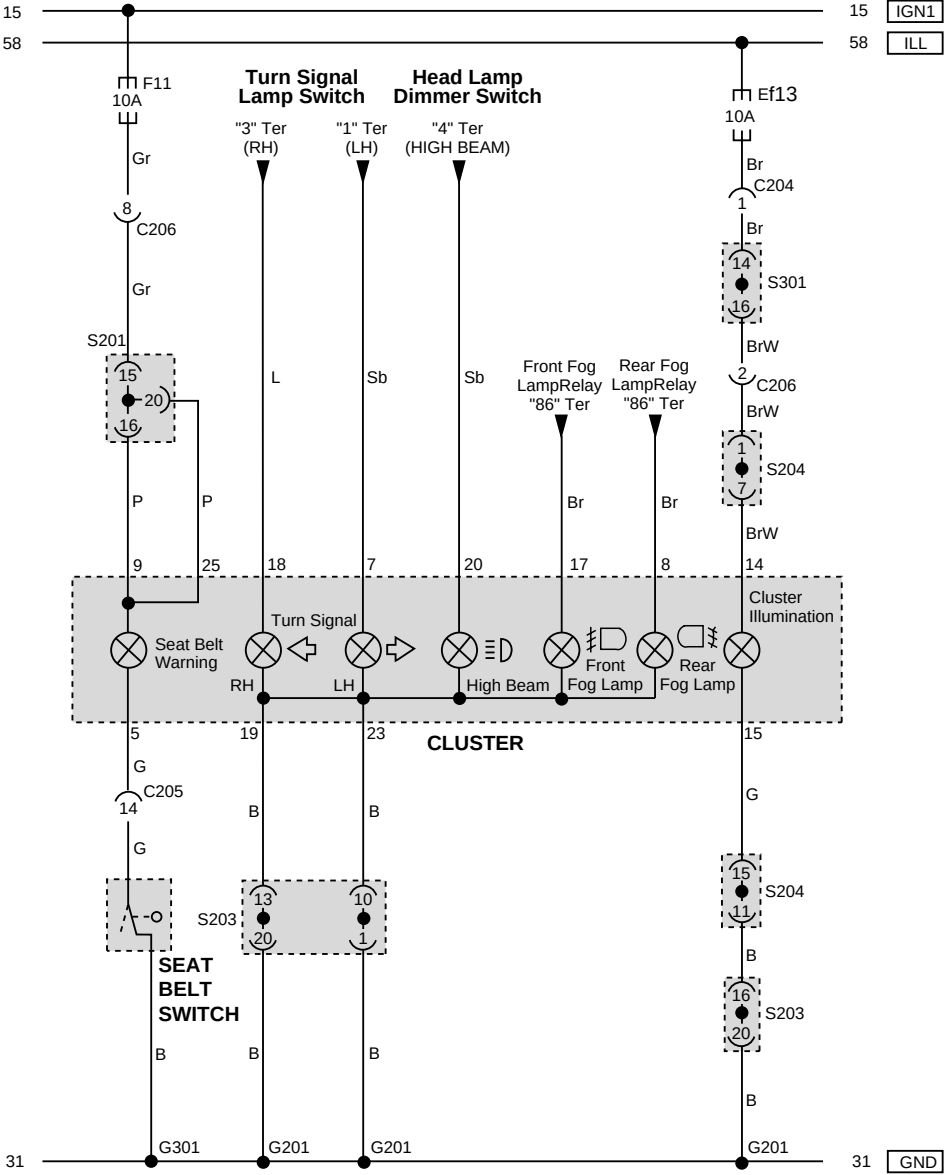


a. CONNECTOR INFORMATION

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C204 (6PIN. WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
S204 (20PIN. RED)	Splice Pack	Above Glove Box
S301 (20PIN. ORANGE)	Splice Pack	Below Driver Seat
G201	Ground	Below Right Front Console Box

 
b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



C204
W/H FRONT

 

C206
W/H IP

 


S201(BLUE)





S203(RED)



 S204(RED)




S301(ORANGE)

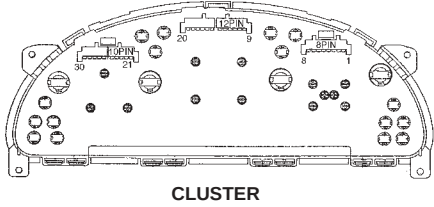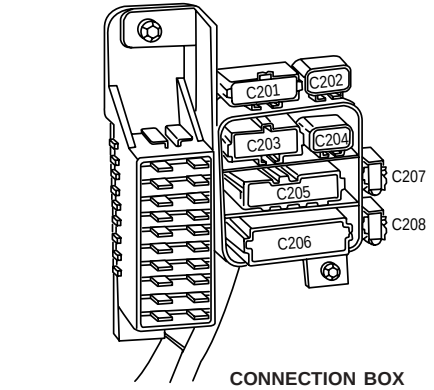


c. POSITION OF CONNECTORS AND GROUNDS

• INSTRUMENT PANEL INSIDE

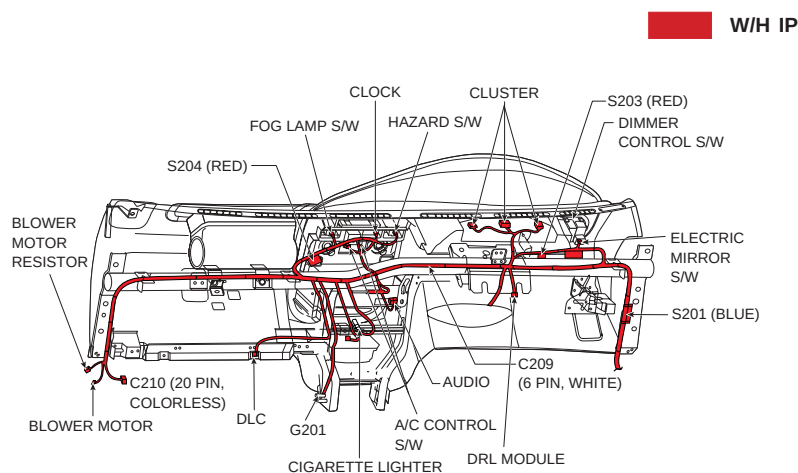


d. SPLICE PACK


S201(BLUE)

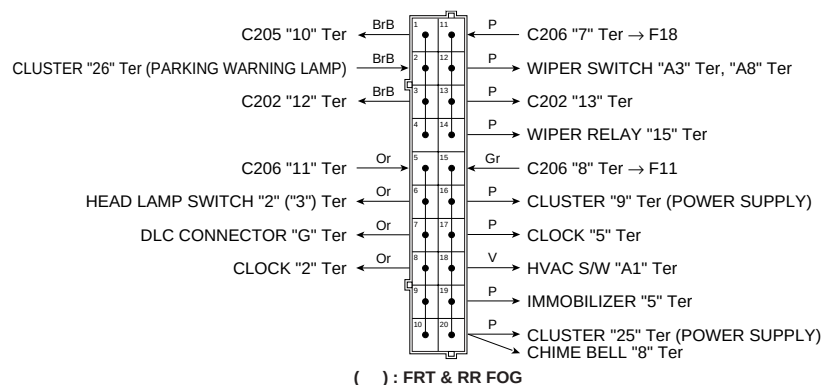


S203(RED) - LHD

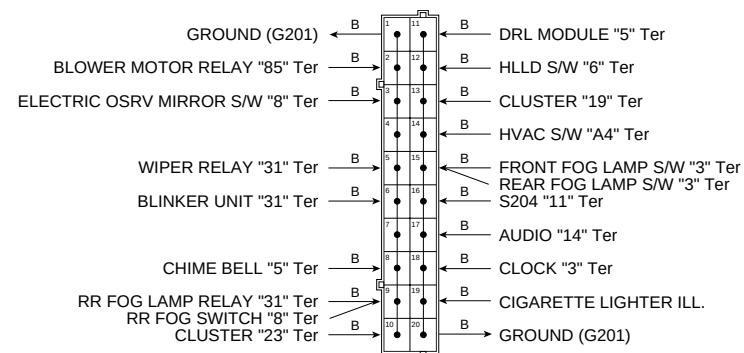


S204(RED) - LHD

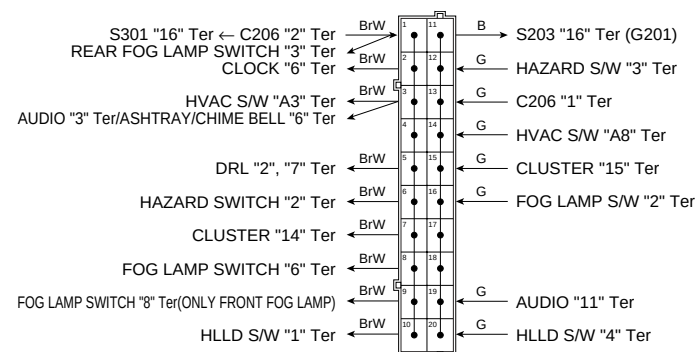

S301(ORANGE) - NOTCH BACK

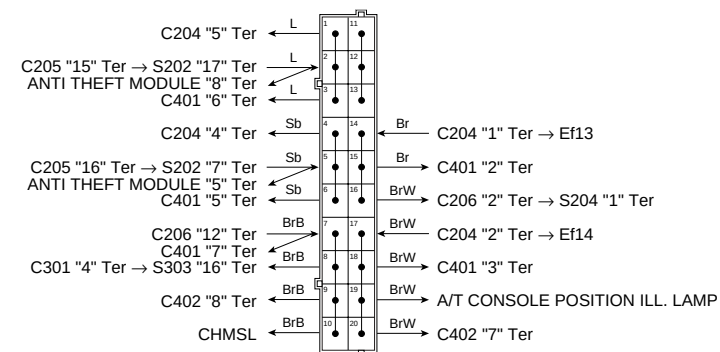


26. ABS (ANTILOCK BRAKE SYSTEM) CIRCUIT

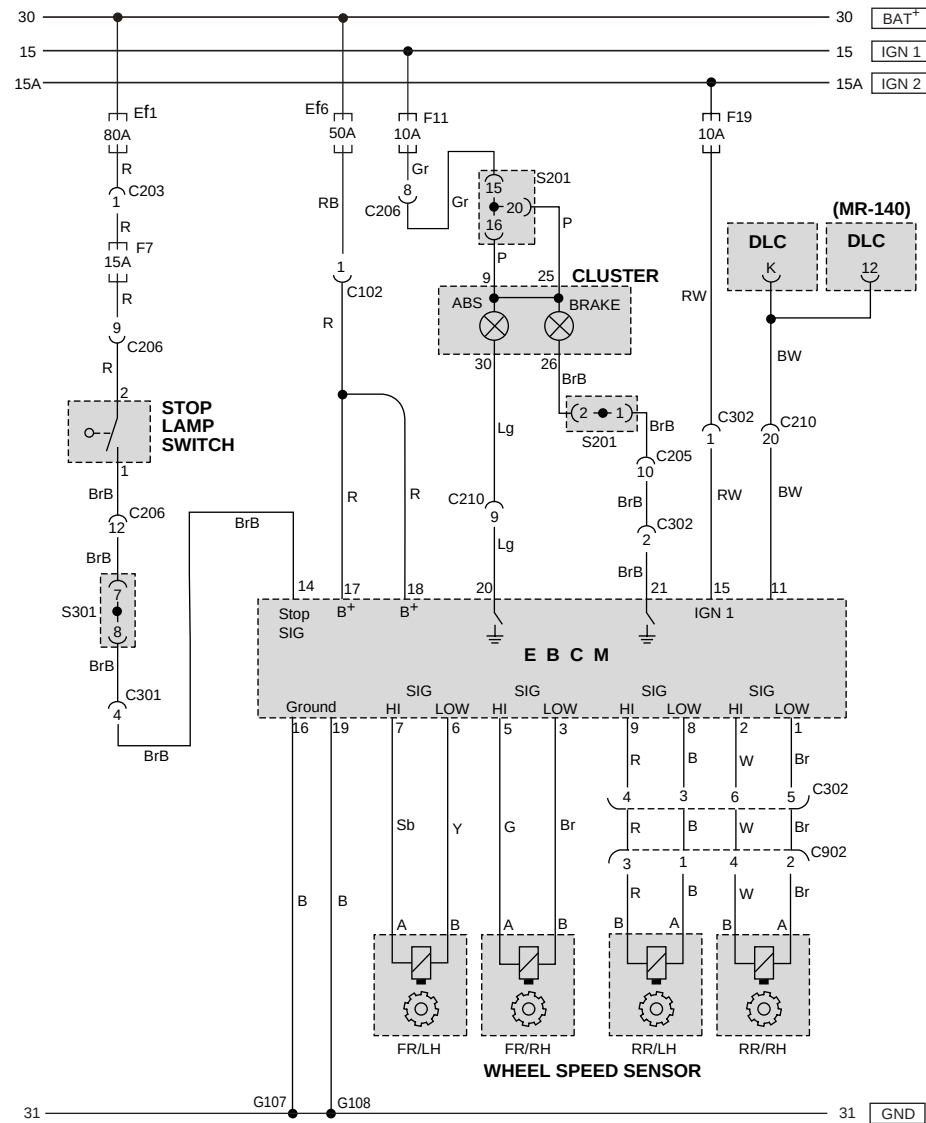

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C102 (1PIN. BLACK)	W/H ECM & ABS-Front	Below Engine Coolant Surge Tank
C203 (7PIN. BROWN)	W/H Front-Floor	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor-IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor-IP	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN. COLORLESS)	W/H ECM & ABS-IP	Below Glove Box (Right Side Panel)
C301 (10PIN. WHITE)	W/H ECM & ABS-Floor	Below Co-driver Seat
C302 (6PIN. WHITE)	W/H ECM & ABS-Floor	Below Co-driver Seat
C902 (4PIN. BLACK)	W/H Floor-Rear ABS Sensor	Right Side Rear Axle
S201 (20PIN. BLUE)	W/H IP	Next to Passenger Room Relay Box
S301 (20PIN. ORANGE)	W/H Floor	Below Driver Seat
G107	W/H ECM & ABS	Next to EBCM
G108	W/H ECM & ABS	Next to EBCM

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

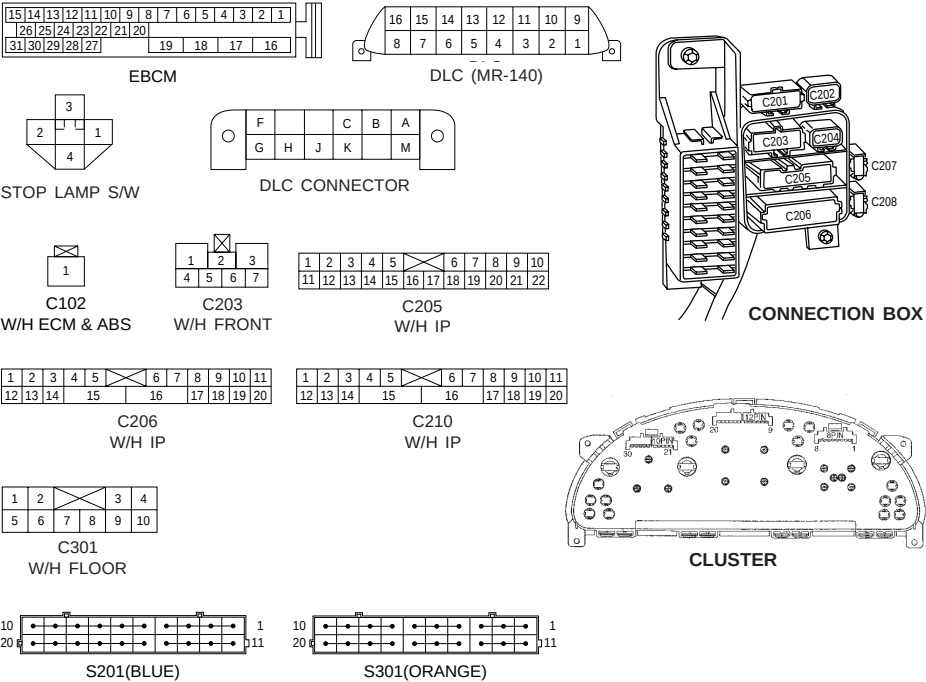


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

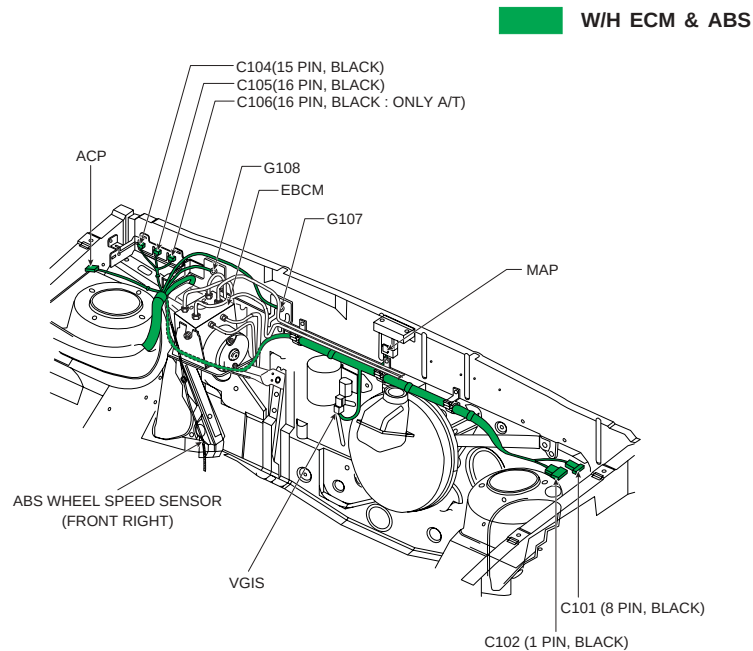


• REAR AXLE RIGHT

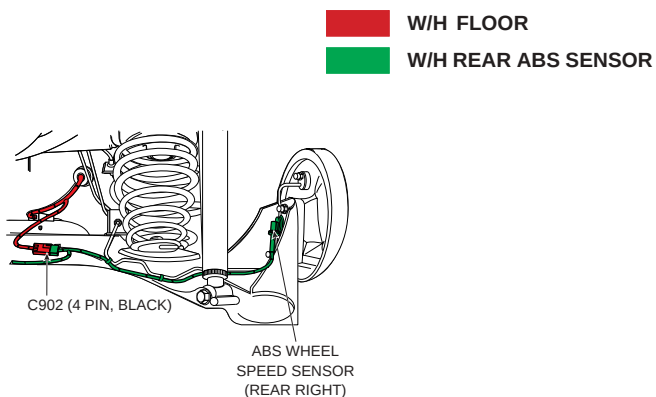


d. SPLICE PACK

S201(BLUE) - LHD

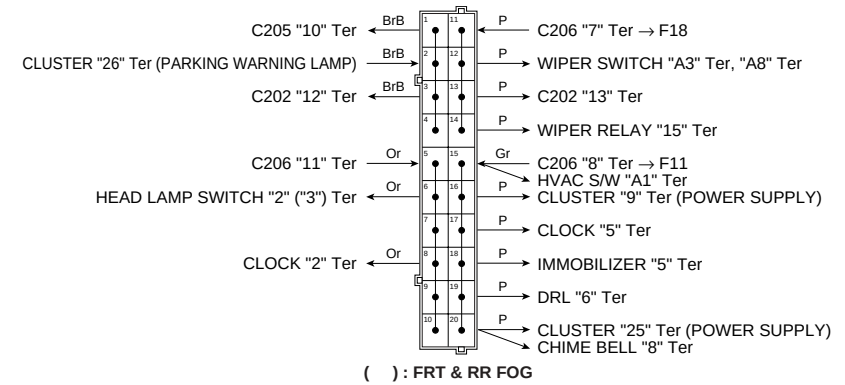

S301(ORANGE) - NOTCH BACK

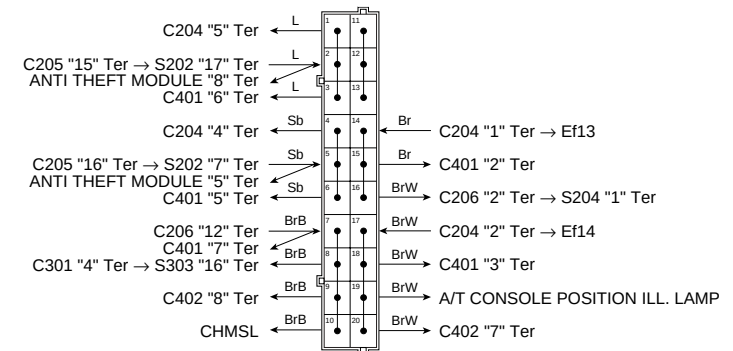








The diagram illustrates the electrical system for the Airbag Control Unit (SDM). Key components and their connections include:

- Power Source:** A 15A fuse (F13) provides power to the system through a brown (Br) wire.
- Wiring Harness:** The brown wire passes through a 22-pin connector (C205) and a 2-pin connector (C209) before entering the SDM.
- SDM (Airbag Control Unit):** The central unit contains a Crash Sensor and two relays. It is connected to the brown wire at pin 5 and to the ground (G302) at pin 6.
- Cluster:** The Cluster contains an Air Bag (S201) and is connected to the SDM at pin 3 (L) and pin 5 (C209).
- Driver and Passenger Airbag Modules:** These modules are connected to the SDM at pins 10 (G) and 11 (W) for the Driver Airbag Module, and pins 13 (WB) and 14 (GW) for the Passenger Airbag Module.
- Contact Coil:** A contact coil is connected to the Driver and Passenger Airbag Modules.
- Other Components:** The diagram also shows two DLC (MR-140) units connected to the brown wire at pins 13 and 16, and a 10A fuse (F11) connected to the brown wire at pin 8.

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C205 (22PIN. YELLOW)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C209 (6PIN. WHITE)	W/H Air Bag - IP	Behind Left Front Console
S201 (20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
G302	Ground	Below Right Front Console Box


1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
				20			23	24			27			30

     SDM

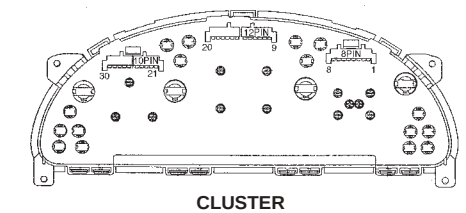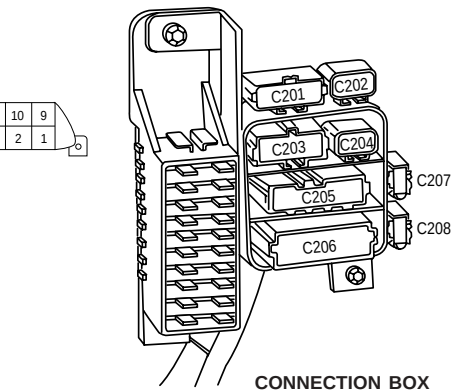


c. POSITION OF CONNECTORS AND GROUNDS

- INSTRUMENT PANEL INSIDE

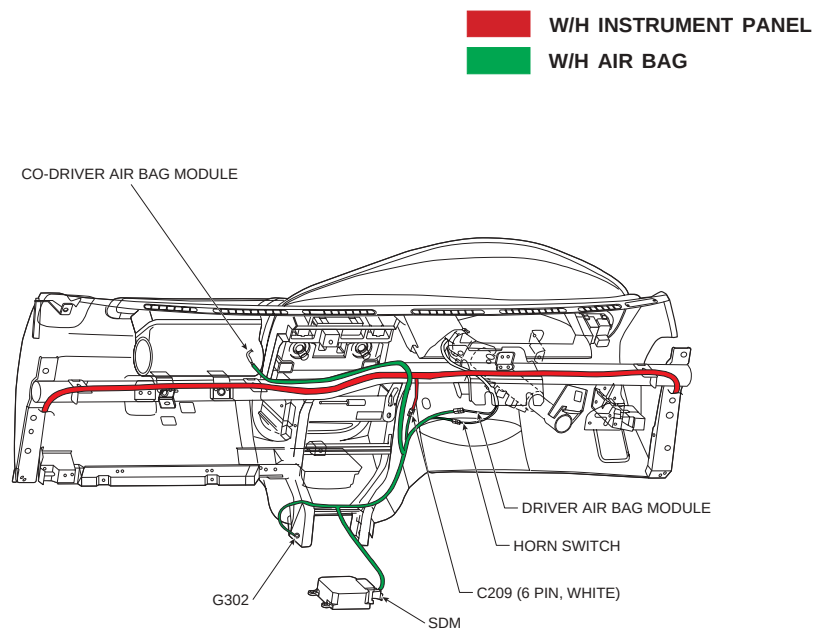


d. SPLICE PACK

S201(BLUE) - LHD

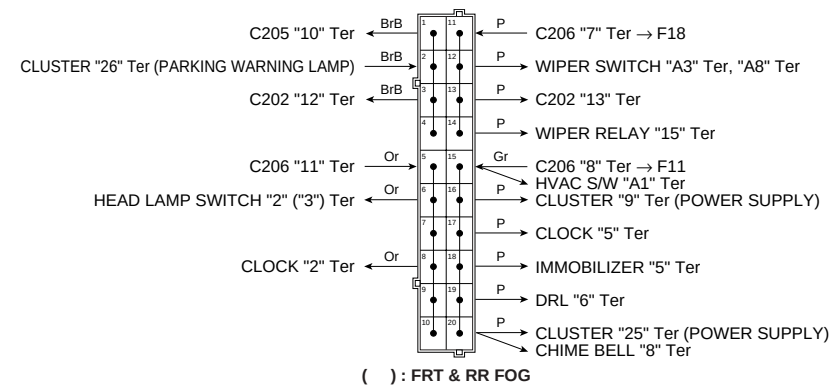


28. IMMOBILIZER SYSTEM CIRCUIT

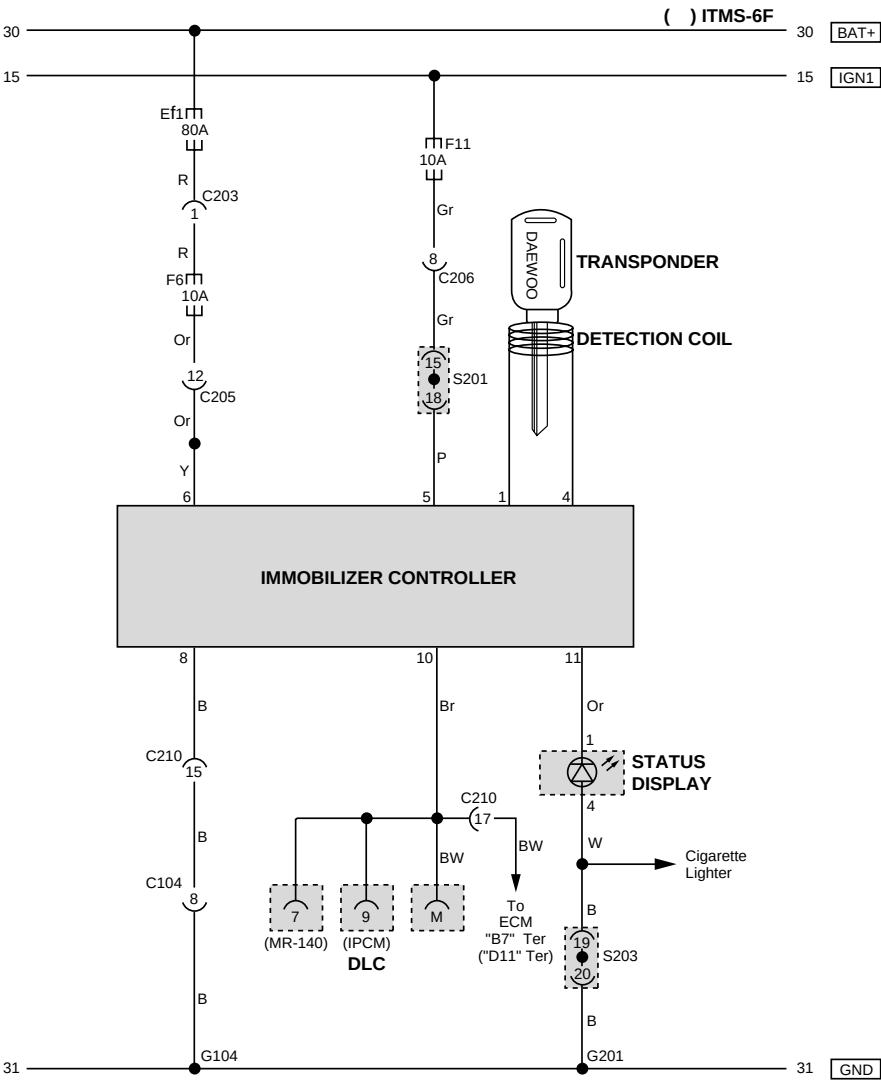

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C104 (15PIN. BLACK)	W/H ECM & ABS - Engine control	Behind Right Strut Mounting
C203 (7PIN. BROWN)	W/H Front-Floor	Connection Box Next to Passenger Room Fuse Box
C205 (22PIN. YELLOW)	W/H Floor-IP	Connection Box Next to Passenger Room Fuse Box
C206 (20PIN. COLORLESS)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C210 (20PIN. COLORLESS)	W/H ECM & ABS - IP	Below Glove Box(Right Side Panel)
S201(20PIN. BLUE)	Splice Pack	Next to Passenger Room Relay Box
S203 (20PIN. RED)	Splice Pack	Next to Passenger Room Relay Box
G104	Ground	Intake Manifold '#4' Cylinder
G201	Ground	Below Right Front Console Box

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

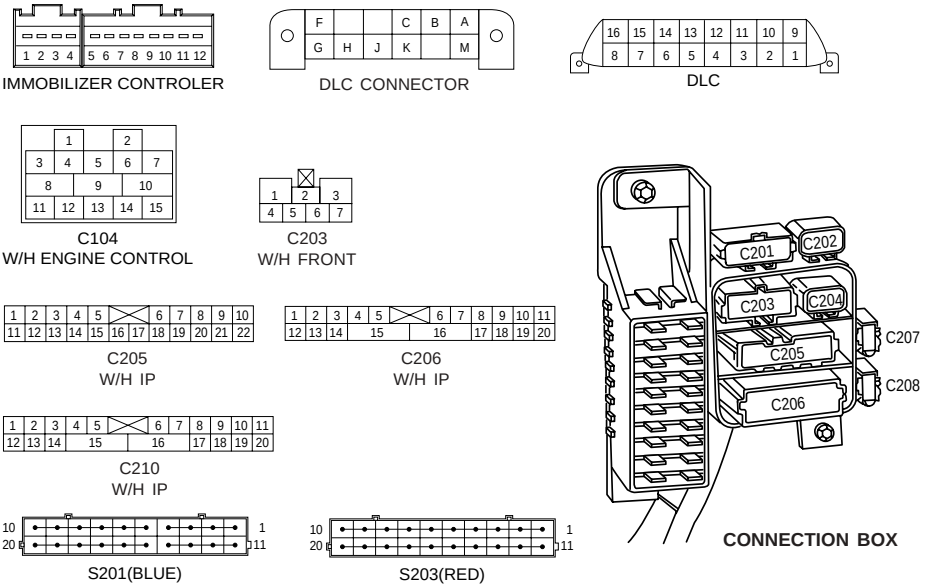


c. POSITION OF CONNECTORS AND GROUNDS

• ENGINE ROOM INSIDE

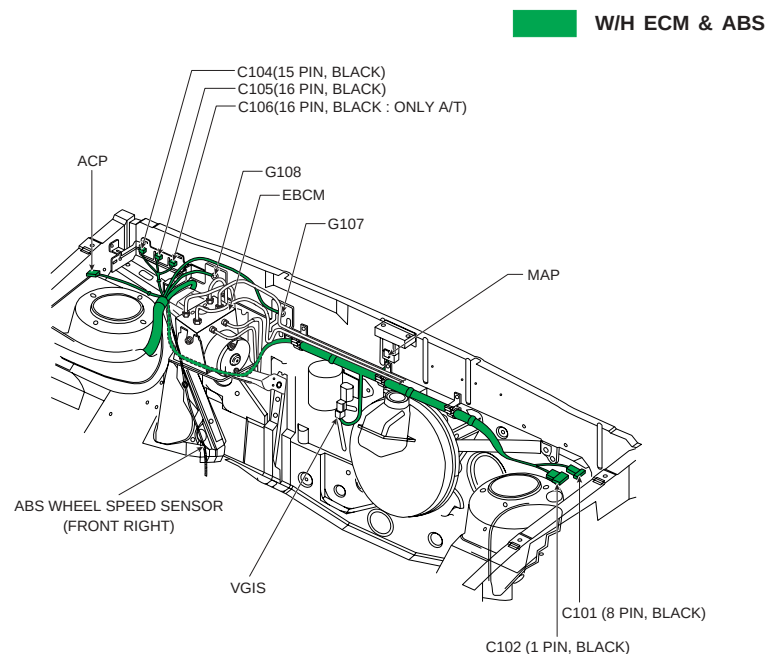


• PASSENGER ROOM RIGHT SIDE PANEL

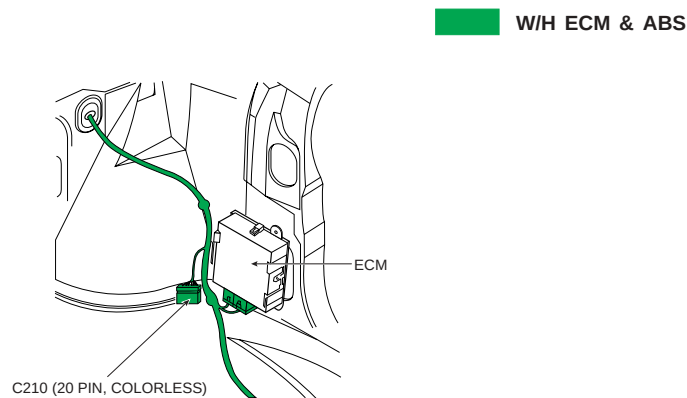


d. SPLICE PACK

S201(BLUE) - LHD

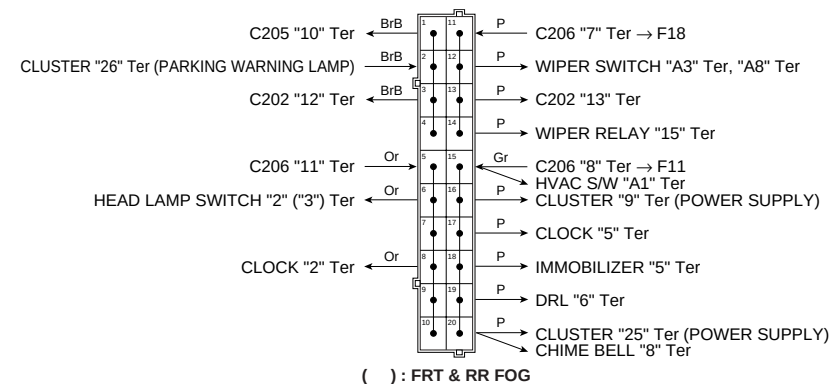


S203(RED) - LHD

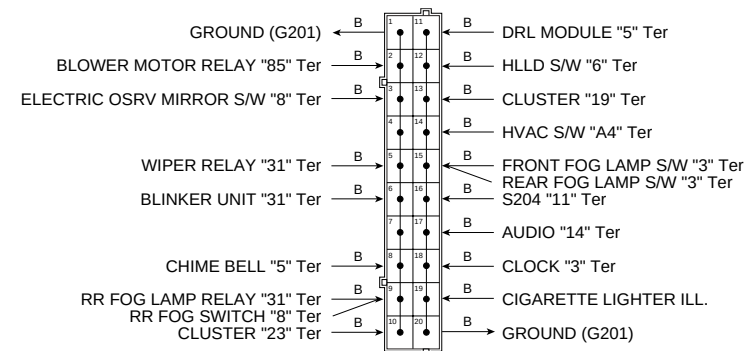

29. ANTI-THEFT CIRCUIT


1) NOTCH BACK - LHD

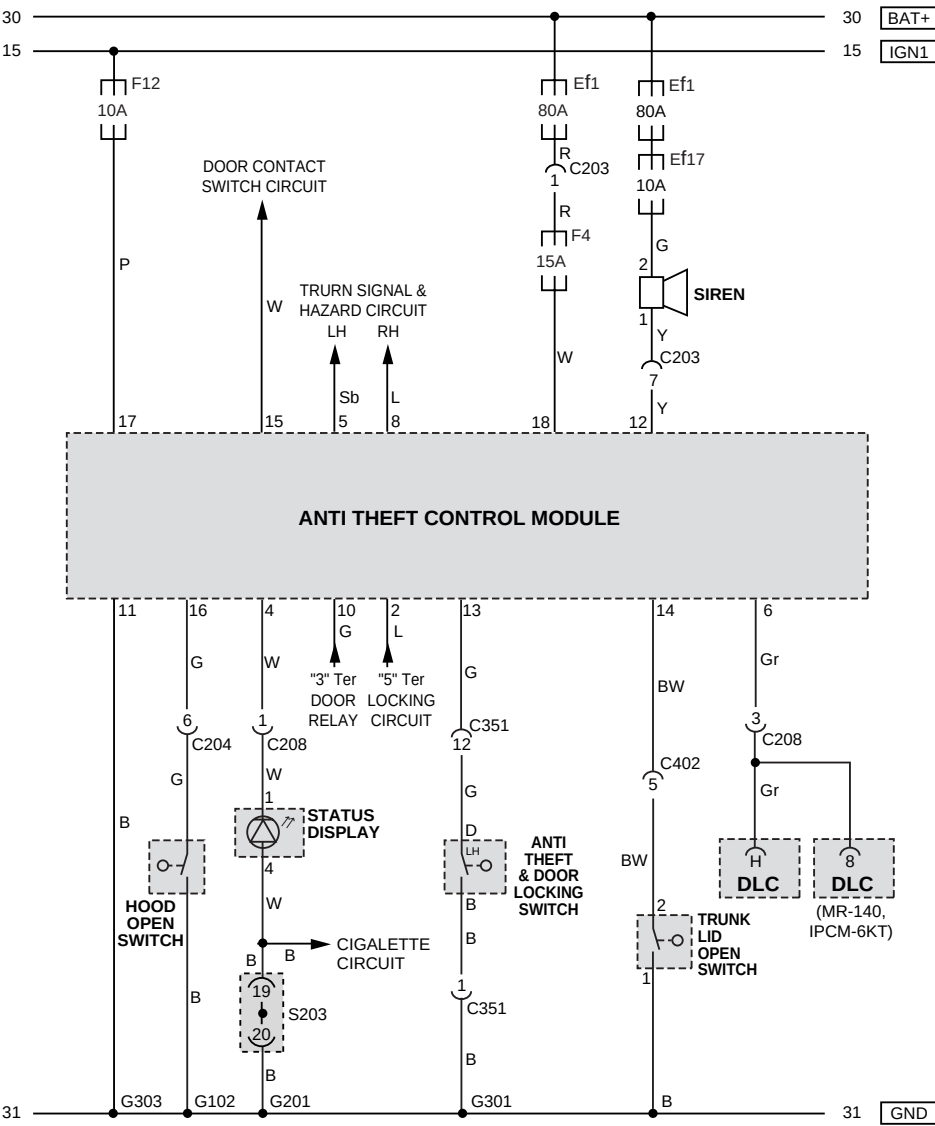

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN, WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C208 (8PIN, WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN, WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C402 (8PIN, WHITE)	W/H Floor - Trunk Lid (N/B)	Above Left Tail Lamp In Trunk
S203 (20PIN, RED)	W/H IP	Next to Passenger Room Relay Box
G102	W/H Front	Fender Below Engine Room Fuse Box
G201	W/H IP	Below Right Front Console Box
G301	W/H Floor	Below Driver Seat
G303	W/H Floor	Below Co-driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

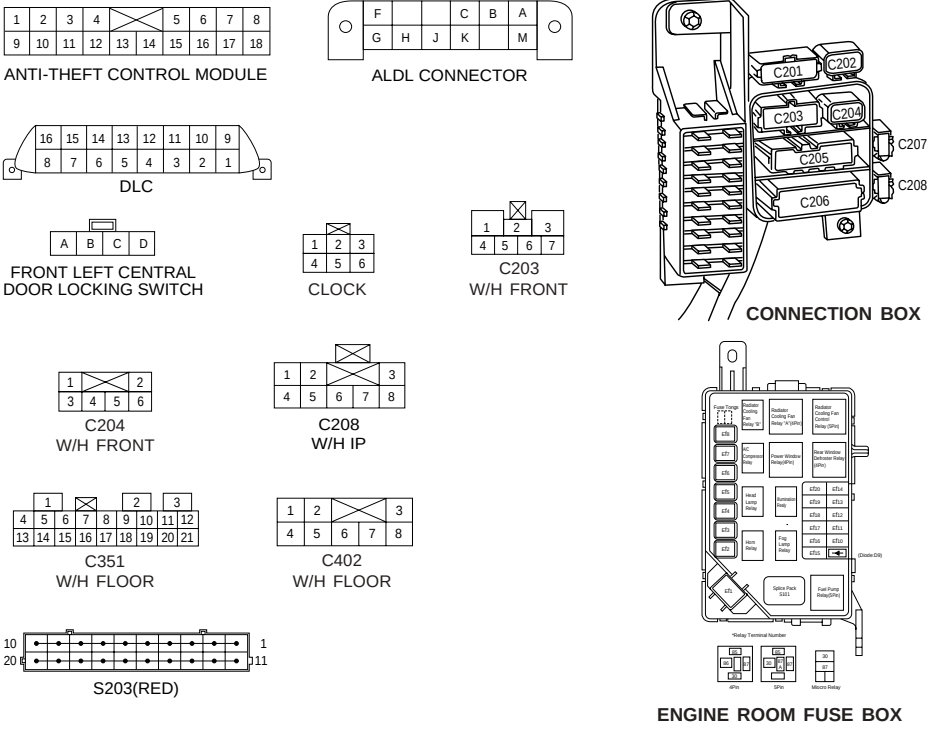

c. POSITION OF CONNECTORS AND GROUNDS

• FLOOR PANEL

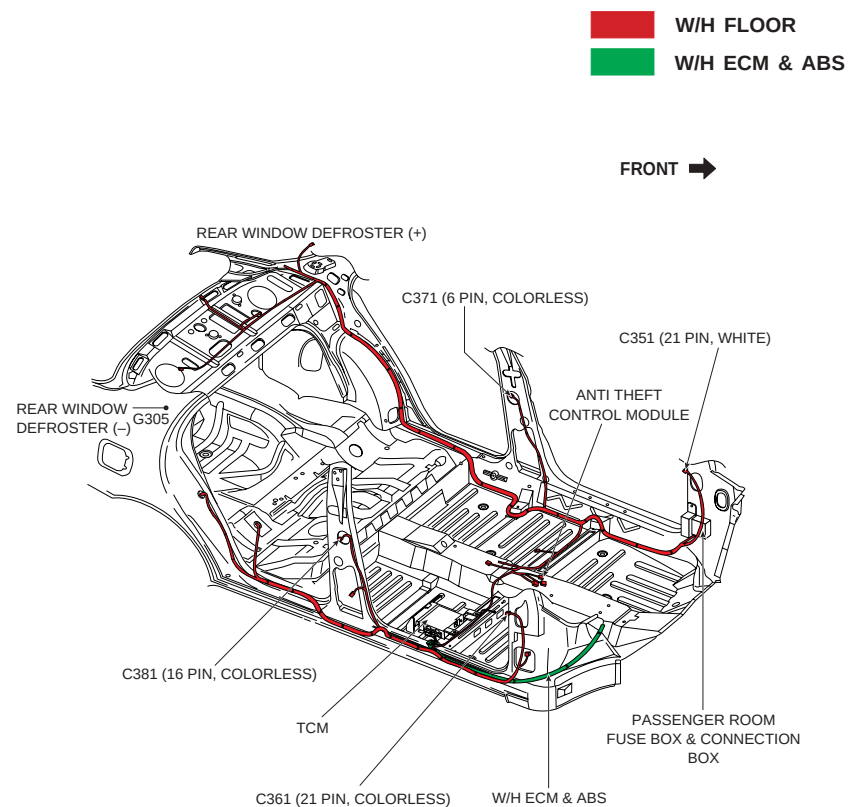

d. SPLICE PACK

S203(RED) - LHD

