



2) NOTCH BACK - RHD

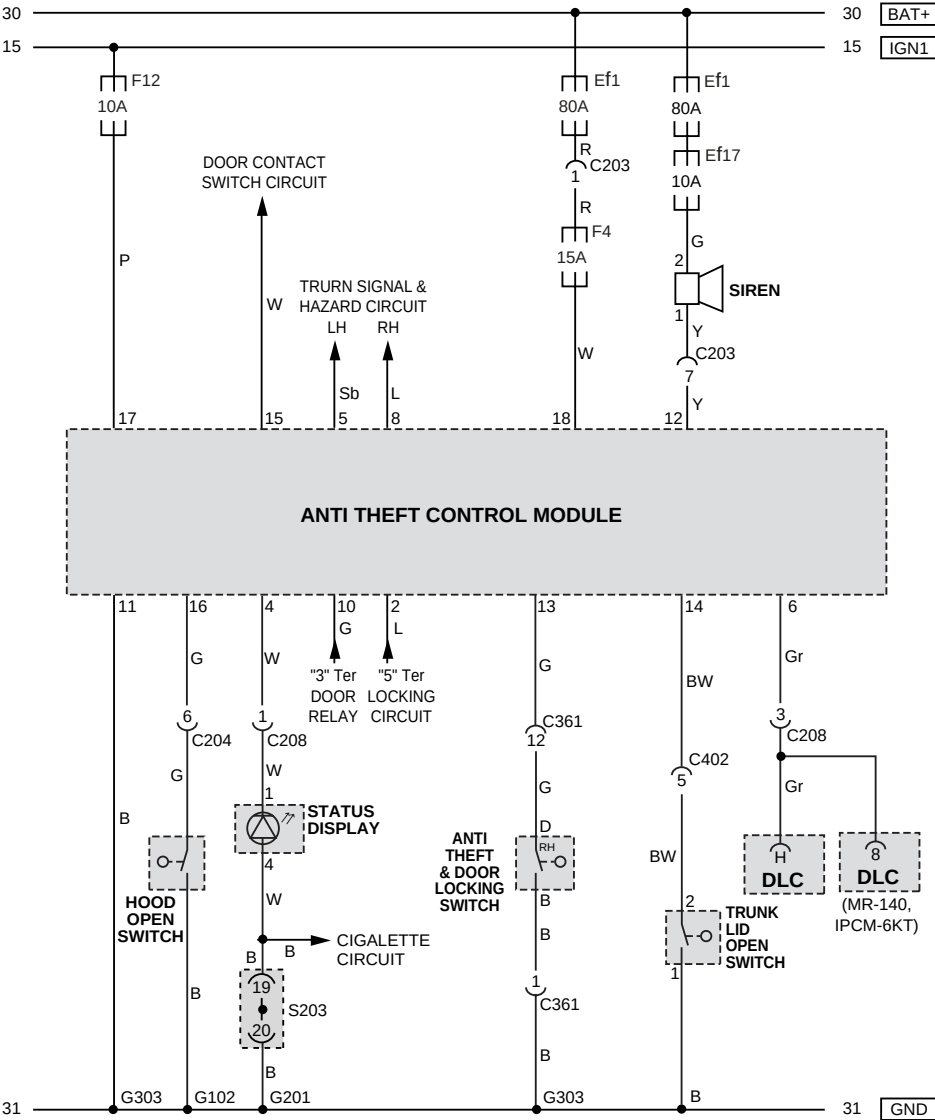

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN, WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C208 (8PIN, WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C361 (21PIN, WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
C402 (8PIN, WHITE)	W/H Floor - Trunk Lid (N/B)	Above Left Tail Lamp In Trunk
S203 (20PIN, RED)	W/H IP	Next to Passenger Room Relay Box
G102	W/H Front	Fender Below Engine Room Fuse Box
G201	W/H IP	Below Right Front Console Box
G301	W/H Floor	Below Driver Seat
G303	W/H Floor	Below Co-driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

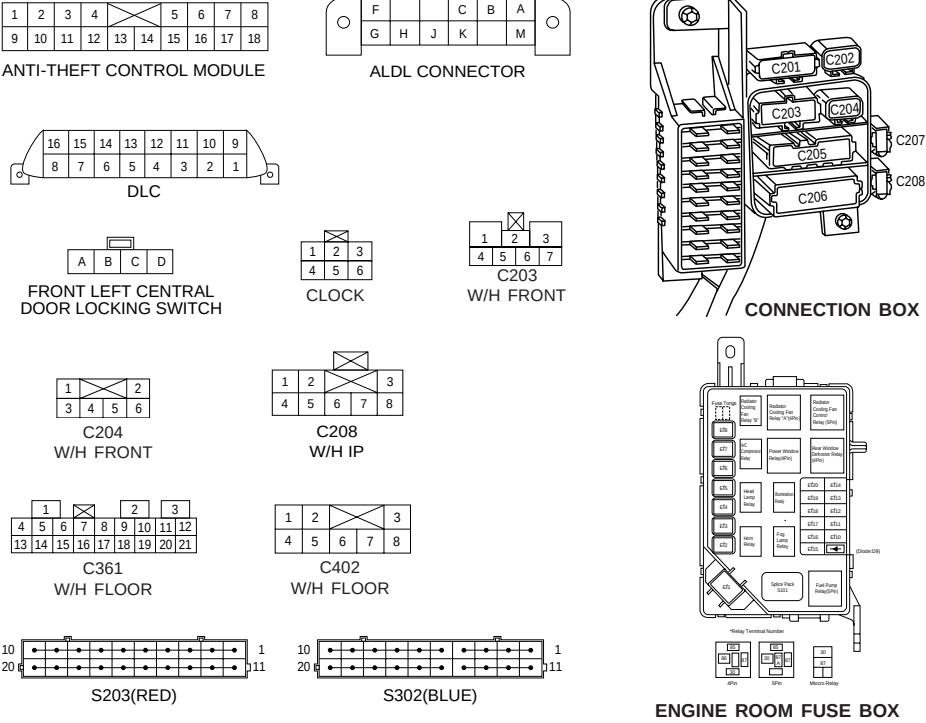


c. POSITION OF CONNECTORS AND GROUNDS

• FLOOR PANEL

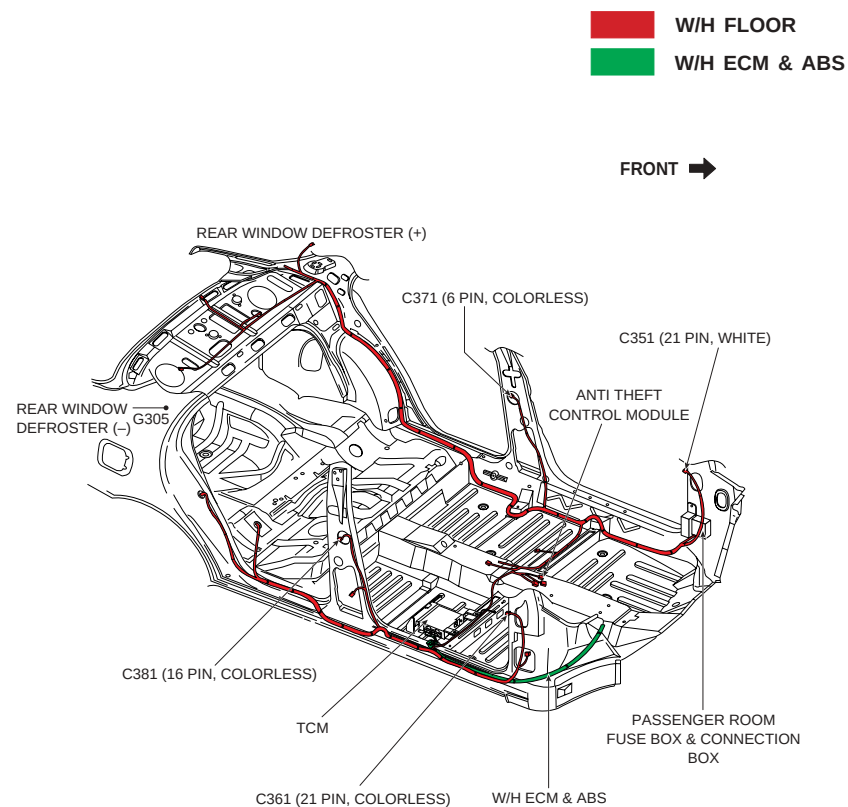


d. SPLICE PACK

S203(RED) - RHD

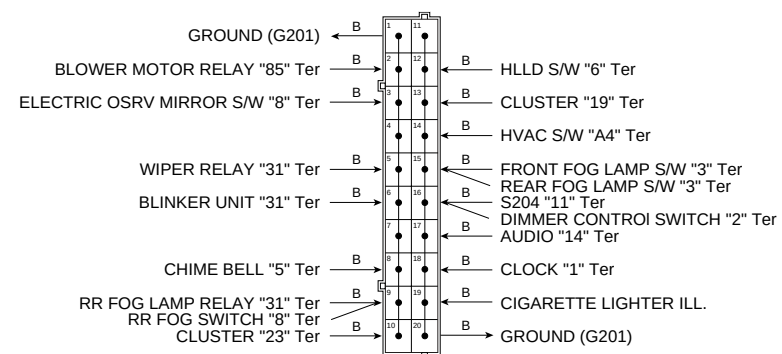


3) HATCH BACK - LHD

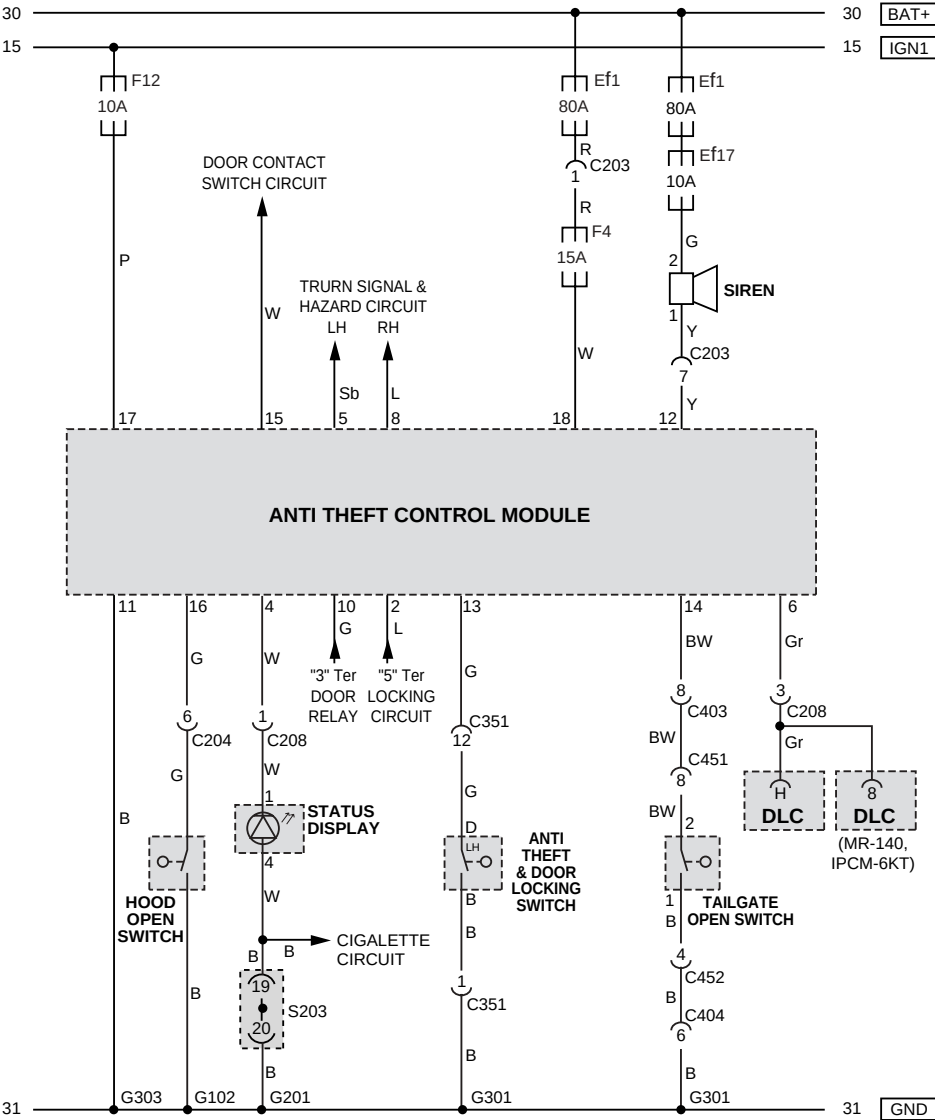

a. CONNECTOR INFORMATION


CONNECTOR(No) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN, WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C208 (8PIN, WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C351 (21PIN, WHITE)	W/H Floor - Front Left Door	Below Front Left Door Upper Hinge
C403 (8PIN, WHITE)	W/H Floor-Tail Gate Extension (H/B)	Inside Trunk
C404 (7PIN, WHITE)	W/H Floor-Tail Gate Extension (H/B)	Inside Trunk (With Anti-theft)
C451 (8PIN, WHITE)	W/H Tail Gate Extension-Tail Gate (H/B)	Inside Tail Gate
C452 (4PIN, WHITE)	W/H Tail Gate Extension-Tail Gate (H/B)	Inside Tail Gate
S203 (20PIN, RED)	W/H IP	Next to Passenger Room Relay Box
G102	W/H Front	Fender Below Engine Room Fuse Box
G201	W/H IP	Below Right Front Console Box
G301	W/H Floor	Below Driver Seat
G303	W/H Floor	Below Co-driver Seat

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

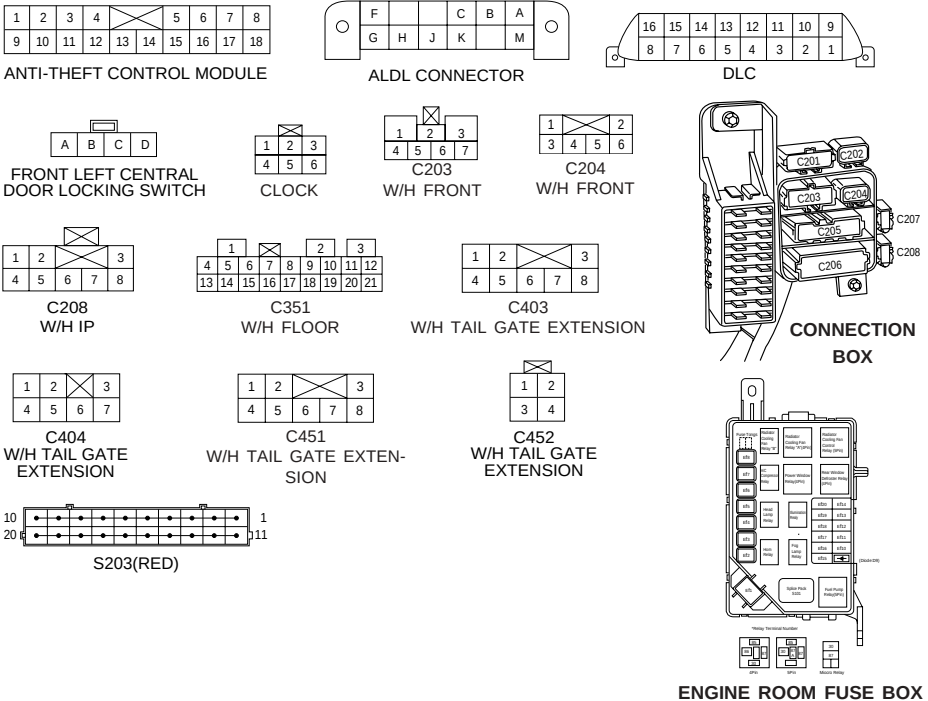


c. POSITION OF CONNECTORS AND GROUNDS


• FLOOR PANEL

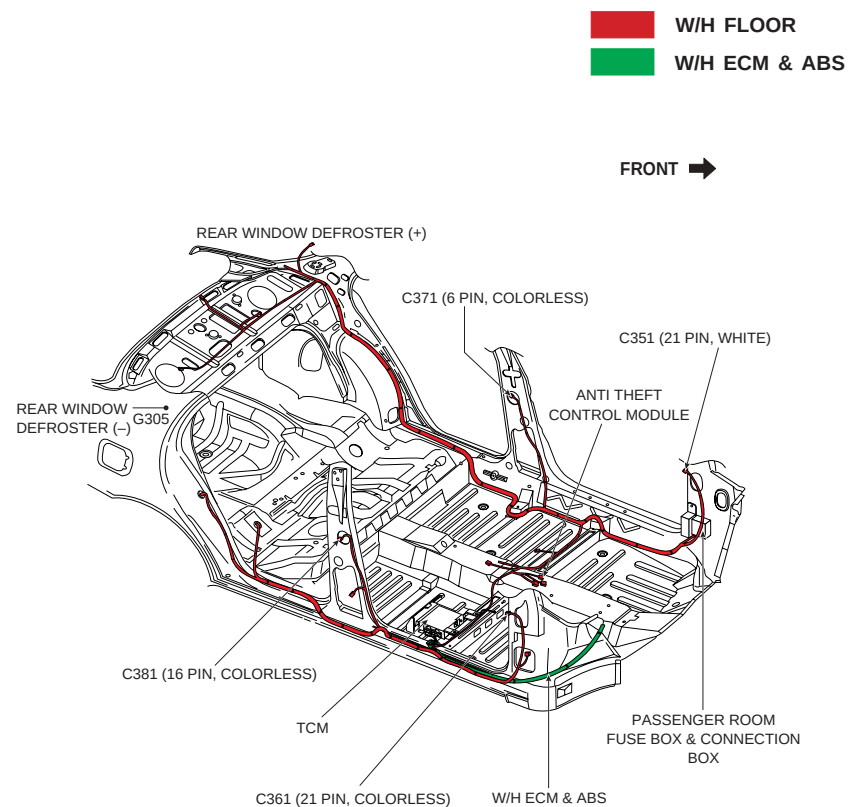

d. SPLICE PACK

S203(RED) - LHD

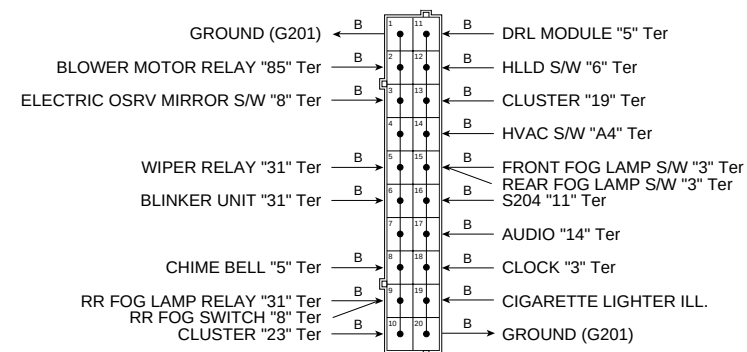

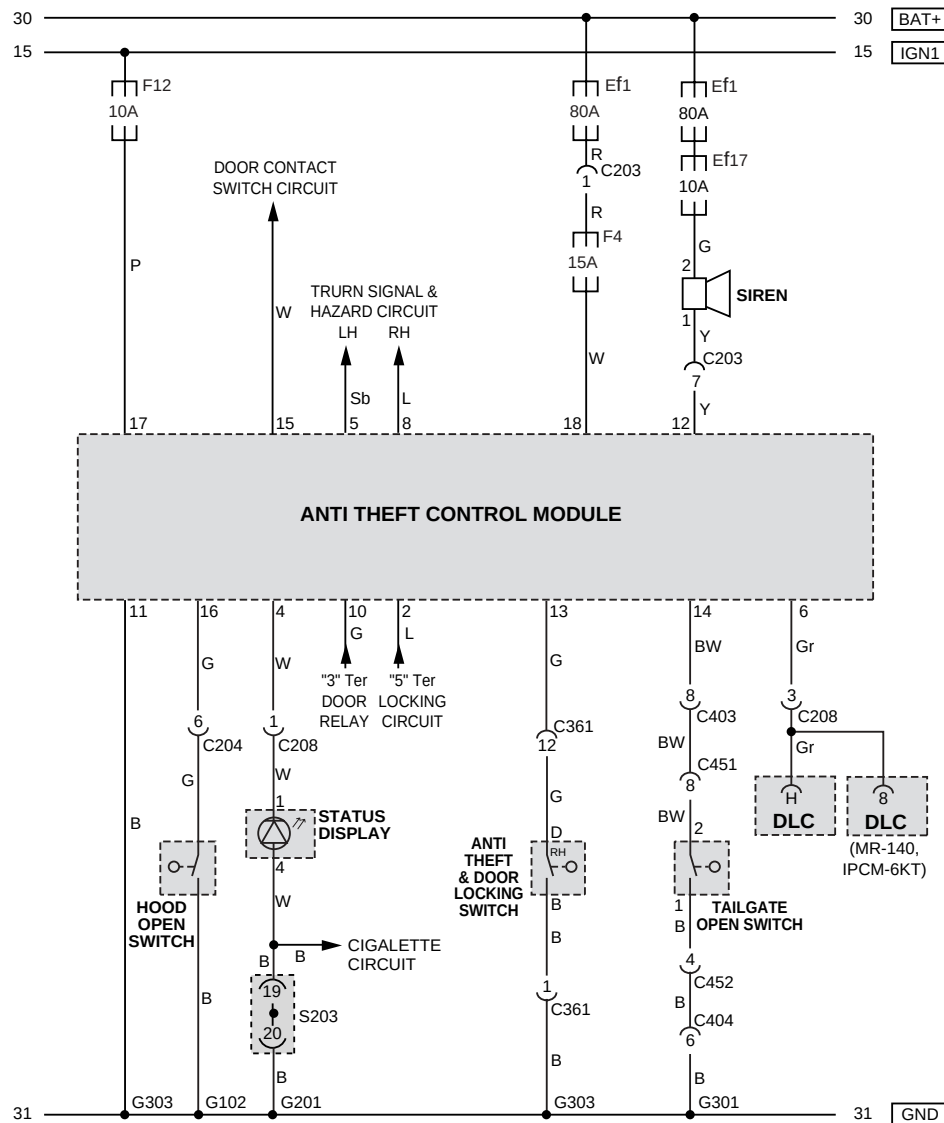

CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C203 (7PIN, BROWN)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C204 (6PIN, WHITE)	W/H Front - Floor	Connection Box Next to Passenger Room Fuse Box
C208 (8PIN, WHITE)	W/H Floor - IP	Connection Box Next to Passenger Room Fuse Box
C361 (21PIN, WHITE)	W/H Floor - Front Right Door	Below Front Right Door Upper Hinge
C403 (8PIN, WHITE)	W/H Floor–Tail Gate Extension (H/B)	Inside Trunk
C404 (7PIN, WHITE)	W/H Floor–Tail Gate Extension (H/B)	Inside Trunk (With Anti-theft)
C451 (8PIN, WHITE)	W/H Tail Gate Extension–Tail Gate (H/B)	Inside Tail Gate
C452 (4PIN, WHITE)	W/H Tail Gate Extension–Tail Gate (H/B)	Inside Tail Gate
S203 (20PIN, RED)	W/H IP	Next to Passenger Room Relay Box
G102	W/H Front	Fender Below Engine Room Fuse Box
G201	W/H IP	Below Right Front Console Box
G301	W/H Floor	Below Driver Seat
G303	W/H Floor	Below Co-driver Seat

ANTI-THIEF CONTROL MODULE

1	2	3	4	5	6	7	8		
9	10	11	12	13	14	15	16	17	18

ALDL CONNECTOR

F			C	B	A
G	H	J	K		M

DLC

16	15	14	13	12	11	10	9
8	7	6	5	4	3	2	1

FRONT LEFT CENTRAL DOOR LOCKING SWITCH

A	B	C	D
---	---	---	---

CLOCK

1	2	3
4	5	6

W/H FRONT

1	2	3
4	5	6

C203

W/H FRONT

1	2
3	4

C204

C208

1	2	3		
4	5	6	7	8

W/H IP

C361

1	2	3						
4	5	6	7	8	9	10	11	12
13	14	15	16	17	18	19	20	21

W/H FLOOR

C403

1	2	3		
4	5	6	7	8

W/H TAIL GATE EXTENSION

C404

1	2	3	
4	5	6	7

W/H TAIL GATE EXTENSION

C451

1	2	3		
4	5	6	7	8

W/H TAIL GATE EXTENSION

C452

1	2
3	4


W/H TAIL GATE EXTENSION

CONNECTION BOX

ENGINE ROOM FUSE BOX


c. POSITION OF CONNECTORS AND GROUNDS

• FLOOR PANEL

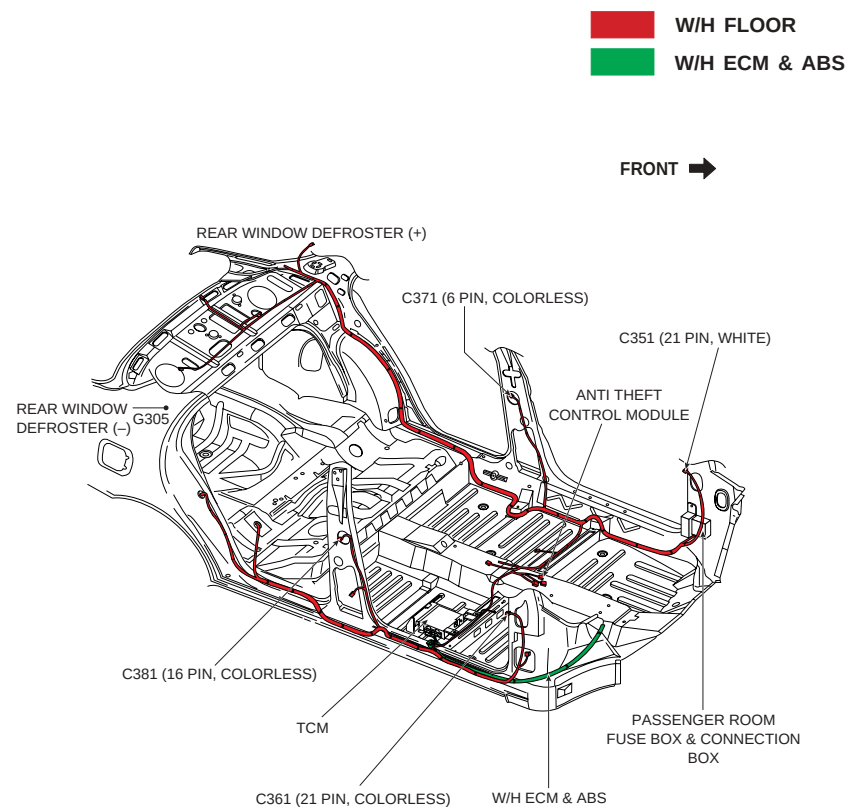


d. SPLICE PACK

S203(RED) - RHD

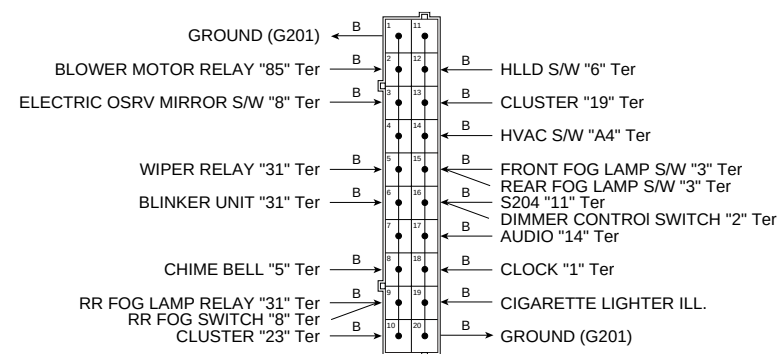



28. SUN ROOF CIRCUIT

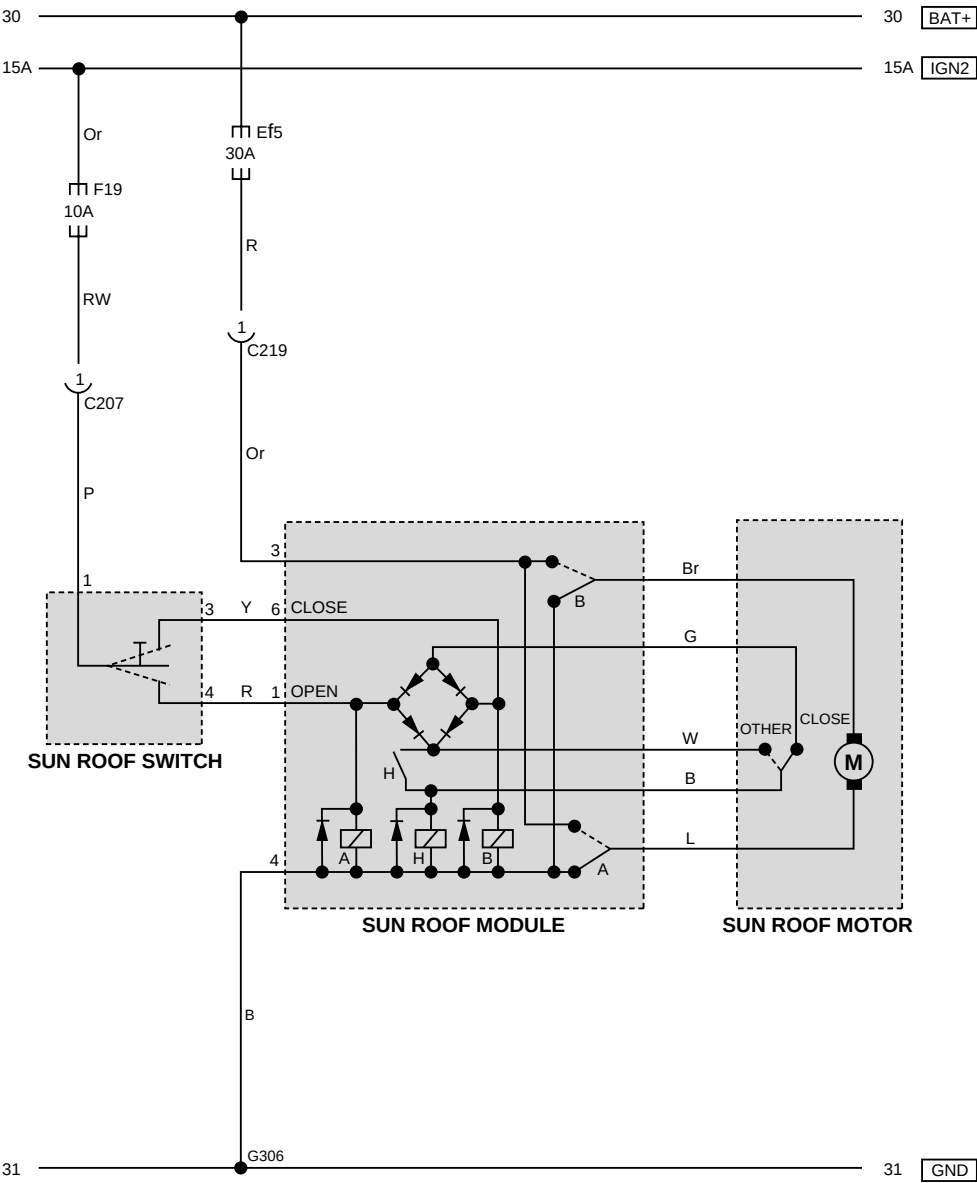

a. CONNECTOR INFORMATION


CONNECTOR(NO) (PIN NO. COLOR)	CONNECTING. WIRING HARNESS	CONNECTOR POSITION
C207 (4PIN. WHITE)	W/H Floor - Roof	Connection Box Next to Passenger Room Fuse Box
C219 (1PIN. WHITE)	W/H Floor - Roof	Near Connection Box
G306	Ground	In the Roof Panel

b. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

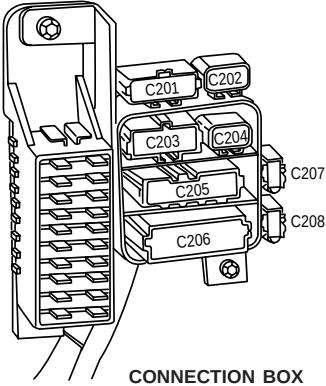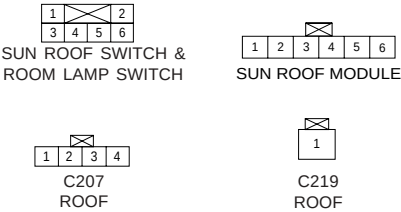

c. POSITION OF CONNECTORS AND GROUNDS

- LEFT PILLAR INSIDE

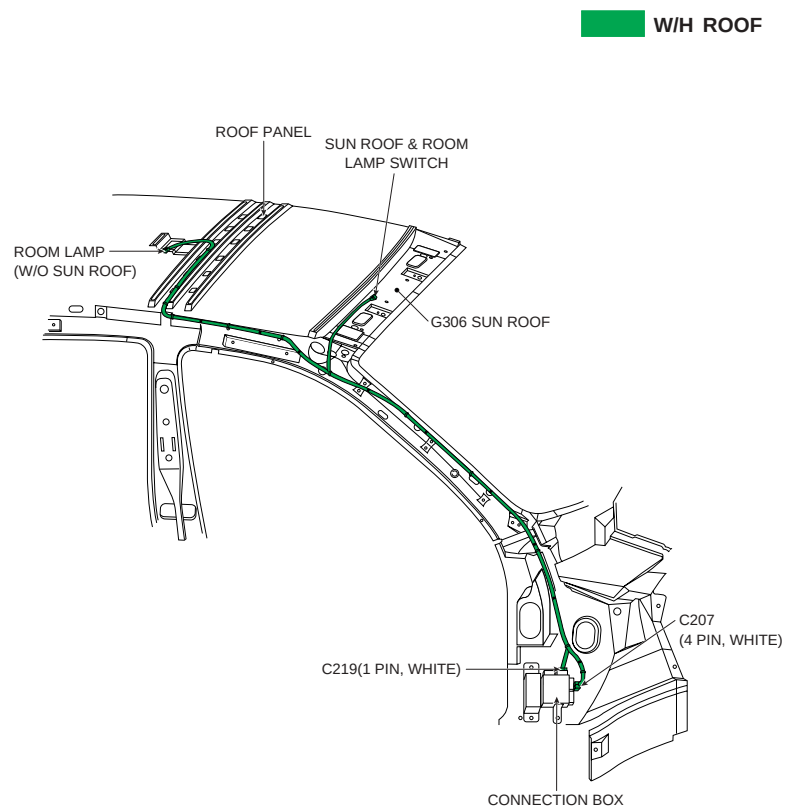

EDITION HISTORY

No.	CODE NO.	PRINTING DATE	MODEL YEAR	REMARKS
1	LA-EWD1E-7D-600A	APRIL, 1997	MY97	
2	LA-EWD2E-7J-400B	OCTOBER, 1997	MY98	
3	LA-EWD2E-8G-50A	JULY, 1998	MY98	
4	LA-9EWD3E-8K-250B	NOVEMBER, 1998	MY99	
5	LA-0EWD4E-9E-200A	MAY, 1999	MY00	
6	LA-1EWD5E-0G-200A	JULY, 2000	MY01	
7	LA-2EWD6E-1F-200A	JUNE, 2001	MY02	

LANOS ELECTRICAL WIRING DIAGRAM

ISSUED BY
OVERSEAS TECH. SERVICE TEAM
DAEWOO MOTOR CO., LTD.

409-7 CHONG CHON-DONG, PU PYUNG-KU,
INCHON, KOREA

TELEPHONE : 82-32-509-7320~7326, 7350
FACSIMILE : 82-32-509-7205, 7206
