

Connectors and Harnesses



Connector Index

Identification numbers have been assigned to in-line connectors, junction connectors, and terminals. The number is preceded by the letter "C" for connectors "G" for ground terminals or "T" for non-ground terminals.

Harness	Location			Notes
	Engine Compartment	Dashboard	Others (Floor, Door, Trunk, and Roof)	
A/C compressor clutch subharness	C309 G351			(see page 22-71)
A/C wire harness		C502, C503		(see page 22-70)
Front accessory power socket subharness			C528	(see page 22-62)
Active noise cancellation subharness			C633	(see page 22-48)
Battery ground cable	(-) G1 and T2			(see page 22-19)
CKP sensor subharness	C151			(see page 22-22)
Console subharness			C551, C552	(see page 22-62)
Dashboard wire harness (around the steering column)		C519, C520		(see page 22-34)
Dashboard wire harness (center branch)		C521 through C528 G503, G504	C528, C551 G505	(see page 22-36)
Dashboard wire harness (left branch)		C301, C302, C303, C507 through C518 G501, G502	C601, C602	(see page 22-32)
Dashboard wire harness (right branch)		C201, C501, C502, C503, C529 G506	C651, C652, C771	(see page 22-38)
Driver's door subharness			C751, C752, C753	(see page 22-56)
Driver's door wire harness A			C754, 755, C756	(see page 22-56)
Driver's door wire harness B			C752, C753, C754, C757	(see page 22-56)
Driver's seat wire harness			C901, C902, C903	(see page 22-64)
Engine compartment wire harness (dash branch)		C301 through C307		(see page 22-28)
Engine compartment wire harness (left branch)	C104, C309 G301			(see page 22-26)
Engine compartment wire harness (right branch)	G201, G202	C201, C202 G401		(see page 22-30)
Engine ground cable	T4, G2			(see page 22-19)
Engine wire harness (front branch)	C104, C106, C108, C153 T101 and T102			(see page 22-20)
Engine wire harness (rear branch)	C101, C102, C103, C105, C107, C151, C152 G101			(see page 22-22)
E-pretensioner subharness			C991, C992, C993	(see page 22-72)
Floor subharness			C658, C659, C698, C699	(see page 22-52)

(cont'd)

Connectors and Harnesses

Connector Index (cont'd)

Harness	Location			Notes
	Engine Compartment	Dashboard	Others (Floor, Door, Trunk, and Roof)	
Front passenger's door subharness			C771, C772, C774	(see page 22-58)
Front passenger's door wire harness A			C773, C776	(see page 22-58)
Front passenger's door wire harness B			C773, C774, C775	(see page 22-58)
Front passenger's seat wire harness			C931, C932	(see page 22-66)
Knock sensor subharness	C152			(see page 22-22)
Left rear door subharness			C782	(see page 22-60)
Left rear door wire harness			C781, C782, C783	(see page 22-60)
Left side wire harness (front branch)		C304	C601 through C604, C607 through C610, C631, C632, C751, C781, C901, C902, C903, C991 G601	(see page 22-40)
Left side wire harness (rear branch)			C606, C612 through C616, C653, C654, C655, C701, C951 G602, G603, G604	(see page 22-42)
Moonroof subharness			C851	(see page 22-48)
PCM wire harness	C101, C102, C103	C251, C501		(see page 22-24)
Rear differential subharness A			C698, T15	(see page 22-54)
Rear differential subharness B			C699	(see page 22-54)
Rear headrest actuator subharness			C961, C962, C963 T16, T17, T18	(see page 22-68)
Rear headrest subharness			C951, C961, C962, C963, C964	(see page 22-68)
Rear seat heater subharness			C964	(see page 22-68)
Rear shelf wire harness			C606, C656	(see page 22-50)
Rear window defogger ground wire			G851	(see page 22-50)
Rear wire harness			C701 G701	(see page 22-50)
Right rear door subharness			C792	(see page 22-61)
Right rear door wire harness			C791, C792, C793	(see page 22-61)
Right side wire harness (front branch)			C603, C604 C651, C652, C660, C661 C772, C791, C931, C932, C992, C993 G651, G653	(see page 22-44)
Right side wire harness (rear branch)			C633, C653 through C659, C662, C663 G652	(see page 22-46)
Roof wire harness			C631, C632, C851, C852	(see page 22-48)
Shift solenoid wire harness	C153			(see page 22-20)
Starter cable	(+), T1 and T3			(see page 22-19)
Throttle actuator control module subharness		C251		(see page 22-24)
Trunk subharness			C657, C831	(see page 22-52)
Trunk wire harness			C831, C833	(see page 22-52)



Connector to Harness Index

Starter Cable


Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
T1	2		Left side of engine compartment	Under-hood fuse/relay box	
T3	1		Left side of engine compartment	Starter motor	
(+)	3		Battery	Battery positive terminal	

Battery Ground Cable

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
G1	5		Left side of engine compartment	Body ground, via battery ground cable	
T2	6		Left side of engine compartment	Transmission housing	
(-)	4		Battery	Battery negative terminal	

Engine Ground Cable

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
T4	7		Right side of engine compartment	Engine mount bracket	
G2	8		Right side of engine compartment	Engine ground, via engine ground cable	

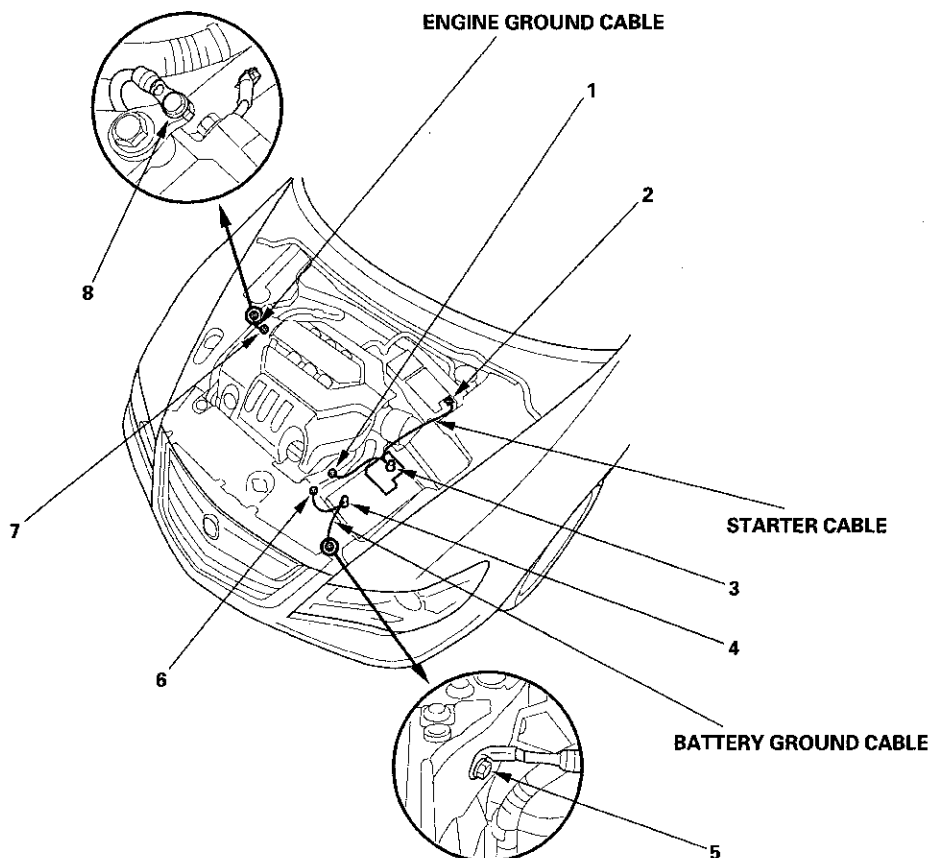

Connectors and Harnesses


Connector to Harness Index (cont'd)

Engine Wire Harness (Front branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
A/T clutch pressure control solenoid valve A	14	2	Transmission housing		
A/T clutch pressure control solenoid valve B	15	2	Transmission housing		
A/T clutch pressure control solenoid valve C	9	2	Transmission housing		
Alternator	30	4	Middle of engine compartment		
ATF temperature sensor	21	2	Transmission housing		
Engine coolant temperature (ECT) sensor 1	6	2	Left side of engine		
Exhaust gas recirculation (EGR) valve and position sensor	5	5	Left side of engine compartment		
Front A/F sensor (Bank 2, Sensor 1)	29	6	Exhaust manifold (front bank)		
Front secondary heated oxygen sensor (secondary HO2S) (Bank 2, Sensor 2)	28	4	Exhaust manifold (front bank)		
Ignition coil No. 4	2	3	Middle of engine		
Ignition coil No. 5	3	3	Middle of engine		
Ignition coil No. 6	4	3	Middle of engine		
Input shaft (mainshaft) speed sensor	25	3	Transmission housing		
Manifold absolute pressure (MAP) sensor	7	3	Left side of engine compartment		
Output shaft (countershaft) speed sensor	23	3	Transmission housing		
Starter solenoid	26	1	Left side of engine compartment		
Throttle actuator and throttle position sensor	8	6	Middle of engine compartment		
Transmission range switch	22	10	Transmission housing		
3rd clutch transmission fluid pressure switch	24	1	Transmission housing		
4th clutch transmission fluid pressure switch	27	1	Transmission housing		
C104	11	1	Left side of engine compartment	Engine compartment wire harness (see page 22-26)	
C106 (Junction connector)	12	24	Left side of engine compartment		
C108 (Junction connector)	13	24	Left side of engine compartment		
C153	20	5	On the transmission housing	Shift solenoid wire harness	
T101	10		Under-hood fuse/relay box	Under-hood fuse/relay box (see page 22-73).	
T102	1		Middle of engine compartment	Alternator	

Shift Solenoid Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Shift solenoid valve A	19	1	In the transmission		
Shift solenoid valve B	18	1	In the transmission		
Shift solenoid valve C	17	1	In the transmission		
Shift solenoid valve D	16	1	In the transmission		
C153	20	5	On the transmission housing	Engine wire harness	

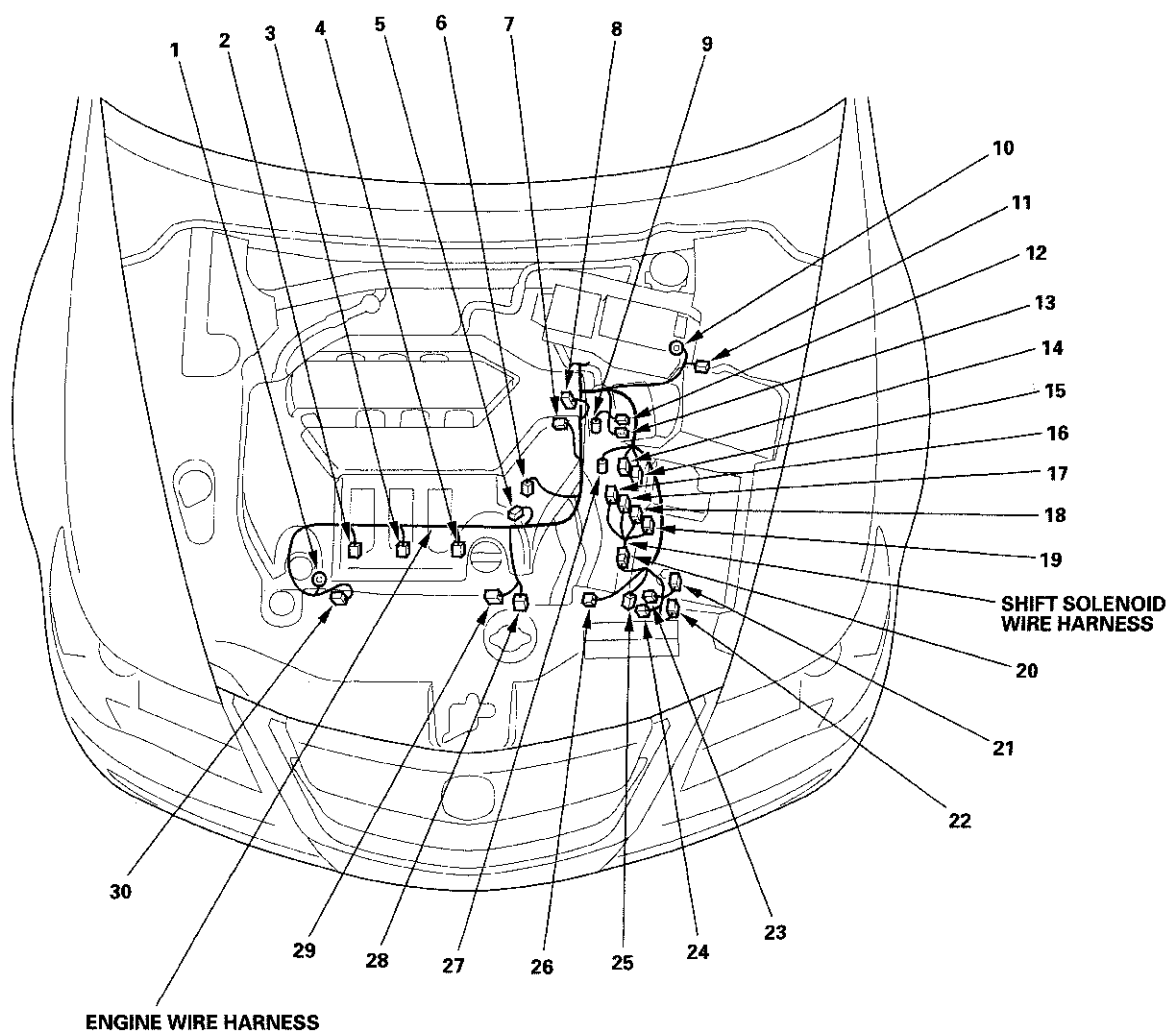

Connectors and Harnesses

Connector to Harness Index (cont'd)

Engine Wire Harness (Rear branch)


Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
CMP sensor	27	3	Right side of engine		
Engine mount control solenoid valve	12	2	Left side of engine compartment		
Engine oil pressure switch	26	1	Right side of engine		
EVAP canister purge valve	13	2	Left side of engine compartment		
Ignition coil No. 1	3	3	Middle of engine		
Ignition coil No. 2	4	3	Middle of engine		
Ignition coil No. 3	6	3	Middle of engine		
Injector No. 1	18	2	Middle of engine		
Injector No. 2	17	2	Middle of engine		
Injector No. 3	16	2	Middle of engine		
Injector No. 4	22	2	Middle of engine		
Injector No. 5	20	2	Middle of engine		
Injector No. 6	19	2	Middle of engine		
Intake manifold tuning (IMT) actuator	24	5	Right side of engine		
Rear A/F sensor (Bank 1, Sensor 1)	15	6	Exhaust manifold (rear bank)		
Rear secondary heated oxygen sensor (secondary HO2S) (Bank 1, Sensor 2)	14	4	Exhaust manifold (rear bank)		
Rocker arm oil control solenoid	1	1	Right side of engine		
Rocker arm oil pressure switch	28	2	Right side of engine		
2nd clutch transmission fluid pressure switch	7	1	Left side of engine compartment		
C101	8	33	Left side of engine compartment	PCM wire harness (see page 22-24)	
C102	9	33	Left side of engine compartment	PCM wire harness (see page 22-24)	
C103	10	23	Left side of engine compartment	PCM wire harness (see page 22-24)	
C105 (Junction connector)	5	12	Middle of engine compartment		
C107 (Junction connector)	11	24	Middle of engine compartment		
C151	2	6	Right side of engine compartment	CKP sensor subharness	
C152	23	1	Right side of engine compartment	Knock sensor subharness	
G101	29		Right side of engine compartment	Body ground, via engine wire harness	

CKP Sensor Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
CKP sensor A/B	25	6	Right side of engine		
C151	2	6	Right side of engine compartment	Engine wire harness	

Knock Sensor Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Knock sensor	21	1	Middle of engine		
C152	23	1	Right side of engine compartment	Engine wire harness	

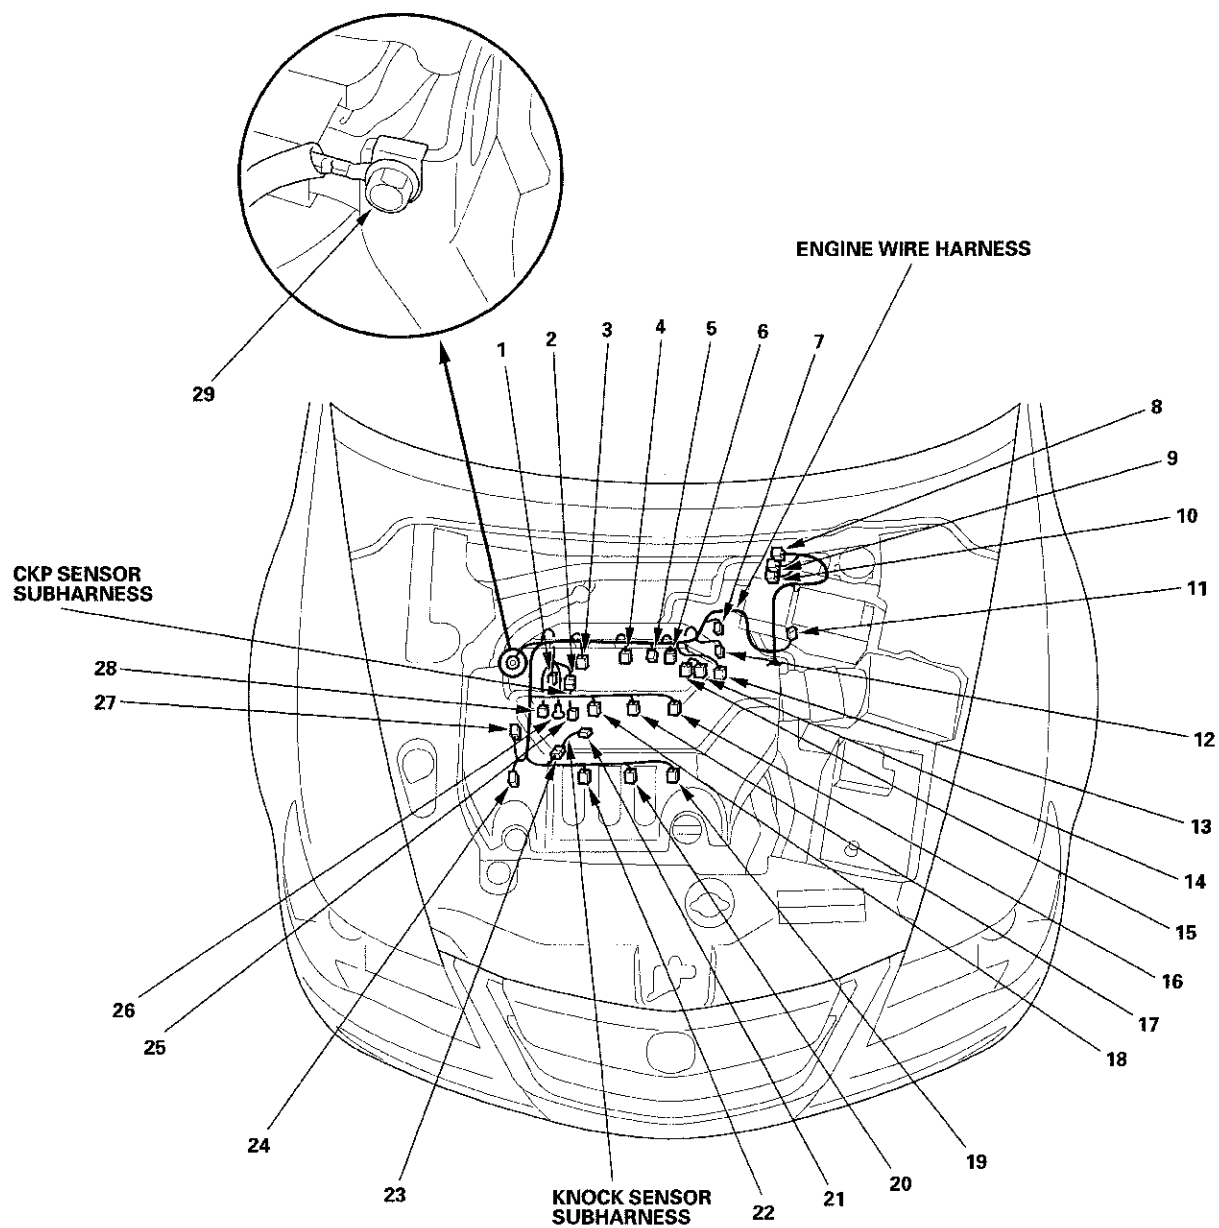

Connectors and Harnesses


Connector to Harness Index (cont'd)

PCM Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
PCM connector A	4	31	Under middle side of dash		
PCM connector B	5	24	Under middle side of dash		
PCM connector C	6	22	Under middle side of dash		
C101	3	33	Left side of engine compartment	Engine wire harness (see page 22-22)	
C102	2	33	Left side of engine compartment	Engine wire harness (see page 22-22)	
C103	1	23	Left side of engine compartment	Engine wire harness (see page 22-22)	
C251	7	13	Under middle of dash	Throttle actuator control module subharness	
C501	9	17	Under middle of dash	Dashboard wire harness (see page 22-38)	

Throttle Actuator Control Module Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Throttle actuator control module	8	16	Under right side of dash		
C251	7	13	Under middle of dash	PCM wire harness	

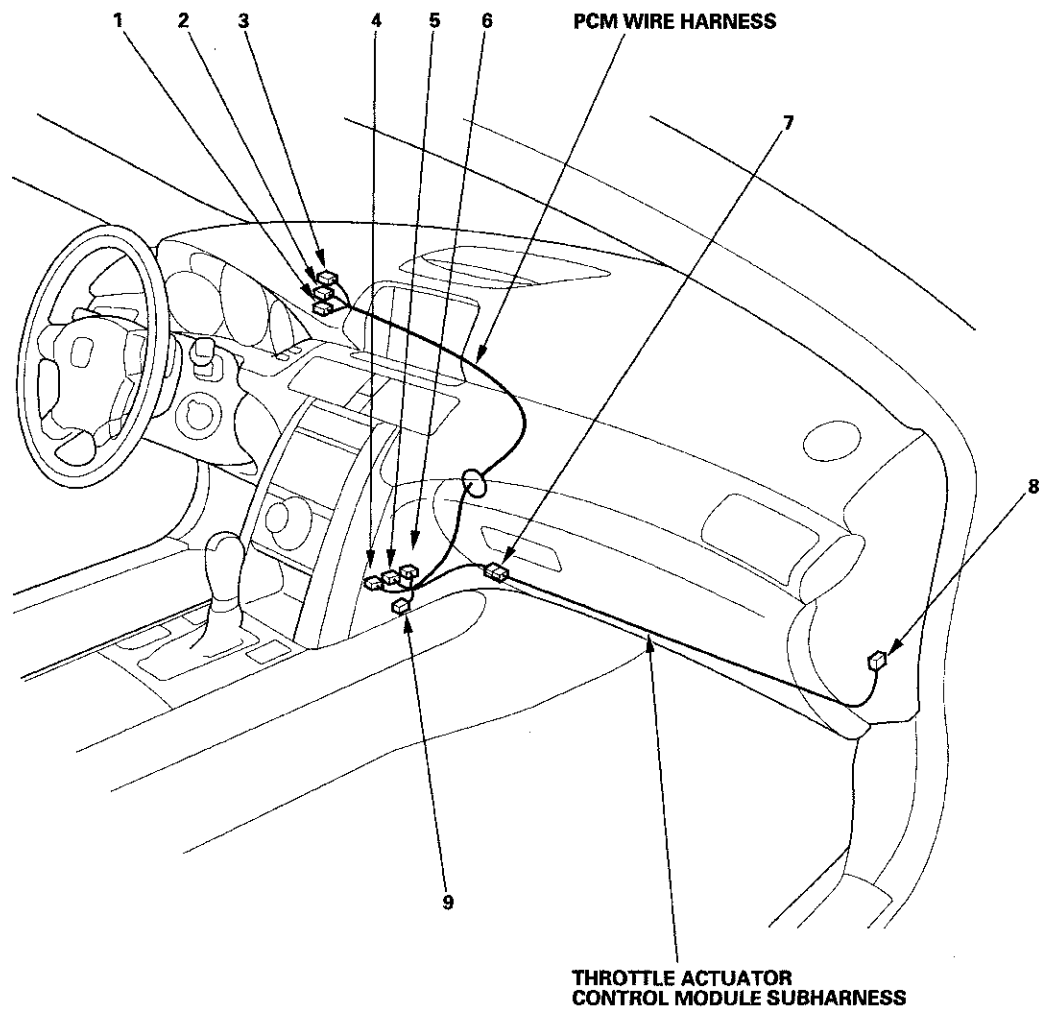

Connectors and Harnesses


Connector to Harness Index (cont'd)

Engine Compartment Wire Harness (Left branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Adaptive cruise control relay	19	5	Auxiliary under-hood relay box		* 1
Battery terminal fuse box (+)	38	—	Left side of engine compartment		
Brake fluid level switch	13	2	Left side of engine compartment		
Daytime running lights relay	21	5	Auxiliary under-hood relay box		Canada models
ECPS valve	14	6	Left side of engine compartment		
Horn (high)	32	1	Behind left side of front bumper		
Horn (low)	35	1	Front of engine compartment		
Left adaptive front lighting gearbox connector	25	8	Behind left headlight		* 2
Left fog light	27	2	Behind left side of front bumper		
Left front brake fluid pressure sensor	11	3	Left side of engine compartment		* 1
Left front impact sensor	23	2	Behind left side of front bumper		
Left front TPMS initiator	22	3	Behind left side of engine compartment		
Left front parking light	24	2	Behind left headlight		
Left front turn signal light	29	3	Behind left headlight		
Left front wheel speed sensor	17	2	Left side of engine compartment		
Left headlight (high)	30	2	Behind left headlight		
Left headlight (low)	26	2	Behind left headlight		
Left headlight leveling motor connector	28	3	Behind left headlight		
MAF sensor/IAT sensor	39	5	On the air cleaner box		
Millimeter wave radar	33	5	Front of engine compartment		* 1
Radiator fan control (RFC) unit connector A	37	3	Front of engine compartment		
Radiator fan control (RFC) unit connector B	36	1	Front of engine compartment		
Radiator fan control (RFC) unit relay	20	4	Auxiliary under-hood relay box		
Right front brake fluid pressure sensor	12	3	Left side of engine compartment		* 1
Security hood switch	34	2	Front of engine compartment		
Under-hood fuse/relay box connector A (see page 22-73)	2	3	Behind under-hood fuse/relay box	ELD	
Under-hood fuse/relay box connector B (see page 22-73)	3	1	Behind under-hood fuse/relay box		
Under-hood fuse/relay box connector C (see page 22-73)	4	2	Behind under-hood fuse/relay box		
Under-hood fuse/relay box connector D (see page 22-73)	7	9	Behind under-hood fuse/relay box		
Under-hood fuse/relay box connector E (see page 22-73)	5	16	Behind under-hood fuse/relay box		
Under-hood fuse/relay box connector F (see page 22-73)	6	20	Behind under-hood fuse/relay box		
Under-hood fuse/relay box connector G (see page 22-73)	1	2	Behind under-hood fuse/relay box		
Under-hood fuse/relay box connector H (see page 22-73)	8	14	Behind under-hood fuse/relay box		
Under-hood fuse/relay box connector J (see page 22-73)	10	10	Behind under-hood fuse/relay box		
Under-hood fuse/relay box connector K (see page 22-73)	9	5	Behind under-hood fuse/relay box		
Windshield wiper motor	15	5	Left side of engine compartment		
C104	18	1	Left side of engine compartment	Engine wire harness (see page 22-20)	
C309	31	6	Behind left side of front bumper	A/C compressor clutch subharness (see page 22-71)	
G301	16		Behind left side of front bumper	Body ground, via engine compartment wire harness	

* 1: With ACC

* 2: With AFS

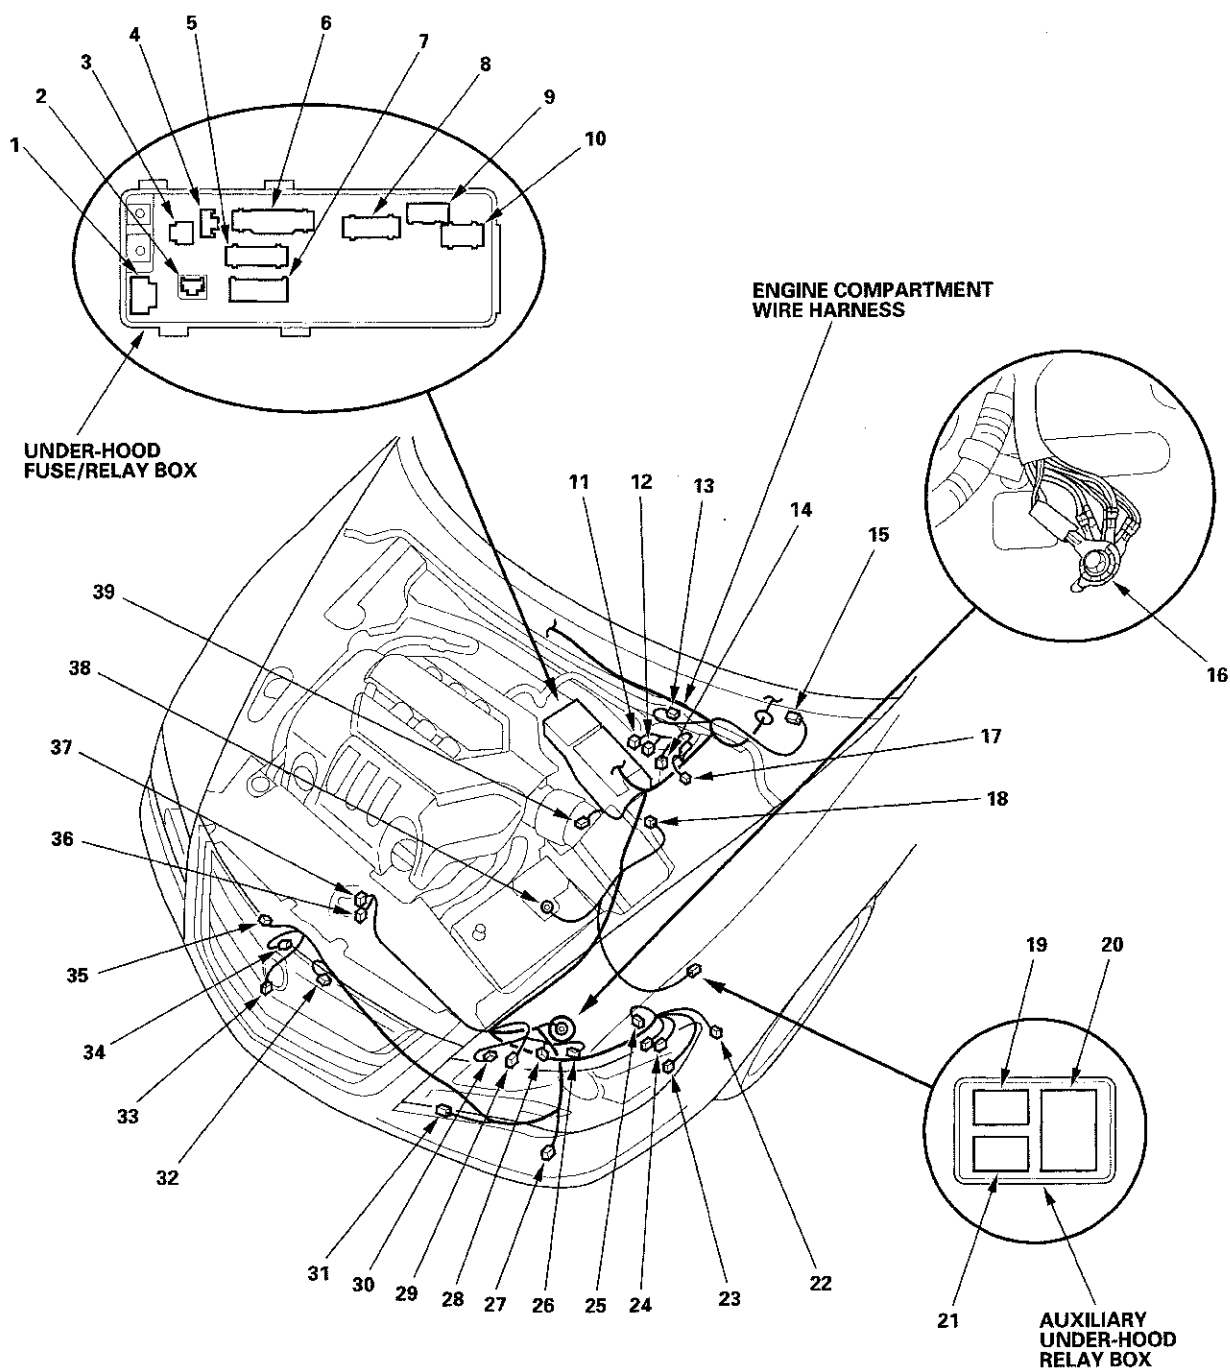

cardiagn.com

Connectors and Harnesses

Connector to Harness Index (cont'd)


Engine Compartment Wire Harness (Dash branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Accelerator pedal position (APP) sensor	7	6	Under left side of dash		
Adaptive front lighting control unit	9	40	Under left side of dash		* 2
Daytime running lights control unit	11	14	Under left side of dash		USA models
Driver's under-dash fuse/relay box connector B (see page 22-75)	2	6	Left kick panel		
Driver's under-dash fuse/relay box connector C (see page 22-75)	1	12	Left kick panel		
Driver's under-dash fuse/relay box connector D (see page 22-75)	3	17	Left kick panel		
ECPS unit	10	12	Under middle of dash		
Headlight leveling control unit	9	16	Under left side of dash		* 3
Starter cut relay 1	12	4	Auxiliary under-dash fuse/relay box		
C301	14	34	Under left side of dash	Dashboard wire harness (see page 22-32)	
C302	13	3	Under left side of dash	Dashboard wire harness (see page 22-32)	
C303	15	4	Under left side of dash	Dashboard wire harness (see page 22-32)	
C304	4	5	Under left side of dash	Left side wire harness (see page 22-40)	
C305 (Junction connector)	5	12	Under left side of dash		
C306 (Junction connector)	6	12	Under left side of dash		
C307 (Junction connector)	8	12	Under left side of dash		* 1

* 1: With ACC

* 2: With AFS

* 3: Without AFS

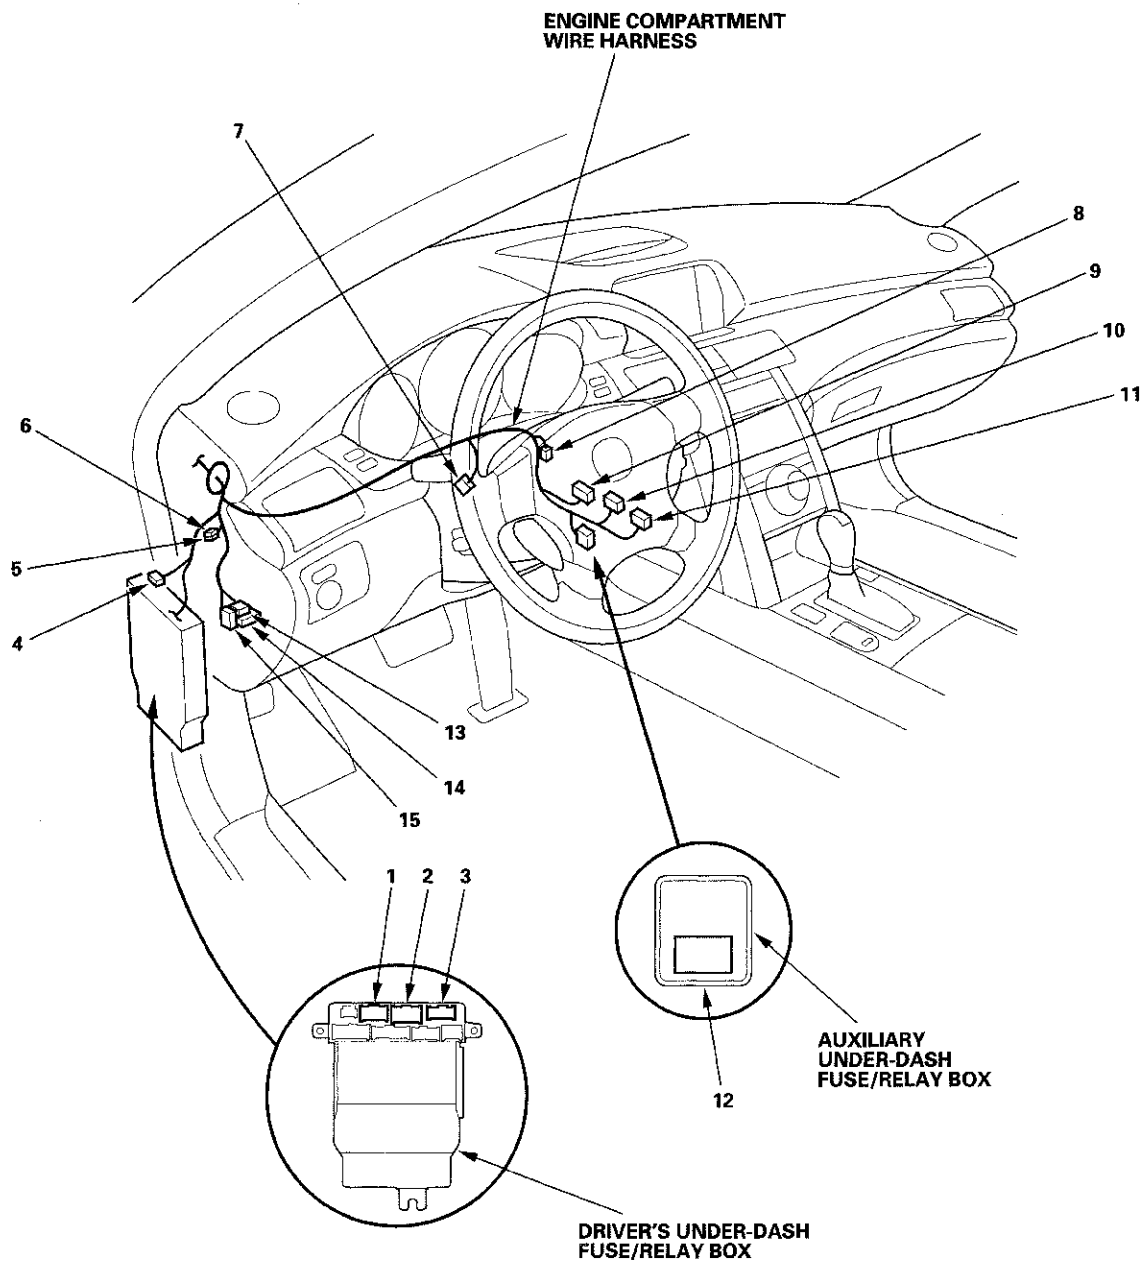

Connectors and Harnesses


Connector to Harness Index (cont'd)

Engine Compartment Wire Harness (Right branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
A/C pressure sensor	9	3	Behind right headlight		* 1 Canada models
Adaptive cruise control (ACC) unit	6	20	Under right side of dash		
Headlight washer motor	17	2	Behind right side of front bumper		
Outside air temperature sensor	13	2	Behind right side of front bumper		* 2
Passenger's under-dash fuse/relay box connector A (see page 22-76)	1	1	Right kick panel		
Passenger's under-dash fuse/relay box connector B (see page 22-76)	2	10	Right kick panel		
Passenger's under-dash fuse/relay box connector J (see page 22-76)	3	13	Right kick panel		
Power steering pressure (PSP) switch	24	2	Right side of engine compartment		
Right adaptive front lighting gearbox	18	8	Behind right headlight		
Right fog light	15	2	Behind right side of front bumper		
Right front impact sensor	20	2	Behind right side of front bumper		
Right front parking light	21	2	Behind right headlight		
Right front TPMS initiator	19	3	Right side of engine compartment		
Right front turn signal light	10	3	Behind right headlight		
Right front wheel speed sensor	25	2	Right side of engine compartment		
Right headlight (high)	11	2	Behind right headlight		
Right headlight (low)	16	2	Behind right headlight		
Right headlight leveling motor	12	3	Behind right headlight		
VSA modulator-control unit	8	47	Right side of engine compartment		
Washer fluid level switch	23	2	Behind right side of front bumper		
Windshield washer motor	22	2	Behind right side of front bumper		
C201	4	13	Right side of dash	Dashboard wire harness (see page 22-38)	
C202 (Junction connector)	26	12	Under right side of dash		
G201	14		Behind right headlight	Body ground, via engine compartment wire harness	
G202	7		Right side of engine compartment	Body ground, via engine compartment wire harness	
G401	5		Under right side of dash	Body ground, via engine compartment wire harness	

* 1: With ACC

* 2: With AFS

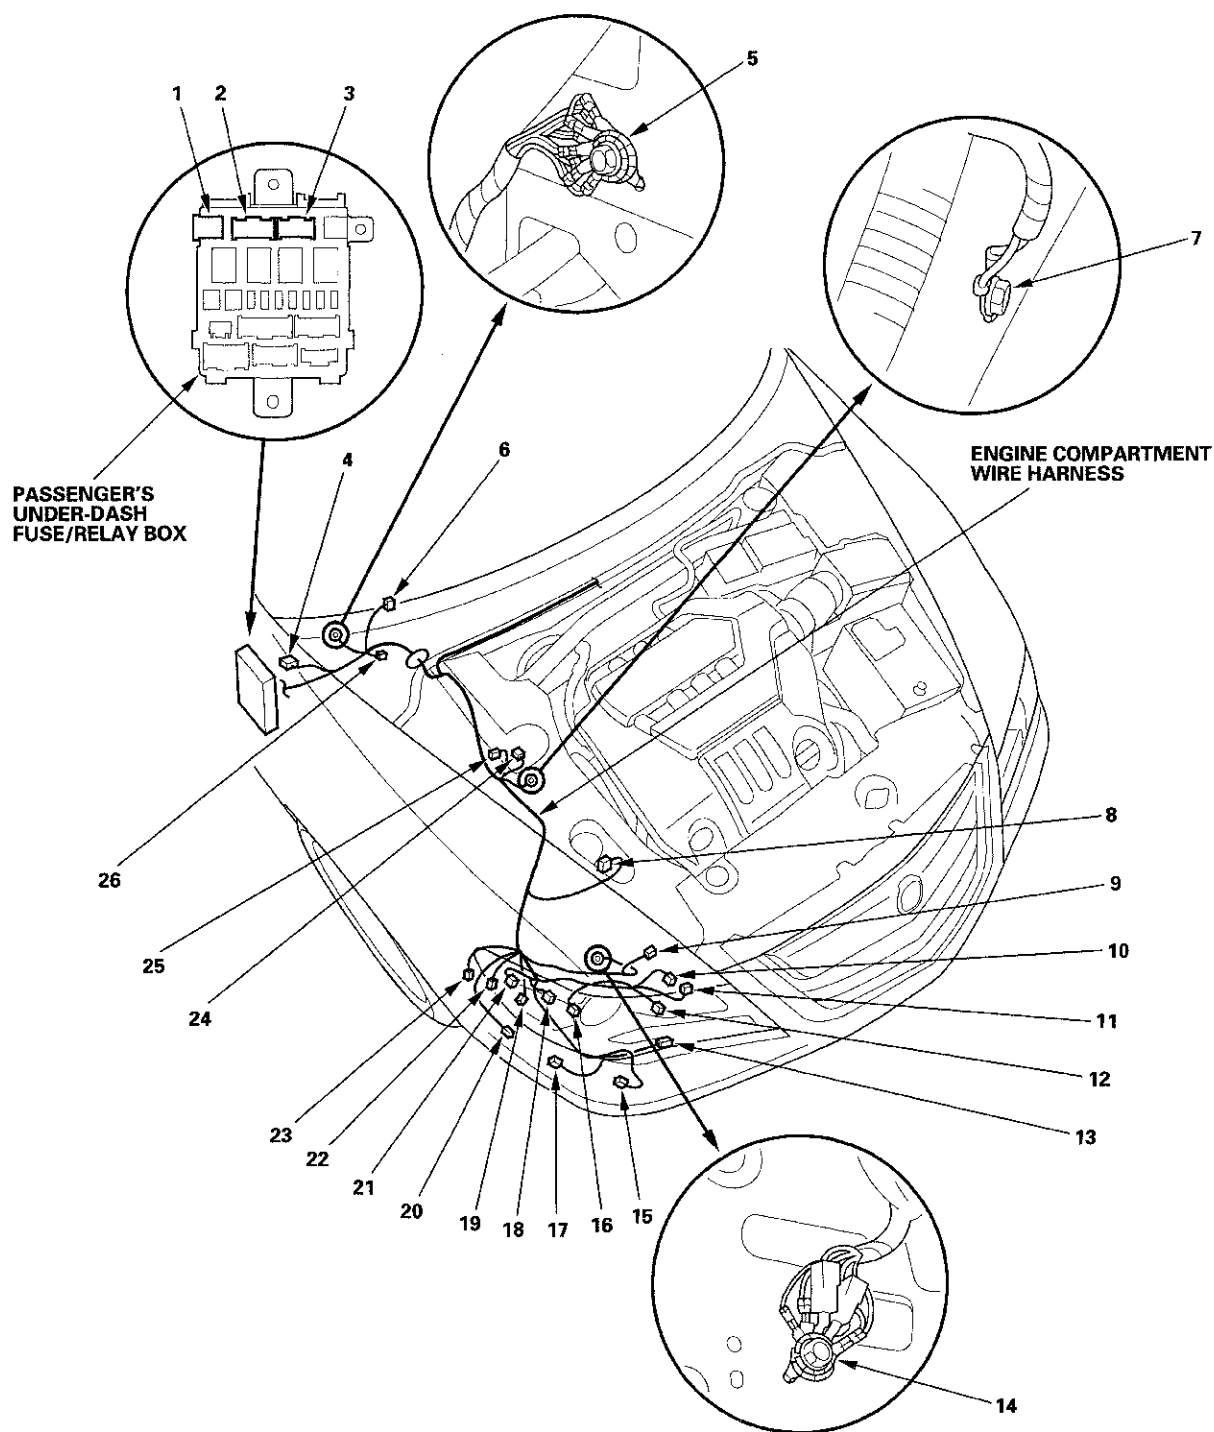

Connectors and Harnesses

Connector to Harness Index (cont'd)


Dashboard Wire Harness (Left branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
VSA OFF switch	13	6	Left side of dash		* 1
AFS OFF/VSA OFF switch	13	6	Left side of dash		* 2
AFS OFF/VSA OFF/CMBS switch	13	6	Left side of dash		* 3
Brake pedal position switch	18	4	Under left side of dash		
Dash lights brightness controller	24	6	Middle of dash		
Data link connector	31	16	Under left side of dash		
Driver's footwell light	27	2	Under left side of dash		
Driver's under-dash fuse/relay box connector A (see page 22-75)	3	6	Left kick panel		
Driver's under-dash fuse/relay box connector N (see page 22-75)	2	45	Left kick panel		
Driver's under-dash fuse/relay box connector P (MICU) (see page 22-75)	7	30	Left kick panel		
Driver's under-dash fuse/relay box connector R (see page 22-75)	4	2	Left kick panel		
Driver's under-dash fuse/relay box connector S (see page 22-75)	5	2	Left kick panel		
Driver's under-dash fuse/relay box connector T (see page 22-75)	6	6	Left kick panel		
Driver's under-dash fuse/relay box connector X (see page 22-75)	1	39	Left kick panel		
Driver's vent air temperature sensor	12	2	Behind gauge		
Gauge control module connector A	19	20	Behind gauge		
Gauge control module connector B	14	28	Behind gauge		
Hazard warning switch/passenger's airbag cutoff indicator	23	6	Middle of dash		
Headlight washer switch	11	5	Left side of dash		Canada models
In-car temperature sensor	25	4	In the steering column		
Keyless access control unit connector A	16	31	Under left side of dash		
Keyless access control unit connector C	15	17	Under left side of dash		
Power mirror switch	10	10	Left side of dash		
Turn signal/hazard relay 2 (sounder)	26	3	Middle of dash		
C301	28	34	Under left side of dash	Engine compartment wire harness (see page 22-28)	
C302	9	3	Under left side of dash	Engine compartment wire harness (see page 22-28)	
C303	8	4	Under left side of dash	Engine compartment wire harness (see page 22-28)	
C507 (Junction connector)	39	12	Under left side of dash		
C508 (Junction connector)	40	12	Under left side of dash		
C509 (Junction connector)	41	12	Under left side of dash		
C510 (Junction connector)	36	12	Under left side of dash		
C511 (Junction connector)	33	12	Under left side of dash		
C512 (Junction connector)	37	12	Under left side of dash		
C513 (Junction connector)	32	12	Under left side of dash		
C514 (Junction connector)	17	12	Under left side of dash		
C515 (Junction connector)	22	12	Under middle of dash		
C516 (Junction connector)	20	12	Under middle of dash		
C517 (Junction connector)	21	12	Under middle of dash		
C518 (Junction connector)	38	12	Under left side of dash		
C601	35	23	Under left side of dash	Left side wire harness (see page 22-40)	
C602	34	34	Under left side of dash	Left side wire harness (see page 22-40)	
G501	30		Left kick panel	Body ground, via dashboard wire harness	
G502	29		Left kick panel	Body ground, via dashboard wire harness	

* 1: USA and Canada RL models

* 2: Hawaii and USA TECH model

* 3: USA TECH with ACC and CMBS model and Canada Premium model

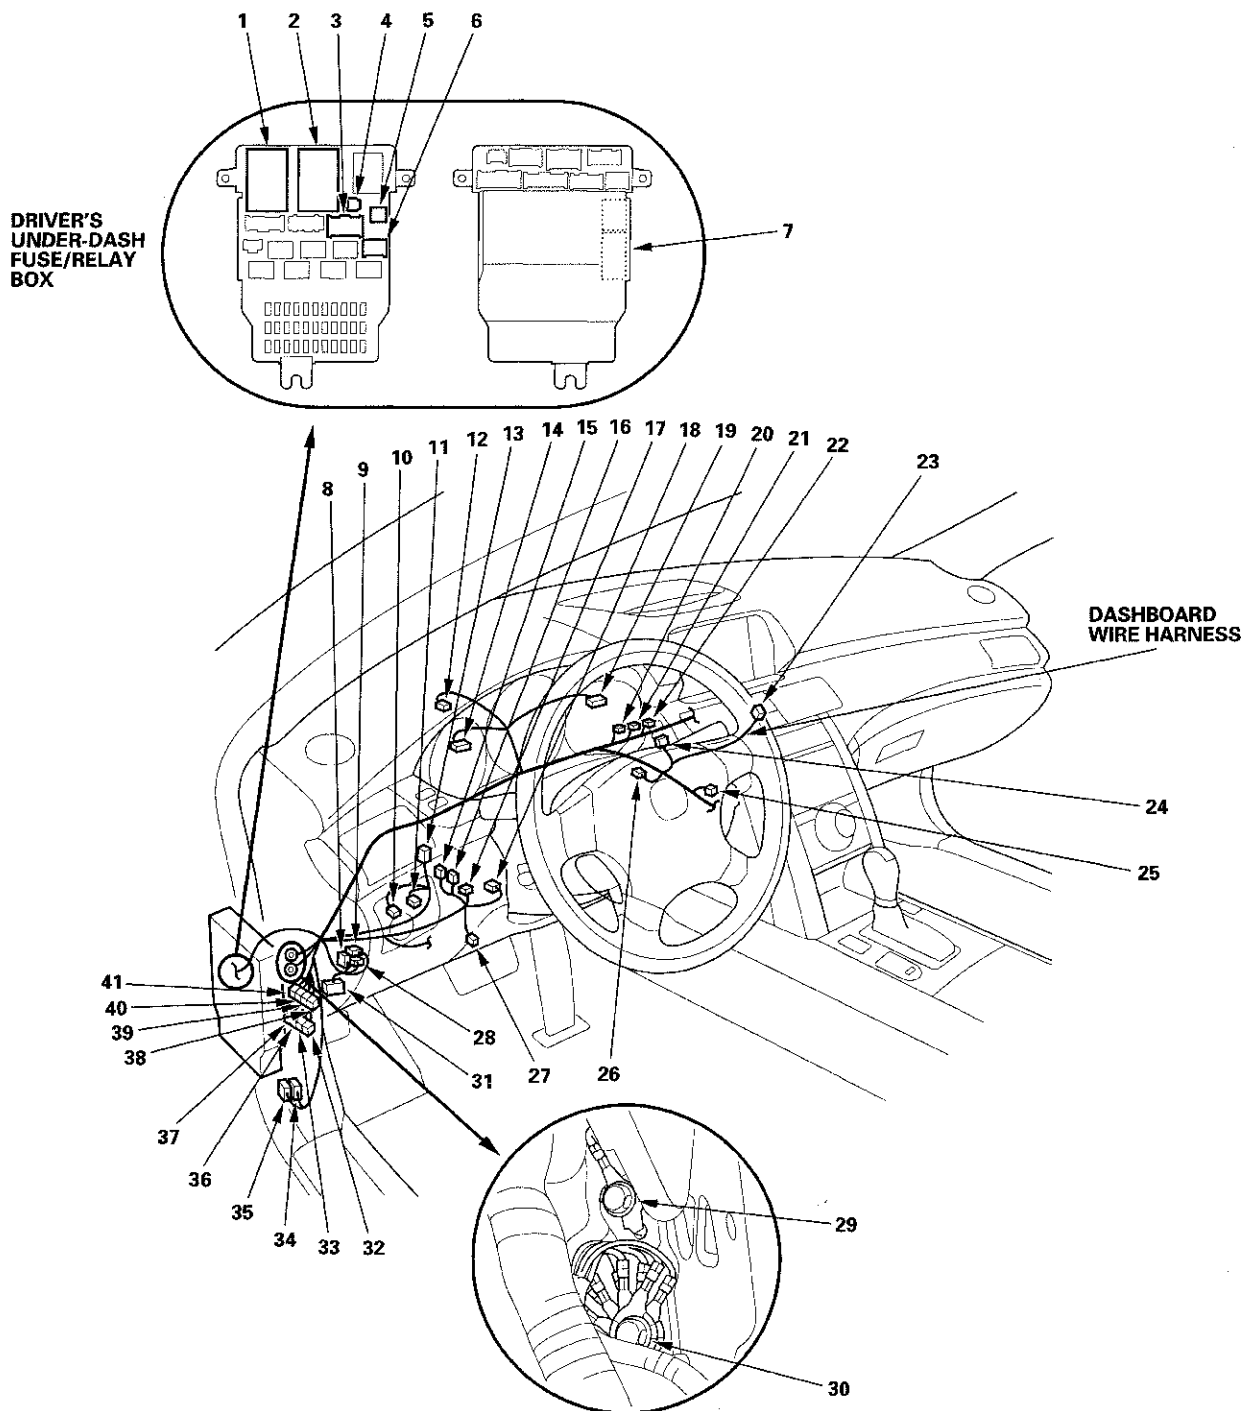


Connectors and Harnesses

Connector to Harness Index (cont'd)

Dashboard Wire Harness (Around the steering column)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
ACC cut relay	15	5	Driver's auxiliary under-dash relay box		
Cable reel connector B	5	20	In steering column cover		
Cable reel connector A	10	4	In steering column cover		
Ignition switch	11	6	In steering column cover		
Ignition switch control unit	9	10	In steering column cover		
IG2 cut relay	16	5	Driver's auxiliary under-dash relay box		
Immobilizer control unit-receiver	8	7	In steering column cover		
Power telescopic motor/position sensor	13	8	In steering column cover		
Power tilt/telescopic steering control unit connector A	4	16	In steering column cover		
Power tilt/telescopic steering control unit connector B	3	8	In steering column cover		
Power tilt/telescopic steering switch	1	13	In steering column cover		
Power tilt motor/position sensor	12	6	In steering column cover		
Steering angle sensor	2	5	In steering column cover		
Wiper/washer switch connector A	6	8	In steering column cover		
C519 (Junction connector)	14	12	In steering column cover		
C520 (Junction connector)	7	12	In steering column cover		

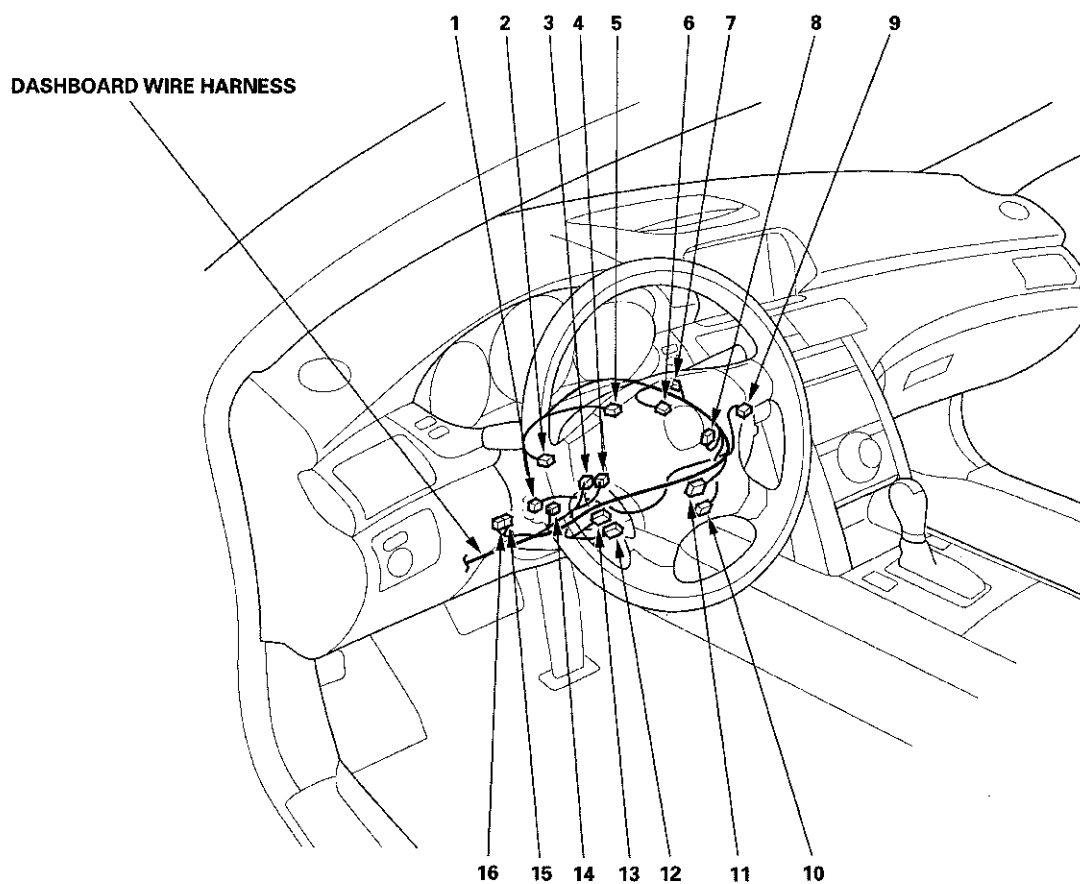


Connectors and Harnesses

Connector to Harness Index (cont'd)

Dashboard Wire Harness (Center branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
A/T shift lock solenoid	21	2	Under console panel		
Audio-HVAC subdisplay unit	3	10	Middle of dash		
Audio unit connector A	32	20	Middle of dash		
Audio unit connector B	30	32	Middle of dash		
Audio unit connector C	31	14	Middle of dash		
Audio unit connector (for auxiliary jack)	13	6	Middle of dash		
Automatic lighting/sunlight sensor	5	5	Middle of dash		
Auxiliary jack	23	5	Console panel		
Climate control unit	11	40	Middle of dash		
Coin pocket light	27	2	Under middle of dash		
Front center speaker	6	2	Middle of dash		
Front interior LF antenna	17	2	Under middle of dash		
Imoes unit	16	5	Under middle of dash		
Interface dial	15	5	Under middle of dash		
Navigation display unit	2	20	Middle of dash		
Park pin switch/A/T gear position indicator panel light	20	8	Under console panel		
RF unit 1	4	6	Middle of dash		
SRS unit connector A	18	28	Under middle of dash		
USB adapter unit connector A	10	14	Middle of dash		
Yaw rate-lateral/Longitudinal acceleration sensor	19	5	Under console panel		
C521 (Junction connector)	29	12	Under middle of dash		
C522 (Junction connector)	28	12	Under middle of dash		
C523 (Junction connector)	26	12	Under console panel		
C524 (Junction connector)	7	12	Middle of dash		
C525 (Junction connector)	8	12	Middle of dash		
C526 (Junction connector)	9	12	Middle of dash		
C527 (Junction connector)	14	12	Under middle of dash		
C528	22	6	Under console panel	Front accessory power socket subharness (see page 22-62)	
C551	24	23	Under console panel	Console subharness (see page 22-62)	
G503	1		Middle of dash	Body ground, via dashboard wire harness	
G504	12		Middle of dash	Body ground, via dashboard wire harness	
G505	25		Under console panel	Body ground, via dashboard wire harness	

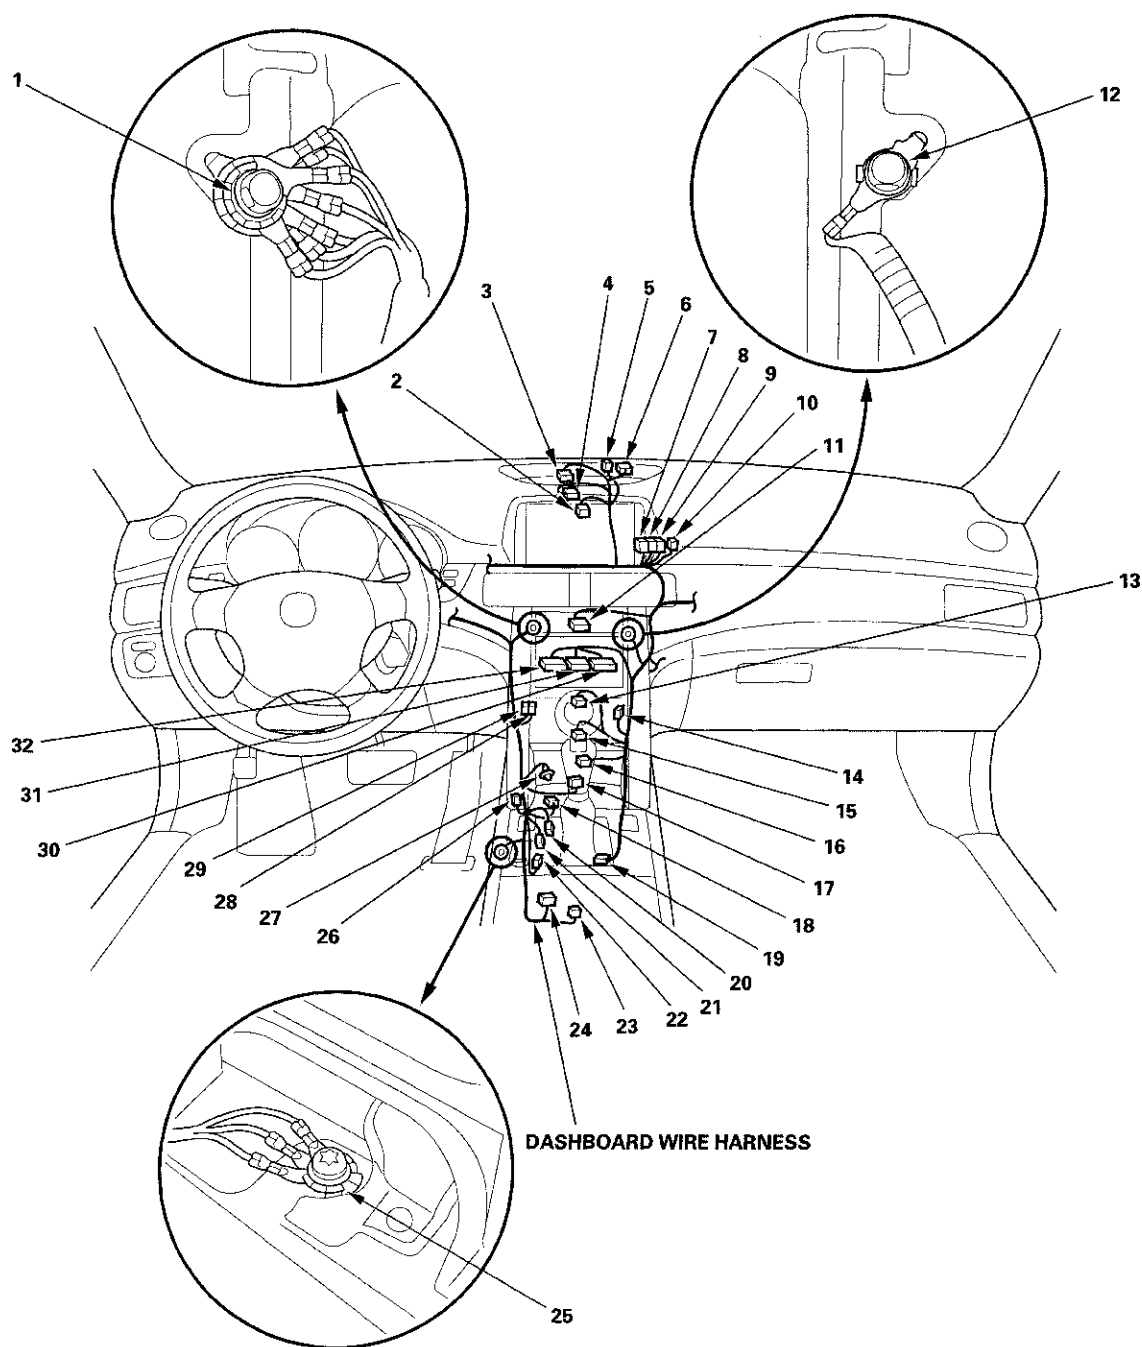


Connectors and Harnesses

Connector to Harness Index (cont'd)

Dashboard Wire Harness (Right branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Front passenger's airbag first and second inflator	3	4	Under right side of dash		
Front passenger's footwell light	16	2	Under right side of dash		
Front passenger's vent air temperature sensor	4	2	Under right side of dash		
Glove box light	17	2	Under right side of dash		
Passenger's under-dash fuse/relay box connector D (see page 22-76)	9	17	Right kick panel		
Passenger's under-dash fuse/relay box connector E (see page 22-76)	8	14	Right kick panel		
Passenger's under-dash fuse/relay box connector H (see page 22-76)	7	3	Right kick panel		
PCM connector D	20	17	Under middle of dash		
PCM connector E	19	31	Under middle of dash		
Rear seat heater relay	5	4	Under right side of dash	Passenger's auxiliary under-dash relay box (see page 22-77)	Canada models
Trunk lid opener main switch	2	2	Under right side of dash		
C201	6	13	Right side of dash	Engine compartment wire harness (see page 22-30)	
C501	18	17	Under middle of dash	PCM wire harness (see page 22-24)	
C502	15	12	Under right side of dash	A/C wire harness (see page 22-70)	
C503	14	2	Under right side of dash	A/C wire harness (see page 22-70)	
C529 (Junction connector)	12	12	Under right side of dash		
C651	10	34	Under right side of dash	Right side wire harness (see page 22-44)	
C652	11	8	Under right side of dash	Right side wire harness (see page 22-44)	
C771	13	20	Under right side of dash	Front passenger's door subharness (see page 22-58)	
G506	1		Right side of dash	Body ground, via dashboard wire harness	

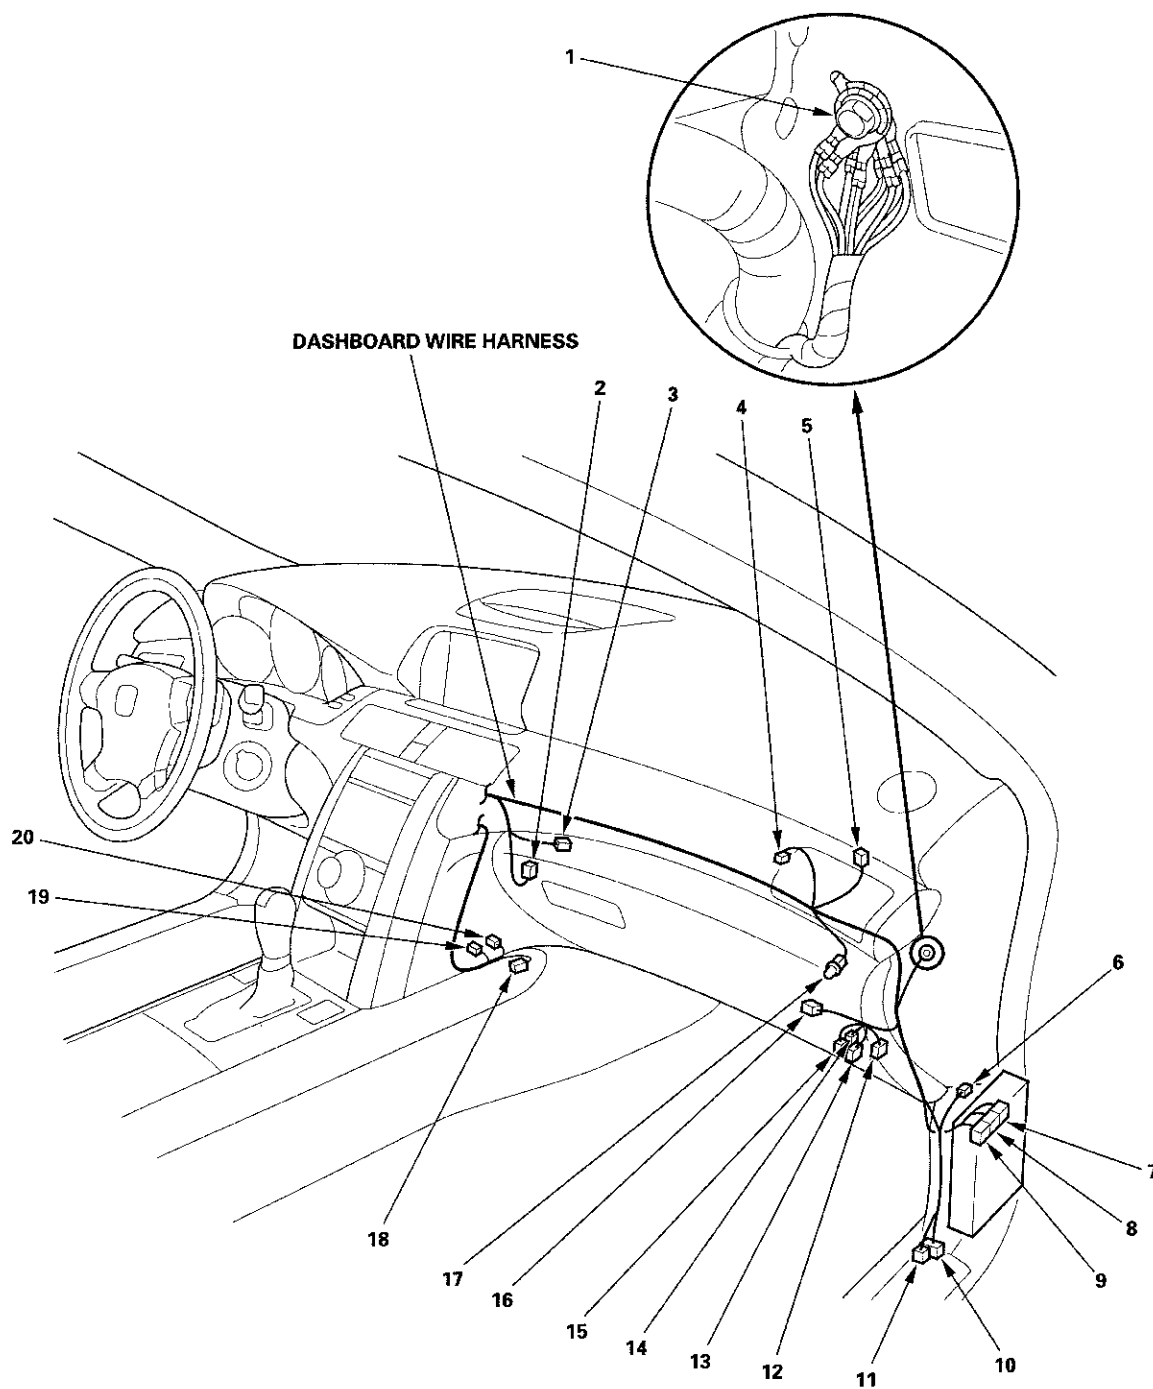

Connectors and Harnesses

Connector to Harness Index (cont'd)


Left Side Wire Harness (Front branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Driver's e-pretensioner	22	2	Left B-pillar		* 1
Driver's seat belt tensioner	23	4	Left B-pillar		
Driver's seat belt tension reducer solenoid	24	2	Left B-pillar		
Driver's seat ventilation switch	15	14	Under console panel		* 2
Driver's seat heater switch	15	6	Under console panel		* 3
Driver's side airbag inflator	20	2	Under driver's seat		
Driver's under-dash fuse/relay box connector E (see page 22-75)	4	16	Left kick panel		
Driver's under-dash fuse/relay box connector F (see page 22-75)	2	14	Left kick panel		
Driver's under-dash fuse/relay box connector G (see page 22-75)	6	6	Left kick panel		
Driver's under-dash fuse/relay box connector H (see page 22-75)	5	14	Left kick panel		
Driver's under-dash fuse/relay box connector J (see page 22-75)	1	21	Left kick panel		
Driver's under-dash fuse/relay box connector Q (see page 22-75)	33	14	Left kick panel		
Driver's under-dash fuse/relay box connector W (see page 22-75)	3	5	Left kick panel		
Keyless access control unit connector B	11	24	Under left side of dash		
Left side impact sensor (1st)	26	2	Left B-pillar		
Parking brake switch	16	1	Under left side of dash		
C304	7	5	Under left side of dash	Engine compartment wire harness (see page 22-28)	
C601	31	23	Under left side of dash	Dashboard wire harness (see page 22-32)	
C602	32	34	Under left side of dash	Dashboard wire harness (see page 22-32)	
C603	13	6	Under middle of dash	Right side wire harness (see page 22-44)	* 1
C604	14	16	Under middle of dash	Right side wire harness (see page 22-44)	
C607 (Junction connector)	28	12	Under left side of dash		
C608 (Junction connector)	29	12	Under left side of dash		
C609 (Junction connector)	30	12	Under left side of dash		
C610 (Junction connector)	25	12	Under driver's seat		
C631	9	24	Under left side of dash	Roof wire harness (see page 22-48)	
C632	8	8	Under left side of dash	Roof wire harness (see page 22-48)	
C751	10	14	Under left side of dash	Driver's door subharness (see page 22-56)	
C781	21	17	Left B-pillar	Left rear door wire harness (see page 22-60)	
C901	18	23	Under driver's seat	Driver's seat wire harness (see page 22-64)	* 2
C902	19	6	Under driver's seat	Driver's seat wire harness (see page 22-64)	
C903	17	2	Under driver's seat	Driver's seat wire harness (see page 22-64)	
C991	12	12	Under middle of dash	E-pretensioner subharness (see page 22-72)	* 1
G601	27		Under driver's seat	Body ground, via left side wire harness	

* 1: With e-pretensioner

* 2: With seat ventilation

* 3: Without seat ventilation

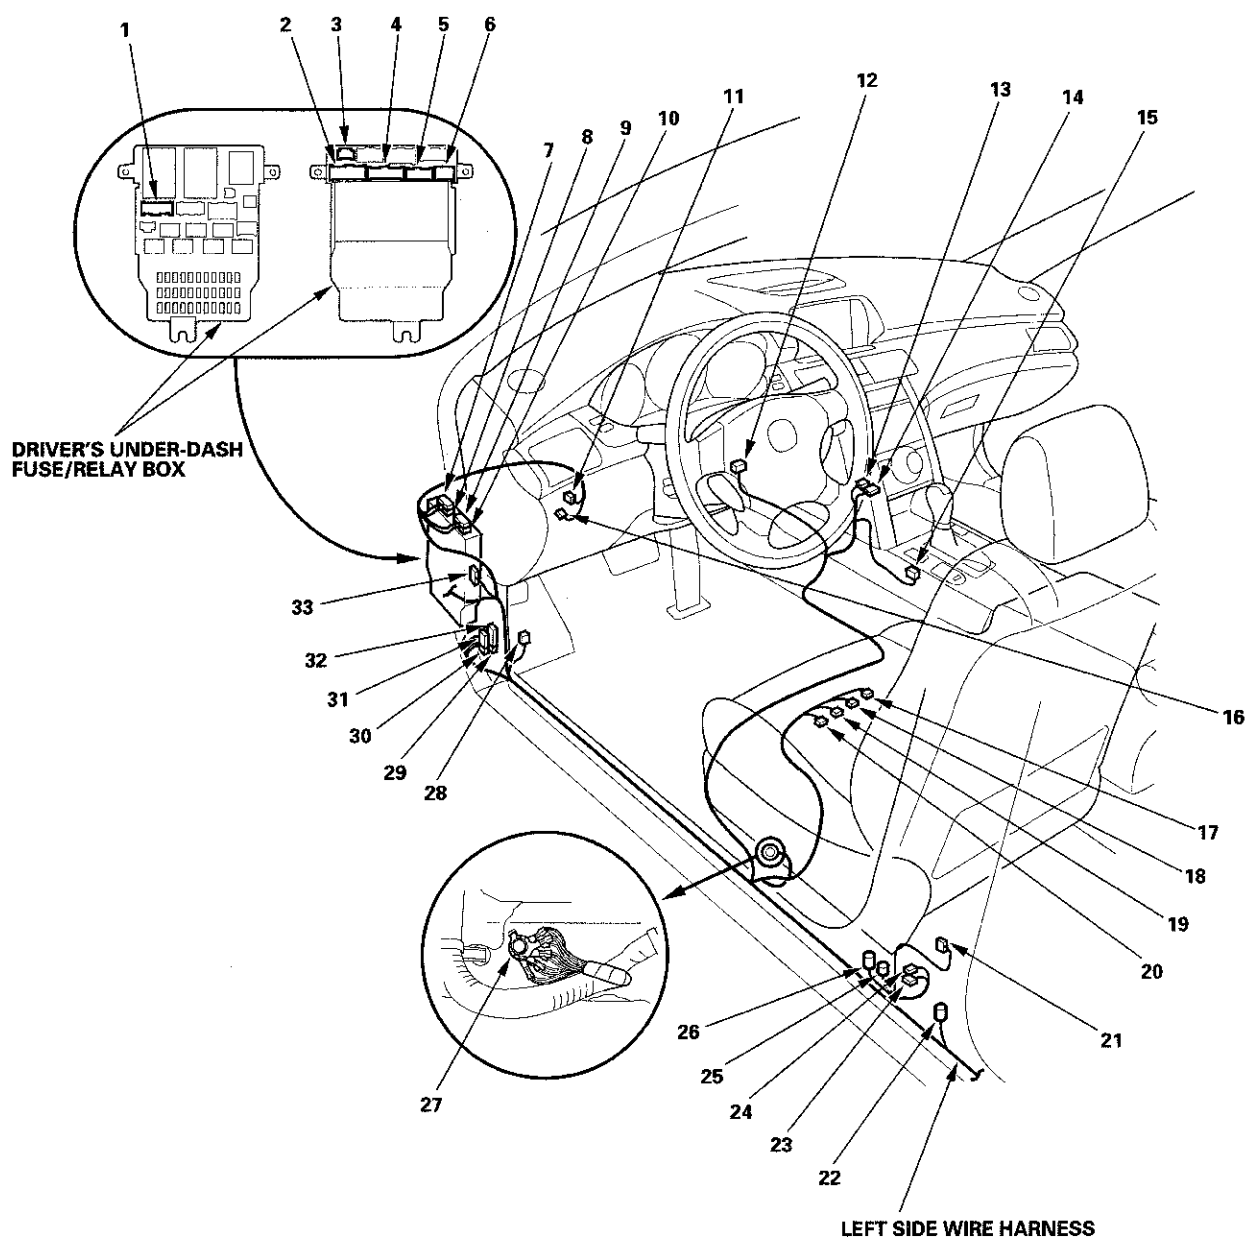

Connectors and Harnesses

Connector to Harness Index (cont'd)

Left Side Wire Harness (Rear branch)


Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
AcuraLink control unit (XM receiver) connector	8	32	Left side of trunk		* 1
AcuraLink connector (Male connector)	10	5	Left side of trunk		* 1
AcuraLink connector (Female connector)	9	5	Left side of trunk		* 1
Fuel fill door opener solenoid	7	2	Left side of trunk		
Fuel pump control module	17	10	Under left side of floor		
Fuel pump/fuel gauge sending unit	23	5	Under left side of floor		
Left rear TPMS initiator	20	3	Left side of floor		
Left rear wheel speed sensor	18	2	Under left side of floor		
Left side curtain airbag inflator	27	2	Left C-pillar		
Left side impact sensor (2nd)	21	2	Left C-pillar		
Navigation service check connector	1	2	Left side of rear shelf		
Navigation unit connector A	2	8	Left side of rear shelf		
Navigation unit connector B	3	32	Left side of rear shelf		
Navigation unit connector C	6	16	Left side of rear shelf		
Navigation unit connector D	5	5	Left side of rear shelf		
Navigation unit connector E (for rearview camera)	4	7	Left side of rear shelf		
Noise reduction condenser	14	2	Left side of rear shelf		
Rear window defogger connector A (+)	31	1	Left C-pillar		
Rear safing sensor	28	2	Under rear seat		
Secondary fuel gauge sending unit	32	5	Under rear seat		
Suspension stroke sensor	16	3	Under left side of floor		
XM receiver	8	14	Left side of trunk		* 2
C606	15	24	Left C-pillar	Rear shelf wire harness (see page 22-50)	
C612 (Junction connector)	25	12	Left C-pillar		
C613 (Junction connector)	26	12	Left C-pillar		
C614 (Junction connector)	13	12	Left side of rear shelf		
C615 (Junction connector)	12	12	Left side of rear shelf		
C616 (Junction connector)	34	12	Left side of rear shelf		
C653	33	23	Under rear floor	Right side wire harness (see page 22-46)	
C654	29	24	Under rear floor	Right side wire harness (see page 22-46)	
C655	30	16	Under rear floor	Right side wire harness (see page 22-46)	
C701	11	20	Left side of trunk	Rear wire harness (see page 22-50)	
C951	24	8	Under rear seat	Rear headrest subharness (see page 22-68)	* 3
C951	24	3	Under rear seat	Rear headrest subharness (see page 22-68)	* 4
G602	22		Left C-pillar	Body ground, via left side wire harness	
G603	19		Left C-pillar	Body ground, via left side wire harness	
G604	35		Left side of trunk	Body ground, via left side wire harness	

* 1: With AcuraLink

* 2: With XM radio without AcuraLink

* 3: With rear seat heater

* 4: Without rear seat heater

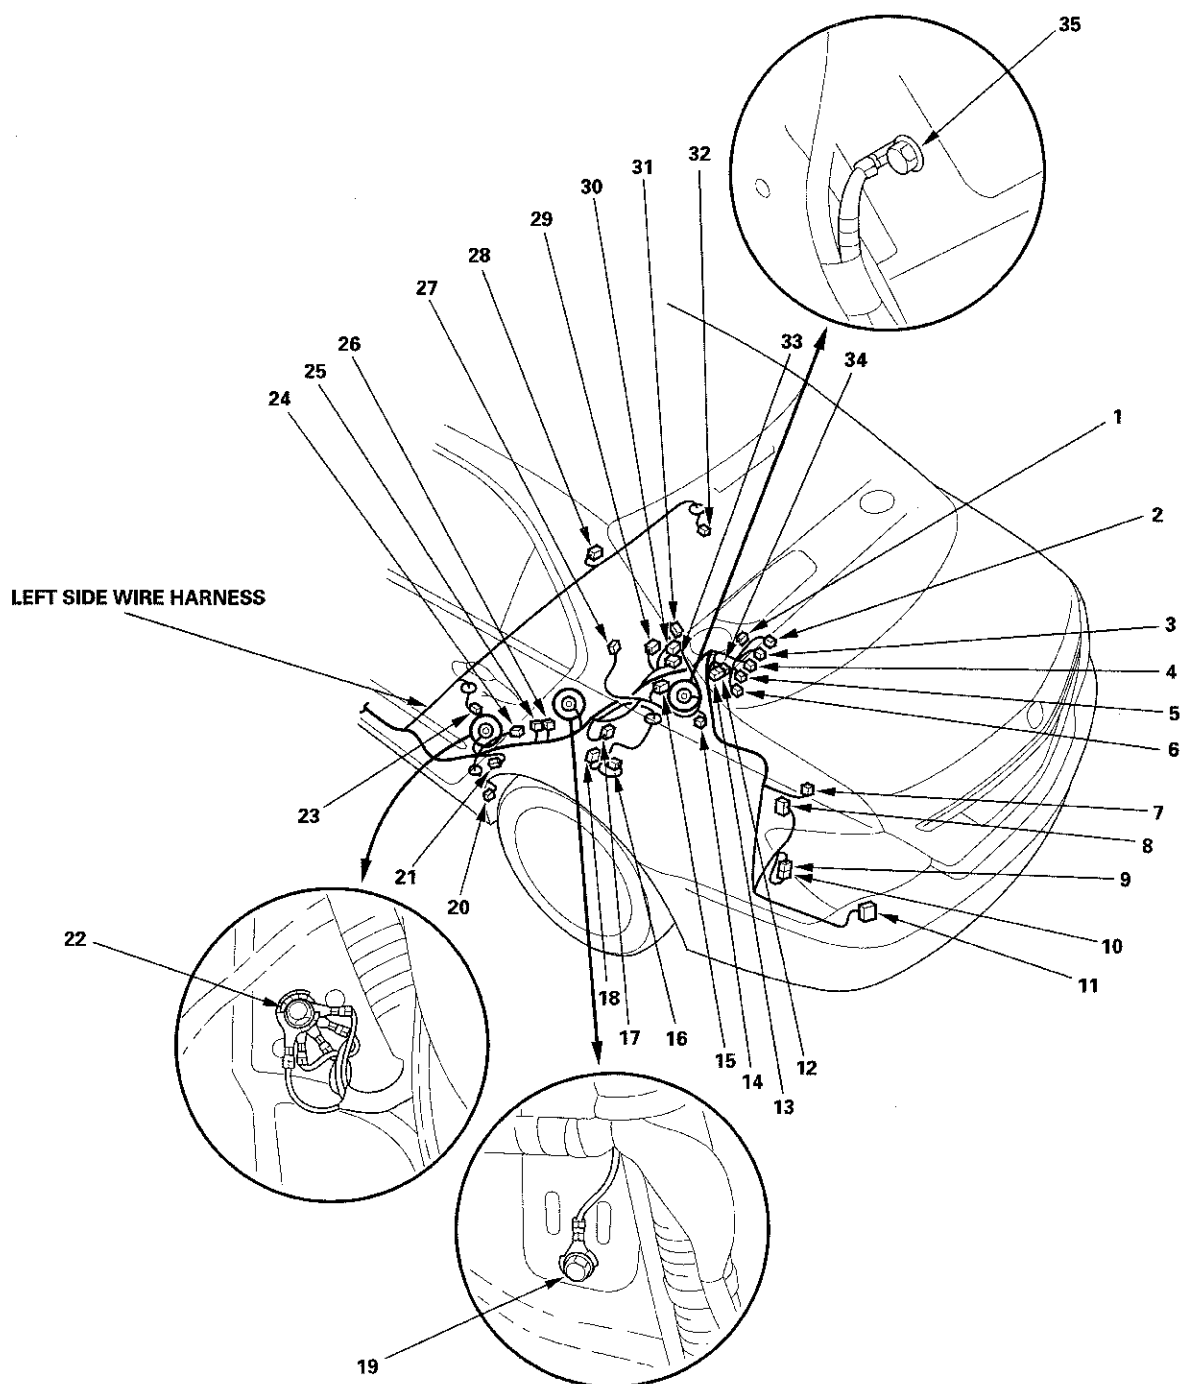


Connectors and Harnesses

Connector to Harness Index (cont'd)

Right Side Wire Harness (Front branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Front passenger's e-pretensioner	15	2	Right B-pillar		* 1
Front passenger's seat belt tensioner	16	4	Right B-pillar		
Front passenger's seat belt tension reducer solenoid	17	2	Right B-pillar		
Front passenger's seat ventilation switch	22	14	Under console panel		* 2
Front passenger's seat heater switch	22	6	Under console panel		* 3
Front passenger's side airbag inflator	19	2	Under front passenger's seat		
HandsFreeLink control unit	5	28	Under right side of dash		
Passenger's under-dash fuse/relay box connector C (see page 22-76)	1	5	Right kick panel		
Passenger's under-dash fuse/relay box connector F (see page 22-76)	3	8	Right kick panel		
Passenger's under-dash fuse/relay box connector G (see page 22-76)	2	14	Right kick panel		
Right side impact sensor (1st)	12	2	Right B-pillar		
SRS unit connector B	24	28	Under middle of dash		
SRS unit connector C	23	28	Under middle of dash		
C603	26	6	Under middle of dash	Left side wire harness (see page 22-40)	* 1
C604	25	16	Under middle of dash	Left side wire harness (see page 22-40)	
C651	8	34	Under right side of dash	Dashboard wire harness (see page 22-38)	
C652	9	8	Under right side of dash	Dashboard wire harness (see page 22-38)	
C660 (Junction connector)	13	12	Under right side of dash	Front passenger's door subharness (see page 22-58)	
C661 (Junction connector)	14	12	Under right side of dash	Right rear door wire harness (see page 22-61)	
C772	4	6	Under right side of dash	Front passenger's seat harness (see page 22-66)	
C791	18	17	Right B-pillar	Front passenger's seat wire harness (see page 22-66)	
C931	21	23	Under front passenger's seat	E-pretensioner subharness (see page 22-72)	* 1
C932	20	4	Under front passenger's seat	E-pretensioner subharness (see page 22-72)	* 1
C992	7	5	Behind right kick panel		
C993	6	2	Behind right kick panel		
G651	11		Under front passenger's seat	Body ground, via right side wire harness	
G653	10		Right kick panel	Body ground, via right side wire harness	* 1

- * 1: With e-pretensioner
- * 2: With seat ventilation
- * 3: Without seat ventilation

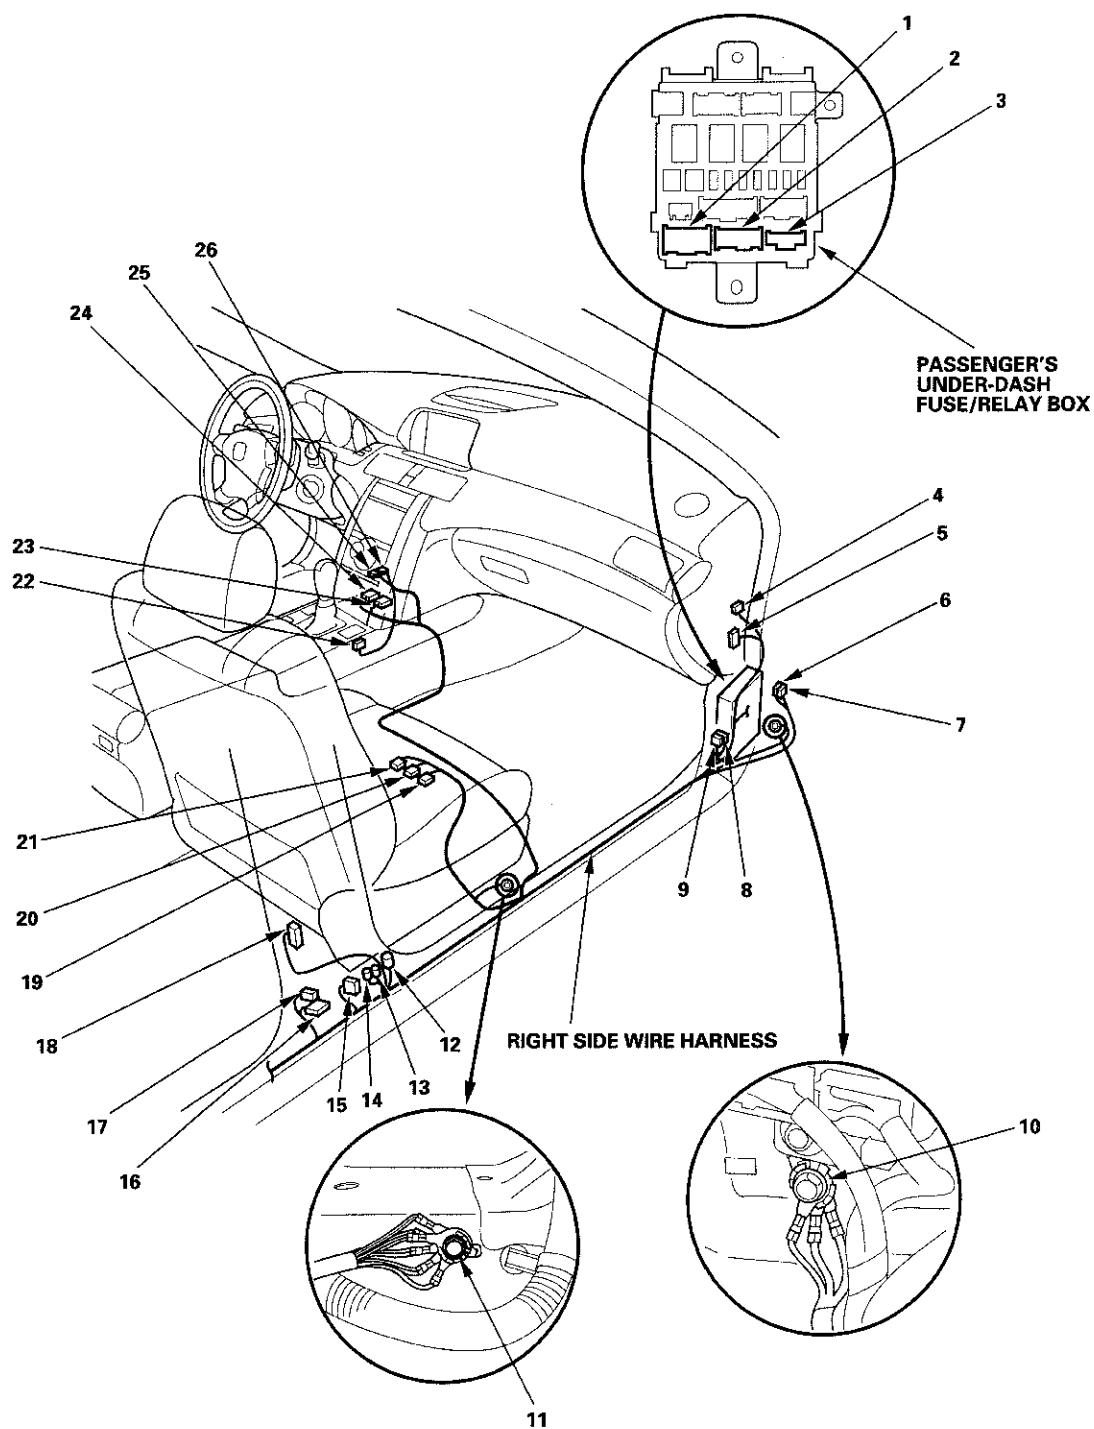

Connectors and Harnesses


Connector to Harness Index (cont'd)

Right Side Wire Harness (Rear branch)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Active noise cancellation unit	8	16	Right side of trunk		
Right rear TPMS initiator	3	3	Right side of floor		
Right side curtain airbag	15	2	Right C-pillar		
Right side impact sensor (2nd)	2	2	Right C-pillar		
Stereo amplifier connector A	9	26	Right side of trunk		
Stereo amplifier connector B	11	14	Right side of trunk		
Stereo amplifier connector C	10	23	Right side of trunk		
C633	13	6	Right C-pillar	Active noise cancellation subharness (see page 22-48)	
C653	17	23	Under rear floor	Left side wire harness (see page 22-42)	
C654	16	24	Under rear floor	Left side wire harness (see page 22-42)	
C655	18	16	Under rear floor	Left side wire harness (see page 22-42)	
C656	14	20	Right C-pillar	Rear shelf wire harness (see page 22-50)	
C657	12	20	Right side of trunk	Trunk subharness (see page 22-52)	* 1
C657	12	6	Right side of trunk	Trunk subharness (see page 22-52)	* 2
C658	6	14	Right C-pillar	Floor subharness (see page 22-52)	
C659	7	6	Right C-pillar	Floor subharness (see page 22-52)	
C662 (Junction connector)	4	12	Right C-pillar		
C663 (Junction connector)	5	12	Right C-pillar		
G652	1		Right C-pillar	Body ground, via right side wire harness	

* 1: With rearview camera

* 2: Without rearview camera

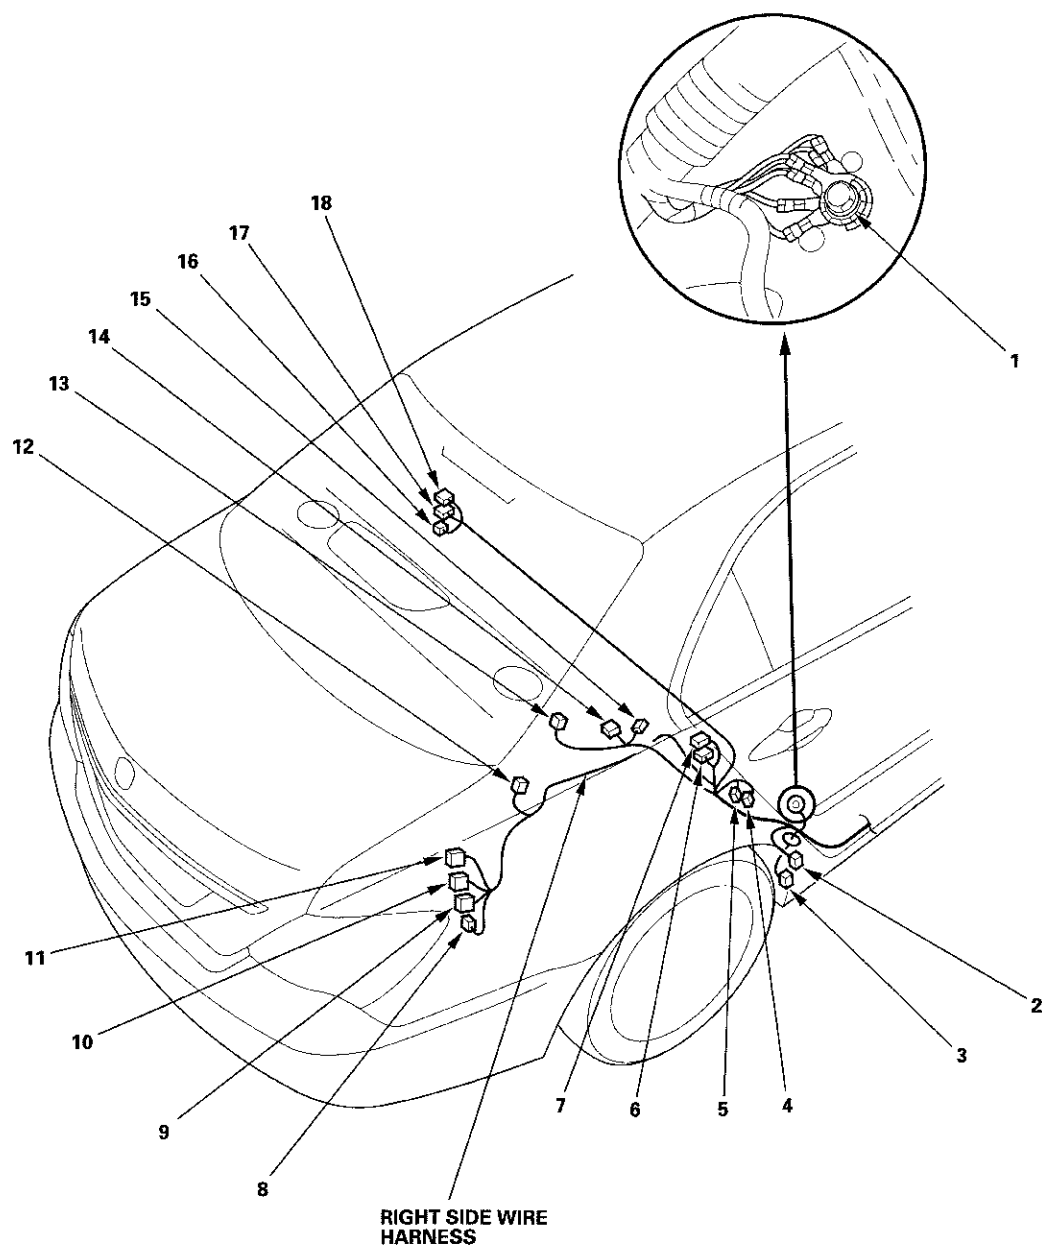

Connectors and Harnesses

Connector to Harness Index (cont'd)

Roof Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Automatic dimming inside mirror	3	6	Roof		
Driver's vanity mirror light	13	2	Driver's sunvisor		
High mount brake light	9	3	Roof		
Passenger's vanity mirror light	1	2	Front passenger's sunvisor		
Rear individual map light	10	10	Roof		
Roof console	2	28	Roof		
C631	15	24	Under left side of dash	Left side wire harness (see page 22-40)	
C632	16	8	Under left side of dash	Left side wire harness (see page 22-40)	
C851	11	8	Roof	Moonroof subharness	
C852 (Junction connector)	14	12	Roof		


Moonroof Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Moonroof motor/control unit	12	10	Roof		
C851	11	8	Roof	Roof wire harness	

Active Noise Cancellation Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Active noise cancellation front microphone connector A	4	2	Roof		
Active noise cancellation front microphone connector B	5	3	Roof		
Active noise cancellation rear microphone connector A	6	2	Roof		
Active noise cancellation rear microphone connector B	7	3	Roof		
C633	8	6	Right C-pillar	Right side wire harness (see page 22-46)	

cardiagn.com

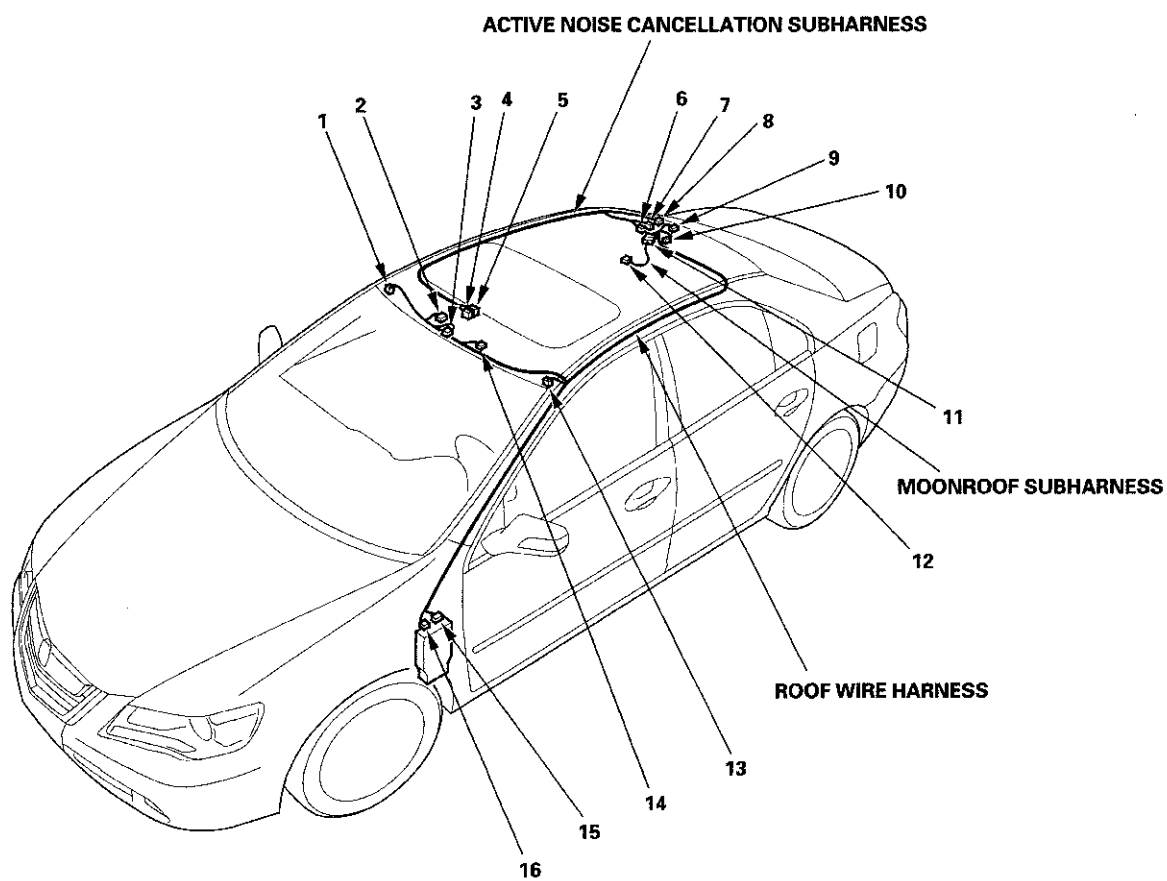

Connectors and Harnesses

Connector to Harness Index (cont'd)

Rear Shelf Wire Harness


Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Left rear Twiddler® speaker	2	2	Left side of rear shelf		
Power rear window sunshade control unit	11	5	Middle of rear shelf		
Rear shelf LF antenna	14	2	Middle of rear shelf		
RF unit 2	10	6	Middle of rear shelf		
Right rear Twiddler® speaker	7	2	Right side of rear shelf		
Subwoofer	3	2	Middle of rear shelf		
TPMS control unit connector A	9	20	Right side of rear shelf		
TPMS control unit connector B	8	14	Right side of rear shelf		
Trunk light B	13	2	Middle of rear shelf		
C606	1	24	Left C-pillar	Left side wire harness (see page 22-42)	
C656	4	20	Right C-pillar	Right side wire harness (see page 22-46)	

Rear Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Keyless buzzer	17	2	Middle of trunk		
Left taillight/brake light	18	5	Left side of trunk		
Rear bumper LF antenna	15	2	Middle of trunk		
Right taillight/brake light	12	5	Right side of trunk		
Trunk lid latch switch/opener solenoid	16	5	Middle of trunk		
C701	19	20	Left side of trunk	Left side wire harness (see page 22-42)	
G701	20		Left side of trunk	Body ground, via rear wire harness	

Rear Window Defogger Ground Wire

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Rear window defogger connector B	6	1	Right C-pillar		
G851	5		Right C-pillar	Body ground, via rear window defogger ground wire	

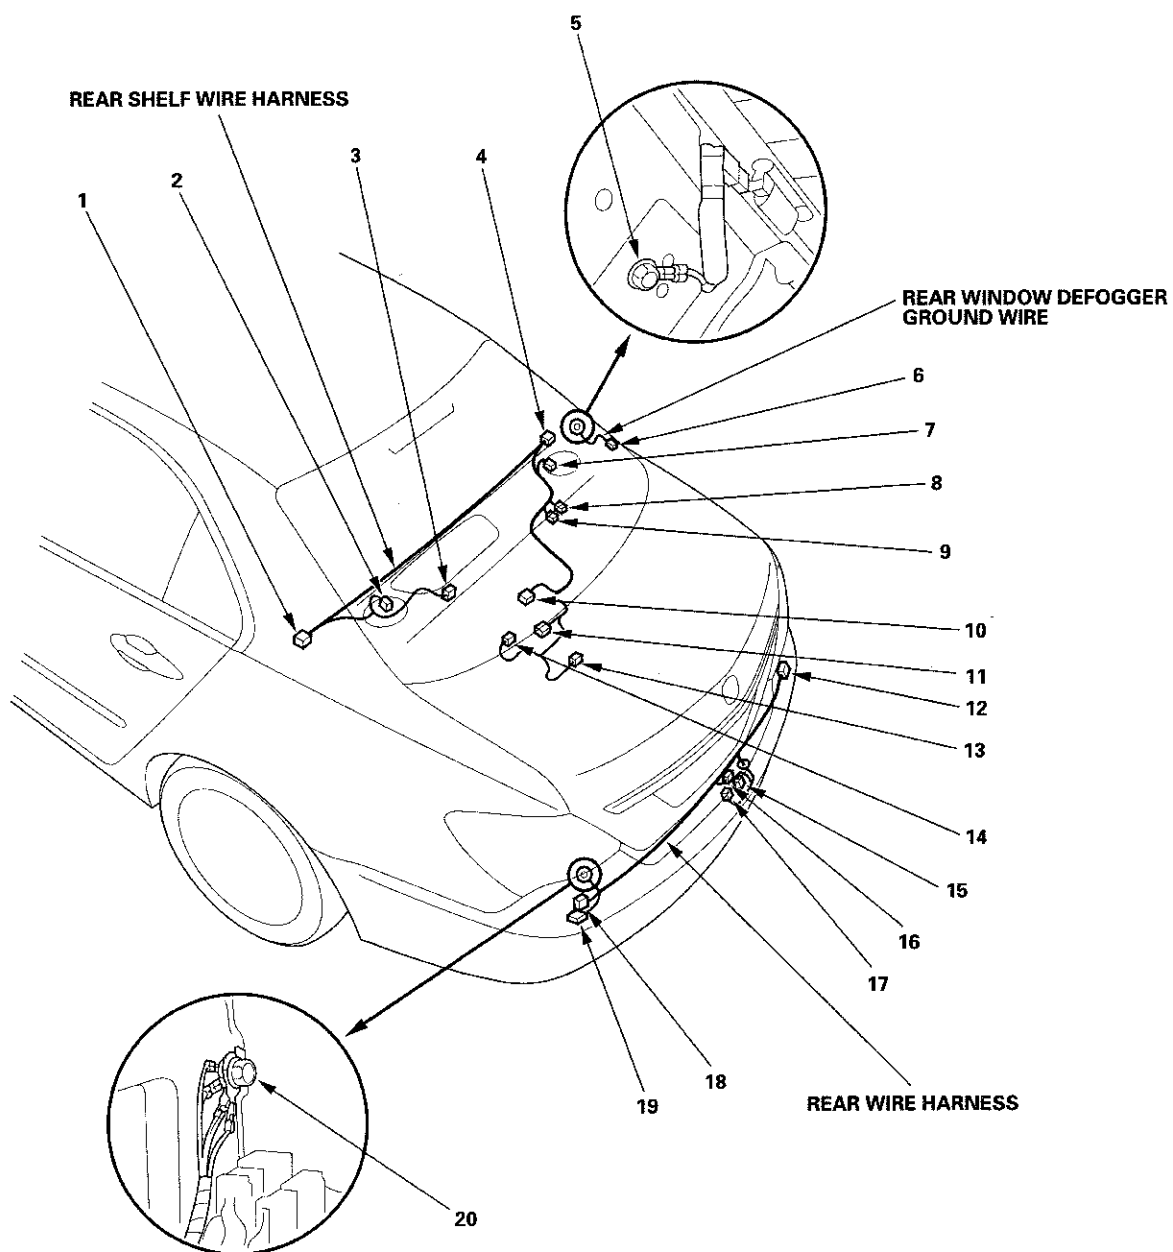

Connectors and Harnesses

Connector to Harness Index (cont'd)

Trunk Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Left back-up light	19	3	Left side of trunk		
Left license plate light	18	2	Left side of trunk		
Rearview camera	16	6	Middle of trunk		* 1
Right back-up light	13	3	Right side of trunk		
Right license plate light	15	2	Right side of trunk		
Trunk lid outer handle switch	17	3	Middle of trunk		
Trunk light A	20	2	Left side of trunk		
C831	14	12	Middle of trunk	Trunk subharness	* 2
C831	14	20	Middle of trunk	Trunk subharness	* 1
C833 (Junction connector)	12	12	Middle of trunk		

* 1: With rearview camera

* 2: Without rearview camera

Trunk Subharness


Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
C657	9	20	Right side of trunk	Right side wire harness (see page 22-46)	* 1
C657	9	6	Right side of trunk	Right side wire harness (see page 22-46)	* 2
C831	14	12	Middle of trunk	Trunk wire harness	* 2
C831	14	20	Middle of trunk	Trunk wire harness	* 1

* 1: With rearview camera

* 2: Without rearview camera

Floor Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
EVAP canister vent shut valve	1	2	Under rear floor		
Fuel tank pressure (FTP) sensor	2	3	Under rear floor		
Right rear wheel speed sensor	8	2	Under right side of vehicle		
SH-AWD control unit connector A	4	26	Under right side of rear seat		
SH-AWD control unit connector B	5	8	Under right side of rear seat		
SH-AWD relay	3	4	Under right side of rear seat		
C658	7	14	Right C-pillar	Right side wire harness (see page 22-46)	
C659	6	6	Right C-pillar	Right side wire harness (see page 22-46)	
C698	11	10	Under rear floor	Rear differential subharness A (see page 22-54)	
C699	10	6	Under rear floor	Rear differential subharness B (see page 22-54)	

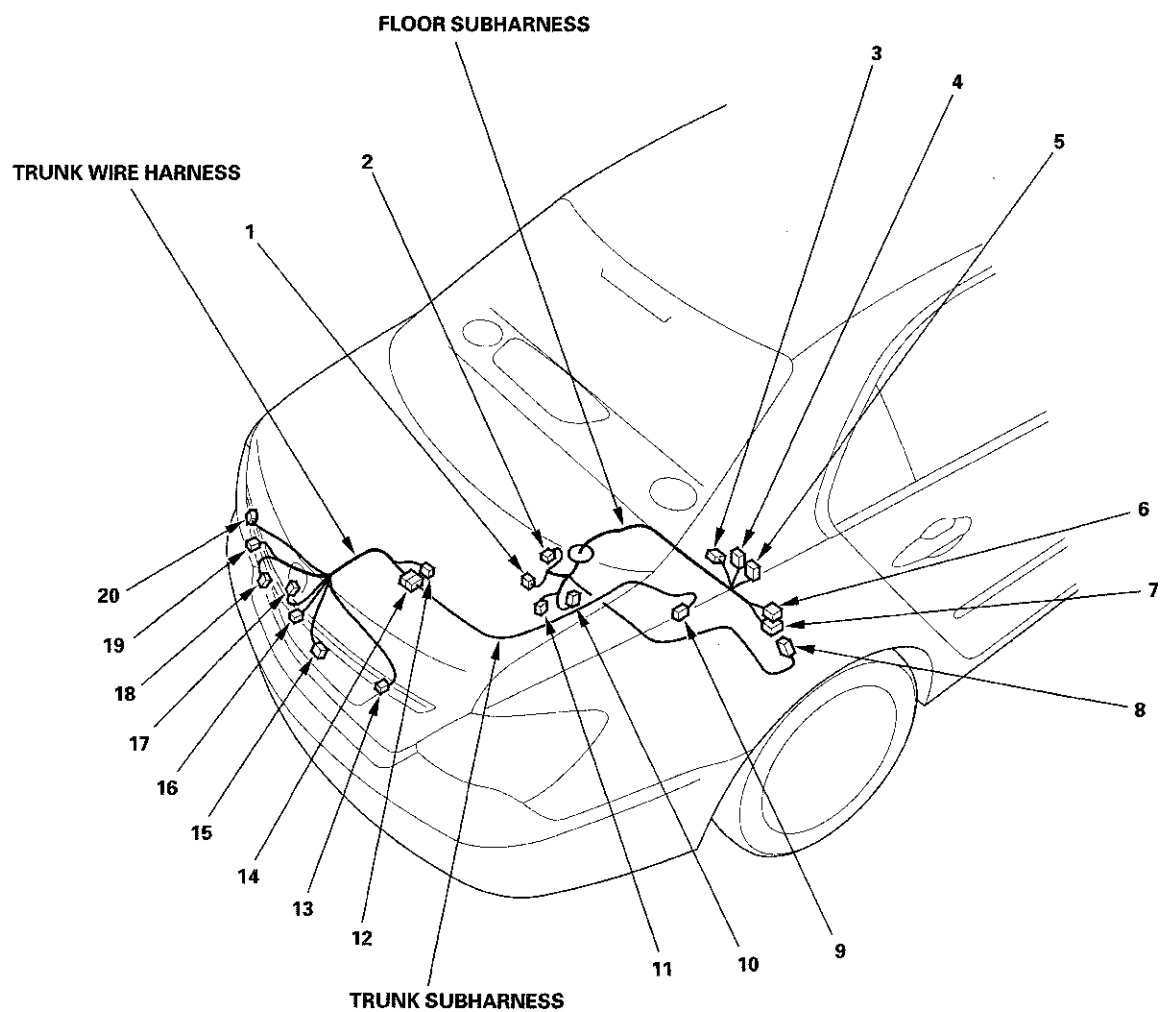

Connectors and Harnesses


Connector to Harness Index (cont'd)

Rear Differential Subharness A

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Hypoid gear speed sensor	6	3	Rear differential		
Left clutch electromagnetic coil	8	2	Rear differential		
Left search coil	9	2	Rear differential		
Shift solenoid valve	10	2	Rear differential		
C698	5	10	Rear differential	Floor subharness (see page 22-52)	
T15	7		Rear differential	Rear differential	

Rear Differential Subharness B

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Rear differential fluid temperature sensor	1	2	Rear differential		
Right clutch electromagnetic coil	4	2	Rear differential		
Right search coil	2	2	Rear differential		
C699	3	6	Rear differential	Floor subharness (see page 22-52)	

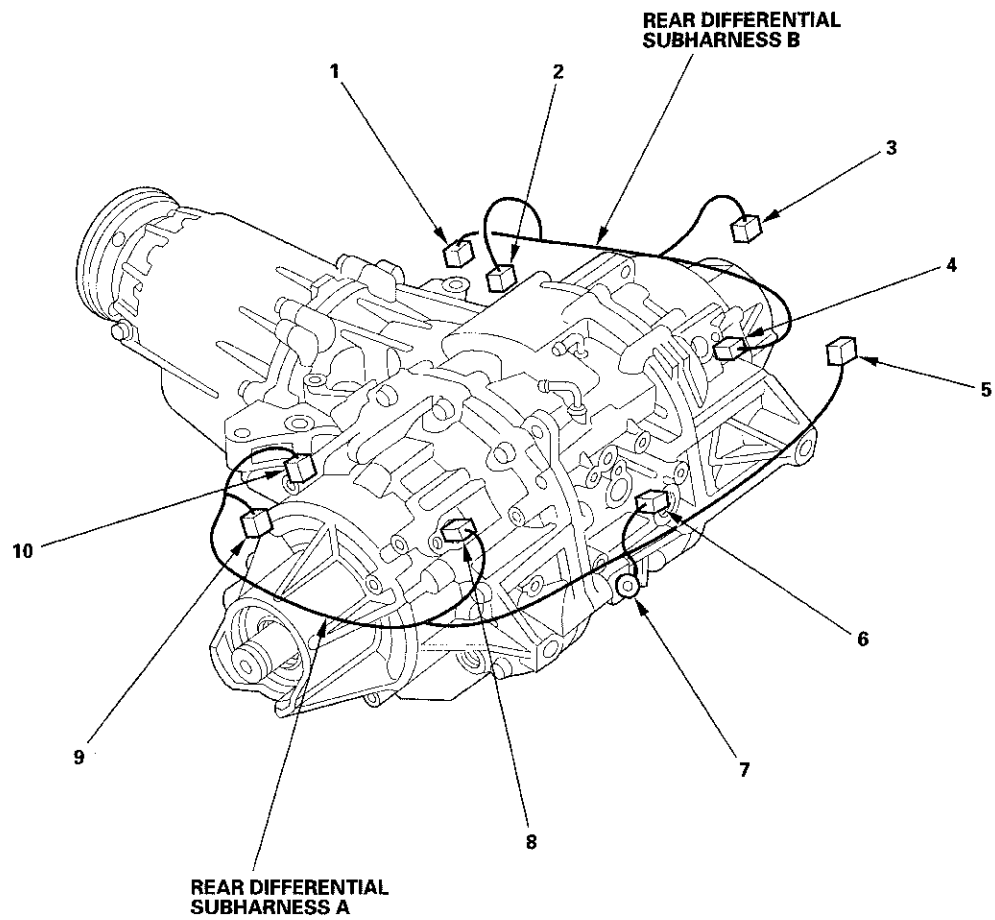

Connectors and Harnesses

Connector to Harness Index (cont'd)

Driver's Door Wire Harness A


Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Driver's door courtesy light	21	2	Driver's door	Driver's door wire harness B	
Driver's door inner handle light	2	2	Driver's door		
Driver's door lock switch	3	4	Driver's door		
Driver's door pocket light	19	2	Driver's door		
Driver's MPCS unit connector A	12	40	Driver's door		
Driver's MPCS unit connector B	16	14	Driver's door		
Driving position memory switch	4	10	Driver's door		
Left power mirror	5	16	Driver's door		
Power window master switch	20	6	Driver's door		
Trunk lid opener/fuel fill door opener switch	15	10	Driver's door		
C754	6	28	Driver's door		
C755 (Junction connector)	16	12	Driver's door		
C756 (Junction connector)	17	12	Driver's door		

Driver's Door Wire Harness B

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Driver's door lock actuator/knob switch/door switch connector A	24	10	Driver's door	Driver's door subharness Driver's door subharness Driver's door wire harness A	
Driver's door lock actuator/knob switch/door switch connector B	22	2	Driver's door		
Driver's door LF antenna/outer handle light/touch sensor	1	8	Driver's door		
Driver's power window motor	14	6	Driver's door		
Driver's door speaker	13	2	Driver's door		
Tweeter (left)	7	2	Driver's door		
C752	8	20	Under left side of dash		
C753	11	17	Under left side of dash		
C754	6	28	Driver's door		
C757 (Junction connector)	23	12	Driver's door		

Driver's Door Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Driver's under-dash fuse/relay box connector K (see page 22-75)	10	12	Left kick panel	Left side wire harness (see page 22-40) Driver's door wire harness B Driver's door wire harness B	
C751	9	14	Under left side of dash		
C752	8	20	Under left side of dash		
C753	11	17	Under left side of dash		

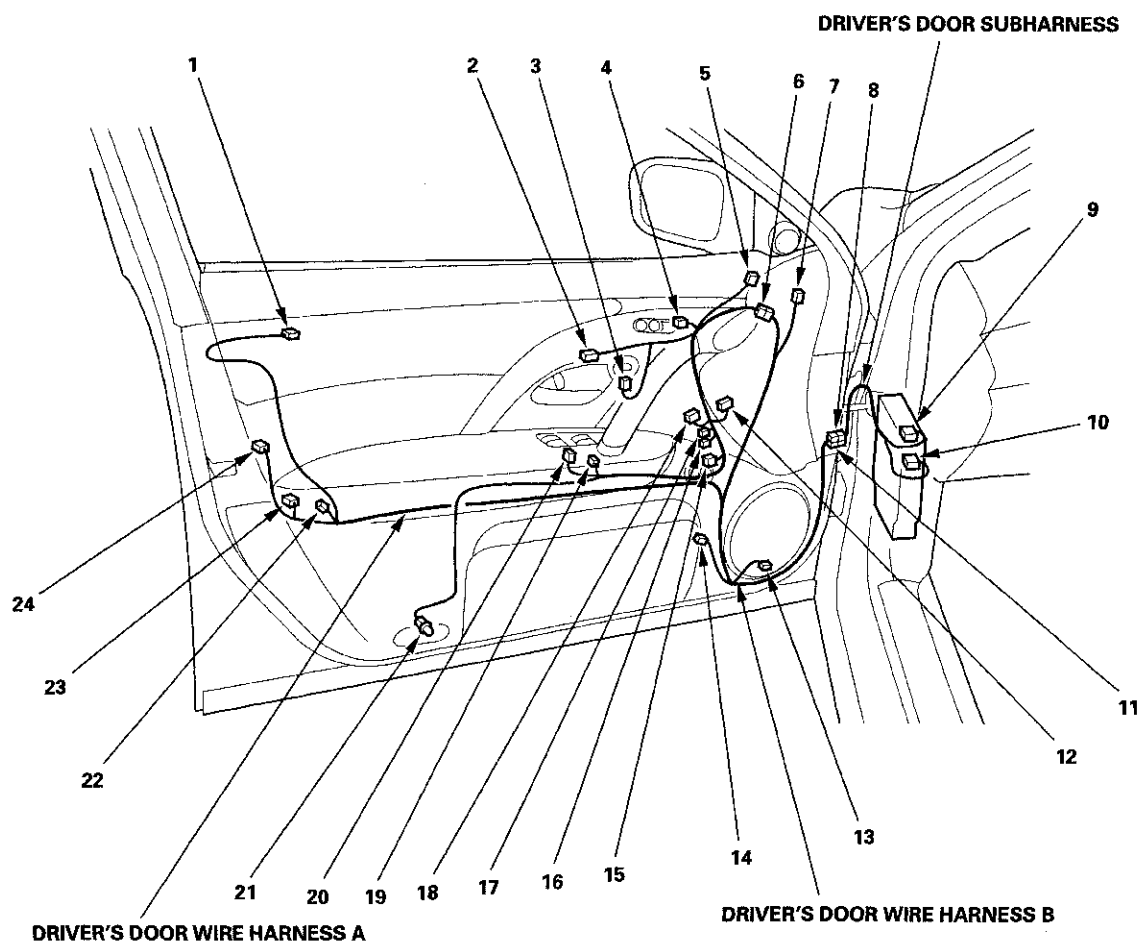

Connectors and Harnesses

Connector to Harness Index (cont'd)

Front Passenger's Door Wire Harness A


Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Front passenger's door courtesy light	12	2	Front passenger's door		
Front passenger's door inner handle light	6	2	Front passenger's door		
Front passenger's door lock switch	5	4	Front passenger's door		
Front passenger's door pocket light	13	2	Front passenger's door		
Front passenger's MPCS unit connector A	1	28	Front passenger's door		
Front passenger's MPCS unit connector B	15	14	Front passenger's door		
Front passenger's power window switch	7	10	Front passenger's door		
Right power mirror	3	16	Front passenger's door		
C773	4	20	Front passenger's door	Front passenger's door wire harness B	
C776 (Junction connector)	17	12	Front passenger's door		

Front Passenger's Door Wire Harness B

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Front passenger's door lock actuator/knob switch/door switch connector A	9	10	Front passenger's door		
Front passenger's door lock actuator/knob switch/door switch connector B	11	2	Front passenger's door		
Front passenger's door LF antenna/outer handle light/touch sensor	8	8	Front passenger's door		
Front passenger's power window motor	14	6	Front passenger's door		
Front passenger's door speaker	16	2	Front passenger's door		
Tweeter (right)	2	2	Front passenger's door		
C773	4	20	Front passenger's door	Front passenger's door wire harness A	
C774	18	37	Front passenger's door	Front passenger's door subharness	
C775 (Junction connector)	10	12	Front passenger's door		

Front Passenger's Door Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
C771	19	20	Under right side of dash	Dashboard wire harness (see page 22-38)	
C772	20	6	Under right side of dash	Right side wire harness (see page 22-44)	
C774	18	37	Front passenger's door	Front passenger's door wire harness B	

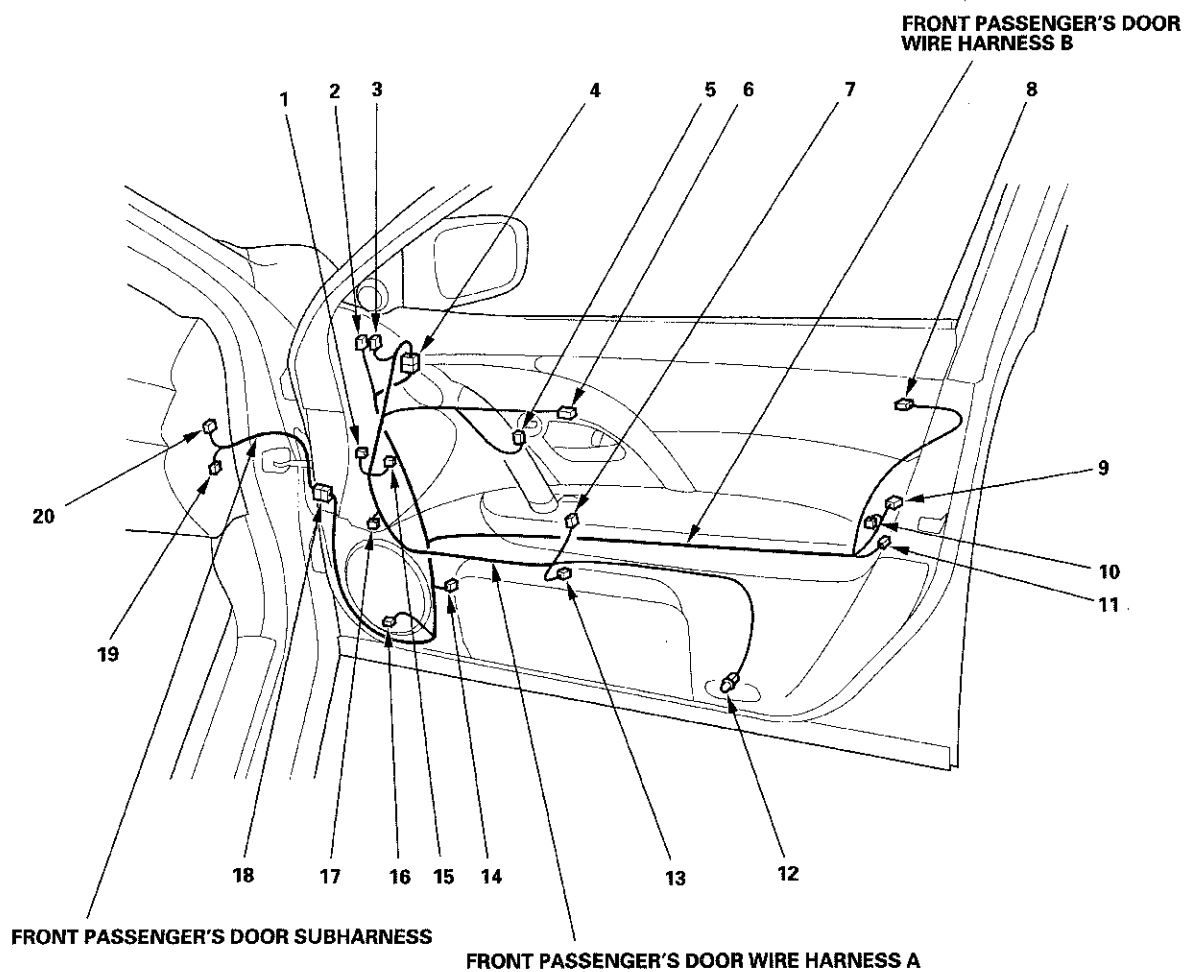

Connectors and Harnesses


Connector to Harness Index (cont'd)

Left Rear Door Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Left rear door lock actuator/knob switch/door switch connector A	2	10	Left rear door		
Left rear door lock actuator/knob switch/door switch connector B	1	2	Left rear door		
Left rear power window motor	11	6	Left rear door		
Left rear power window switch	8	14	Left rear door		
Left rear door speaker	6	2	Left rear door		
C781	5	17	Left B-pillar	Left side wire harness (see page 22-40)	
C782	7	6	Left rear door	Left rear door subharness	
C783 (Junction connector)	9	12	Left rear door		

Left Rear Door Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Left rear door ashtray light	3	2	Left rear door		
Left rear door courtesy light	10	2	Left rear door		
Left rear door inner handle light	4	2	Left rear door		
C782	7	6	Left rear door	Left rear door wire harness	

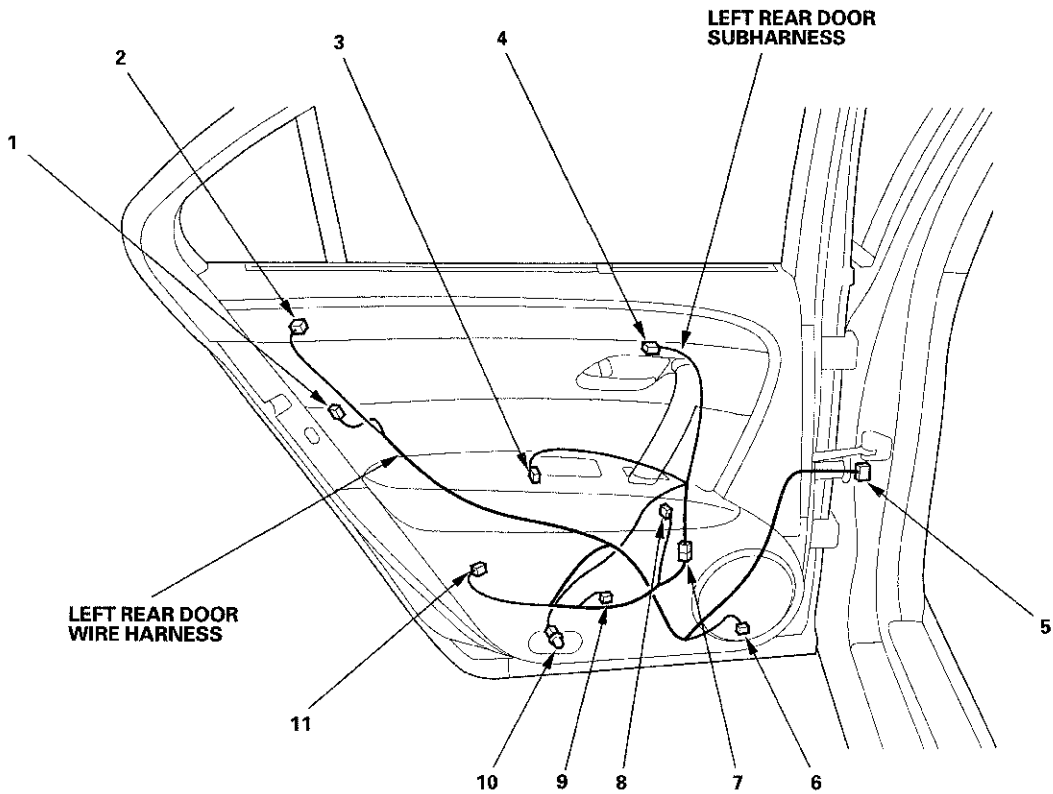




Right Rear Door Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Right rear door lock actuator/knob switch/door switch connector A	5	10	Right rear door	Right side wire harness (see page 22-44) Right rear door subharness	
Right rear door lock actuator/knob switch/door switch connector B	6	2	Right rear door		
Right rear power window motor	7	6	Right rear door		
Right rear power window switch	3	14	Right rear door		
Right rear door speaker	11	2	Right rear door		
C791	1	17	Right B-pillar		
C792	10	6	Right rear door		
C793 (Junction connector)	9	12	Right rear door		

Right Rear Door Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Right rear door ashtray light	4	2	Right rear door	Right rear door wire harness	
Right rear door courtesy light	8	2	Right rear door		
Right rear door inner handle light	2	2	Right rear door		
C792	10	6	Right rear door		

RIGHT REAR DOOR SUBHARNESS

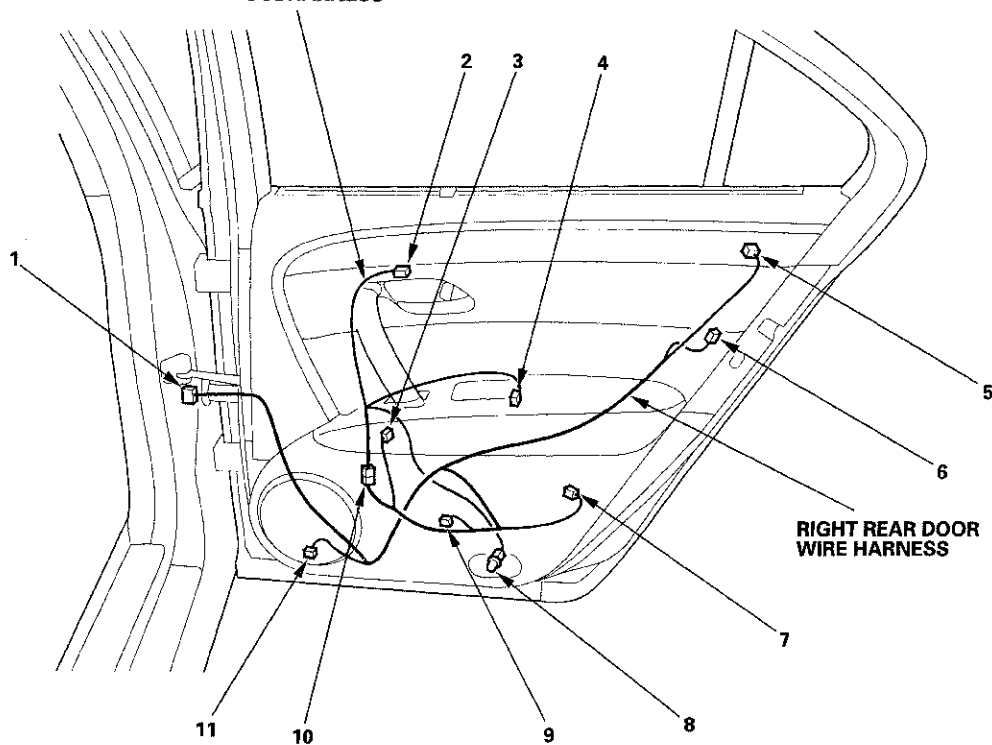

Connectors and Harnesses

Connector to Harness Index (cont'd)


Front Accessory Power Socket Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Front accessory power socket	2	2	Under console panel	Dashboard wire harness (see page 22-36)	
C528	1	6	Under console panel		

Console Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Console box light	4	2	Under console panel	Dashboard wire harness (see page 22-36).	*
Left rear seat heater switch	7	6	Behind center console rear cover		
Rear accessory power socket	5	2	Under console panel		
Rear interior LF antenna	8	2	Behind center console rear cover		
Right rear seat heater switch	6	6	Behind center console rear cover		
C551	3	23	Under console panel		
C552 (Junction connector)	9	12	Behind center console rear cover		*

* : With rear seat heater

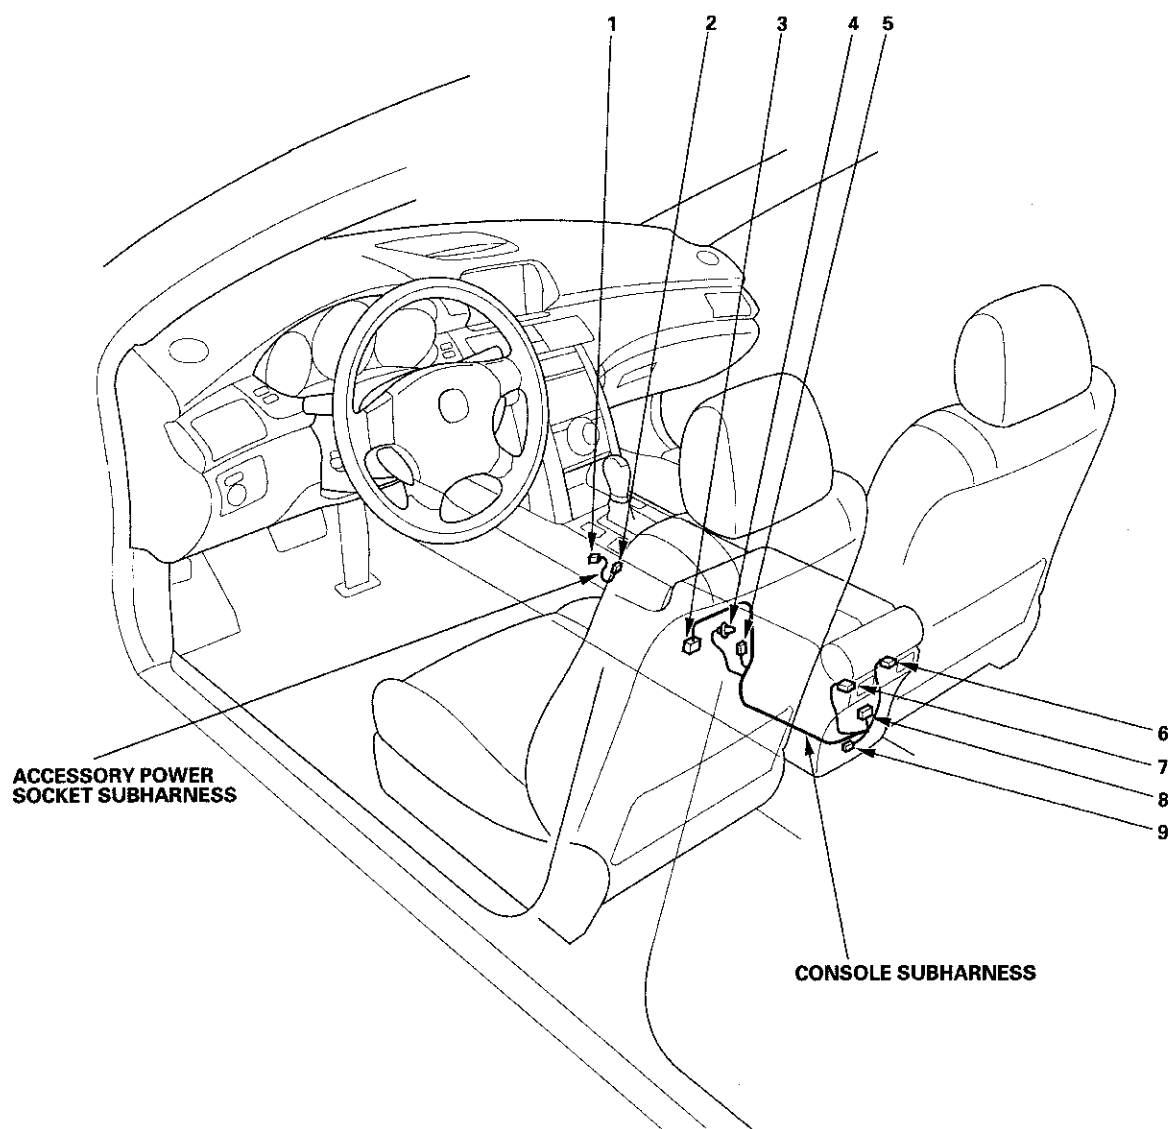

Connectors and Harnesses


Connector to Harness Index (cont'd)

Driver's Seat Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Driver's lumbar support motor	3	2	Right side of driver's seat		
Driver's lumbar support switch	9	5	Left side of driver's seat		
Driver's power seat adjustment switch	10	12	Left side of driver's seat		
Driver's power seat control unit connector A	11	40	Under driver's seat		
Driver's power seat control unit connector B	14	18	Under driver's seat		
Driver's power seat front up-down motor/position sensor	21	5	Under driver's seat		
Driver's power seat rear up-down motor/position sensor	8	5	Under driver's seat		
Driver's power seat recline motor/position sensor	5	5	Bottom of driver's seat-back		
Driver's power seat slide motor/position sensor	6	5	under driver's seat		
Driver's seat-back outer fan motor	2	3	Driver's seat-back		* 1
Driver's seat-back inner fan motor	1	3	Driver's seat-back		* 1
Driver's seat-back heater	4	2	Bottom of driver's seat-back		
Driver's seat belt buckle switch	15	4	Under driver's seat		
Driver's seat cushion front fan motor	16	3	Under driver's seat		* 1
Driver's seat cushion heater	12	5	Under driver's seat		* 1
Driver's seat cushion heater	16	4	Under driver's seat		* 2
Driver's seat cushion rear fan motor	13	3	Under driver's seat		* 1
Driver's seat position sensor	7	2	Under driver's seat		
Driver's seat ventilation control unit	17	26	Under driver's seat		* 1
C901	20	23	Under driver's seat	Left side wire harness (see page 22-40)	
C902	18	6	Under driver's seat	Left side wire harness (see page 22-40)	* 1
C903	19	2	Under driver's seat	Left side wire harness (see page 22-40)	

* 1: With seat ventilation

* 2: Without seat ventilation

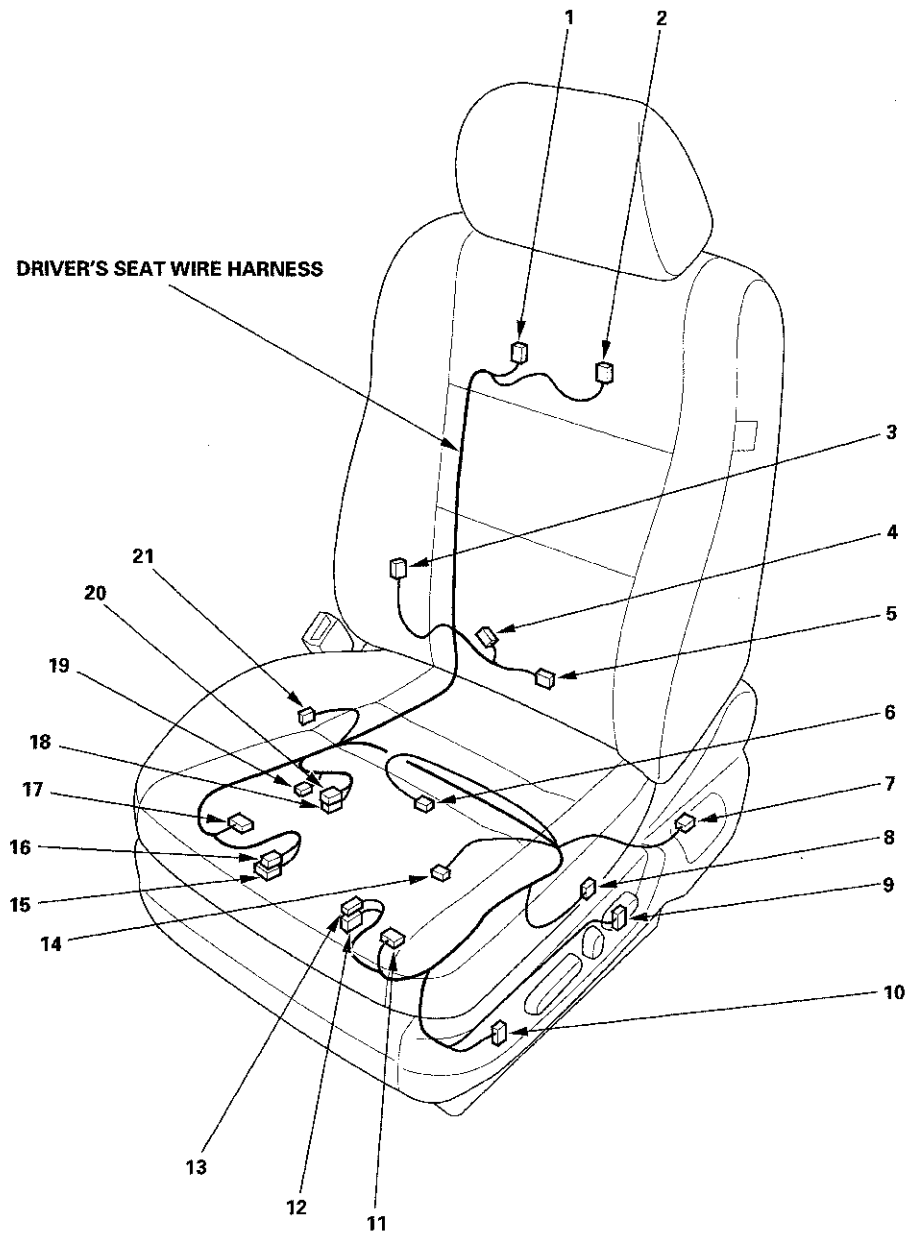

Connectors and Harnesses


Connector to Harness Index (cont'd)

Front Passenger's Seat Wire Harness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Front passenger's lumbar support motor	4	2	Left side of front passenger's seat		
Front passenger's lumbar support switch	18	5	Right side of front passenger's seat		
Front passenger's power seat adjustment switch	15	12	Right side of front passenger's seat		
Front passenger's power seat front up-down motor	6	2	Under front passenger's seat		
Front passenger's power seat rear up-down motor	16	2	Under front passenger's seat		
Front passenger's power seat recline motor	19	2	Bottom of front passenger's seat-back		
Front passenger's power seat slide motor	10	5	Under front passenger's seat		
Front passenger's seat-back inner fan motor	2	3	Front passenger's seat-back		
Front passenger's seat-back outer fan motor	1	3	Front passenger's seat-back		
Front passenger's seat belt buckle switch	9	4	Under front passenger's seat		* 1
Front passenger's seat cushion heater	8	5	Under front passenger's seat		* 1
Front passenger's seat cushion heater	7	3	Under front passenger's seat		* 2
Front passenger's seat cushion front fan motor	11	3	Under front passenger's seat		* 1
Front passenger's seat cushion rear fan motor	7	2	Under front passenger's seat		* 1
Front passenger's seat ventilation control unit	12	26	Under front passenger's seat		* 1
Front passenger's weight sensor (inner side)	5	2	Under front passenger's seat		* 1
Front passenger's weight sensor (outer side)	17	3	Under front passenger's seat		
ODS unit connector D	3	18	Left side of front passenger's seat		
C931	13	23	Under front passenger's seat	Right side wire harness (see page 22-44)	
C932	14	4	Under front passenger's seat	Right side wire harness (see page 22-44)	

* 1: With seat ventilation

* 2: Without seat ventilation

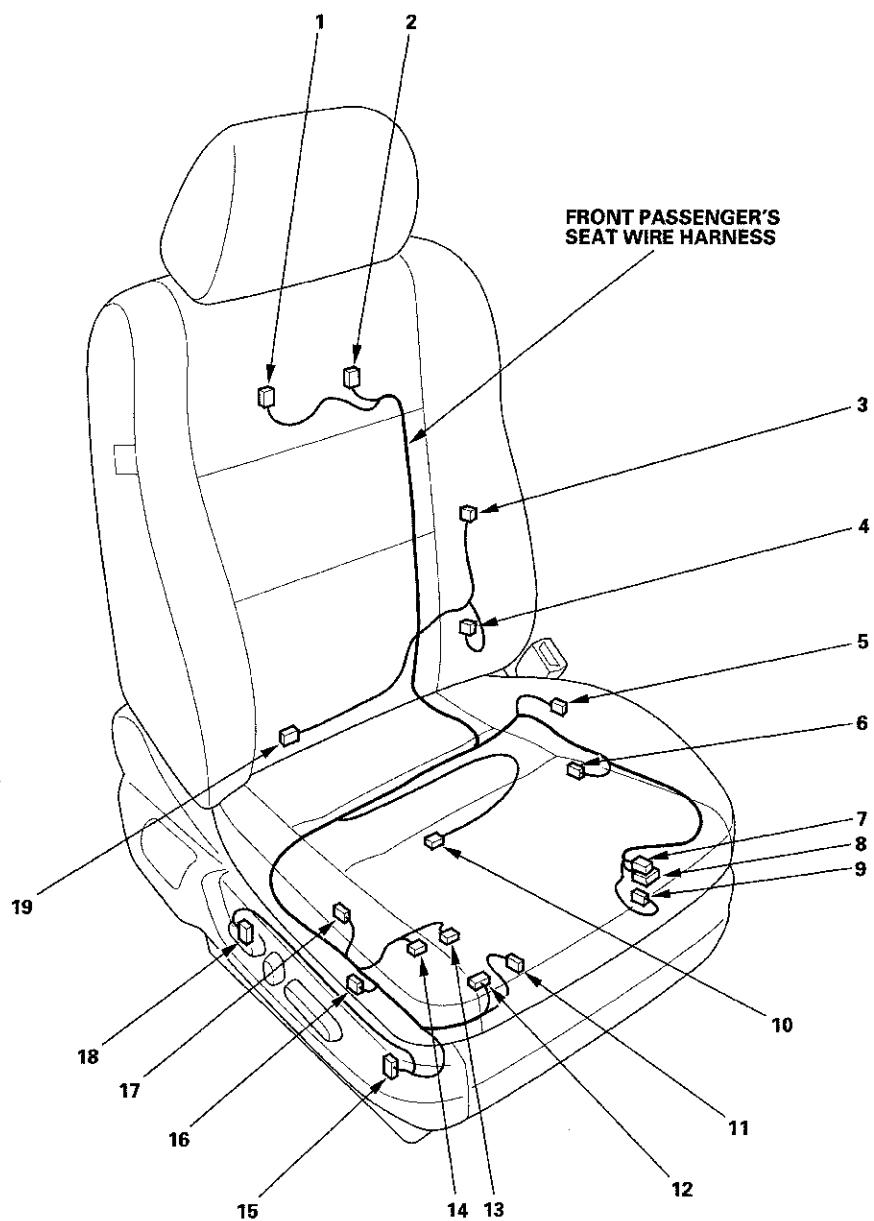

Connectors and Harnesses

Connector to Harness Index (cont'd)

Rear Headrest Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Left rear seat-back heater	7	2	Left side of rear seat-back		* 1
Right rear seat-back heater	12	2	Right side of rear seat-back		* 1
C951	8	8	Left side of rear seat	Left side wire harness (see page 22-42)	* 1
C951	8	3	Left side of rear seat	Left side wire harness (see page 22-42)	* 2
C961	15	3	Right side of rear seat-back	Rear headrest actuator subharness	
C962	6	3	Left side of rear seat-back	Rear headrest actuator subharness	
C963	13	3	Center of rear seat-back	Rear headrest actuator subharness	
C964	10	8	Under center of rear seat cushion	Rear seat cushion heater subharness	* 1

* 1: With rear seat heater


* 2: Without rear seat heater

Rear Headrest Actuator Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Center rear headrest actuator	14	2	In the center rear headrest		
Left rear headrest actuator	5	2	In the left rear headrest		
Right rear headrest actuator	2	2	In the right rear headrest		
C961	15	3	Right side of rear seat-back	Rear headrest subharness	
C962	6	3	Left side of rear seat-back	Rear headrest subharness	
C963	13	3	Center of rear seat-back	Rear headrest subharness	
T16	4		In the left rear headrest		
T17	3		In the center rear headrest		
T18	1		In the right rear headrest		

Rear Seat Heater Subharness (Canada models with rear seat heater)

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Left rear seat cushion heater	9	3	Under left side of rear seat cushion		
Right rear seat cushion heater	11	4	Under right side of rear seat cushion		
C964	10	8	Under center of rear seat cushion	Rear headrest subharness	

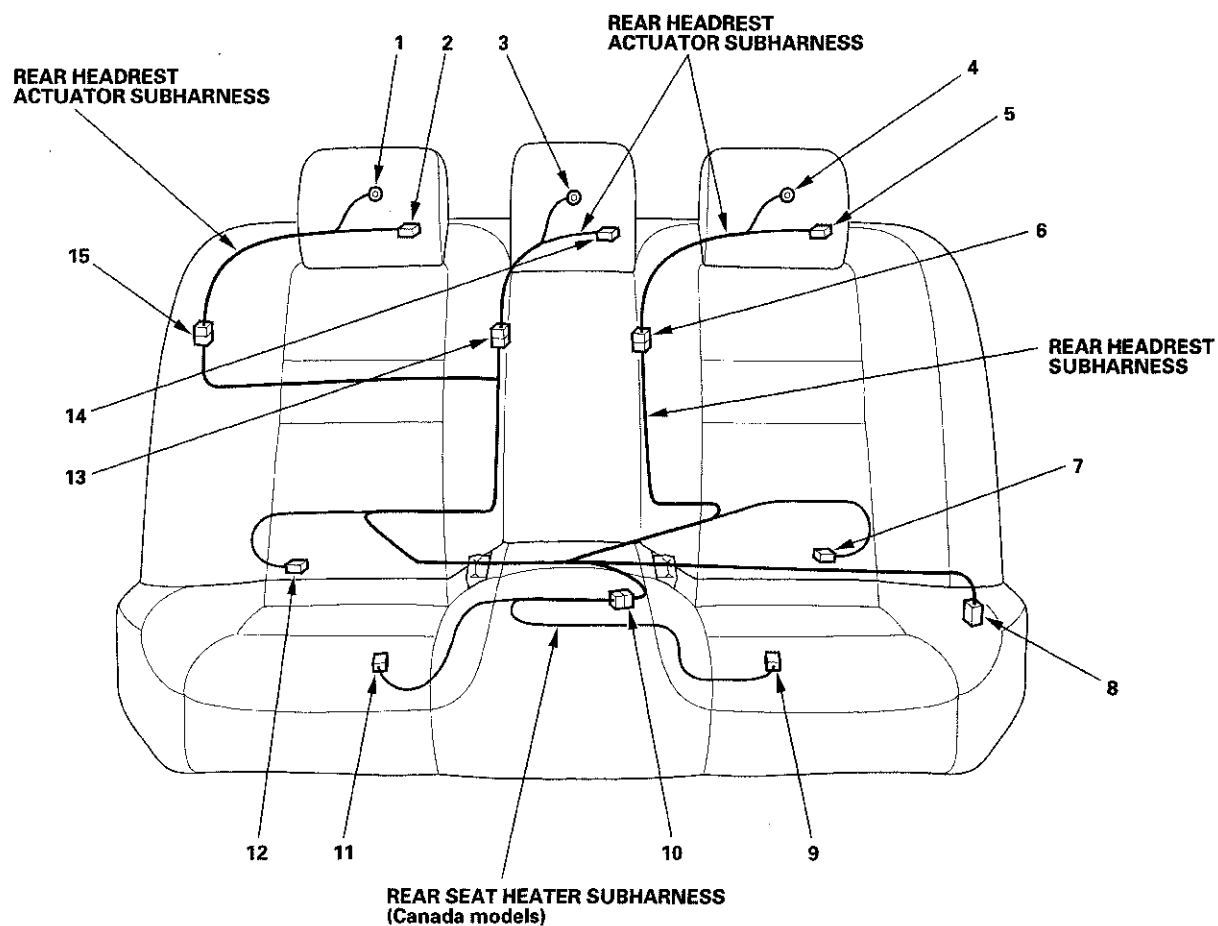


Connectors and Harnesses

Connector to Harness Index (cont'd)

A/C Wire Harness


Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
Blower motor	7	2	Under middle of dash		
Blower power transistor	10	5	Under middle of dash		
Driver's air mix control motor	1	5	Under middle of dash		
Driver's cool vent control motor	4	5	Under middle of dash		
Evaporator temperature sensor	3	2	Under middle of dash		
Front passenger's air mix control motor	11	5	Under middle of dash		
HVAC control motor relay	9	4	Under middle of dash		
Mode control motor	2	5	Under middle of dash		
Passenger's cool vent control motor	13	5	Under middle of dash		
Rear vent control motor	12	5	Under middle of dash		
Recirculation control motor	8	5	Under middle of dash		
C502	6	12	Under middle of dash	Dashboard wire harness (see page 22-38)	
C503	5	2	Under middle of dash	Dashboard wire harness (see page 22-38)	

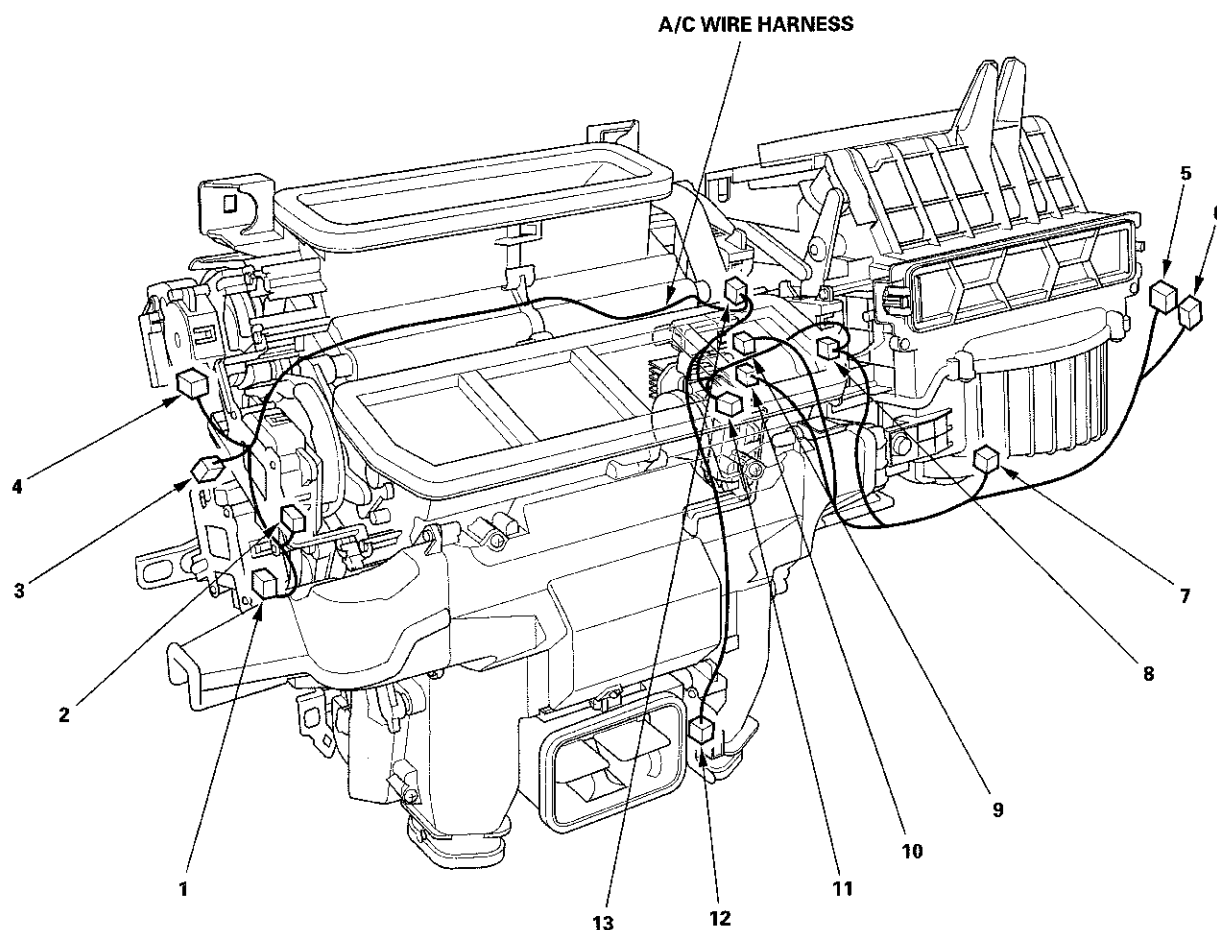



A/C Compressor Clutch Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
A/C compressor clutch	4	3	Behind radiator	Engine compartment wire harness (see page 22-26)	
Engine coolant temperature (ECT) sensor 2	2	2	Behind radiator		
C309	1	6	Behind radiator fan		
G351	3		Behind radiator fan	Body ground, via A/C compressor clutch subharness	

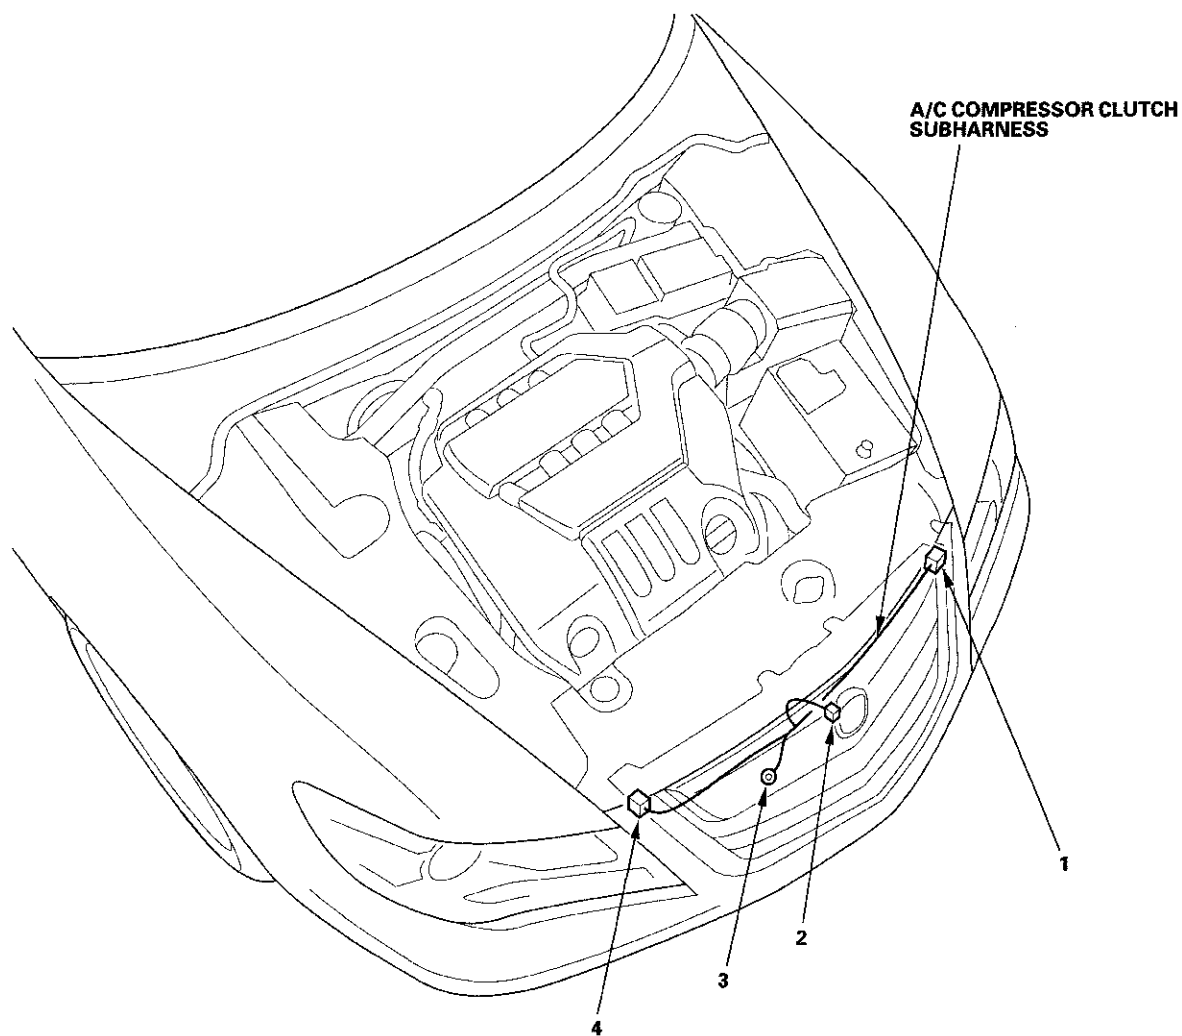

Connectors and Harnesses

Connector to Harness Index (cont'd)

E-pretensioner Subharness

Connector or Terminal	Ref	Cavities	Location	Connects to	Notes
E-pretensioner unit connector A	1	5	Under middle of dash	Left side wire harness (see page 22-40) Right side wire harness (see page 22-44) Right side wire harness (see page 22-44)	
E-pretensioner unit connector B	2	14	Under middle of dash		
C991	5	12	Under middle of dash		
C992	3	5	Behind right kick panel		
C993	4	2	Behind right kick panel		

