

PART NAME INDEX

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.
= A =		BEARING-TAPER ROLLER	3270 11	BOLT	3250 02	BOLT	7150 02
		BELLOWS A-TUBE,G/S	3910 05		3260 22		7310 16
		BELT A-FRT SEAT	7550 01		3270 10		7322 06
ABSORBER-ENG,Y,FRT BUMPER	6720 03	BELT A-PELVIS,RR SEAT,CTR	7560 02		3810 02		7520 66
ACTUATOR A-DR	6250 01	BELT A-RR SEAT	7560 01		3820 16		7530 17
ACTUATOR A-LATCH,TRK	6450 13	BELT A-RR SEAT,CTR	7560 29		3821 12		7540 05
ACTUATOR A-T/GATE	6451 13	BELT-TIMING	1331 18		3824 07		7541 52
	6452 13		1333 15		3825 09		7550 04
ACTUATOR A-VGIS	1521 07	BLADE A-WIPER	5310 03		3910 04		7610 18
ADAPTER-EGR VALVE	1311 31		5320 03		3920 12		8310 06
	1713 01	BLOCK A-CYLINDER	1210 01		4130 10		8331 03
ADJUSTER A-HEIGHT,FRT SEAT	7530 01		1211 01		4140 14		8340 11
ADJUSTER A-HEIGHT,S/BELT	7550 03	BLOCK-SLIDE	9250 09		4150 03		9250 24
ADJUSTER-TAPPET	1313 20	BODY A-CONT VALVE	3860 01		4190 02		9260 02
ALTERNATOR A	1740 01	BODY A-THROTTLE	1411 01		4310 09	BOOSTER-MASTER BRAKE	4620 09
ANCHOR A-TETHER,CTR	7560 24		1510 01		4320 11	BOOT A-FRT CNSL,M/T	7141 29
ANCHOR A-TETHER,SIDE	7560 28	BOLT	1111 04		4330 17	BOOT A-P/BRAKE	7141 16
ANTENNA A-ATAS	5440 04		1113 03		4410 37	BOOT KIT	4931 01
ANTIFREEZER	9120 09		1210 05		4420 35	BOOT SET-INR	4120 04
ARM A-CONT	4150 01		1211 03		4510 10	BOOT SET-OTR	4120 03
ARM A-WIPER	5310 02		1220 05		4520 22	BOX A-FUSE&RELAY	5620 01
	5320 02		1221 05		4521 10	BOX A-FUSE,PASS	5620 28
ARMATURE	1760 12		1230 14		4530 02	BOX A-GLOVE	7113 04
ARMREST A-RR S/BACK	7541 37		1231 23		4652 02	BOX A-L/COMPT	7322 13
ASHTRAY A-I/P	7130 01		1240 02		4710 04	BOX A-RELAY	9250 15
AXLE A-RR	4310 01		1241 02		4830 08	BOX-CNSL,RR	7141 06
AXLE-RR	4310 37		1311 18		4831 20	BOX-CUP HOLDER	7141 92
= B =			1313 21		4910 02	BOX-DEPOSIT,I/P,CTR	7130 06
			1321 04		4950 16	BRACE A-CLU PEDAL	4420 02
BAG-JACK	9110 10		1323 04		5110 05	BRACE A-FRT W/H	6140 03
BAG-TOOL	9110 01		1331 03		5310 08	BRACE A-W/H,LWR	6520 18
BALL	3240 13		1333 08		5320 08	BRACE-BRAKE PEDAL	4430 09
BAR A-IMPACT,RR BUMPER	6732 04		1411 03		5330 08	BRACKET	3810 13
BAR A-TIE	7113 05		1413 15		5410 02	BRACKET A-CNSL,FRT	7141 85
BAR-CONNECTING	3825 05		1521 08		5420 15	BRACKET A-DIS	1711 03
BAR-FRT STABILIZER	4150 05		1523 02		5430 05	BRACKET A-FIRE EXTINGUISHER	6510 26
BAR-HOLDER	5610 04		1531 05		5510 03	BRACKET A-FOOTREST	7610 15
BAR-RAD GRILLE	6710 22		1533 02		5620 30	BRACKET A-G/S,FRT	3910 15
BAR-RR STABILIZER	4310 06		1681 06		5710 27	BRACKET A-G/S,RR	3910 14
BAR-T/LID TORSION	6440 11		1683 03		6110 04	BRACKET A-GAS,SPRING	6442 10
BATTERY A	5610 01		1711 05		6130 07	BRACKET A-GUIDE PIN,I/P	7113 15
BATTERY A-KEY	6460 11		1713 03		6140 05	BRACKET A-HYD UNIT	4710 01
BEAM A-FRT BUMPER IMPACT	6720 04		1740 20		6150 30	BRACKET A-I/P,SIDE	7113 12
BEAM A-RR BUMPER IMPACT	6730 04		1751 03		6220 08	BRACKET A-JACK,NO 1	6520 10
BEARING	4130 03		1753 02		6230 08	BRACKET A-L/PLATE	6720 54
	4140 05		1760 24		6320 07	BRACKET A-P/STRG PIPE	4950 26
	1220 06		2110 23		6330 07	BRACKET A-REACTION,LWR	4190 86
BEARING SET-CONN ROD	1221 06		2120 10		6420 13	BRACKET A-RR CNSL	7141 35
	1220 08		2130 09		6440 06	BRACKET A-T/A MT	4190 32
BEARING SET-CR/SHF	1221 08		2220 14		6441 04	BRACKET A-T/A MT,RR	4190 01
	1740 17		2230 04		6442 04	BRACKET A-TIE BAR	7113 13
BEARING-BALL	3230 36		2233 04		6450 08	BRACKET-ACCEL CONT CABLE	4440 17
BEARING-GROOVE BALL	3240 07		2241 05		6451 05	BRACKET-ALTERNATOR	1751 01
	3824 04		2242 05		6452 12		1753 04
BEARING-NEEDLE	3831 04		2410 09		6510 16	BRACKET-BRAKE PEDAL	4430 18
	3833 07		2451 21		6660 08	BRACKET-C/MBR,LOWER	4150 48
	3230 01		2460 05		6720 15	BRACKET-CMPR&P/STRG PUMP	8331 01
BEARING-ROLLER	3832 03		2520 15		6730 11	BRACKET-CMPR,RR	8331 10
	3850 02		3110 03		6732 11	BRACKET-DR HANDLE	7210 05
BEARING-ROLLER INR	3850 10		3210 02		7113 30		7220 05
BEARING-ROLLER OTR	3850 11		3220 22		7130 20	BRACKET-ECM	2520 01
			3240 04		7141 18	BRACKET-EGR SOL VALVE	1713 25

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.
BRACKET-ENG CONT HARN	5710 33	BUSH	4310 18	CAP-FOOTREST	7610 34	CLIP	2241 13
BRACKET-ENG HARN	5710 35		4440 12	CAP-FRT FLR	6510 17		2242 13
BRACKET-ENG MT	4190 24		6451 16	CAP-FUEL FILLER	6420 01		2411 06
BRACKET-FUEL FILTER	2120 09		6452 16	CAP-GUIDE PULLEY	7550 27		2451 07
BRACKET-FUEL VAPOR	1713 14		7520 65	CAP-HINGE,FRT S/BACK	7520 20		2453 14
BRACKET-GUIDE,CANISTER	2130 16	BUSH-CONT ARM	4150 13	CAP-HINGE,FRT SEAT CUSH	7520 21		3260 30
BRACKET-HOUSING,STRG GEAR	4910 12	BUSH-DMP	4150 31	CAP-MASTER BRAKE	4620 02		3910 12
BRACKET-IDLER,NON A/C	8331 15	BUSH-STABILIZER BAR	4150 09	CAP-OIL DUCT	1311 08		4190 40
BRACKET-MANIF,VGIS	1521 19		4310 07	CAP-PURGE	2130 10		4410 15
BRACKET-MAP SENSOR	1523 14	BUSHING A-LOCK,FRT DR,LWR	7210 68	CAP-RESERVOIR	4950 03		4440 21
BRACKET-NET,UPR,FRT	7310 10	BUSHING-LOCK,FRT DR,UPR	7210 67		5330 07		4530 20
BRACKET-NET,UPR,RR	7310 12	BUSHINGLOCK,RR DR,LWR	7220 46	CAP-SCREW	6420 06		4652 31
BRACKET-O2 SENSOR	1531 10	BUSHINGLOCK,RR DR,UPR	7220 45	CAP-STRUT MT	4140 01		4710 13
	1533 10	BUTTON A-BTSI	3920 57	CAP-SURGE TANK	2230 09		4950 11
	2460 28	BUTTON-FIXED	7321 03		2233 09		5110 07
BRACKET-OIL PAN	3824 10	BUTTON-LOCKING,DR	6220 29	CAP-VALVE SPRING	1313 18		5440 09
BRACKET-OIL SUCT PIPE	1230 19		6320 34	CAP-WATER CHAMBER	1311 07		6110 12
BRACKET-PLENUM	1521 33			CAP-WHEEL,CTR	6660 04		6130 33
BRACKET-PUMP,HYD UNIT	4950 17	= C =		CAP-WIPER ARM	5310 05		6140 50
BRACKET-PUP CONV,EXH	2460 32				5320 06		6150 09
BRACKET-REACTION	4190 95	C/MBR A-DASH,LWR	6150 04	CARRIER	4510 13		6220 06
BRACKET-SUNSHADE	7350 04	C/MBR A-FRT SEAT,FRT	6510 05		4521 13		6240 12
BRACKET-SUPT,SUNROOF	9260 01	C/MBR A-FRT SEAT,RR	6510 06	CARRIER-DISC,INR	3831 01		6320 05
BRACKET-TCM	2520 04	C/MBR A-FRT SUSP	4150 10	CARRIER-INR GEAR	3830 10		6340 11
BRACKET-VGIS	2451 12	C/MBR A-RAD	6130 08	CASE A-T/A	3220 01		6420 19
BRAKE A-PARK,RR	4530 13	C/MBR A-RR FLR,FRT	6530 13	CASE-INST	5220 08		6440 14
BRAKE A-RR	4520 01	C/MBR A-RR FLR,RR	6530 14	CASE-RELEASE PNL	5430 25		6450 21
BRAKE UNIT A-MASTER	4610 01	CABLE A-ACCEL CONT	4440 01	CASSETTE-AM/FM STEREO	5430 01		6451 15
BRIDGE-OIL PAN	1231 25	CABLE A-DRIVE SUNROOF	9250 27	CHANGER A-CD	5430 06		6452 15
BRIDGE-STRAIN BOLT	3250 01	CABLE A-FUEL FILLER DR	6420 08	CHANNEL-DRAIN	9250 06		6610 15
BRUSH A	1740 11	CABLE A-HOOD RELEASE	6110 10	CHECK A-DR,FRT DR	6220 07		6630 12
BUCKLE A-FRT S/BELT	7550 02	CABLE A-MODE	8350 29	CHECK A-DR,RR DR	6320 06		6710 16
BUCKLE A-RR S/BELT	7560 03	CABLE A-P/BRAKE	4530 12	CIRCLIP	3230 14		6720 25
BUFFER-CLU PEDAL	4420 37	CABLE A-SELECTOR CONT	3920 30	CLAMP	1241 04		6730 28
BULB	5110 02	CABLE A-TEMP	8350 30		1531 08		6732 28
	5140 02	CABLE-ANTENNA,I/P	5420 07		1533 09		7120 81
	5220 10	CABLE-ANTENNA,RR	5420 08		2110 11		7210 03
	5410 11	CAGE A-T/A MT	4190 29		2411 02		7220 03
BUMPER	4320 09	CAGE-NEEDLE	3230 06		2453 02		7231 02
	4430 19	CALIPER A-BRAKE,FRT	4510 01		3910 06		7232 07
	6110 14	CALIPER A-BRAKE,RR	4521 01		3920 40		7310 03
	6130 09	CAMSHAFT A	1321 10		4150 08		7320 04
	6220 26	CAMSHAFT A-EXH	1323 10		4310 08		7322 17
	6320 25	CAMSHAFT A-INT	1323 09		4410 17		7330 13
	6440 03	CANISTER	2130 12		4950 10		7340 06
	6441 08	CAP	1210 02		6130 12		7341 06
	6442 07		1211 02		6220 14		7342 04
BUMPER A-FRT	6720 01		2451 20		6320 13		7541 27
BUMPER A-RR	6730 01		3260 32		7322 33		7610 02
	6732 01	CAP A-CNSL	7141 19	CLAMP-CPLIT	2110 41		9260 11
BUMPER-ADJUSTING SCREW	4440 10	CAP A-HORN	4810 03	CLEANER A-AIR	2410 01	CLIP-RETAINING	3860 06
BUMPER-HOLLOW,FRT	4140 10	CAP A-OIL FILLER	1321 01	CLEANER-AIR,LWR	2410 03	CLOCK A-DIGITAL	7130 27
BUMPER-RAD,LWR	2220 04		1323 01	CLEANER-AIR,UPR	2410 02	CLUSTER A-INST	5220 01
BUMPER-RAD,UPR	2220 02	CAP-BATTERY	5610 08	CLEVIS-MASTER BRAKE	4620 07	CLUTCH&PULLEY KIT	8320 02
BUMPER-T/GATE,SIDE	6441 12	CAP-BOLT,FRONT SEAT BELT	7550 10	CLIP	1240 04	COCK A-DRAIN	2210 11
BUMPER-T/LID HINGE	6440 08	CAP-BRACKET NET	7310 29		1333 29	COIL&HOUSING A	8320 07
BUSH	1740 19	CAP-CNSL,AUTOMATIC	7141 20		1411 14	COIL-DIS	1711 01
	1760 03	CAP-CNSL,RR	7141 79		1413 05		1713 09
	3220 05	CAP-CYL BLOCK	1230 33		1521 28	COLLAR	1740 04
	3821 02	CAP-CYLINDER BLOCK	1211 07		2120 13	COLUMN A-STRG,NON TILT	4830 01
	3825 02	CAP-DUST	4520 04		2230 21	COLUMN A-STRG,TILT	4831 01
	3920 50	CAP-EGR	2453 10		2233 18	COMPRESSOR A	8320 01

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.
COMPRESSOR SUB A	8320 09	COVER-BRAKE PEDAL	4430 03	DAMPER A-TORSIONAL	1231 42	FILTER A-OIL,T/A	3820 08
CONDENSER A	8310 01	COVER-C PILLAR	7330 29	DAMPER RING	1333 24	FILTER-FUEL	2120 08
CONNECTOR A-AIR DISTR	8110 18	COVER-CLU	3110 02	DAMPER-AIR CLEANER	2410 30	FINGER-SHIFT	3260 14
CONNECTOR A-INCAR SENSOR	7113 17	COVER-DIFF GEAR	3220 06	DAMPER-ASSIST GRIP	7310 38	FINISHER-HEADLINING	7310 02
CONNECTOR A-PORT	4652 08	COVER-DUST,RR	4320 08	DAMPER-FUEL	1413 17	FLANGE-DIFF GEAR BEARING	3270 15
CONNECTOR-VACUUM	1523 03	COVER-FLANGE,FRONT POST	6410 59	DAMPER-VIBRATION	4190 94	FLOOR A-L/COMPT,FRT	7322 09
CONSOLE A-FRT	7141 45	COVER-FLANGE,FRT POST	6411 59	DEADENER	6520 35	FLUID-BRAKE	9120 05
CONSOLE A-RR	7141 61		6413 59		6732 60	FLUID-WDO CLEANER	9120 06
CONSOLE-FRONT,LOWER	7141 94	COVER-FRT SEAT,INR	7520 34		7610 28	FLYWHEEL A	1220 10
CONSOLE-FRONT,UPPER	7141 93	COVER-FUEL TANK HOLE	6520 19	DEFLECTOR-WATER	4190 37		1221 11
CONTROL A-G/S	3910 01	COVER-FUSE BOX,LWR	5620 04	DEFLECTOR-WDO	9250 04	FOAM-FLR PNL,TRK	6520 58
CONTROL A-G/S GUIDE	3910 10	COVER-FUSE BOX,UPR	5620 02	DIFFUSER-AIR CLEANER	2410 47	FOOTREST A	7610 17
CONTROL UNIT A-RKE&ATAS	5440 02	COVER-GRILLE,RAD	6710 02	DISC SET-C&D	3834 18	FORK A-1ST&2ND G/S	3260 01
CONTROL UNIT-IMMOBILIZER	4830 33	COVER-GRIP HANDLE,FRT DR	7210 92	DISC-BEVEL GEAR	3270 07	FORK A-G/S,SLIDING	3250 11
	4831 57	COVER-HANDLE,RR DR	7220 56	DISC-BRAKE SOLID,RR	4330 07	FORK-3RD&4TH G/S	3260 04
CONVERTER A-PUP	2460 40	COVER-HOUSING,RAD GRILLE	6710 23	DISC-BRAKE,FRT	4130 06	FORK-G/S,REV	3260 09
CONVERTER-TORQUE	3820 02	COVER-INR,O/S MIRROR	6630 15	DISC-CLU	3110 01	FRAME A	1740 26
CORD-CD CHANGER I/P	5430 08	COVER-INR,T/GATE,LWR	7231 09	DISC-CLU,OTR	3830 07	FRAME A-ROOF,RR	6430 04
CORD-CD CHANGER,RR	5430 09	COVER-INST	5220 02		3831 08	FRAME A-RR S/BACK	7541 04
CORE A-EVAPORATOR	8221 07	COVER-OIL PUMP	1230 09	DISC-DETENT	3825 03	FRAME A-SUN ROOF	6430 08
CORE-HEATER	8212 12		1231 09	DISC-MAINSHAFT	3230 34	FRAME&BEARING A	1740 07
COUPLER A-RAIN SENSOR	5620 47	COVER-OTR,FRT SEAT	7520 09	DISC-SPRING	3830 06	FRAME&STATOR A	1740 24
COVER	1740 27	COVER-P/WDO S/W,FRT DR	7210 33		3831 10	FRAME-COMMUTATOR END	1760 21
	3920 62	COVER-PLASTIC LATCH T/LID	6450 11		3834 02	FRAME-FIELD	1760 17
COVER A-BACK PNL,LWR	7340 19	COVER-RAD GRILLE	6710 14	DISC-TRANSMITTER	1221 17	FRAME-FRT S/BACK	7520 03
	7341 05	COVER-S/COL,LWR	4820 02	DOOR A-FUEL FILLER	6420 02	FRAME-FRT SEAT CUSH	7520 06
COVER A-BLANK	7120 72	COVER-S/COL,UPR	4820 01	DOWEL-GUIDE PIN	7113 18	FRAME-RADIO	5430 10
COVER A-CD CHANGER	7340 55	COVER-SHEET	4130 02	DRIVE A	1760 16	FRAME-SLIP RING END	1740 18
COVER A-CM/SHF	1323 06	COVER-SHROUD	4810 21	DRIVE&SHAFT A	1760 34	FUNNEL A-W/SHIELD WASHER	5330 06
COVER A-CM/SHF,UPR	1321 03	COVER-SIDE,INR	9250 11	DRIVER	9110 03	FUSE-MINI	5620 13
	1323 03	COVER-SIDE,OTR	9250 12	DRUM A-BRAKE,RR	4330 06	FUSE-SLOW BLOW	5620 15
COVER A-CTR PILLAR,OTR	6413 70	COVER-SUPT,L/COMPT	7322 30	DRYER A-RECEIVER	8310 02		
COVER A-CTR,L/COMPT	7321 01	COVER-T/A	3250 16	DUCT A-LEG ROOM,RR	8110 19	= G =	
COVER A-FOG LAMP	6720 05	COVER-TETHER ANCHOR	7310 30	DUCT-AIR,I/P	8110 01		
COVER A-FRT S/BACK	7520 31	COVERING A-RR S/BACK	7540 02			GARNISH A-FRT DR,CTR	6240 05
COVER A-FRT SEAT,INR	7520 46		7541 02	= E =		GARNISH A-HOOD	6110 38
COVER A-G/S	3260 12	COVERING A-RR SEAT CUSH	7540 07			GARNISH A-RR DR,CTR	6340 05
COVER A-I/P,CTR,LWR	7113 07	COVERING-FRT S/BACK	7520 01	ECM	2510 01	GARNISH A-RR DR,RR	6340 07
COVER A-I/P,LWR	7113 06	COVERING-FRT SEAT CUSH	7520 05	ELEMENT A-AIR CLEANER	2410 07	GARNISH-FRONT DOOR,TRIM	7210 31
COVER A-I/P,SIDE	7113 03	COWL A	6150 06	EMBLEM A	6650 01	GARNISH-REAR DOOR,TRIM	7220 37
COVER A-INR,RR DR	6340 10	CRANK A-DR	6320 32	END-TIE ROD	4931 05	GASKET	3820 04
COVER A-P/WDO S/W,RR DR	7220 36	CRANK A-WDO LIFTER	7210 10	ENGINE A	1111 01	GASKET KIT-ENG OVERHAUL	1141 01
COVER A-PWR WDO,FRT DR	7210 71		7220 13		1113 01		1143 01
COVER A-RAIN SENSOR	5620 46	CRANKSHAFT A	1220 07	ESCUTCHEON-FRT DR	7210 62	GASKET-BEARING PLATE	3250 19
COVER A-SWITCH,DIMMER	7120 68		1221 07	ESCUTCHEON-RR DR	7220 40	GASKET-CATAL CONV	2460 10
COVER A-T/A,RR	3824 01	CUSHION	1760 38	EXTENSION-SIDE PNL,OTR	6411 29	GASKET-CM/SHF COVER	1321 08
COVER A-TIMING BELT,LWR	1331 22	CYLINDER 'C'	3834 16		6413 29		1323 07
COVER A-TIMING BELT,UPR	1331 19	CYLINDER A	4510 12	EXTINGUISHER A-FIRE	6510 24	GASKET-COVER PLATE	1510 05
COVER A-TORQUE ROLL AXIS	1333 27		4521 12	EXTRUSION-HARN,RR ABS	4310 30	GASKET-CYL HEAD	1313 23
COVER A-WDO FRAME,INR	6630 04	CYLINDER A-BRAKE MASTER	4620 01			GASKET-CYL HEAD COVER	1311 25
COVER A-WHEEL	6660 02	CYLINDER A-CLU MASTER	4410 01	= F =		GASKET-DIFF GEAR COVER	3220 07
COVER COMPLETET-CM/SHF	1321 16	CYLINDER A-CONCENTRIC SLAVE	4410 36			GASKET-E/MANIF	1531 02
COVER-ASSIST GRIP	7310 15	CYLINDER A-WHEEL BRAKE	4520 03	FAN	1740 05		1533 03
COVER-BACK PNL,LWR	7342 17			FAN A-AUX	2220 15	GASKET-EGR	1713 12
COVER-BLANK	7130 49	= D =		FAN A-MAIN	2220 05	GASKET-EGR ADAPTOR	1311 30
	7220 74			FASCIA A-BUMPER,FRT	6720 02	GASKET-EGR PIPE,VGIS	1521 18
COVER-BLANK ASHTRAY,RR	7141 30	DAM A-AIR,INLET	2410 50	FASCIA A-BUMPER,RR	6730 02	GASKET-EGR VALVE	1311 34
COVER-BLANK,PWR SOCKET	7141 75	DAM A-QUARTER WDO	6641 17		6732 02	GASKET-EGR&IGN ADAPTOR	1713 02
COVER-BLANK,RADIO	7130 23	DAM-GLASS,QUATER	6641 18	FASTENER-SELECTOR CABLE	3920 24	GASKET-ENG VENT	1240 01
COVER-BLANK,TRK OPEN S/W	7210 61	DAM-GLASS,T/GATE	6641 16	FILTER A-AIR	8221 09		1241 01
COVER-BOX,L/COMPT	7322 31	DAMPER A-FRT S/ABS STRUT	4140 13	FILTER A-OIL,ENG	1230 30	GASKET-EXH,FRT PIPE	2460 01
COVER-BRACKET ARMREST	7541 41	DAMPER A-RR S/ABS STRUT	4320 10		1231 18	GASKET-FRT TOOTH BELT	1333 22

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.
GASKET-G/S COVER	3260 21	GROMMET	6110 11	HOSE A-VACUUM,I/MANIF	2453 11	INSERT-OIL PAN PLUG	1231 55
GASKET-I/MANIF	1523 04	GROMMET -WIPER	5320 04	HOSE A-W/SHIELD WASHER	5330 10	INSULATION-B PILLAR	7610 40
GASKET-MASTER BRAKE	4620 19	GROMMET-DOOR	5710 54	HOSE-AIR VENT,CANISTER	2130 14	INSULATION-BACK PNL,UPR	7610 67
GASKET-OIL FILLER	1323 02	GROMMET-DRAIN TUBE	9260 07	HOSE-ASPIRATOR	8212 16	INSULATION-C PILLAR,LWR	6411 57
GASKET-OIL PAN	3824 09	GUARD A-MUD,FRT	6750 01	HOSE-AUX RESONATOR	2411 29	INSULATION-DASH PANEL,OUTER	6150 35
GASKET-OIL PUMP	1230 11	GUARD A-MUD,RR	6750 05	HOSE-BODY WASHER	5330 26	INSULATION-DASH PNL,INR	7610 03
	1231 19	GUIDE-EXH VALVE	1313 14	HOSE-BREATHER	2241 11	INSULATION-DASH PNL,OTR	7610 12
GASKET-PUP CONV	2460 41	GUIDE-INT VALVE	1313 13		2411 05	INSULATION-F/PNL,FRT	7610 05
GASKET-RR MUFFLER	2460 13	GUIDE-VALVE	1311 02	HOSE-DEFROSTER,SIDE	8110 02	INSULATION-F/PNL,RR	7610 20
GASKET-T/A COVER	3250 17			HOSE-EGR	2453 03	INSULATION-FENDER	6140 27
GASKET-T/BODY	1523 11	= H =		HOSE-ENG VENT	1240 05	INSULATION-FUEL TANK	2110 33
GASKET-TORQUE CONV	3820 03				1241 05	INSULATION-HOOD,ENG	6110 16
GEAR	1760 37	HANDLE A-DR,I/S	7210 07	HOSE-FUEL VAPOR VALVE	2453 05	INSULATION-RR SEAT	7610 42
GEAR A	1760 35		7220 07	HOSE-HEATER,FDG	2230 17	INSULATION-SIDE PNL,OTR	6411 56
GEAR A-1ST SPEED	3230 31	HANDLE A-FRT DR,O/S	6220 13		2233 16	INSULATION-STRUT,RR	7610 23
GEAR A-2ND SPEED	3230 19	HANDLE A-RELEASE,T/GATE	6451 33	HOSE-HEATER,RTN	2230 15	INSULATOR	1740 25
GEAR A-3RD SPEED	3230 16		6452 33		2233 17	INSULATOR-FRT SPRING,LWR	4140 12
GEAR A-4TH SPEED	3230 05	HANDLE A-RR DR,O/S	6320 12	HOSE-I/MANIF	2453 04	INSULATOR-FRT SPRING,UPR	4140 09
GEAR A-5TH SPEED	3230 39	HANDLE A-A-SELECTOR CONT	3920 02	HOSE-MANIF&DISTR	2230 18	INSULATOR-RR SPRING,LWR	4320 07
GEAR A-CR/SHF	1331 17	HANDLE A-T/GATE	6451 01	HOSE-PCV	1321 21	INSULATOR-RR SPRING,UPR	4320 05
GEAR A-DIFF	3850 04		6452 01	HOSE-PIPE&WATER PUMP	2230 05	INSULATOR-STRUT RR	4320 30
GEAR A-DRIVEN,SPEEDOMETER	3220 21	HANDLE A-T/GATE,LWR	7231 12		2233 05		
GEAR A-INPUT SHF CLUSTER	3240 03	HANDLE A-T/LID	6450 01	HOSE-RAD&SURGE TANK	2230 07	= J =	
GEAR A-REV IDLER	3240 11	HANDLE-T/GATE,LWR	7232 08		2233 07		
GEAR A-SLIDING	3230 24	HEAD A-CYL	1311 01	HOSE-RAD,LWR	2230 02	JACK A	9110 04
GEAR A-SPUR	3832 02		1313 01		2233 02	JACK-LEVER	9110 05
GEAR A-STRG	4910 01	HEAD COMPLETE-CYL	1311 42	HOSE-RAD,UPR	2230 01	JET	4520 05
GEAR A-SUN,FRT	3833 05	HEADLINING A	7310 01		2233 01	JOINT A-BOLL	6441 10
GEAR A-SUN,RR	3833 10	HEADREST A-FRT SEAT	7520 07	HOSE-RR WASHER	5330 13		6442 08
GEAR-AXLE SHF BEVEL	3270 05	HEADREST A-RR SEAT	7541 57	HOSE-SURGE TANK&PIPE	2230 06	JOINT SET-BALL ,CONT ARM	4150 02
GEAR-BEVEL DIFF	3270 06	HEADREST A-RR SEAT,CTR	7541 61		2233 06	JOINT SET-INR	4120 02
GEAR-CLUSTER 5TH SPEED	3240 08	HINGE A-DR	6220 22	HOSE-T/BODY	2453 07	JOINT SET-OTR	4120 01
GEAR-CM/SHF	1331 09		6320 20	HOSE-T/BODY&CAM COVER	2453 01		
	1333 16	HINGE A-HOOD	6110 03	HOSE-T/BODY,FDG	2230 20	= K =	
GEAR-CR/SHF	1231 36	HINGE A-RR S/BACK,FOLDING	7541 56		2233 15		
GEAR-DRIVEN WORM	3270 03	HINGE A-T/GATE	6441 03	HOSE-T/BODY,RTN	2233 14	KEY-1ST&2ND SYN	3230 27
GEAR-HELICAL DIFF	3270 02		6442 02	HOSE-VENT	8110 08	KEY-5TH SPEED SYN	3230 45
GEAR-OIL PUMP	1231 08	HINGE A-T/LID	6440 05	HOSE-WATER DRAIN	8212 26	KEY-BLANK	6460 05
GEAR-PLANETARY DRIVE	3833 01	HOLDER A-BATTERY	5610 02	HOUSING A-ASHTRAY,CNSL	7141 11	KEY-SYN	3230 11
GEAR-PLANETARY,FRT	3833 03	HOLDER A-CARD	7120 29	HOUSING A-BYPASS	1683 04	KEY-VALVE	1311 16
GEAR-PLANETARY,RR	3833 08	HOLDER A-CUP	7141 43	HOUSING A-CLUSTER	7120 01	KEY-WOODRUFF	1221 19
GEAR-RING,FRT	3833 02	HOLDER A-SUNGLASS	7310 37	HOUSING A-RAD GRILLE	6710 03	KNEE BOLSTER A-DRV	7150 01
GLASS A-BACK WDO	6640 06	HOLDER-BRUSH	1760 18	HOUSING A-STRG LOCK	4830 13	KNOB-GUIDE RAIL,FRT SEAT	7530 40
GLASS A-MIRROR	6630 06	HOLDER-NUT,P/BRAKE	4530 06		4831 18	KNOB-LOCK,RR BACK	7541 43
GLASS A-PNL	9250 03	HOOD A-FRT TOOTH BELT	1333 21	HOUSING A-T/A	3821 01	KNUCKLE A-RR	4330 01
GLASS A-QUARTER WDO,RR	6640 22	HOOD A-RR TOOTH BELT	1333 04	HOUSING A-THERMOSTAT	1681 07	KNUCKLE A-STRG	4130 01
GLASS A-T/GATE	6641 06	HOOK	2410 26	HOUSING-DIFF GEAR	3270 01		
GLASS A-W/SHIELD	6640 01		6140 26	HOUSING-TORQUE CONV	3820 01	= L =	
GLASS RUN-FRT DR	6240 01		7340 25	HUB UNIT-FRT	4130 05		
GLASS RUN-RR DR	6340 01		7540 61	HUB UNIT-RR	4330 03	LABEL-AUDIO WARNING	6670 17
GLASS-DROP WDO,FRT DR	6640 10	HOOK A-SERVICE MAT	7610 41	HYDROMOUNT	4190 21	LABEL-CHILD SECURITY LOCK	6670 06
GLASS-DROP WDO,RR DR	6640 11	HORN A	5410 01			LABEL-ECE	6670 41
GRILLE A-DEFROSTER,SIDE	7113 11	HOSE A-AIR CLEANER,OTLT	2411 01	= I =		LABEL-FUEL ECONOMY	6670 14
GRILLE A-RAD	6710 01	HOSE A-BRAKE,FRT	4652 01			LABEL-FUSE BOX	5620 03
GRILLE-TWEETER	5410 44	HOSE A-BRAKE,RR SHORT	4652 21	IACV&THROTTLE KIT	1510 04	LABEL-IMMOBILIZER	6670 16
GRIP A-ASSIST	7310 05	HOSE A-REF,DISCHARGE	8340 05	IDLER	8331 14	LABEL-KYLESS	6670 30
GRIP-LUMBAR SUPT SEAT	7520 29	HOSE A-REF,SUCT	8340 04	INJECTOR A-FUEL	1411 11	LAMP A-EXTN	5140 20
GRIP-RECL FRT SEAT	7520 22	HOSE A-REF,SUCT FROM EVAP	8340 01		1413 02	LAMP A-FOG,FRT	5110 11
GROMMET	1230 32	HOSE A-RESERVOIR	5330 04	INSERT A-VENT	6410 35	LAMP A-HEAD	5110 01
	4440 02	HOSE A-RESERVOIR TANK	4410 25		6411 35	LAMP A-HIGH MT STOP	5140 13
	4931 20	HOSE A-T/GATE	5330 17		6413 35	LAMP A-LICENSE	5140 09
	4950 24	HOSE A-VACUUM	2451 05	INSERT-OIL PAN PLUG	1230 27	LAMP A-MAP,FRT	5410 09

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.
LAMP A-PASS COMPT	5410 21	MANIFOLD A-EXH	1531 01	NUT	1753 07	NUT	7113 48
LAMP A-ROOM,CTR	5410 17		1533 01		1760 19		7120 80
LAMP A-ROOM,LUGGAGE	5410 46	MANIFOLD A-INT	1521 01		2110 13		7210 15
LAMP A-RR COMB	5140 01		1523 01		2230 13		7220 17
LAMP A-T/SIG,SIDE	5110 17	MAT-CNSL BODY	7141 15		2233 39		7231 04
LATCH A-FRT DR	6220 01	MECHANISM	9250 05		2451 14		7232 03
LATCH A-HOOD	6130 06	MIRROR A-I/S,TILT	7350 01		2460 03		7330 44
LATCH A-RR DR	6320 01	MIRROR A-O/S	6630 01		2510 07		7340 29
LATCH A-RR S/BACK	7541 20	MODULE A-A/C	8212 01		2520 26		7341 11
LATCH A-T/GATE	6451 03	MODULE A-ABS	4710 27		3832 08		7342 12
	6452 03	MODULE A-AIR BAG,DRIVER	5510 01		3910 17		7520 50
LATCH A-T/LID	6450 03	MODULE A-AIR BAG,PASS	5510 02		3920 21		7541 44
LENS-INST	5220 03	MODULE A-AIR BAG,SIDE	7520 49		4130 08		7610 16
LETTERING A-BRAND	6650 04	MODULE A-ANTENNA GLASS	5420 22		4140 02		8340 10
LETTERING A-CAR LEVEL	6650 05	MODULE A-CHIME BELL	5620 10		4150 11		9210 02
LETTERING A-CAR NAME	6650 03	MODULE A-EVO	4831 45		4190 06		
LEVER	1760 04	MODULE A-FOLDING MIRROR	5620 32		4310 12	= O =	
LEVER A-ACCEL PEDAL	4440 04	MODULE A-FUEL PUMP	2110 02		4320 02		
LEVER A-HOOD RELEASE	6110 07	MODULE A-GLASS ANTENNA	5420 14		4410 31	OIL DAM	3831 13
LEVER A-P/BRAKE	4530 01	MOLDING A-BACK GLASS	6640 07		4420 07	OIL-A/T	9120 03
LEVER A-REV	3260 28	MOLDING A-GARNISH	7120 57		4430 08	OIL-ENG	9120 01
LEVER A-SELECTOR CONT	3920 01	MOLDING A-GLASS,T/GATE	6641 07		4440 05	OIL-M/T	9120 02
LEVER A-T/LID&FUEL FILLER	6420 10	MOLDING A-I/P,CTR	7130 10		4530 05	OIL-P/STRG	9120 04
LEVER-ACCEL PEDAL	4440 06	MOLDING A-OTR CHANNEL,FRT	6240 04		4610 04		
LEVER-ARM	1521 31	MOLDING A-OTR CHANNEL,RR	6340 04		4620 06	= P =	
LEVER-G/S INTER	3260 16	MOLDING A-PROTV,FRT DR	6610 01		4652 27		
LID A-CNSL,RR	7141 05	MOLDING A-PROTV,RR DR	6610 02		4710 16	PAD A-RR S/BACK	7540 03
LIGHTER A-CIGAR	7130 33	MOLDING A-ROOF	6430 06		4830 02		7541 03
LIN-CLU DISC	3830 08	MOLDING A-W/SHIELD	6640 02		4831 07	PAD A-RR SEAT CUSH	7540 08
	3831 07	MOTOR A-P/WDO	6230 02		4910 05	PAD KIT-FRT BRAKE	4510 02
	6140 10		6330 02		4931 06	PAD KIT-RR BRAKE	4521 02
LINER A-FENDER	6140 10		6330 02		4950 39	PAD-FRT S/BACK	7520 02
LINER A-RR BUMPER	6750 08	MOTOR A-WIPER,FRT	5310 01		5110 06	PAD-FRT SEAT CUSH	7520 04
LINING A-F/PNL,TRK	7610 43	MOTOR A-WIPER,RR	5320 01		5140 06	PAD-PEDAL,ACCEL CONT	4440 07
LINING KIT-BRAKE,RR	4520 18	MOTOR&DRIVE GEAR A	9250 13		5310 04	PAD-ROOF RACK,CTR	6430 13
LINING-F/PNL	7610 01	MOTOR-BLOWER	8221 02		5320 05	PAD-ROOF RACK,FRT	6430 12
LINING-INSERT,CNSL	7141 10	MOTOR-IACV	1510 02		5330 09	PAD-ROOF RACK,RR	6430 14
LINK A-FRT STABILIZER	4150 18	MOTOR-INTAKE	8221 04		5410 08	PAN A-OIL,ENG	1230 23
LINK A-MAIN	8212 17	MOTOR-MODE	8212 03		5430 14		1231 29
LINK A-PARALLEL,FRT	4310 02	MOTOR-TEMP	8212 10		5510 04	PAN A-OIL,T/A	3824 08
LINK A-PARALLEL,RR	4310 03	MUFFLER A-EXH,FRT	2460 11		5610 05	PANEL A-BACK,LWR	6520 15
LINK A-RR STABILIZER	4310 11	MUFFLER A-EXH,RR	2460 12		5620 05	PANEL A-BACK,UPR	6440 09
LINK A-TEMP	8212 18				6110 39	PANEL A-CENTER PILLAR,INR	6410 48
LINK A-TRAILING,RR	4310 14	= N =			6130 34	PANEL A-CTR PILLAR,INR	6411 66
LINKAGE A-WIPER	5310 06				6140 19		6413 66
LOCATING-PIECE	6640 05	NECK-WATER,INLET	1210 06		6230 04	PANEL A-DASH,LWR	6150 02
LOCATOR-FRT SPRING	4140 08		1211 04		6330 03	PANEL A-DASH,UPR	6150 01
LOCK A-GLOVE BOX	7113 19	NET A-F/PNL	7322 22		6413 71	PANEL A-FENDER	6140 01
LOCK SET-CAR	6460 01	NET A-L/COMPT	7322 12		6430 10	PANEL A-FLR,SIDE	6510 04
LOCK SET-DR	6460 03	NOZZLE A-OTR	7120 38		6441 05	PANEL A-FRT DR	6210 01
LOCK SET-GLOVE BOX	6460 06	NOZZLE A-RR WASHER	5330 14		6442 03	PANEL A-FRT FLR	6510 01
LOCK SET-STRG	6460 02	NOZZLE A-VENT,CTR	7120 51		6450 02	PANEL A-FRT,SIDE	6130 04
LOCK SET-T/LID	6460 04	NOZZLE A-W/SHIELD WASHER	5330 11		6451 02	PANEL A-FRT,UPR	6130 02
LONGITUDINAL A-FLR,LWR	6510 10	NUT	1321 18		6452 02	PANEL A-HOOD	6110 01
LONGITUDINAL A-FRT	6530 02		1333 11		6510 28	PANEL A-INST,MAIN	7113 02
LONGITUDINAL A-RR	6530 10		1411 24		6640 12	PANEL A-INST,UPR	7113 01
			1521 16		6660 13	PANEL A-QUARTER,INNER	6410 51
= M =			1523 06		6710 05	PANEL A-QUARTER,INR	6411 68
			1531 03		6720 13		6413 68
MAGAZINE-CD	5430 07		1533 05		6730 07	PANEL A-RELEASE,R/CASSETTE	5430 22
MAGNET	3220 20		1711 02		6732 07	PANEL A-ROOF	6430 01
	3250 18		1740 02		6750 03	PANEL A-RR DR	6310 01
	3820 07		1751 06				

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.
PANEL A-RR FLR	6520 01	PIN-DIFF SPRING	3270 09	PLATE-FIXING	3860 12	RECTIFIER	1740 15
PANEL A-SIDE,COMPL	6410 01	PIN-DOWEL	3220 02	PLATE-GUARD	3260 17	REFLECTOR A-REFLEX,RR	5140 34
	6411 01		3250 07	PLATE-LOCKING	3270 17	REFLECTOR A-WARNING	9110 13
	6413 01	PIN-P/BRAKE	4530 09	PLATE-OIL BAFFLE	3820 05	REGULATOR	1740 13
PANEL A-T/GATE	6441 01	PIN-PISTON	1220 02	PLATE-PRESSURE	1331 28	REGULATOR&BRUSH A	1740 29
	6442 01		1221 02	PLATE-TYPE	3821 08	REGULATOR-FRT SEAT	7520 12
PANEL A-T/LID	6440 01	PIN-PIVOT	7541 12	PLAYER-CD	5430 03	REGULATOR-RECL,FRT SEAT	7520 39
PANEL-FRT DR,OTR	6210 02	PINION-STOP	1760 15	PLUG	1210 12	REGULATOR-WDO,FRT	6230 01
PANEL-PILLAR,SIDE,OTR,CTR	6410 06	PIPE A-BRAKE HYD UNIT	4652 14		1211 10	REGULATOR-WDO,RR	6330 01
	6413 06	PIPE A-BRAKE,FRT	4652 11		1230 06	REINF A	4310 58
PANEL-PILLAR,SIDE,OTR,FRT	6410 05	PIPE A-BRAKE,RR 2ND	4652 17		1231 06	REINF A-CTR PILLAR	6410 10
	6413 05	PIPE A-BRAKE,RR 3RD	4652 19		1311 09		6411 10
PANEL-PILLAR,SIDE,OUT,CTR	6411 06	PIPE A-BRAKE,RR SHORT	4652 20		1313 05		6413 10
PANEL-PILLAR,SIDE,OUT,FRT	6411 05	PIPE A-BRAKE,RR,1ST	4652 15		1531 09	REINF A-GLOVE BOX,LWR	7113 10
PANEL-ROCKER	6410 07	PIPE A-CLU MASTER CYL	4410 04		1533 11	REINF A-GLOVE BOX,UPR	7113 09
	6411 07	PIPE A-CONCETRIC SLAVE	4410 33		1760 06	REINF A-ROCKER,RR	6410 49
	6413 07	PIPE A-ENG VENT	1240 03		3220 19		6411 36
PANEL-RR DR,OTR	6310 02		1241 03		3250 10		6413 36
PANEL-RR FLR,FRT	6520 04	PIPE A-EXH,FRT	2460 08		3260 23	REINF A-STRICKER,RR,PILLAR	6413 41
PANEL-RR FLR,RR	6520 05	PIPE A-LIQUID,CONDENSER	8340 02		3860 04	REINF A-STRIKER,G/BOX	7113 08
PANEL-SIDE,INR,RR	6410 15	PIPE A-MASTER BRAKE,2ND	4652 10		4320 31	REINF A-STRIKER,RR,PILLAR	6410 41
	6411 50	PIPE A-MASTER BRAKE,PRIM	4652 09		4520 21		6411 41
	6413 50	PIPE A-OIL COOLER,INL	2241 03		6140 28	REINF A-TUNNEL	6510 03
PANEL-SIDE,OTR	6410 03		2242 03		6150 18	REINF-FRT FASCIA,SIDE	6720 18
	6413 03	PIPE A-OIL COOLER,OTLT	2241 01		6510 14	REINF-ROCKER PNL	6410 11
PANEL-SIDE,OTR,LWR	6410 40		2242 01		6520 22		6411 11
PANEL-SIDE,OTR,RR	6410 08	PIPE A-OIL SUCT	1230 18		6530 20		6413 11
	6413 08		1231 21		9260 09	REINF-RR FASCIA,SIDE	6730 37
PANEL-SIDE,OUT	6411 03	PIPE A-P/STRG GEAR	4931 13	PLUG-OIL	3820 13		6732 37
PANEL-SIDE,OUT,RR	6411 08	PIPE A-PRESSURE	4950 51	PLUG-PRESSURE	3820 11	REINF-RR FASCIA,SPACER	6730 39
PANEL-SIDE,ROOF	6410 04	PIPE A-RTN FLOW	4950 20	PLUG-SCREW	3824 06	REINFORCING-DISC	1221 14
	6411 04	PIPE A-SUCT	4950 58	PLUNGER-VALVE, PRESSURE	1231 03	RELAY A	5620 21
	6413 04	PIPE A-VACUUM	2451 02	PLUNGER-VALVE,PRESSURE	1230 03	RELAY A-COOLING FAN	5620 19
PANEL-TAIL LAMP HOUSING	6411 22	PIPE-BREATHER	3821 06	PROTECTOR-BLEEDER	4510 07	RELAY A-CTR DR LOCK	5620 07
	6413 22	PIPE-EGR PASSAGE	1521 10		4521 07	RELAY A-DRL	5620 23
PATCH A-RR FLR,SIDE	6520 46	PIPE-FUEL FDG,CTR	2120 03	PROTECTOR-FILTER,FUEL	2120 52	RELAY A-T/SIG	5620 18
PATCH-TAIL LAMP HOUSING	6410 21	PIPE-HEATER TAKE OFF	1311 26	PULLEY	1740 03	RESERVOIR A-P/STRG OIL	4950 02
PAWL	3825 07	PIPE-LIQUID,EVAPORATOR	8340 03	PULLEY-CR/SHF	1331 27	RESERVOIR A-W/SHIELD	5330 01
PAWL-G/S ROD	3260 08	PIPE-PURGE,CTR	2130 04	PULLEY-IDLER	1331 14	RESERVOIR BODY	4620 03
PEDAL A-BRAKE	4430 01	PIPE-RAD,PUMP	2230 03	PUMP A-OIL,ENG	1231 01	RESISTOR A-COOLING FAN	5410 25
PEDAL A-CLU	4420 03	PIPE-WATER	2233 03	PUMP A-OIL,ENGINE	1230 01	RESISTOR-BLOWER	8221 03
PEDAL UNIT-CLU	4420 01	PISTON	1220 01	PUMP A-OIL,T/A	3822 01	RESONATOR A	2410 13
PEDAL-BRAKE	4430 02		3831 21	PUMP A-P/STRG	4950 01	RESONATOR A-2ND	2411 15
PIECE A-CONN,FRT PNL,UPR	6530 54	PISTON 'B'	3831 31	PUMP A-W/SHIELD WASHER	5330 03	RESONATOR A-AUX	2411 08
PIECE A-CONN,SIDE,OTR	6411 65	PISTON 'C'	3834 15	PUMP A-WATER	1331 01	RESONATOR A-EXH,FRT	2460 39
	6413 65	PISTON 'D'	3830 01		1333 01	RESTRAINT A-L/COMPT	7322 23
	3260 07		3834 01				7342 03
PIECE-5TH SPEED ENGAGING	4810 23	PISTON 'E'	3831 16			RESTRICTOR-OIL	4950 69
PIECE-ADDITIONAL	1230 31	PISTON&PIN A	1221 01			RETAINER	1311 15
PIECE-CONN	1231 13	PIVOT A-SUPT HOOD	6130 11	RACK A-ROOF	6430 09		1313 19
PIECE-END,FRT SEAT,FRT	7530 20	PLATE A-BEARING	3832 01	RADIATOR A	2210 01		2120 15
PIECE-END,FRT SEAT,RR	7530 22	PLATE A-FLEXIBLE	1220 12	RAIL A-FUEL	1411 06		5140 08
PILLAR A-FRT	6410 12		1221 12		1413 01	RETAINET	6413 73
	6411 12	PLATE A-TIMING BELT BACK	1331 04	RAIL A-GUIDE,FRT DR,FRT	6230 07	RING A-LIGHT	7130 22
	6413 12	PLATE-BEARING	3250 05	RAIL A-GUIDE,FRT SEAT,OTR	7530 46	RING SET-PISTON	1220 03
PIN	3260 29		3832 04	RAIL A-GUIDE,RR DR	6330 06		1221 03
	3825 08	PLATE-BRAKEBACKING	4520 02	RAIL A-W/SHIELD HEADER	6430 02	RING-3 CONE INTER	3230 22
	3910 11	PLATE-BUMPER	4140 30	RAIL-FUEL	1411 26	RING-ADJUST	3832 06
	4610 02	PLATE-CAMBOLT	4310 46	READJUSTING UNIT	4520 13	RING-CLUSTER BEARING	3240 06
PIN-BLOCKING	3250 08	PLATE-CARRIER	6640 03	RECLINER A-FRT SEAT	7530 03	RING-CPLIT	2110 40
PIN-CM/SHF GEAR	1323 11	PLATE-CLOSING EGR	1311 38	RECLINER A-INR	7530 44	RING-DIFF BEARING	3270 12
PIN-COILED	3260 03	PLATE-CLU	3831 06	RECLINER A-OTR	7530 43	RING-E	3920 22

= R =

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.
RING-E	4420 13	ROD-3RD&4TH G/S	3260 05	SCREW	5110 16	SEAL-EGR	1521 26
	4430 21	ROD-ACTUATOR,T/GATE	6451 14		5140 11	SEAL-INNER COVER,FRONT DR	7210 58
	4440 03		6452 14		5220 22	SEAL-INNER COVER,RR DR	7220 57
	4610 05	ROD-G/S CONT	3910 09		5410 07	SEAL-OIL DUCT PLUG	1231 11
	4652 04	ROD-HANDLE,T/GATE	6451 32		5420 20	SEAL-OIL PUMP	3822 02
RING-EXH VALVE SEAT	1311 04		6452 10		5440 07	SEAL-PILLAR	6410 53
	1313 12	ROD-HOLDER	5610 03		5510 12		6411 58
RING-GEAR,OIL PUMP	1231 07	ROD-I/S HANDLE,FRT DR	6220 05		5620 11		6413 58
RING-I/S SYN	3230 21	ROD-I/S HANDLE,RR DR	6320 03		6140 11	SEAL-PORT	1521 25
RING-INT VALVE SEAT	1311 03	ROD-KEY CYL,DR	6220 03		6220 11	SEAL-ROOF RACK,UPR	6430 11
	1313 11	ROD-KEY CYL,T/GATE	6451 04		6240 06	SEAL-RR FASCIA	6730 34
RING-LOCKING	1760 14		6452 04		6250 04	SEAL-SHF	3821 03
	2110 04	ROD-LATCH,TRK,PULL	6450 04		6320 10	SEAL-SPONGE	7113 22
RING-O	1231 40	ROD-LOCKING,RR DR	6320 04		6340 06		8221 11
	1321 13	ROD-O/S HANDLE,FRT DR	6220 15		6413 72	SEAL-T/BODY	1521 24
	1323 08	ROD-O/S HANDLE,RR DR	6320 14		6420 04		2411 22
	1411 12	ROD-PULL P/BRAKE CABLE	4530 04		6450 15	SEAL-TIMING COVER,UPR	1331 20
	1413 03	ROD-REV G/S	3260 10		6451 10	SEAL-TRIM,FRT DR	7210 13
	1510 06	ROD-TIE END	4910 17		6452 05	SEAL-TRIM,RR DR	7220 02
	2110 03	ROLLER A-GUIDE	1333 09		6460 12	SEAL-VALVE STEM	1311 13
	3220 12	ROOF A-SUN	9250 01		6610 17		1313 16
	3270 14	ROTOR	1740 08		6630 02	SEAT A-FRT	7510 01
	3820 09	ROTOR-OIL PUMP,INR	1230 08		6640 13	SEAT A-FRT BACK	7520 17
	3822 04	ROTOR-OIL PUMP,OTR	1230 07		6710 04	SEAT A-FRT CUSH	7520 18
	3824 03	RUBBER-HANGER	2460 15		6720 08	SEAT A-FRT SPRING,UPR	4140 06
	3830 02	RUBBER-PROTV	4330 18		6730 16	SEAT A-RR BACK	7540 01
	3831 12				6732 16		7541 01
	4950 05	= S =			6750 02	SEAT A-RR CUSHION	7540 06
	5330 21				7113 32	SEAT-ROD HOOD,HOLD OPEN	6110 13
	8340 08	SAVER UNIT-BATTERY	5620 52		7120 02	SEAT-UPR SPRING,RR	4320 14
RING-O/S SYN	3230 23	SCRAPER-OIL PAN	1231 26		7130 03	SEAT-VALVE SPRING	1313 15
RING-PISTON	3824 02	SCREW	1220 23		7141 09	SENDER-FUEL	2110 36
	3831 02		1221 18		7210 09	SENSOR A-AIR TEMP	1521 23
RING-RETAINING	3230 35		1230 10		7220 12		2411 04
	3240 05		1231 10		7231 03	SENSOR A-AMBIENT	8352 09
	3260 20		1311 06		7232 02	SENSOR A-CM/SHF POSITION	1331 42
	3831 11		1313 07		7330 20	SENSOR A-CM/SHF POSITON	1333 31
	4130 04		1323 05		7340 28	SENSOR A-COOLANT TEMP	1311 21
RING-SEAL	1230 05		1333 03		7341 10		1713 06
	1231 05		1413 16		7342 02	SENSOR A-CR/SHF POSITION	1231 39
RING-SEAL,THERMOSTAT	1681 01		1521 36		7350 03		1331 32
	1683 02		1523 07		7520 38	SENSOR A-DISTANCE	2510 09
RING-SEAL,WATER PUMP	1331 02		1740 12		7541 15	SENSOR A-EXH GAS	1531 07
	1333 02		1760 11		7550 15		1533 08
RING-SHAFT SEAL	1220 09		2110 22		7610 51		2460 43
RING-SHF SEAL	1313 04		2411 20		8110 03	SENSOR A-INDUCTIVE	3860 07
	3270 13		2460 29		8212 31	SENSOR A-MAP	1521 37
RING-SNAP	3831 03		3220 08		8350 19		1523 13
	3833 06		3250 13		8352 06		2451 22
	3834 17		3820 06		9250 07	SENSOR A-RAIN	5620 45
RING-STOP	3830 05		3822 06	SEAL	1333 23	SENSOR A-RESERVOIR	4620 29
	3831 25		3832 05		5330 02	SENSOR A-SUN	7130 51
RING-SYN	3230 07		3860 11	SEAL-AXLE SHF	3821 04	SENSOR A-TEMP	1713 05
RING-WASHER RETAINING	3230 04		3920 52		3850 07	SENSOR A-WATER	8212 09
RIVET	4150 32		4130 09	SEAL-BYPASS	1683 05	SENSOR A-WHEEL EVO,COLUMN	4831 28
ROD A-CONN	1220 04		4330 08	SEAL-CM/SHF,FRT	1321 11	SENSOR A-WHEEL SPEED,FRT	4710 03
	1221 04		4510 08	SEAL-COVER,LWR	1331 25	SENSOR-AIR BAG	5510 06
ROD A-G/S	3260 13		4521 08	SEAL-COVER,UPR	1331 21	SENSOR-AIRBAG,SIDE	5510 26
ROD A-REACTION	4190 91		4810 20	SEAL-CPLIT	2110 39	SENSOR-KNOCK	1210 13
ROD A-REACTION,LWR	4190 69		4820 03	SEAL-CR/SHF,FRT	1230 02		1523 17
ROD A-SUPT,HOOD	6130 10		4830 34		1231 02	SENSOR-ROUGH ROAD	2510 14
ROD-1ST&2ND G/S	3260 02		4831 34	SEAL-CR/SHF,RR	1221 10	SENSOR-SPEED,OUTPUT	3821 10

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.	PART NAME	KEY No.
SENSOR-THROTTLE POSITION	1510 03	SPEAKER A-RR	5410 23	SUPPORT A-L/COMPT,FRT	7322 05	TRAY A-BATTERY	6140 04
SHACKLE-ALTERNATOR	1751 07	SPEAKER-BALANCE TWEETER	5410 05	SUPPORT A-ROOF,CTR	6430 03	TRAY A-L/COMPT	7322 29
	1753 01	SPOILER A-RR	9210 01	SUPPORT A-ROOF,FRT	6430 17	TRAY A-L/COMPT,SIDE	7342 15
SHACKLE-ENG TRANSPORT	1111 02	SPONGE-OIL RESERVOIR	4950 64	SUPPORT A-ROOF,RR	6430 05	TRAY A-UNDER,FRT SEAT	7610 50
	1113 02	SPRING	4430 07	SUPPORT A-STAY,OTR	6530 50	TRAY-ASHTRAY,I/P	7130 13
SHAFT	1760 36		4440 09	SUPPORT-ALTERNATOR	1753 03	TRAY-JACK&TOOL	9110 11
SHAFT A-AXLE,FRT	4110 01		4520 14	SUPPORT-C/MBR RAD,OTR	6530 04	TRAY-OIL	3833 04
SHAFT A-INPUT	3831 18	SPRING A-CLOCK	5510 11	SUPPORT-ENG MT BRACKET	1331 38	TRIM A-A PILLAR	7330 09
SHAFT A-INTERM	4910 03	SPRING KIT	4520 24		1333 07	TRIM A-B PILLAR,LWR	7330 06
SHAFT A-MAIN,T/A	3230 02	SPRING-1ST&2ND SYN	3230 28	SUPPORT-I/MANIF	1523 08	TRIM A-B PILLAR,UPR	7330 10
SHAFT A-SIDE	3850 01	SPRING-3&4TH SYN	3230 12	SUPPORT-I/P,UPR	7113 14	TRIM A-BACK PANEL,UPPER	7320 16
SHAFT COMPLETE-INPUT	3831 33	SPRING-5TH SPEED SYN	3230 46	SUPPORT-RR BUMPER,UPR	6732 20	TRIM A-C PILLAR	7330 12
SHAFT-DIFF GEAR	3270 08	SPRING-BTSl	3920 56	SWITCH A-A/C CONT	8350 01	TRIM A-D PILLAR	7330 35
SHAFT-INPUT DRIVE	3240 02	SPRING-CMPR	3250 09		8352 01	TRIM A-FRT DR	7210 01
SHAFT-PEDAL	4430 05		3260 18	SWITCH A-AUDIO REMOCON	4810 19	TRIM A-ROCKER PNL,FRT	7330 48
SHAFT-REV IDLER GEAR	3240 12	SPRING-CUP	3830 04	SWITCH A-BACK UP LIGHT	3220 24	TRIM A-ROCKER PNL,RR	7330 49
SHAFT-SELECTOR	3825 01		3831 14	SWITCH A-CENTRAL LOCK,DR	7210 93	TRIM A-RR DR	7220 01
SHELF A-BACK PNL,UPR	7320 01	SPRING-FRT	4140 11	SWITCH A-CONTACT,DR	6220 10	TRIM A-SHROUD,SIDE	7330 01
SHELF A-L/COMPT	7322 11	SPRING-GAS,OPERATION	6442 09		6320 09	TRIM A-SIDE PNL,RR	7340 04
SHIELD	1740 30	SPRING-GAS,T/GATE	6441 09	SWITCH A-CONTACT,HOOD	5440 08		7341 01
	1760 39	SPRING-LEG	3825 06	SWITCH A-HAZARD LIGHT	7120 05		7342 01
SHIELD A-HEAT,E/MANIF	1531 06	SPRING-OIL RELIEF	1230 04	SWITCH A-HEAD LAMP,LEVEL	7120 17	TRIM A-T/GATE,LWR	7231 06
	1533 06		1231 04	SWITCH A-HOLD MODE	7141 50		7232 06
SHIELD-CATAL CONV PROTV	2460 16	SPRING-PAD	4510 06	SWITCH A-IGN	4830 14	TRIM A-T/GATE,SIDE	7231 11
SHIELD-FRT MUFFLER PROTV	2460 18		4521 06	SWITCH A-KEY REMINDER	4830 16		7232 05
SHIELD-FUEL FILLER	2110 12	SPRING-POSITIONING	3920 51		4831 22	TRIM A-T/GATE,UPR	7231 01
SHIELD-OIL RESERVOIR	4950 15	SPRING-RR	4320 06	SWITCH A-LIGHT	7113 20		7232 01
SHIELD-RR MUFFLER PROTV	2460 20	SPRING-SLIDE BLOCK	9250 08	SWITCH A-MIRROR ADJUST	6630 11	TRIM A-W/H,FRT	7330 45
SHIM	3821 13	SPRING-VALVE	1311 14	SWITCH A-MIRROR,FOLDING	6630 10	TRIM-T/LID,INR	6440 16
	3824 05		1313 17	SWITCH A-OIL PRESSURE	1230 16	TUBE A-FUEL FILLER	2110 08
SHOE A-P/BRAKE	4530 14	STAND A-SPARE WHEEL	6520 06		1231 15	TUBE A-FUEL VAPOR	2130 01
SHOE-G/S	3250 12	STARTER A	1760 01	SWITCH A-PARK&NEU	3821 15	TUBE A-SUPPLY,FUEL	2120 42
SHORT BLOCK A	1120 01	STATOR	1740 09	SWITCH A-PUSH	8350 33	TUBE-DRAIN,SUNROOF,FRT	9260 05
	1121 01	STAY A-FRT BUMPER	6720 41	SWITCH A-SIGNAL&LIGHT	4810 06	TUBE-DRAIN,SUNROOF,RR	9260 06
SIREN A-RKE&ATAS	5440 06	STICK A-OIL GAUGE,ENG	1210 08	SWITCH A-STOP LAMP	4430 04	TUBE-FUEL FDG,RR	2120 01
SLEEVE	1210 07		1211 08	SWITCH A-TRK OPEN	7210 59	TUBE-FUEL FILTER,FRT	2120 07
	1211 05	STICKER A/C	6670 09	SWITCH A-UNLOCK,KEY CYL	6450 16	TUBE-FUEL FILTER,RR	2120 05
	1230 12	STICKER-COOLING FAN	2220 07	SWITCH A-WARNING,P/BRAKE	4530 03	TUBE-OIL LEVEL STICK	1210 09
	1231 20	STICKER-DR FUEL FILLER	6670 31	SWITCH A-WDO LIFTER	7210 34	TUBE-PURGE,ENG	2130 06
	3220 04	STICKER-TIRE PRESSURE	6670 07	SWITCH A-WIPER	4810 05	TUBE-PURGE,FRT	2130 05
	3822 05	STIFFENER-DASH,UPPER	6150 29	SWITCH-HEADLAMP&DIMMER	7120 15	TUBE-PURGE,RR	2130 03
SLEEVE A-5TH SPEED SHIFT	3230 42	STOPPER-SUNSHADE,RR	9250 20	SWITCH-IGN	4831 19	TUBE-VAPOR,CANISTER	2130 02
SLEEVE A-SHIFT	3230 08	STRAP	1523 21				
SLEEVE-CLAMPING	3825 04		2110 07	= T =		= V =	
SLEEVE-DETENT	3250 24		2453 09				
SLEEVE-HEADREST	7520 08		5710 38	TANK A-FUEL	2110 01	V BELT	1130 01
	7541 58		7321 02	TANK A-VACUUM,VGIS	2451 11	VALVE A-BYPASS	1210 10
SLEEVE-NEEDLE	3240 01	STRIKER A-DR	6220 16	TANK-SURGE	2230 08		1231 14
SLEEVE-SEALING	3821 05		6320 16		2233 08	VALVE A-EGR	1311 35
SLIDER A-STEP GATE	3920 55	STRIKER A-HOOD	6110 30	TAPPET-HYD	1311 17		1713 10
SNORKEL-AIR CLEANER	2410 19	STRIKER A-LATCH,T/GATE	6451 07	TCM	2510 02	VALVE A-EGR SOL	1713 23
SOCKET A-ADAPTER	7141 71		6452 07	TENSIONER A-AIR COMP	8331 08		2453 08
	7342 16	STRIKER A-LATCH,T/LID	6450 07	TENSIONER A-TIMING BELT	1331 12	VALVE A-FILLER CHECK	2110 42
SOCKET A-BULB	5220 11	STRIP	5710 41		1333 19	VALVE KIT-CONT	8320 18
SOLENOID A-SELECTOR LEVER	3920 35		6420 18	TERMINAL-CABLE	3821 09	VALVE-CHECK	2451 06
SOLENOID-STARTER	1760 10	STRIP-INSULATING	6220 21		3860 05	VALVE-EXH	1311 12
SPACER	1740 31	STRUT MOUNT A-FRT	4140 04	THERMOSTAT A	1683 01		1313 10
SPACER-FLEXIBLE PLATE	1221 13	STRUT MOUNT A-RR	4320 04	TOWING EYE A-RR	6520 12	VALVE-EXPN KIT	8221 13
SPANNER	9110 07	SUNSHADE A	7350 02	TRANSAXLE A-AUTOMATIC	3810 01	VALVE-INT	1311 11
SPARK PLUG	1711 06	SUNSHADE A-SUN ROOF	9250 23	TRANSAXLE A-MANUAL	3210 01		1313 09
	1713 22	SUPPORT	6720 68	TRANSDUCER-PRESSURE	8340 06	VALVE-PCV	1321 17
SPEAKER A-FRT	5410 06	SUPPORT A-C/MBR,RAD,INR	6530 53	TRAY A-ASHTRAY CNSL,RR	7141 12		1713 13

PART NAME INDEX

English

PART NAME	KEY No.	PART NAME	KEY No.		
VALVE-PCV	2130 07	WASHER	3821 11		
VALVE-PROPORTIONING	4652 29		3822 03		
VALVE-ROLL OVER	2130 31		4130 07		
VALVE-RUBBER	6660 06		4150 22		
VALVE-SOL	1713 24		4310 21		
	2451 09		4440 15		
VALVE-SOL PRESSURE	3860 09		4520 23		
VALVE-SOL,VALVE BODY	3860 14		4652 03		
VALVE-THERMOSTAT EXPN	8221 08		6441 18		
VALVE-TIRE	6660 05		6442 18		
			7210 12		
= W =			7220 14		
			7550 05		
W/HARNESS-ABS	5710 10		8340 09		
W/HARNESS-ABS RR SENSOR	5710 12	WEIGHT-BALANCE	6660 15		
W/HARNESS-AIR BAG	5710 43	WHEEL A	6660 01		
W/HARNESS-ATC	8212 07	WHEEL A-STRG	4810 01		
W/HARNESS-BATTERY	5710 08	WHEEL-TARGET	1220 22		
W/HARNESS-CONSOLE	7141 95	WHEELHOUSE A-FRT	6140 02		
W/HARNESS-ENG	5710 03	WHEELHOUSE A-RR	6410 19		
W/HARNESS-FLR	5710 06		6411 19		
W/HARNESS-FRT	5710 02		6413 19		
W/HARNESS-FRT DR	5710 04	WIPER UNIT A	5310 09		
W/HARNESS-HORN	5710 53	WIRE A-NOISE FILTER	5420 26		
W/HARNESS-I/P	5710 01	WIRE SET-HIGH TENSION	1711 07		
W/HARNESS-MAP SENSOR	1523 16		1713 16		
W/HARNESS-POLAR	2120 33	WIRE-HIGH TENSION	1711 08		
W/HARNESS-ROOF	5710 09		1713 17		
W/HARNESS-RR DR	5710 05	WIRE-RON,S/W	5710 48		
W/HARNESS-T/GATE	5710 52	WRENCH-WHEEL	9110 02		
W/HARNESS-T/GATE,EXTN	5710 23				
W/HARNESS-T/LID	5710 11				
W/HARNESS-TCM	5710 26				
W/HARNESS-TRK ROOM	5710 07				
W/HARNESS-VALVE BODY	3860 02				
W/STRIP A-2ND,FRAME,FRT DR	6240 03				
W/STRIP A-2ND,FRAME,RR DR	6340 03				
W/STRIP A-DR OPG,FRT	6240 07				
W/STRIP A-DR OPG,RR	6340 09				
W/STRIP A-FRT DR	6240 02				
W/STRIP A-FRT DR,INR	7210 36				
W/STRIP A-FRT DR,LWR	6240 13				
W/STRIP A-HOOD	6150 05				
W/STRIP A-RR DR	6340 02				
W/STRIP A-RR DR,INR	7220 22				
W/STRIP A-RR DR,LWR	6340 18				
W/STRIP A-T/GATE	6441 02				
	6442 06				
W/STRIP A-T/LID	6440 02				
WASHER	1230 15				
	1231 16				
	1311 24				
	1331 10				
	1333 17				
	1753 10				
	1760 30				
	2241 07				
	2242 07				
	3220 25				
	3230 03				
	3240 10				
	3270 04				