

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

2007 DTC INDEX

Avalanche, Escalade, Suburban, Tahoe & Yukon

ORDERED DTC INDEX

Diagnostic Trouble Code (DTC) List

DTC	DTC Descriptor	Module That Sets the DTC	Diagnostic Procedure
IMPORTANT: If any DTCs are Powertrain related DTCs, select Capture Info in order to store the DTC information with the scan tool. Diagnose any current DTCs in the following order: 1. DTCs that begin with a U. 2. Any of the following: B1000, B1001, B1008, B1011, B1019, C0550, C0569, P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, P1621, P2101, or P2610. 3. Any of the following: B1325, B1370, B1424, B1517, C0895, C0899, C0900, P0562, or P0563. 4. Component level DTCs. 5. System level DTCs. 6. Any remaining DTCs.			
B0000	Vehicle Speed Information Circuit	Radio	<u>DTC B0000</u>
B0012	Driver Frontal Deployment Loop Stage 1	SDM	<u>DTC B0012 or B0013</u>
B0013	Driver Frontal Deployment Loop Stage 2	SDM	<u>DTC B0012 or B0013</u>
B0015	Left Front Pretensioner Deployment Loop	SDM	<u>DTC B0015</u>
B0016	Left Roof Rail Deployment Loop	SDM	<u>DTC B0016</u>
B0019	Passenger Frontal Deployment Loop Stage 1	SDM	<u>DTC B0019 or B0020</u>
B0020	Passenger Frontal Deployment Loop Stage 2	SDM	<u>DTC B0019 or B0020</u>
B0022	Right Front Pretensioner Deployment Loop	SDM	<u>DTC B0022</u>
B0023	Right Roof Rail Deployment Loop	SDM	<u>DTC B0023</u>
B0033	Third Row Left Roof Rail Deployment Loop	SDM	<u>DTC B0033 or B0040</u>
B0040	Third Row Right Roof Rail Deployment Loop	SDM	<u>DTC B0033 or B0040</u>
B0052	Deployment Commanded	SDM	<u>DTC B0052 or B0053</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

B0053	Deployment Commanded With Loop DTCs Present	SDM	<u>DTC B0052 or B0053</u>
B0055	Side Airbag Deployment Commanded	SDM	<u>DTC B0055</u>
B0056	Passenger Frontal Airbag Suppressed	SDM	<u>DTC B0056</u>
B0057	Right Front Side Airbag Suppressed	SDM	<u>DTC B0057</u>
B0058	Right Front Pretensioner Suppressed	SDM	<u>DTC B0058</u>
B0071	Passenger Seat Belt Tension Sensor Circuit	SDM	<u>DTC B0071</u>
B0074	Passenger Occupant Classification Sensor Circuit	SDM	<u>DTC B0074</u>
B0079	Left Front Seat Position Sensor Circuit	SDM	<u>DTC B0079</u>
B0081	Passenger Presence System	SDM	<u>DTC B0081</u>
B0083	Front End Sensor 1	SDM	<u>DTC B0083 or B0084</u>
B0084	Front End Sensor 2	SDM	<u>DTC B0083 or B0084</u>
B0085	Left Front Side Impact Sensor (SIS)	SDM	<u>DTC B0085 or B0086</u>
B0086	Right Front Side Impact Sensor (SIS)	SDM	<u>DTC B0085 or B0086</u>
B0087	Left Rear Side Impact Sensor (SIS)	SDM	<u>DTC B0087 or B0088</u>
B0088	Right Rear Side Impact Sensor (SIS)	SDM	<u>DTC B0087 or B0088</u>
B0090	Rollover Sensor Performance	SDM	<u>DTC B0090</u>
B0158	Outside Air Temperature Sensor Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B0163	Passenger Compartment Temp Sensor 1 Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B0168	Passenger Compartment Temp Sensor 2 Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B0173	Output Air Temperature Sensor 1 Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B0178	Output Air Temperature Sensor 2 Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B0183	Solar Load Sensor 1 Circuit	HVAC	<u>DTC B0183 or B0188</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

B0188	Solar Load Sensor 2 Circuit	HVAC	<u>DTC B0183 or B0188</u>
B0228	Recirculate Position Feedback Circuit	HVAC	<u>DTC B0228, B0413, B0423, B0433, B3779 or B3782</u>
B0283	Electric Rear Defrost Circuit	HVAC	<u>DTC B0283</u>
B0413	Temperature Control 1 Feedback Circuit	HVAC	<u>DTC B0228, B0413, B0423, B0433, B3779 or B3782</u> w/ CJ2 or <u>DTC B0413, B0423, B0433, B3779 or B3782</u> w/ CJ3
B0423	Temperature Control 2 Feedback Circuit	HVAC	<u>DTC B0228, B0413, B0423, B0433, B3779 or B3782</u> w/ CJ2 or <u>DTC B0413, B0423, B0433, B3779 or B3782</u> w/ CJ3
B0433	Temperature Control 3 Feedback Circuit	HVAC	<u>DTC B0228, B0413, B0423, B0433, B3779 or B3782</u> w/ CJ2 or <u>DTC B0413, B0423, B0433, B3779 or B3782</u> w/ CJ3
B0509	Output Air Temperature Sensor 3 Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B0514	Output Air Temperature Sensor 4 Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B0770	All Wheel Drive (AWD) Indicator Circuit Malfunction	TCSCM	<u>DTC B0770</u>
B0775	Four Wheel Drive High Range (4HI) Indicator Circuit Malfunction	TCSCM	<u>DTC B0775</u>
B0780	Four Wheel Drive Low Range (4LO) Indicator Circuit Malfunction	TCSCM	<u>DTC B0780</u>
B0785	Two Wheel Drive High Range (2HI) Indicator Circuit Malfunction	TCSCM	<u>DTC B0785</u>
B0790	Transfer Case Neutral Indicator Circuit	TCSCM	<u>DTC B0790</u>
B0835	Cruise Control System Active Indicator Circuit	BCM	<u>DTC B0835</u>
B0958	Parking Aid Rear Sensor 1 Circuit	Object Alarm Module	<u>DTC B0958, B0959, B0960, or B0961</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

B0959	Parking Aid Rear Sensor 2 Circuit	Object Alarm Module	<u>DTC B0958, B0959, B0960, or B0961</u>
B0960	Parking Aid Rear Sensor 3 Circuit	Object Alarm Module	<u>DTC B0958, B0959, B0960, or B0961</u>
B0961	Parking Aid Rear Sensor 4 Circuit	Object Alarm Module	<u>DTC B0958, B0959, B0960, or B0961</u>
B0967	Parking Aid Switch Circuit	Object Alarm Module	<u>DTC B0967</u>
B0968	Parking Aid Indicator Circuit	Object Alarm Module	<u>DTC B0968</u>
B1000	Electronic Control Unit (ECU) Performance	Audio Amplifier, BCM, DDS, DRR, HVAC, IPC, Object Alarm Module, PLGM, PDS, PPS, Radio, RCDLR, ROS, RSA, SDM, TDM, VCIM	<u>DTC B1000</u>
B1001	Option Configuration Error	BCM, DPM, PPS, Radio, RHVSM, ROS	<u>DTC B1001</u>
		SDM	<u>DTC B1001 (SDM) or DTC B1001 (ROS)</u>
		VCIM	<u>DTC B1001</u>
B1008	Calibration Data Not Programmed	Object Alarm Module	<u>DTC B1008</u>
B1011	System Disabled Information Stored Invalid Serial Data Received	SDM	<u>DTC B1011</u>
B1015	Vehicle Identification Number (VIN) Information Error	Object Alarm Module	<u>DTC B1015</u>
B1019	System Configuration Error	LGCM	<u>DTC B1019</u>
		SDM	<u>DTC B1019</u>
B1024	Circuit Board Temperature Sensor	Audio Amplifier	<u>DTC B1024</u>
B1025	Audio Output 1 Circuit	Radio	<u>DTC B1025-B1095</u>
B1035	Audio Output 2 Circuit	Radio	<u>DTC B1025-B1095</u>
B1045	Audio Output 3 Circuit	Radio	<u>DTC B1025-B1095</u>
B1055	Audio Output 4 Circuit	Radio	<u>DTC B1025-B1095</u>
B1065	Audio Output 5 Circuit	Radio	<u>DTC B1025-B1095</u>
B1075	Audio Output 6 Circuit	Radio	<u>DTC B1025-B1095</u>
B1085	Audio Output 7 Circuit	Radio	<u>DTC B1025-B1095</u>
B1095	Audio Output 8 Circuit	Radio	<u>DTC B1025-B1095</u>
B1259	Antenna Ground Circuit	DRR	<u>DTC B1259</u>
B1287	Amplifier Control Signal Circuit	Radio	<u>DTC B1287</u>
B1288	Video Display Mode Control Signal	Radio	<u>DTC B1288</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

B1289	Video Display Brightness Control Signal	Radio	<u>DTC B1289</u>
B1325	Device Power Circuit	Radio	<u>DTC B1325</u>
B1335	Device Power 3 Circuit	DPM	<u>DTC B1335</u>
B1370	Device Ignition 1 Circuit	BCM	<u>DTC B1370</u>
		SDM	<u>DTC B1370</u>
B1380	Device Ignition ACCESSORY Circuit	BCM	<u>DTC B1380</u>
B1395	Device Voltage Reference Output Circuit	BCM	<u>DTC B1395</u>
		DPM	<u>DTC B1395</u>
B1405	Device Voltage Reference Output 2 Circuit	ECM	<u>DTC B1405</u>
B1424	Device Voltage Low	TDM	<u>DTC B1424</u>
B1428	Ignition-Switched Power Relay 1 Circuit	BCM	<u>DTC B1428</u>
B1433	Ignition-Switched Power Relay 2 Circuit	BCM	<u>DTC B1433</u>
B1441	Device Ignition OFF, RUN, and CRANK Circuit	BCM	<u>DTC B1441</u>
B1475	Retained Accessory Power Circuit	BCM	<u>DTC B1475</u>
B1516	Battery Current Sensor	BCM	<u>DTC B1516</u>
B1517	Battery Voltage	BCM	<u>DTC B1517</u>
B1527	High Parasitic Load Detected	BCM	<u>DTC B1527</u>
B153A	Liftgate Latch Switch Signal Circuit	LGCM	<u>DTC B153A</u>
B153B	Liftgate Open Switch Signal Circuit	LGCM	<u>DTC B153B</u>
B153E	Liftgate Position Sensor Signal Circuit	LGCM	<u>DTC B153E</u>
B153F	Liftgate Object Sensor Signal Circuit	LGCM	<u>DTC B153F</u>
B1544	Mirror Motors Common Circuit	DDS, PDS	<u>DTC B1544, B1600, or B1605</u>
B1580	Mirror Horizontal Position Sensor Circuit	DDS, PDS	<u>DTC B1580 or B1590</u>
B1590	Mirror Vertical Position Sensor Circuit	DDS, PDS	<u>DTC B1580 or B1590</u>
B1600	Mirror Motor Vertical Circuit	DDS, PDS	<u>DTC B1544, B1600, or B1605</u>
B1605	Mirror Motor Horizontal Circuit	DDS, PDS	<u>DTC B1544, B1600, or B1605</u>
B1640	Mirror Heater Circuit	DDS, PDS	<u>DTC B1640 or B1645</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

B1722	Mirror Power Fold Control Circuit	DDS, PDS	<u>DTC B1722</u>
B1735	Driver Seat Front Up Switch Circuit	DPM	<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1740	Driver Seat Front Down Switch Circuit	DPM	<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1745	Driver Seat Rear Up Switch Circuit	DPM	<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1750	Driver Seat Rear Down Switch Circuit	DPM	<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1755	Driver Seat Assembly Forward Switch Circuit	DPM	<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1760	Driver Seat Assembly Rearward Switch Circuit	DPM	<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1815	Driver Seat Recline Forward Switch Circuit	DPM	<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1820	Driver Seat Recline Rearward Switch Circuit	DPM	<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, or B1820</u>
B1825	Driver Seat Recline Position Sensor Circuit	DPM	<u>DTC B1825, B1850, B1860, B2355, B2365, or B2375</u>
B1850	Driver Seat Lumbar Horizontal Position Sensor Circuit	DPM	<u>DTC B1825, B1850, B1860, B2355, B2365, or B2375</u>
B1860	Driver Seat Lumbar Vertical Position Sensor Circuit	DPM	<u>DTC B1825, B1850, B1860, B2355, B2365, or B2375</u>
B1913	Seat Heater Switch 1 Circuit	DDS, PDS	<u>DTC B1913 or B1918</u>
B1918	Seat Heater Switch 2 Circuit	DDS, PDS	<u>DTC B1913 or B1918</u>
B1925	Left Seat Heater Sensor Circuit	DPM	<u>DTC B1925 or B2170</u>
B1935	Left Seat Back Heater Circuit	DPM	<u>DTC B1935 or B2180</u>
B1E3A	Sensor Power Circuit	Object Alarm Module	<u>DTC B1E3A</u>
B2170	Right Seat Heater Cushion Sensor Circuit	DPM	<u>DTC B1925 or B2170</u>
B2180	Right Seat Back Heater Circuit	DPM	<u>DTC B1935 or B2180</u>
B2345	Seat Heater Disable Circuit	DPM, RHVSM	<u>DTC B2345 (Front Seat) or DTC B2345 (Rear Seat)</u>
B2355	Driver Seat Front Vertical	DPM	<u>DTC B1825, B1850, B1860,</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

	Position Sensor Circuit		<u>B2355, B2365, or B2375</u>
B2365	Driver Seat Rear Vertical Position Sensor Circuit	DPM	<u>DTC B1825, B1850, B1860, B2355, B2365, or B2375</u>
B2375	Driver Seat Assembly Horizontal Position Sensor Circuit	DPM	<u>DTC B1825, B1850, B1860, B2355, B2365, or B2375</u>
B2425	Left Seat Heater Cushion Circuit	DPM	<u>DTC B2425 or B2430</u>
B2430	Right Seat Heater Cushion Circuit	DPM	<u>DTC B2425 or B2430</u>
B2435	Left Seat Back Heater Sensor Circuit	DPM	<u>DTC B2435 or B2440</u>
B2440	Right Seat Back Heater Sensor Circuit	DPM	<u>DTC B2435 or B2440</u>
B2455	Cellular Phone Microphone Circuit	VCIM	<u>DTC B2455</u>
B2462	Global Positioning System (GPS) Signal Error	Radio	<u>DTC B2462</u>
B2470	Cellular Phone Antenna Circuit	VCIM	<u>DTC B2470</u>
B2474	Navigation Display Head (NDH) Backlighting Performance	Radio	<u>DTC B2474</u>
B2476	Cellular Phone Select Service Switch	VCIM	<u>DTC B2476</u>
B2482	Cellular Phone Select Switch Range/Performance	VCIM	<u>DTC B2482</u>
B2483	Global Positioning System (GPS) Sensor Circuit Low	VCIM	<u>DTC B2483 or B2484</u>
B2484	Global Positioning System (GPS) Sensor Circuit Open	VCIM	<u>DTC B2483 or B2484</u>
B2494	Liftgate Handle Switch Circuit	LGCM	<u>DTC B2494</u>
B2495	Liftgate Latch Control Circuit	LGCM	<u>DTC B2495</u>
B2508	Seat Heater Relay Circuit	DPM, RHVSM	<u>DTC B2508 or B2509 (Front Seat) or DTC B2508 or B2509 (Rear Seat)</u>
B2530	Front Foglamps Control Circuit	BCM	<u>DTC B2530</u>
B2540	Rear Foglamps Control Circuit	BCM	<u>DTC B2540</u>
B2545	Backup Lamps Circuit	BCM	<u>DTC B2545</u>
B2555	Passenger Compartment Lamp Control Circuit	BCM	<u>DTC B2555</u>
B2575	Headlamp Control Circuit	BCM	<u>DTC B2575</u>
	Headlamp Switch Input		

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

B257A	Signals Mismatch	BCM	<u>DTC B257A</u>
B2580	Headlamp High Beam Control Circuit	BCM	<u>DTC B2580</u>
B2585	Parklamp Control Circuit	BCM	<u>DTC B2585</u>
B2600	Daytime Running Lamp Control System Circuit	BCM	<u>DTC B2600</u>
B2610	Passenger Compartment Dimming 1 Circuit	BCM	<u>DTC B2610</u>
B2615	Passenger Compartment Dimming 2 Circuit	BCM	<u>DTC B2615</u>
B2625	Display Dimming Pulse Width Modulation (PWM) Output Circuit	BCM	<u>DTC B2625</u>
B2645	Ambient Light Sensor Circuit	BCM	<u>DTC B2645</u>
B2652	Passenger Compartment Dimming 3 Circuit	BCM	<u>DTC B2652</u>
B2705	Gearshift Unlock Circuit	BCM	<u>DTC B2705</u>
B2725	ATC Mode Switch Circuit Malfunction	TCSCM	<u>DTC B2725</u>
B2750	Door Ajar Circuit	BCM	<u>DTC B2750</u>
B2765	Memory Set Switch Circuit	DDS	<u>DTC B2765</u>
B3006	Hood Ajar Circuit Plausibility Failure	BCM	<u>DTC B3006</u>
B302A	Telematic Requested Immobilization	TDM	<u>DTC B302A</u>
B3031	Security System Controller in Learn Mode	TDM	<u>DTC B3031</u>
B3055	No Transponder Modulation or No Transponder	TDM	<u>DTC B3055</u>
B3060	Unprogrammed Transponder Identification Code Received	TDM	<u>DTC B3060</u>
B3105	Keyless Entry System Key Fobs Not Programmed	RCDLR	<u>DTC B3105</u>
B3109	Keyless Entry Transmitter 1 Low Battery	RCDLR	<u>DTC B3109</u>
B3110	Keyless Entry Transmitter 2 Low Battery	RCDLR	<u>DTC B3110</u>
B3111	Keyless Entry Transmitter 3 Low Battery	RCDLR	<u>DTC B3111</u>
B3112	Keyless Entry Transmitter 4 Low Battery	RCDLR	<u>DTC B3112</u>
B3205	Window Motor Circuit	DDS, PDS	<u>DTC B3205</u>
B3265	Liftglass Release Output	LGCM	<u>DTC B3265</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

	Circuit		
B3445	Stoplamp Circuit	BCM	<u>DTC B3445</u>
B3567	Driver Information Center (DIC) Select Switch Circuit	IPC	<u>DTC B3567</u>
B3578	Output Air Temperature Sensor 6 Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B3583	Output Air Temperature Sensor 7 Circuit	HVAC	<u>DTC B0158, B0163, B0168, B0173, B0178, B0509, B0514, B3578 or B3583</u>
B3600	Passenger Compartment Dimming Request Signal Circuit	BCM	<u>DTC B3600</u>
B3604	Adjustable Foot Pedal Forward Switch Circuit	DPM	<u>DTC B3604 or B3605</u>
B3605	Adjustable Foot Pedal Rearward Switch Circuit	DPM	<u>DTC B3604 or B3605</u>
B3606	Adjustable Foot Pedal Position Sensor Circuit	DPM	<u>DTC B3606</u>
B3622	Steering Wheel Controls Signal Circuit	BCM	<u>DTC B3622</u>
B3715	Front Wiper Relay Drive Circuit	BCM	<u>DTC B3715</u>
B3779	Air Flow Control 9 Feedback Circuit	HVAC	<u>DTC B0228, B0413, B0423, B0433, B3779 or B3782</u>
B3782	Air Flow Control 10 Feedback Circuit	HVAC	<u>DTC B0228, B0413, B0423, B0433, B3779 or B3782 w/ CJ2 or B0413, B0423, B0433, B3779 or B3782 w/ CJ3</u>
B3794	Cruise Control Function Request Circuit	BCM	<u>DTC B3794</u>
B3819	Left Rear Window Up Control Circuit	DDS, PDS	<u>DTC B3819</u>
B3820	Left Rear Window Down Control Circuit	DDS, PDS	<u>DTC B3820</u>
B3821	Left Rear Window Relay Power Circuit	DDS, PDS	<u>DTC B3821</u>
B3822	Right Rear Window Up Control Circuit	DDS, PDS	<u>DTC B3822</u>
B3823	Right Rear Window Down Control Circuit	DDS, PDS	<u>DTC B3823</u>
B3824	Right Rear Window Relay	DDS, PDS	<u>DTC B3824</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

	Power Circuit		
B3873	Front Washer Relay Circuit	BCM	<u>DTC B3873</u>
B3875	Wiper Low Speed Relay Circuit	BCM	<u>DTC B3875</u>
B3884	Center High Mounted Stop Lamp (CHMSL) Circuit	BCM	<u>DTC B3884</u>
B3891	Trailer Foglamps Circuit	XBCM	<u>DTC B3891</u>
B3920	Group 1 Seat Motors Common Circuit	DPM	<u>DTC B3920 or B3921</u>
B3921	Group 2 Seat Motors Common Circuit	DPM	<u>DTC B3920 or B3921</u>
B3922	Front Wiper Function Select Circuit	BCM	<u>DTC B3922</u>
B3935	Transponder Authentication Error	TDM	<u>DTC B3935</u>
B396A	Liftgate Motor Control Circuit	LGCM	<u>DTC B396A</u>
B396B	Liftgate Motor Clutch Control Circuit	LGCM	<u>DTC B396B</u>
B396F	Liftglass Ajar Output Signal Circuit	LGCM	<u>DTC B396F</u>
C0035	Left Front Wheel Speed Sensor Circuit	EBCM	<u>DTC C0035 or C0040 ()</u>
C0040	Right Front Wheel Speed Sensor Circuit	EBCM	<u>DTC C0035 or C0040 ()</u>
C0045	Left Rear Wheel Speed Sensor Circuit	EBCM	<u>DTC C0045 or C0050</u>
C0050	Right Rear Wheel Speed Sensor Circuit	EBCM	<u>DTC C0045 or C0050</u>
C0055	Both Wheels Rear Wheel Speed Sensor Circuit	EBCM	<u>DTC C0055 or P0609 (Over 8600 GVW)</u>
C0110	Pump Motor Circuit	EBCM	<u>DTC C0110 (Equal to or under 8600 GVW) or DTC C0110 (Over 8600 GVW)</u>
C0131	Antilock Brake System (ABS) Pressure Circuit	EBCM	<u>DTC C0131</u>
C0161	Antilock Brake System (ABS) Brake Switch Circuit	EBCM	<u>DTC C0161 (Equal to or Under 8600 GVW) or DTC C0161 (Over 8600 GVW)</u>
C0186	Lateral Accelerometer Circuit	EBCM	<u>DTC C0186</u>
C0196	Yaw Rate Circuit	EBCM	<u>DTC C0196</u>
C0201	Antilock Brake System (ABS) Enable Relay Contact Circuit	EBCM	<u>DTC C0201 (Equal to or under 8600 GVW) or DTC C0201 (Over 8600 GVW)</u>
	Powertrain Control Module		

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

C0242	(PCM) Indicated TCS Malfunction	EBCM	<u>DTC C0242</u>
C0245	Wheel Speed Sensor Frequency Error	EBCM	<u>DTC C0245 (Equal to or Under 8600 GVW) or DTC C0245 (Over 8600 GVW)</u>
C0252	Vehicle Stability Enhancement System (VSES) Sensors Uncorrelated	EBCM	<u>DTC C0252</u>
C0253	Centering Error	EBCM	<u>DTC C0253</u>
C0267	Low Brake Fluid Indicated	EBCM	<u>DTC C0267</u>
C0299	Brake Booster Performance	EBCM	<u>DTC C0299</u>
C0300	Rear Speed Sensor Malfunction	TCSCM	<u>DTC C0300</u>
C0305	Front Speed Sensor Malfunction	TCSCM	<u>DTC C0305</u>
C0306	Motor A or B Circuit	TCSCM	<u>DTC C0306</u>
C0321	Transfer Case Lock Circuit	TCSCM	<u>DTC C0321</u>
C0326	Transfer Case Lock System Performance Signal Invalid	TCSCM	<u>DTC C0326</u>
C0327	Encoder Circuit	TCSCM	<u>DTC C0327</u>
C0359	Four Wheel Drive Low Range (4LO) Discrete Output Circuit	TCSCM	<u>DTC C0359</u>
C0374	General System Malfunction	TCSCM	<u>DTC C0374</u>
C0378	Front Axle Switch Circuit Signal Invalid	TCSCM	<u>DTC C0378</u>
C0379	Four Wheel Drive Low Range (4LO) Discrete Output Circuit	TCSCM	<u>DTC C0379</u>
C0550	Electronic Control Unit (ECU) Performance	EBCM	<u>DTC C0550</u>
		ESCM	<u>DTC C0550</u>
		TCSCM	<u>DTC C0550</u>
C0558	Calibration Data Not Programmed	ESCM	<u>DTC C0558</u>
C0561	System Disabled Information Stored	EBCM	<u>DTC C0561</u>
C0569	System Configuration Error	EBCM	<u>DTC C0569</u>
C0575	Left Front Actuator Circuit	ESCM	<u>DTC C0575, C0580, C0585, or C0590</u>
C0580	Right Front Actuator Circuit	ESCM	<u>DTC C0575, C0580, C0585, or C0590</u>
C0585	Left Rear Actuator Circuit	ESCM	<u>DTC C0575, C0580, C0585, or C0590</u>
C0590	Right Rear Actuator Circuit	ESCM	<u>DTC C0575, C0580, C0585, or C0590</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

C0615	Left Front Position Sensor Circuit	ESCM	<u>DTC C0615, C0620, C0625 or C0630</u>
C0620	Right Front Position Sensor Circuit	ESCM	<u>DTC C0615, C0620, C0625 or C0630</u>
C0625	Left Rear Position Sensor Circuit	ESCM	<u>DTC C0615, C0620, C0625 or C0630</u>
C0630	Right Rear Position Sensor Circuit	ESCM	<u>DTC C0615, C0620, C0625 or C0630</u>
C0660	Level Control Exhaust Valve Circuit	ESCM	<u>DTC C0660</u>
C0696	Position Sensor 5 volt supply	ESCM	<u>DTC C0696</u>
C0710	Steering Position Signal	EBCM	<u>DTC C0710</u>
C0711	Level Control Air Pressure Sensor Circuit	ESCM	<u>DTC C0711</u>
C0712	Level Control Compressor Relay Circuit	ESCM	<u>DTC C0712</u>
C0750	Left Front Tire Pressure Sensor	RCDLR	<u>DTC C0750, C0755, C0760, or C0765</u>
C0755	Right Front Tire Pressure Sensor	RCDLR	<u>DTC C0750, C0755, C0760, or C0765</u>
C0760	Left Rear Tire Pressure Sensor	RCDLR	<u>DTC C0750, C0755, C0760, or C0765</u>
C0765	Right Rear Tire Pressure Sensor	RCDLR	<u>DTC C0750, C0755, C0760, or C0765</u>
C0774	Low Tire Pressure System Performance	EBCM	<u>DTC C0774</u>
C0775	Low Tire Pressure System Sensors Not Learned	RCDLR	<u>DTC C0775</u>
C0895	Device Voltage	ESCM	<u>DTC C0895</u>
C0899	Device 1 Voltage Low	EBCM	<u>DTC C0899</u>
C0900	Device 1 Voltage High	EBCM	<u>DTC C0900</u>
C1100	Brake Booster Vacuum Sensor Failed	EBCM	<u>DTC C1100 or C1101</u>
P0010	Intake Camshaft Position (CMP) Actuator Solenoid Control Circuit Bank 1	ECM	<u>DTC P0010 or P0011</u>
P0011	Intake Camshaft Position (CMP) System Performance Bank 1	ECM	<u>DTC P0010 or P0011</u>
P0016	Crankshaft Position (CKP)-Camshaft Position (CMP) Correlation Bank 1 Sensor A	ECM	<u>DTC P0016 (with LY6/L76/L92) or DTC P0016 (without LY6/L76/L92)</u>
	HO2S Heater Control Circuit		<u>DTC P0030, P0036, P0053,</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0030	Bank 1 Sensor 1	ECM	<u>P0054, P0135, or P0141</u>
P0036	HO2S Heater Control Circuit Bank 1 Sensor 2	ECM	<u>DTC P0030, P0036, P0053, P0054, P0135, or P0141</u>
P0050	HO2S Heater Control Circuit Bank 2 Sensor 1	ECM	<u>DTC P0050, P0056, P0059, P0060, P0155, or P0161</u>
P0053	HO2S Heater Resistance Bank 1 Sensor 1	ECM	<u>DTC P0030, P0036, P0053, P0054, P0135, or P0141</u>
P0054	HO2S Heater Resistance Bank 1 Sensor 2	ECM	<u>DTC P0030, P0036, P0053, P0054, P0135, or P0141</u>
P0056	HO2S Heater Control Circuit Bank 2 Sensor 2	ECM	<u>DTC P0050, P0056, P0059, P0060, P0155, or P0161</u>
P0059	HO2S Heater Resistance Bank 2 Sensor 1	ECM	<u>DTC P0050, P0056, P0059, P0060, P0155, or P0161</u>
P0060	HO2S Heater Resistance Bank 2 Sensor 2	ECM	<u>DTC P0050, P0056, P0059, P0060, P0155, or P0161</u>
P0068	Throttle Body Airflow Performance	ECM	<u>DTC P0068 or P0121</u>
P0101	Mass Air Flow (MAF) Sensor Performance	ECM	<u>DTC P0101 or P1101</u>
P0102	Mass Air Flow (MAF) Sensor Circuit Low	ECM	<u>DTC P0102 or P0103</u>
P0103	Mass Air Flow (MAF) Sensor Circuit High	ECM	<u>DTC P0102 or P0103</u>
P0106	Manifold Absolute Pressure (MAP) Sensor Performance	ECM	<u>DTC P0106</u>
P0107	Manifold Absolute Pressure (MAP) Sensor Circuit Low	ECM	<u>DTC P0107 or P0108</u>
P0108	Manifold Absolute Pressure (MAP) Sensor Circuit High	ECM	<u>DTC P0107 or P0108</u>
P0112	Intake Air Temperature (IAT) Sensor Circuit Low	ECM	<u>DTC P0112 or P0113</u>
P0113	Intake Air Temperature (IAT) Sensor Circuit High	ECM	<u>DTC P0112 or P0113</u>
P0116	Engine Coolant Temperature (ECT) Sensor Performance	ECM	<u>DTC P0116</u>
P0117	Engine Coolant Temperature (ECT) Sensor Circuit Low	ECM	<u>DTC P0117 or P0118</u>
P0118	Engine Coolant Temperature (ECT) Sensor Circuit High	ECM	<u>DTC P0117 or P0118</u>
P0120	Throttle Position (TP) Sensor 1 Circuit	ECM	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u>
P0121	Throttle Position (TP) Sensor 1 Performance	ECM	<u>DTC P0068 or P0121</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0122	Throttle Position (TP) Sensor 1 Circuit Low	ECM	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u>
P0123	Throttle Position (TP) Sensor 1 Circuit High	ECM	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u>
P0128	Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature	ECM	<u>DTC P0128</u>
P0131	HO2S Circuit Low Voltage Bank 1 Sensor 1	ECM	<u>DTC P0131, P0132, P0137, or P0138</u>
P0132	HO2S Circuit High Voltage Bank 1 Sensor 1	ECM	<u>DTC P0131, P0132, P0137, or P0138</u>
P0133	HO2S Slow Response Bank 1 Sensor 1	ECM	<u>DTC P0133, P0134, P0140, P1133, P2A00 or P2A01</u>
P0134	HO2S Circuit Insufficient Activity Bank 1 Sensor 1	ECM	<u>DTC P0133, P0134, P0140, P1133, P2A00 or P2A01</u>
P0135	HO2S Heater Performance Bank 1 Sensor 1	ECM	<u>DTC P0030, P0036, P0053, P0054, P0135, or P0141</u>
P0137	HO2S Circuit Low Voltage Bank 1 Sensor 2	ECM	<u>DTC P0131, P0132, P0137, or P0138</u>
P0138	HO2S Circuit High Voltage Bank 1 Sensor 2	ECM	<u>DTC P0131, P0132, P0137, or P0138</u>
P0140	HO2S Circuit Insufficient Activity Bank 1 Sensor 2	ECM	<u>DTC P0133, P0134, P0140, P1133, P2A00 or P2A01</u>
P0141	HO2S Heater Performance Bank 1 Sensor 2	ECM	<u>DTC P0030, P0036, P0053, P0054, P0135, or P0141</u>
P0151	HO2S Circuit Low Voltage Bank 2 Sensor 1	ECM	<u>DTC P0151, P0152, P0157, or P0158</u>
P0152	HO2S Circuit High Voltage Bank 2 Sensor 1	ECM	<u>DTC P0151, P0152, P0157, or P0158</u>
P0153	HO2S Slow Response Bank 2 Sensor 1	ECM	<u>DTC P0153, P0154, P0160, P1153, P2A03, or P2A04</u>
P0154	HO2S Circuit Insufficient Activity Bank 2 Sensor 1	ECM	<u>DTC P0153, P0154, P0160, P1153, P2A03, or P2A04</u>
P0155	HO2S Heater Performance Bank 2 Sensor 1	ECM	<u>DTC P0050, P0056, P0059, P0060, P0155, or P0161</u>
P0157	HO2S Circuit Low Voltage Bank 2 Sensor 2	ECM	<u>DTC P0151, P0152, P0157, or P0158</u>
P0158	HO2S Circuit High Voltage Bank 2 Sensor 2	ECM	<u>DTC P0153, P0154, P0160, P1153, P2A03, or P2A04</u>
P0160	HO2S Circuit Insufficient Activity Bank 2 Sensor 2	ECM	<u>DTC P0153, P0154, P0160, P1153, P2A03, or P2A04</u>
P0161	HO2S Heater Performance	ECM	<u>DTC P0050, P0056, P0059,</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

	Bank 2 Sensor 2		<u>P0060, P0155, or P0161</u>
P0171	Fuel Trim System Lean Bank 1	ECM	<u>DTC P0171, P0172, P0174, or P0175</u>
P0172	Fuel Trim System Rich Bank 1	ECM	<u>DTC P0171, P0172, P0174, or P0175</u>
P0174	Fuel Trim System Lean Bank 2	ECM	<u>DTC P0171, P0172, P0174, or P0175</u>
P0175	Fuel Trim System Rich Bank 2	ECM	<u>DTC P0171, P0172, P0174, or P0175</u>
P0201	Injector 1 Control Circuit	ECM	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0202	Injector 2 Control Circuit	ECM	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0203	Injector 3 Control Circuit	ECM	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0204	Injector 4 Control Circuit	ECM	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0205	Injector 5 Control Circuit	ECM	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0206	Injector 6 Control Circuit	ECM	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0207	Injector 7 Control Circuit	ECM	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0208	Injector 8 Control Circuit	ECM	<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0207, or P0208</u>
P0218	Transmission Fluid Overtemperature	TCM	• <u>DTC P0218</u> • <u>DTC P0218</u> • <u>DTC P0218</u>
P0220	Throttle Position (TP) Sensor 2 Circuit	ECM	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u>
P0222	Throttle Position (TP) Sensor 2 Circuit Low Voltage	ECM	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or P2135</u>
P0223	Throttle Position (TP) Sensor	ECM	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

	2 Circuit High Voltage		<u>P2135</u>
P0230	Fuel Pump Relay Control Circuit	ECM	<u>DTC P0230 or P2632</u>
P0300	Engine Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0301	Cylinder 1 Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0302	Cylinder 2 Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0303	Cylinder 3 Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0304	Cylinder 4 Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0305	Cylinder 5 Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0306	Cylinder 6 Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0307	Cylinder 7 Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0308	Cylinder 8 Misfire Detected	ECM	<u>DTC P0300 - P0308</u>
P0315	Extended Travel Brake Switch Circuit	ECM	<u>DTC P0315</u>
P0324	Knock Sensor (KS) Module Performance	ECM	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0325	Knock Sensor (KS) Circuit	ECM	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0326	Knock Sensor (KS) Performance	ECM	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0327	Knock Sensor (KS) Circuit Low Frequency	ECM	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0328	Knock Sensor (KS) Circuit High Frequency	ECM	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0330	Knock Sensor (KS) Circuit	ECM	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0332	Knock Sensor (KS) Circuit Low Frequency	ECM	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0333	Knock Sensor (KS) Circuit High Frequency	ECM	<u>DTC P0324, P0325, P0326, P0327, P0328, P0330, P0332, or P0333</u>
P0335	Crankshaft Position (CKP) Sensor Circuit	ECM	<u>DTC P0335 or P0336</u>
P0336	Crankshaft Position (CKP) Sensor Performance	ECM	<u>DTC P0335 or P0336</u>
P0340	Camshaft Position (CMP) Sensor Circuit	ECM	<u>DTC P0340 or P0341</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0341	Camshaft Position (CMP) Sensor Performance	ECM	<u>DTC P0340 or P0341</u>
P0351	Ignition Coil 1 Control Circuit	ECM	<u>DTC P0351-P0358</u>
P0352	Ignition Coil 2 Control Circuit	ECM	<u>DTC P0351-P0358</u>
P0353	Ignition Coil 3 Control Circuit	ECM	<u>DTC P0351-P0358</u>
P0354	Ignition Coil 4 Control Circuit	ECM	<u>DTC P0351-P0358</u>
P0355	Ignition Coil 5 Control Circuit	ECM	<u>DTC P0351-P0358</u>
P0356	Ignition Coil 6 Control Circuit	ECM	<u>DTC P0351-P0358</u>
P0357	Ignition Coil 7 Control Circuit	ECM	<u>DTC P0351-P0358</u>
P0358	Ignition Coil 8 Control Circuit	ECM	<u>DTC P0351-P0358</u>
P0420	Catalyst System Low Efficiency Bank 1	ECM	<u>DTC P0420 or P0430</u>
P0430	Catalyst System Low Efficiency Bank 2	ECM	<u>DTC P0420 or P0430</u>
P0442	Evaporative Emission (EVAP) System Small Leak Detected	ECM	<u>DTC P0442</u>
P0443	Evaporative Emission (EVAP) Purge Solenoid Control Circuit	ECM	<u>DTC P0443 or P0449</u>
P0446	Evaporative Emission (EVAP) Vent System Performance	ECM	<u>DTC P0446</u>
P0449	Evaporative Emission (EVAP) Vent Solenoid Control Circuit	ECM	<u>DTC P0443 or P0449</u>
P0451	Fuel Tank Pressure (FTP) Sensor Circuit Performance	ECM	<u>DTC P0451, P0452, P0453, or P0454</u>
P0452	Fuel Tank Pressure (FTP) Sensor Circuit Low Voltage	ECM	<u>DTC P0451, P0452, P0453, or P0454</u>
P0453	Fuel Tank Pressure (FTP) Sensor Circuit High Voltage	ECM	<u>DTC P0451, P0452, P0453, or P0454</u>
P0454	Fuel Tank Pressure (FTP) Sensor Circuit Intermittent	ECM	<u>DTC P0451, P0452, P0453, or P0454</u>
P0455	Evaporative Emission (EVAP) System Large Leak Detected	ECM	<u>DTC P0455</u>
P0461	Fuel Level Sensor 1 Performance	ECM	<u>DTC P0461</u>
P0462	Fuel Level Sensor 1 Circuit Low Voltage	ECM	<u>DTC P0462</u>
P0463	Fuel Level Sensor 1 Circuit High Voltage	ECM	<u>DTC P0463</u>
P0464	Fuel Level Sensor 1 Circuit Intermittent	ECM	<u>DTC P0464</u>
P0480	Cooling Fan 1 Control Circuit	ECM	<u>DTC P0480 or P0481</u>
P0481	Cooling Fan 2 Control Circuit	ECM	<u>DTC P0480 or P0481</u>
	Accelerator Pedal Position		

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0496	(APP) Sensor 1 Circuit High Voltage	ECM	<u>DTC P0496</u>
P0506	Idle Speed Low	ECM	<u>DTC P0506 or P0507</u>
P0507	Idle Speed High	ECM	<u>DTC P0506 or P0507</u>
P0513	Theft Deterrent Key Incorrect	ECM	<u>DTC P0513</u>
P0521	Engine Oil Pressure (EOP) Sensor Performance	ECM	<u>DTC P0521</u>
P0522	Engine Oil Pressure (EOP) Sensor Circuit Low Voltage	ECM	<u>DTC P0522</u>
P0523	Engine Oil Pressure (EOP) Sensor Circuit High Voltage	ECM	<u>DTC P0523</u>
P0532	Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit Low Voltage	ECM	<u>DTC P0532 or P0533</u> w/ CJ2 or <u>DTC P0532 or P0533</u> w/ CJ3
P0533	Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit High Voltage	ECM	<u>DTC P0532 or P0533</u> w/ CJ2 or <u>DTC P0532 or P0533</u> w/ CJ3
P0562	System Voltage Low	ECM	<u>DTC P0562</u>
		TCM	• <u>DTC P0562</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0562</u> for the 4L80-E/4L85-E transmission • <u>DTC P0562 or P0563</u> for the 6L50/6L80/6L90 transmission
P0563	System Voltage High	ECM	<u>DTC P0563</u>
		TCM	• <u>DTC P0563</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0563</u> for the 4L80-E/4L85-E transmission • <u>DTC P0562 or P0563</u> for the 6L50/6L80/6L90 transmission
P0575	Cruise Control Switch Signal Circuit	ECM	<u>DTC P0575</u>
			• <u>DTC P0601, P0602, P0603, P0604, or</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0601	Transmission Control Module (TCM) Read Only Memory (ROM)	TCM	<u>P062F</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L80-E/4L85-E transmission • <u>DTC P0601, P0602, P0603, P0604, or P1621</u> for the 6L50/6L80/6L90 transmission
	Control Module Read Only Memory (ROM)	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
P0602	Transmission Control Module (TCM) Not Programmed	TCM	• <u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L80-E/4L85-E transmission • <u>DTC P0601, P0602, P0603, P0604, or P1621</u> for the 6L50/6L80/6L90 transmission
	Control Module Not Programmed	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
P0603	Transmission Control Module (TCM) Long Term Memory Reset	TCM	• <u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L80-E/4L85-E transmission • <u>DTC P0601, P0602, P0603, P0604, or P1621</u> for the

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

			6L50/6L80/6L90 transmission
	Control Module Long Term Memory Reset	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
P0604	Transmission Control Module (TCM) Random Access Memory (RAM)	TCM	• <u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L80-E/4L85-E transmission • <u>DTC P0601, P0602, P0603, P0604, or P1621</u> for the 6L50/6L80/6L90 transmission
	Control Module Random Access Memory (RAM)	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
P0606	Control Module Internal Performance	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
P0607	Control Module Performance	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
P060D	Control Module Accelerator Pedal Position (APP) System Performance	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
P0621	Generator L-Terminal Circuit	ECM	<u>DTC P0621</u>
P0622	Generator F-Terminal Circuit	ECM	<u>DTC P0622</u>
P062F	Transmission Control Module (TCM) Long Term Memory Performance	TCM	<u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P0601, P0602, P0603, P0604, or P062F</u> for the 4L80-E/4L85-E transmission
	Control Module Long Term Memory Performance	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
	Theft Deterrent Key Not		

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0633	Programmed	ECM	<u>DTC P0633</u>
P0634	Transmission Control Module (TCM) Overtemperature	TCM	<u>DTC P0634</u>
P0641	5-Volt Reference 1 Circuit	ECM	<u>DTC P0641 or P0651</u>
P0645	Air Conditioning (A/C) Clutch Relay Control Circuit	ECM	<u>DTC P0645</u> w/ CJ2 or <u>DTC P0645</u> w/ CJ3
P0650	Malfunction Indicator Lamp (MIL) Control Circuit	ECM	<u>DTC P0650</u>
P0651	5-Volt Reference 2 Circuit	ECM	<u>DTC P0641 or P0651</u>
P0667	Transmission Control Module (TCM) Temperature Sensor Performance	TCM	<u>DTC P0667, P0668, or P0669</u>
P0668	Transmission Control Module (TCM) Temperature Sensor Circuit Low Voltage	TCM	<u>DTC P0667, P0668, or P0669</u>
P0669	Transmission Control Module (TCM) Temperature Sensor Circuit High Voltage	TCM	<u>DTC P0667, P0668, or P0669</u>
P0685	Control Module Power Relay Control Circuit	ECM	<u>DTC P0685, P0689, or P0690</u>
P0689	Control Module Power Relay Feedback Circuit Low Voltage	ECM	<u>DTC P0685, P0689, or P0690</u>
P0690	Control Module Power Relay Feedback Circuit High Voltage	ECM	<u>DTC P0685, P0689, or P0690</u>
P0700	Transmission Control Module (TCM) Requested MIL Illumination	ECM	<u>DTC P0700</u>
P0703	Brake Switch Circuit	ECM	<u>DTC P0703</u>
P0705	Transmission Range (TR) Switch Circuit	TCM	<u>DTC P0705</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P0705</u> for the 4L80-E/4L85-E transmission
P0711	Transmission Fluid Temperature (TFT) Sensor Performance	TCM	• <u>DTC P0711</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0711</u> for the 4L80-E/4L85-E transmission • <u>DTC P0711, P0712, or P0713</u> for the 6L50/6L80/6L90

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

			transmission
P0712	Transmission Fluid Temperature (TFT) Sensor Circuit Low Voltage	TCM	• <u>DTC P0712</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0712</u> for the 4L80-E/4L85-E transmission • <u>DTC P0711, P0712, or P0713</u> for the 6L50/6L80/6L90 transmission
P0713	Transmission Fluid Temperature (TFT) Sensor Circuit High Voltage	TCM	• <u>DTC P0713</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0713</u> for the 4L80-E/4L85-E transmission • <u>DTC P0711, P0712, or P0713</u> for the 6L50/6L80/6L90 transmission
P0716	Input Speed Sensor Performance	TCM	• <u>DTC P0716</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0716</u> for the 4L80-E/4L85-E transmission • <u>DTC P0716 or P0717</u> for the 6L50/6L80/6L90 transmission
P0717	Input Speed Sensor Circuit Low Voltage	TCM	• <u>DTC P0717</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0717</u> for the 4L80-E/4L85-E transmission • <u>DTC P0716 or P0717</u> for the 6L50/6L80/6L90 transmission
			<u>DTC P0719</u> for the 4L60-E/4L65-E/4L70-E

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0719	Brake Switch Circuit Low Voltage	TCM	transmission or <u>DTC P0719</u> for the 4L80-E/4L85-E transmission
P0722	Output Speed Sensor Circuit Low Voltage	TCM	• <u>DTC P0722</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0722</u> for the 4L80-E/4L85-E transmission • <u>DTC P0722 or P0723</u> for the 6L50/6L80/6L90 transmission
P0723	Output Speed Sensor Circuit Intermittent	TCM	• <u>DTC P0723</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0723</u> for the 4L80-E/4L85-E transmission • <u>DTC P0722 or P0723</u> for the 6L50/6L80/6L90 transmission
P0724	Brake Switch Circuit High Voltage	TCM	<u>DTC P0724</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P0724</u> for the 4L80-E/4L85-E transmission
P0736	Incorrect Reverse Ratio	TCM	<u>DTC P0736</u>
P0741	Torque Converter Clutch (TCC) System - Stuck Off	TCM	• <u>DTC P0741</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0741</u> for the 4L80-E/4L85-E transmission • <u>DTC P0741 or P0742</u> for the 6L50/6L80/6L90 transmission
			• <u>DTC P0742</u> for the 4L60-E/4L65-E/4L70-E transmission

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0742	Torque Converter Clutch (TCC) System - Stuck On	TCM	• <u>DTC P0742</u> for the 4L80-E/4L85-E transmission • <u>DTC P0741 or P0742</u> for the 6L50/6L80/6L90 transmission
P0751	1-2 Shift Solenoid (SS) Valve Performance - No First or Fourth Gear	TCM	<u>DTC P0751</u> for the 4L60-E/4L65-E/4L70-E transmission or
	Shift Solenoid (SS) 1 Valve Performance - Stuck Off		<u>DTC P0751</u> for the 4L80-E/4L85-E transmission
P0752	1-2 Shift Solenoid (SS) Valve Performance - No Second or Third Gear	TCM	<u>DTC P0751</u> for the 6L50/6L80/6L90 transmission
	Shift Solenoid (SS) 1 Valve Performance -- Stuck On		<u>DTC P0752</u> for the 4L60-E/4L65-E/4L70-E transmission or
P0756	2-3 Shift Solenoid (SS) Valve Performance - No First or Second Gear	TCM	<u>DTC P0752</u> for the 4L80-E/4L85-E transmission
	Shift Solenoid (SS) 2 Valve Performance - Stuck Off		<u>DTC P0752</u> for the 6L50/6L80/6L90 transmission
P0757	2-3 Shift Solenoid (SS) Valve Performance - No Third or Fourth Gear	TCM	<u>DTC P0756</u> for the 4L60-E/4L65-E/4L70-E transmission or
P0776	Clutch Pressure Control (PC) Solenoid 2 - Stuck Off	TCM	<u>DTC P0756</u> for the 4L80-E/4L85-E transmission
P0777	Clutch Pressure Control (PC) Solenoid 2 - Stuck On	TCM	<u>DTC P0756</u> for the 6L50/6L80/6L90 transmission
P0787	3-2 Shift Solenoid (SS)	TCM	<u>DTC P0757</u> for the 4L60-E/4L65-E/4L70-E transmission or
			<u>DTC P0757</u> for the 4L80-E/4L85-E transmission
			<u>DTC P0776 or P0777</u>
			<u>DTC P0776 or P0777</u>
			<u>DTC P0787</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

	Control Circuit Low Voltage		
P0788	3-2 Shift Solenoid (SS) Control Circuit High Voltage	TCM	<u>DTC P0788</u>
P0796	Clutch Pressure Control (PC) Solenoid 3 - Stuck Off	TCM	<u>DTC P0796 or P0797</u>
P0797	Clutch Pressure Control (PC) Solenoid 3 - Stuck On	TCM	<u>DTC P0796 or P0797</u>
P0815	Upshift Switch Circuit	TCM	<u>DTC P0815, P0816, or P0826</u>
P0816	Downshift Switch Circuit	TCM	<u>DTC P0815, P0816, or P0826</u>
P0826	Up and Down Shift Switch Circuit	TCM	<u>DTC P0815, P0816, or P0826</u>
P0842	Transmission Fluid Pressure (TFP) Switch 1 Circuit Low Voltage	TCM	<u>DTC P0842 or P0843</u>
P0843	Transmission Fluid Pressure (TFP) Switch 1 Circuit High Voltage	TCM	<u>DTC P0842 or P0843</u>
P0851	Park/Neutral Position (PNP) Switch Circuit Low Voltage	TCM	<u>DTC P0851</u> for the 4L60- E/4L65-E/4L70-E transmission or <u>DTC P0851 or P0852</u> for the 6L50/6L80/6L90 transmission
P0852	Park/Neutral Position (PNP) Switch Circuit High Voltage	TCM	<u>DTC P0852</u> for the 4L60- E/4L65-E/4L70-E transmission or <u>DTC P0851 or P0852</u> for the 6L50/6L80/6L90 transmission
P0872	Transmission Fluid Pressure (TFP) Switch 3 Circuit Low Voltage	TCM	<u>DTC P0872 or P0873</u>
P0873	Transmission Fluid Pressure (TFP) Switch 3 Circuit High Voltage	TCM	<u>DTC P0872 or P0873</u>
P0877	Transmission Fluid Pressure (TFP) Switch 4 Circuit Low Voltage	TCM	<u>DTC P0877 or P0878</u>
P0878	Transmission Fluid Pressure (TFP) Switch 4 Circuit High Voltage	TCM	<u>DTC P0877 or P0878</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0894	Transmission Component Slipping	TCM	<u>DTC P0894</u>
P0961	Line Pressure Control (PC) Solenoid System Performance	TCM	• <u>DTC P0961</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P0961</u> for the 4L80-E/4L85-E transmission • <u>DTC P0961, P0962 or P0963</u> for the 6L50/6L80/6L90 transmission
P0962	Line Pressure Control (PC) Solenoid Control Circuit Low Voltage	TCM	<u>DTC P0961, P0962 or P0963</u>
P0963	Line Pressure Control (PC) Solenoid Control Circuit High Voltage	TCM	<u>DTC P0961, P0962 or P0963</u>
P0965	Clutch Pressure Control (PC) Solenoid 2 System Performance	TCM	<u>DTC P0965, P0966 or P0967</u>
P0966	Clutch Pressure Control (PC) Solenoid 2 Control Circuit Low Voltage	TCM	<u>DTC P0965, P0966 or P0967</u>
P0967	Clutch Pressure Control (PC) Solenoid 2 Control Circuit High Voltage	TCM	<u>DTC P0965, P0966 or P0967</u>
P0969	Clutch Pressure Control (PC) Solenoid 3 System Performance	TCM	<u>DTC P0969, P0970 or P0971</u>
P0970	Clutch Pressure Control (PC) Solenoid 3 Control Circuit Low Voltage	TCM	<u>DTC P0969, P0970 or P0971</u>
P0971	Clutch Pressure Control (PC) Solenoid 3 Control Circuit High Voltage	TCM	<u>DTC P0969, P0970 or P0971</u>
P0973	1-2 Shift Solenoid (SS) Control Circuit Low Voltage	TCM	<u>DTC P0973</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P0973</u> for the 4L80-E/4L85-E transmission
	Shift Solenoid (SS) 1 Control Circuit Low Voltage		<u>DTC P0973 or P0974</u> for the 6L50/6L80/6L90 transmission

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P0974	1-2 Shift Solenoid (SS) Control Circuit High Voltage	TCM	<u>DTC P0974</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P0974</u> for the 4L80-E/4L85-E transmission
	Shift Solenoid (SS) 1 Control Circuit High Voltage		<u>DTC P0973 or P0974</u> for the 6L50/6L80/6L90 transmission
P0976	2-3 Shift Solenoid (SS) Control Circuit Low Voltage	TCM	<u>DTC P0976</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P0976</u> for the 4L80-E/4L85-E transmission
	Shift Solenoid (SS) 2 Control Circuit Low Voltage		<u>DTC P0976 or P0977</u> for the 6L50/6L80/6L90 transmission
P0977	2-3 Shift Solenoid (SS) Control Circuit High Voltage	TCM	<u>DTC P0977</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P0977</u> for the 4L80-E/4L85-E transmission
	Shift Solenoid (SS) 2 Control Circuit High Voltage		<u>DTC P0976 or P0977</u> for the 6L50/6L80/6L90 transmission
P0989	Transmission Fluid Pressure (TFP) Switch 5 Circuit Low Voltage	TCM	<u>DTC P0989 or P0990</u>
P0990	Transmission Fluid Pressure (TFP) Switch 5 Circuit High Voltage	TCM	<u>DTC P0989 or P0990</u>
P1101	Intake Air Flow System Performance	ECM	<u>DTC P0101 or P1101</u>
P1133	HO2S Insufficient Switching Bank 1 Sensor 1	ECM	<u>DTC P0133, P0134, P0140, P1133, P2A00 or P2A01</u>
P1153	HO2S Insufficient Switching Bank 2 Sensor 1	ECM	<u>DTC P0153, P0154, P0160, P1153, P2A03, or P2A04</u>
P1258	Engine Coolant Overtemperature - Protection Mode Active	ECM	<u>DTC P1258</u>
P1380	Misfire Detected - Rough Road Data Not Available	ECM	<u>DTC P1380 or P1381</u>
	Misfire Detected - No		

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P1381	Communication With Brake Control Module	ECM	<u>DTC P1380 or P1381</u>
P1400	Cold Start Emission Reduction Control System	ECM	<u>DTC P1400</u>
P1516	Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance	ECM	<u>DTC P1516, P2101, P2119, or P2176</u>
P1621	Transmission Control Module (TCM) Long Term Memory Performance	TCM	<u>DTC P0601, P0602, P0603, P0604, or P1621</u>
P1629	Theft Deterrent Fuel Enable Signal Not Received	ECM	<u>DTC P1629</u>
P1631	Theft Deterrent Fuel Enable Signal Not Correct	ECM	<u>DTC P1631</u>
P1632	Theft Deterrent Fuel Disable Signal Received	ECM	<u>DTC P1632</u>
P1668	Generator L-Terminal Control Circuit	ECM	<u>DTC P1668</u>
P1682	Ignition 1 Switch Circuit 2	ECM	<u>DTC P1682</u>
P1684	Transmission Control Module (TCM) Power Up Temperature Sensor Performance	TCM	<u>DTC P1684, P1685 or P1686</u>
P1685	Transmission Control Module (TCM) Power Up Temperature Sensor Circuit Low Voltage	TCM	<u>DTC P1684, P1685 or P1686</u>
P1686	Transmission Control Module (TCM) Power Up Temperature Sensor Circuit High Voltage	TCM	<u>DTC P1684, P1685 or P1686</u>
P1751	Shift Valve 1 Performance	TCM	<u>DTC P1751</u>
P1810	Transmission Fluid Pressure (TFP) Position Switch Circuit	TCM	<u>DTC P1810</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P1810</u> for the 4L80-E/4L85-E transmission
P1815	Transmission Fluid Pressure (TFP) Valve Position Switch - Start in Wrong Range	TCM	<u>DTC P1815</u>
P1816	Transmission Fluid Pressure (TFP) Valve Position Switch Indicates Park/Neutral (P/N) with Drive Ratio	TCM	<u>DTC P1816</u> for the 4L60-E/4L65-E/4L70-E transmission or <u>DTC P1816</u> for the 4L80-E/4L85-E transmission
			<u>DTC P1818</u> for the 4L60-

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P1818	Transmission Fluid Pressure (TFP) Valve Position Switch Indicates Drive without Drive Ratio	TCM	E/4L65-E/4L70-E transmission or <u>DTC P1818</u> for the 4L80-E/4L85-E transmission
P1825	Internal Mode Switch - Invalid Range	TCM	<u>DTC P1825 or P1915</u>
P1831	Pressure Control (PC)/Shift Lock Solenoid Control Circuit Low Voltage	TCM	<u>DTC P1831 or P1832</u>
P1832	Pressure Control (PC)/Shift Lock Solenoid Control Circuit High Voltage	TCM	<u>DTC P1831 or P1832</u>
P1915	Internal Mode Switch Start/Wrong Range	TCM	<u>DTC P1825 or P1915</u>
P2066	Fuel Level Sensor 2 Performance	ECM	<u>DTC P2066</u>
P2067	Fuel Level Sensor 2 Low Voltage	ECM	<u>DTC P2067</u>
P2068	Fuel Level Sensor 2 High Voltage	ECM	<u>DTC P2068</u>
P2101	Control Module Throttle Actuator Position Performance	ECM	<u>DTC P1516, P2101, P2119, or P2176</u>
P2119	Throttle Closed Position Performance	ECM	<u>DTC P1516, P2101, P2119, or P2176</u>
P2120	Accelerator Pedal Position (APP) Sensor 1 Circuit	ECM	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2122	Accelerator Pedal Position (APP) Sensor 1 Circuit Low Voltage	ECM	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2123	Accelerator Pedal Position (APP) Sensor 1 Circuit High Voltage	ECM	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2125	Accelerator Pedal Position (APP) Sensor 2 Circuit	ECM	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2127	Accelerator Pedal Position (APP) Sensor 2 Circuit Low Voltage	ECM	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2128	Accelerator Pedal Position (APP) Sensor 2 Circuit High Voltage	ECM	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2135	Throttle Position (TP) Sensor	ECM	<u>DTC P0120, P0122, P0123, P0220, P0222, P0223, or</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

	1-2 Correlation		<u>P2135</u>
P2138	Accelerator Pedal Position (APP) Sensor 1-2 Correlation	ECM	<u>DTC P2120, P2122, P2123, P2125, P2127, P2128, or P2138</u>
P2176	Minimum Throttle Position Not Learned	ECM	<u>DTC P1516, P2101, P2119, or P2176</u>
P2534	Ignition 1 Switch Circuit Low Voltage	TCM	• <u>DTC P2534</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P2534</u> for the 4L80-E/4L85-E transmission • <u>DTC P2534</u> for the 6L50/6L80/6L90 transmission
P2636	Fuel Pump 2 Flow Insufficient	ECM	<u>DTC P2636</u>
P2610	Control Module Ignition Off Timer Performance	ECM	<u>DTC P0601, P0602, P0603, P0604, P0606, P0607, P060D, P062F, or P2610</u>
P2632	Fuel Pump Relay 2 Control Circuit	ECM	<u>DTC P0230 or P2632</u>
P2714	Clutch Pressure Control (PC) Solenoid 4 - Stuck Off	TCM	<u>DTC P2714 or P2715</u>
P2715	Clutch Pressure Control (PC) Solenoid 4 - Stuck On	TCM	<u>DTC P2714 or P2715</u>
P2719	Clutch Pressure Control (PC) Solenoid 4 System Performance	TCM	<u>DTC P2719, P2720 or P2721</u>
P2720	Clutch Pressure Control (PC) Solenoid 4 Control Circuit Low Voltage	TCM	<u>DTC P2719, P2720 or P2721</u>
P2721	Clutch Pressure Control (PC) Solenoid 4 Control Circuit High Voltage	TCM	<u>DTC P2719, P2720 or P2721</u>
P2723	Clutch Pressure Control (PC) Solenoid 5 - Stuck Off	TCM	<u>DTC P2723 or P2724</u>
P2724	Clutch Pressure Control (PC) Solenoid 5 - Stuck On	TCM	<u>DTC P2723 or P2724</u>
P2728	Clutch Pressure Control (PC) Solenoid 5 System Performance	TCM	<u>DTC P2728, P2729 or P2730</u>
P2729	Clutch Pressure Control (PC) Solenoid 5 Control Circuit Low Voltage	TCM	<u>DTC P2728, P2729 or P2730</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P2730	Clutch Pressure Control (PC) Solenoid 5 Control Circuit High Voltage	TCM	<u>DTC P2728, P2729 or P2730</u>
P2762	Torque Converter Clutch (TCC) Pressure Control Solenoid System Performance	TCM	<u>DTC P2762, DTC P2763 or DTC P2764</u>
P2763	Torque Converter Clutch (TCC) Pressure Control (PC) Solenoid Control Circuit High Voltage	TCM	• <u>DTC P2763</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P2763</u> for the 4L80-E/4L85-E transmission • <u>DTC P2762, DTC P2763 or DTC P2764</u> for the 6L50/6L80/6L90 transmission
P2764	Torque Converter Clutch (TCC) Pressure Control (PC) Solenoid Control Circuit Low Voltage	TCM	• <u>DTC P2764</u> for the 4L60-E/4L65-E/4L70-E transmission • <u>DTC P2764</u> for the 4L80-E/4L85-E transmission • <u>DTC P2762, DTC P2763 or DTC P2764</u> for the 6L50/6L80/6L90 transmission
P2769	Torque Converter Clutch (TCC) Enable Solenoid Control Circuit Low Voltage	TCM	<u>DTC P2769</u>
P2770	Torque Converter Clutch (TCC) Enable Solenoid Control Circuit High Voltage	TCM	<u>DTC P2770</u>
P2771	Four Wheel Drive (4WD) Low Switch Circuit	TCM	<u>DTC P2771</u>
P2A00	HO2S Performance Bank 1 Sensor 1	ECM	<u>DTC P0133, P0134, P0140, P1133, P2A00 or P2A01</u>
P2A01	O2 Sensor Circuit Range/Performance Bank 1 Sensor 2	ECM	<u>DTC P0133, P0134, P0140, P1133, P2A00 or P2A01</u>
P2A03	HO2S Performance Bank 2 Sensor 1	ECM	<u>DTC P0153, P0154, P0160, P1153, P2A03, or P2A04</u>
	O2 Sensor Circuit		<u>DTC P0153, P0154, P0160,</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

P2A04	Range/Performance Bank 2 Sensor 2	ECM	<u>P1153, P2A03, or P2A04</u>
P3400	Cylinder Deactivation System Performance	ECM	<u>DTC P3400</u>
P3401	Cylinder 1 Deactivation Solenoid Control Circuit	ECM	<u>DTC P3401, P3425, P3441, or P3449</u>
P3425	Cylinder 4 Deactivation Solenoid Control Circuit	ECM	<u>DTC P3401, P3425, P3441, or P3449</u>
P3441	Cylinder 6 Deactivation Solenoid Control Circuit	ECM	<u>DTC P3401, P3425, P3441, or P3449</u>
P3449	Cylinder 7 Deactivation Solenoid Control Circuit	ECM	<u>DTC P3401, P3425, P3441, or P3449</u>
U0073	Control Module Communication Bus Off	Audio Amplifier, DPM, ECM, PLGM, Radio, RCDLR, RHVSM, ROS, SDM, TDM	<u>DTC U0073</u>
U0100	Lost Communication With ECM	BCM, EBCM	<u>DTC U0100-U0299</u>
U0101	Lost Communication with Transmission Control Module (TCM)	BCM, EBCM, ECM	<u>DTC U0100-U0299</u>
U0102	Lost Communication with Transfer Case Control Module	EBCM, ECM	<u>DTC U0100-U0299</u>
U0104	Lost Communication With Cruise Control Module	BCM, EBCM, ECM	<u>DTC U0100-U0299</u>
U0121	Lost Communication With Antilock Brake System (ABS) Control Module	BCM, ECM	<u>DTC U0100-U0299</u>
U0122	Lost Communication With Vehicle Dynamics Control Module	BCM	<u>DTC U0100-U0299</u>
U0140	Lost Communication With Body Control Module	Audio Amplifier, EBCM, ECM, DDS, DPM, HVAC, IPC, Object Alarm Module, PDS, PPS, RCDLR, RHVSM, ROS, SDM, TDM	<u>DTC U0100-U0299</u>
U0151	Lost Communication With Restraints Control Module	IPC, PPS, ROS	<u>DTC U0100-U0299</u>
U0155	Lost Communication With Instrument Panel Cluster (IPC) Control Module	Audio Amplifier, BCM, DDS, DPM, HVAC, Object Alarm Module, PDS, PLGM, PPS, RCDLR, RHVSM, ROS, RSA, SDM, TDM	<u>DTC U0100-U0299</u>
	Lost Communication With		

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

U0159	Park Assist Module (RPA)	IPC	<u>DTC U0100-U0299</u>
U0160	Lost Communication With Audible Alert Control Module	BCM, Chime Module, Object Alarm Module	<u>DTC U0100-U0299</u>
U0164	Lost Communication With HVAC Control Module	BCM, DDS, DPM, ECM, IPC, PDS, RHVSM, RSA	<u>DTC U0100-U0299</u>
U0165	Loss of Communication with RCC	ECM, HVAC	<u>DTC U0100-U0299</u>
U0168	Lost Communication With Vehicle Security Control Module	BCM, IPC	<u>DTC U0100-U0299</u>
U0170	Lost Communication With AOS	SDM	<u>DTC U0100-U0299</u>
U0172	Lost Communication With ROS	SDM	<u>DTC U0100-U0299</u>
U0184	Lost Communication With Radio	Audio Amplifier, BCM, DRR, Object Alarm Module, RSA	<u>DTC U0100-U0299</u>
U0186	Lost Communication With Audio Amplifier	BCM, Object Alarm Module	<u>DTC U0100-U0299</u>
U0198	Lost Communication With Telematic Control Module	BCM	<u>DTC U0100-U0299</u>
U0199	Lost Communication With "Door Control Module "A"	BCM, DDS, DPM, PDS, RHVSM	<u>DTC U0100-U0299</u>
U0200	Lost Communication With "Door Control Module "B"	BCM, DPM, RHVSM	<u>DTC U0100-U0299</u>
U0208	Lost Communication With "Seat Control Module "A"	DDS, HVAC, PDS	<u>DTC U0100-U0299</u>
U0209	Loss of Communication with HVSM	HVAC	<u>DTC U0100-U0299</u>
U0210	Lost Communication With "Seat Control Module "C"	RSA	<u>DTC U0100-U0299</u>
U0214	Lost Communication With Remote Function Actuation	BCM	<u>DTC U0100-U0299</u>
U0241	Lost Communication With Headlamp Control Module "A"	BCM	<u>DTC U0100-U0299</u>
U0249	Loss of Communication with RSA	DPM, HVAC, RHVSM	<u>DTC U0100-U0299</u>
U1500	Inter-Device Dedicated Bus Malfunction	VCIM	<u>DTC U1500</u>
U1814	Powertrain High Speed Communication Enable Circuit	BCM	<u>DTC U1814</u>
U2099	High Speed Communication Enable Circuit	BCM	<u>DTC U2099</u>

2007 Cadillac Escalade

2007 DTC INDEX Avalanche, Escalade, Suburban, Tahoe & Yukon

U2100	Controller Area Network (CAN) Bus Communication	EBCM, ESCM, HVAC, VCIM	<u>DTC U2100</u>
U2103	Fewer Controllers On Bus Than Programmed	ESCM, HVAC, VCIM	<u>DTC U2105-U2199</u>
U2142	Lost Communications With Yaw Rate Sensor (YRS)	EBCM	<u>DTC U2105-U2199</u>