

Interior Trim and Paneling


Specifications

Fastener Tightening Specifications

Application	Specification	
	Metric	English
Cargo Tie Down Hook Fastener	9 N•m	80 lb in
Roof Rail Front Assist Handle Fastener	6 N•m	53 lb in
Roof Rail Rear Assist Handle Fastener	6 N•m	53 lb in

Repair Instructions

Front Side Door Window Switch Bezel Replacement (Left Side)

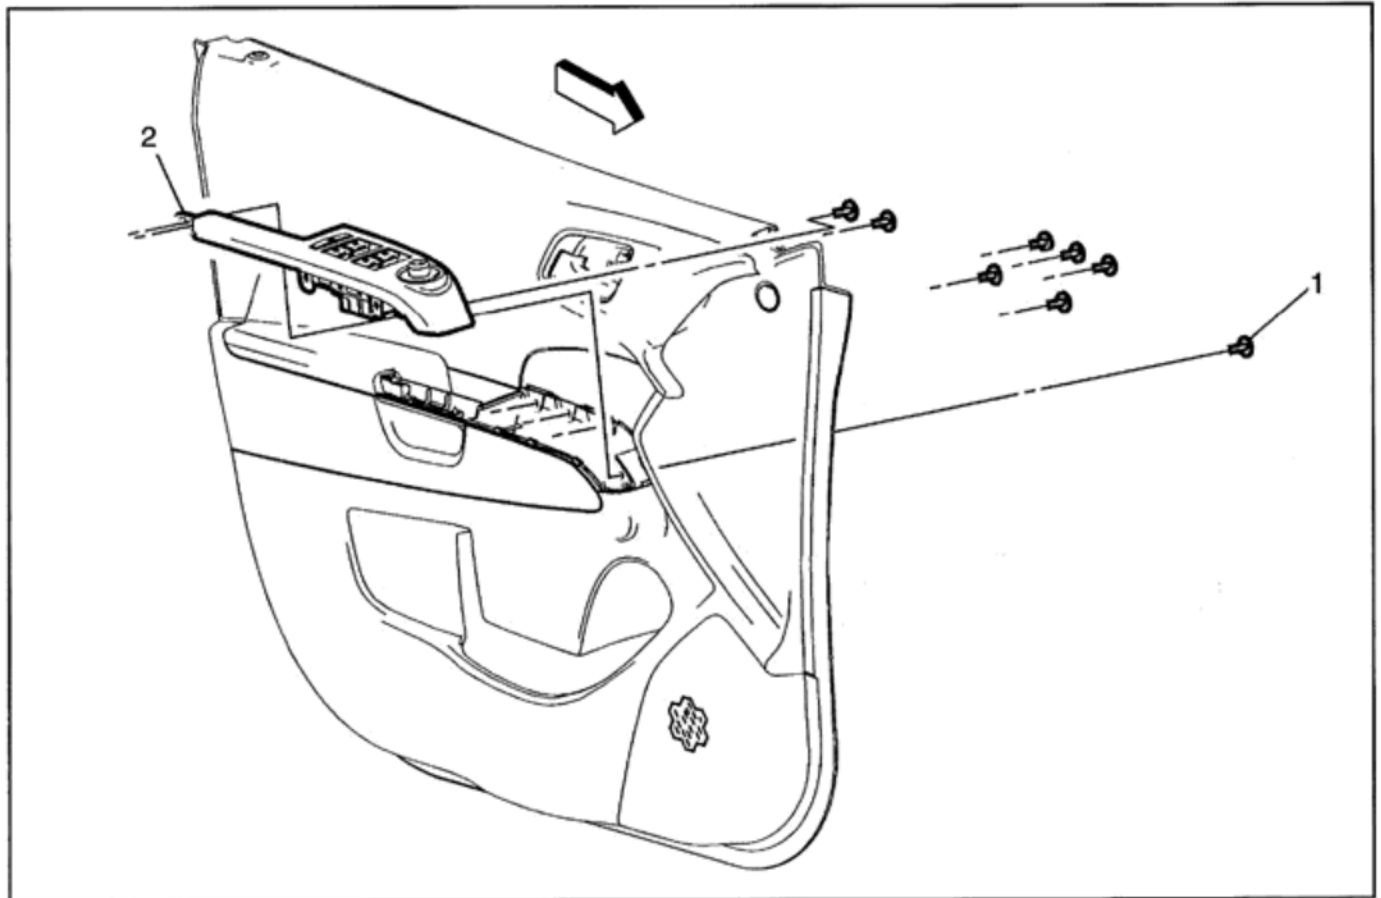


2502651

Front Side Door Window Switch Bezel Replacement (Left Side)

Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to <i>Front Side Door Trim Replacement</i> on page 2-67.	
1	Front Side Door Window Switch Bezel Screw (Qty: 8) Caution: Refer to <i>Fastener Caution</i> on page 0-8.
2	Front Side Door Window Switch Bezel Assembly

Front Side Door Window Switch Bezel Replacement (Right Side)

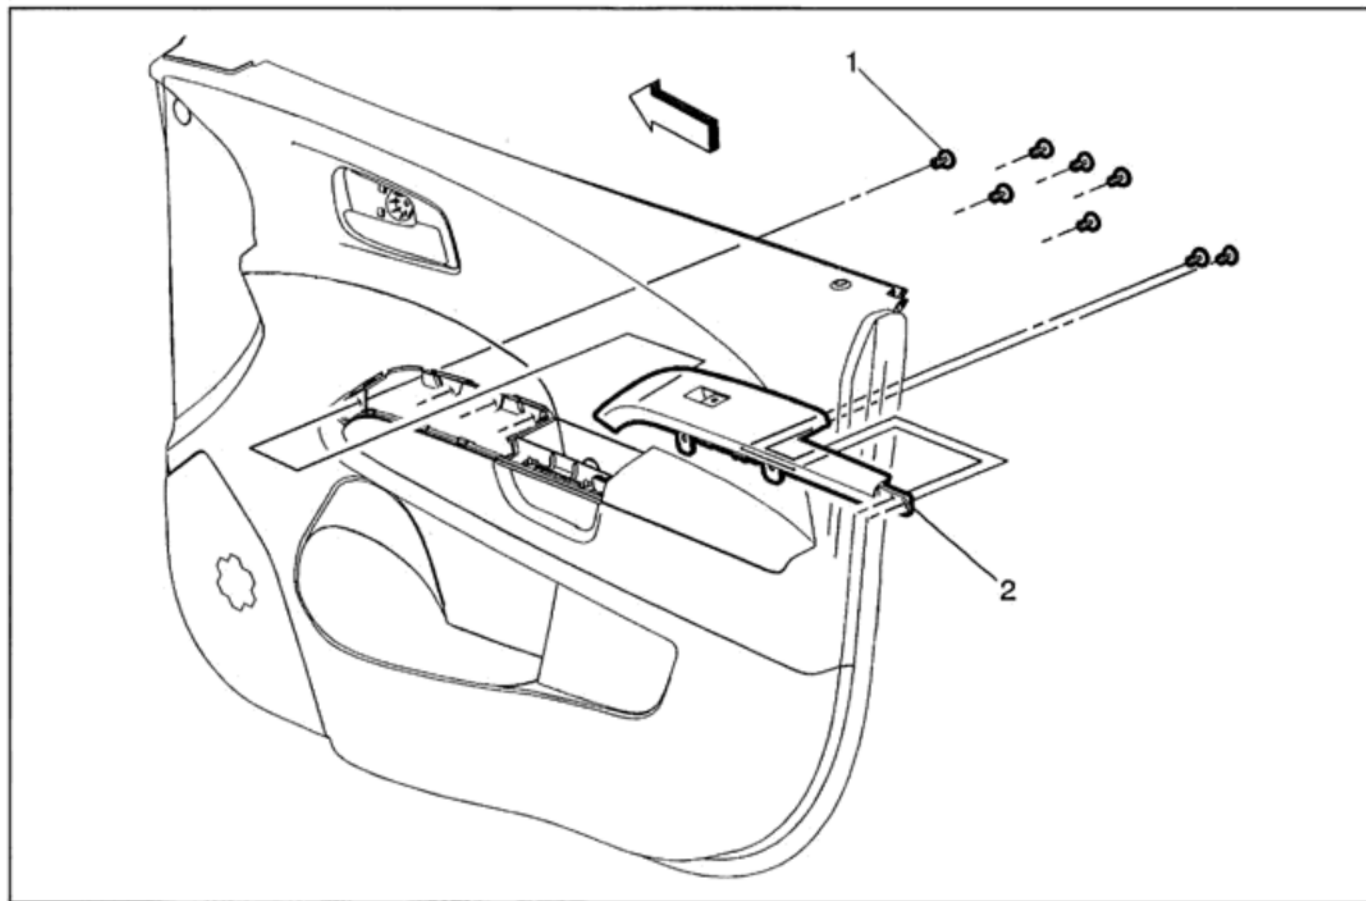


2511553

Front Side Door Window Switch Bezel Replacement (Right Side)

Callout	Component Name
Preliminary Procedure Remove the front side door trim. Refer to <i>Front Side Door Trim Replacement</i> on page 2-67.	
1	Front Side Door Window Switch Bezel Screw (Qty: 8) Caution: Refer to <i>Fastener Caution</i> on page 0-8.
2	Front Side Door Window Switch Bezel Assembly

Rear Side Door Window Switch Bezel Replacement

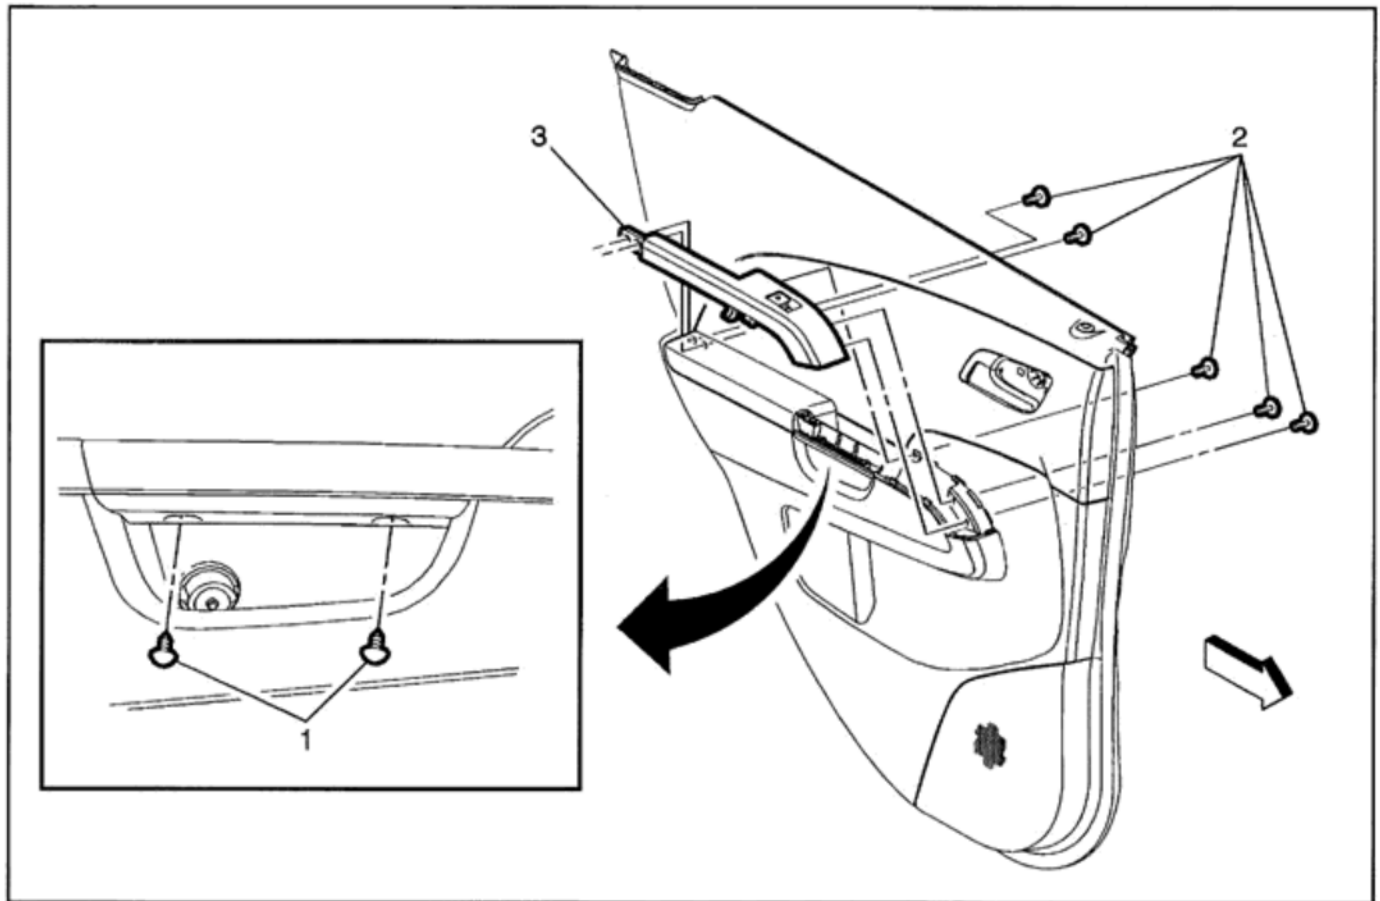


2545441

Rear Side Door Window Switch Bezel Replacement

Callout	Component Name
Preliminary Procedure Remove the rear side door trim. Refer to <i>Rear Side Door Trim Replacement (Sedan)</i> on page 2-84 or <i>Rear Side Door Trim Replacement (Hatchback)</i> on page 2-83.	
1	Rear Side Door Pull Handle Fastener (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8.
2	Rear Side Door Window Switch Bezel Fastener (Qty: 5)
3	Rear Side Door Window Switch Bezel Assembly

Front Side Door Upper Front Trim Panel Replacement

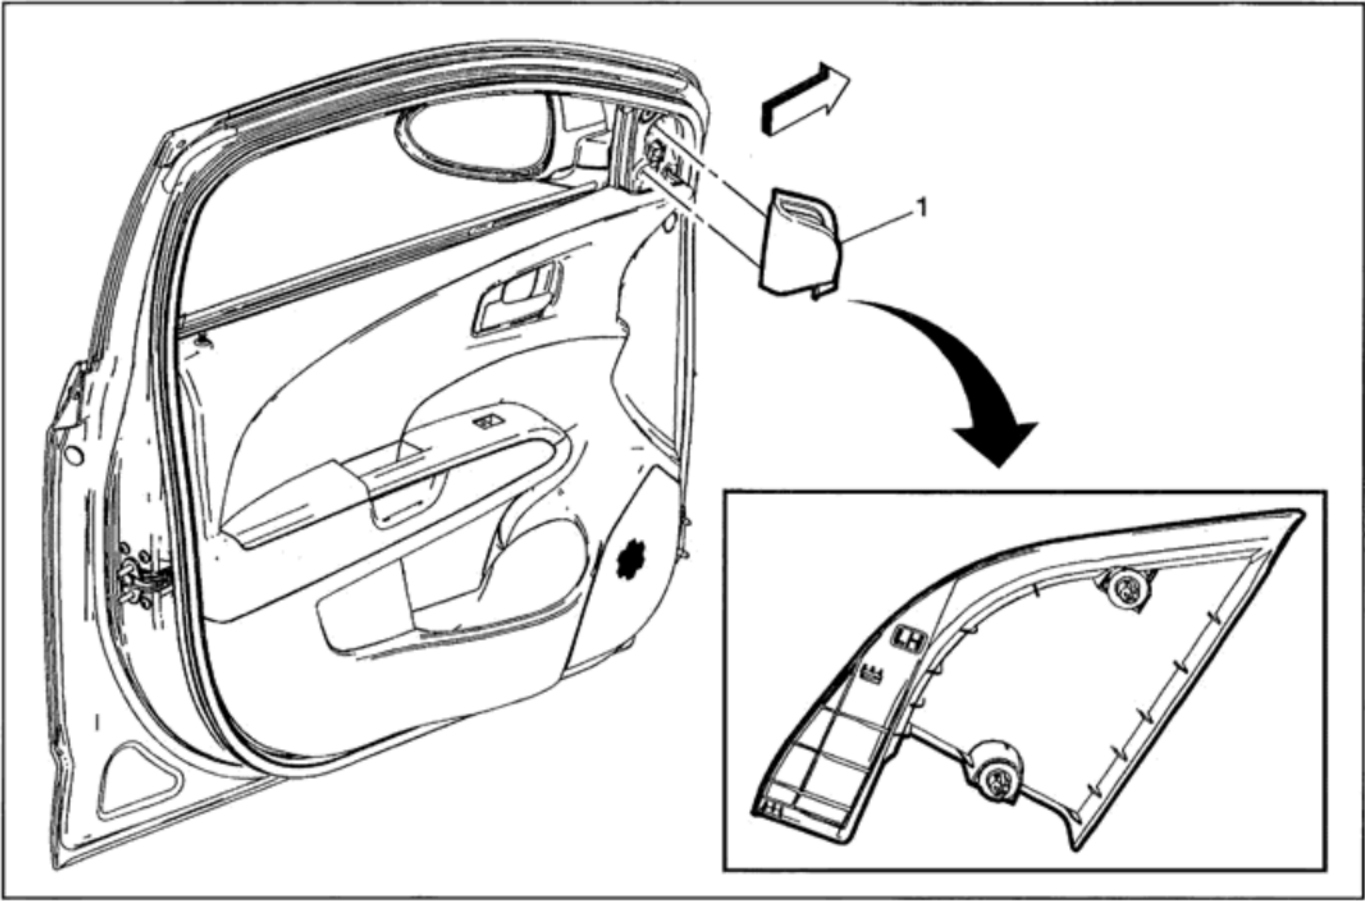


2502894

Front Side Door Upper Front Trim Panel Replacement

Callout	Component Name
1	Front Side Door Upper Front Trim Panel Assembly Procedure Use the appropriate plastic trim tool to aid in the removal of the door trim.

Front Side Door Trim Replacement

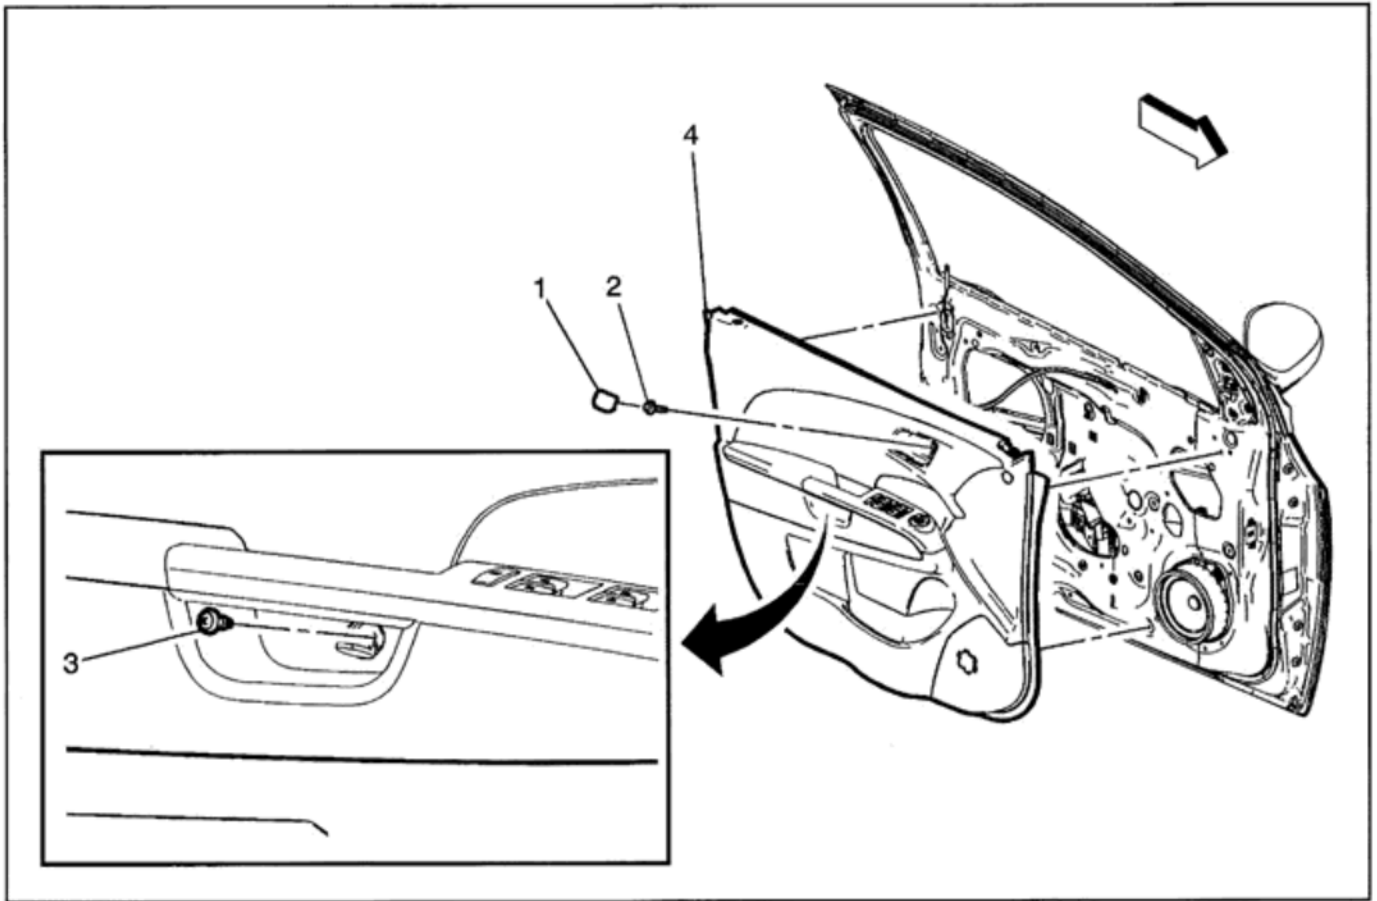


2502974

Front Side Door Trim Replacement

Callout	Component Name
Preliminary Procedure Remove the front side door upper front trim panel. Refer to <i>Front Side Door Upper Front Trim Panel Replacement</i> on page 2-66.	
1	Front Side Door Inside Handle Bolt Finish Cap
2	Front Side Door Inside Handle Fastener Caution: Refer to <i>Fastener Caution</i> on page 0-8.
3	Front Side Door Trim Fastener Procedure Use a small flat-bladed tool to open the front side door trim integral cap to access the fastener.
4	Front Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

Rear Side Door Upper Rear Trim Panel Replacement (Hatchback)

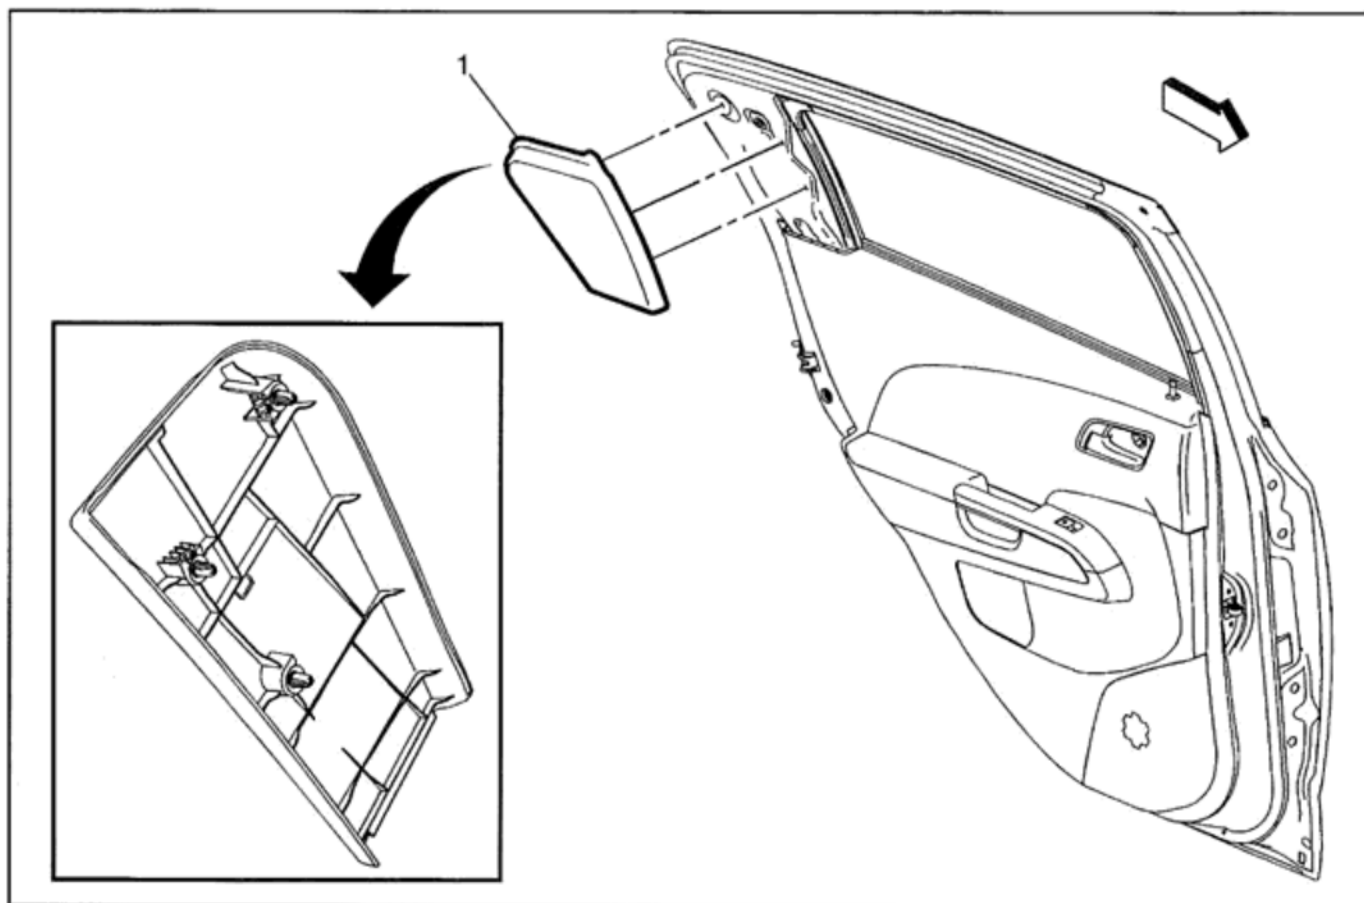


2505586

Rear Side Door Upper Rear Trim Panel Replacement (Hatchback)

Callout	Component Name
1	Rear Side Door Upper Rear Trim Panel Assembly Procedure Pull the door upper rear trim panel away from the rear side door.

Roof Rail Front Assist Handle Replacement

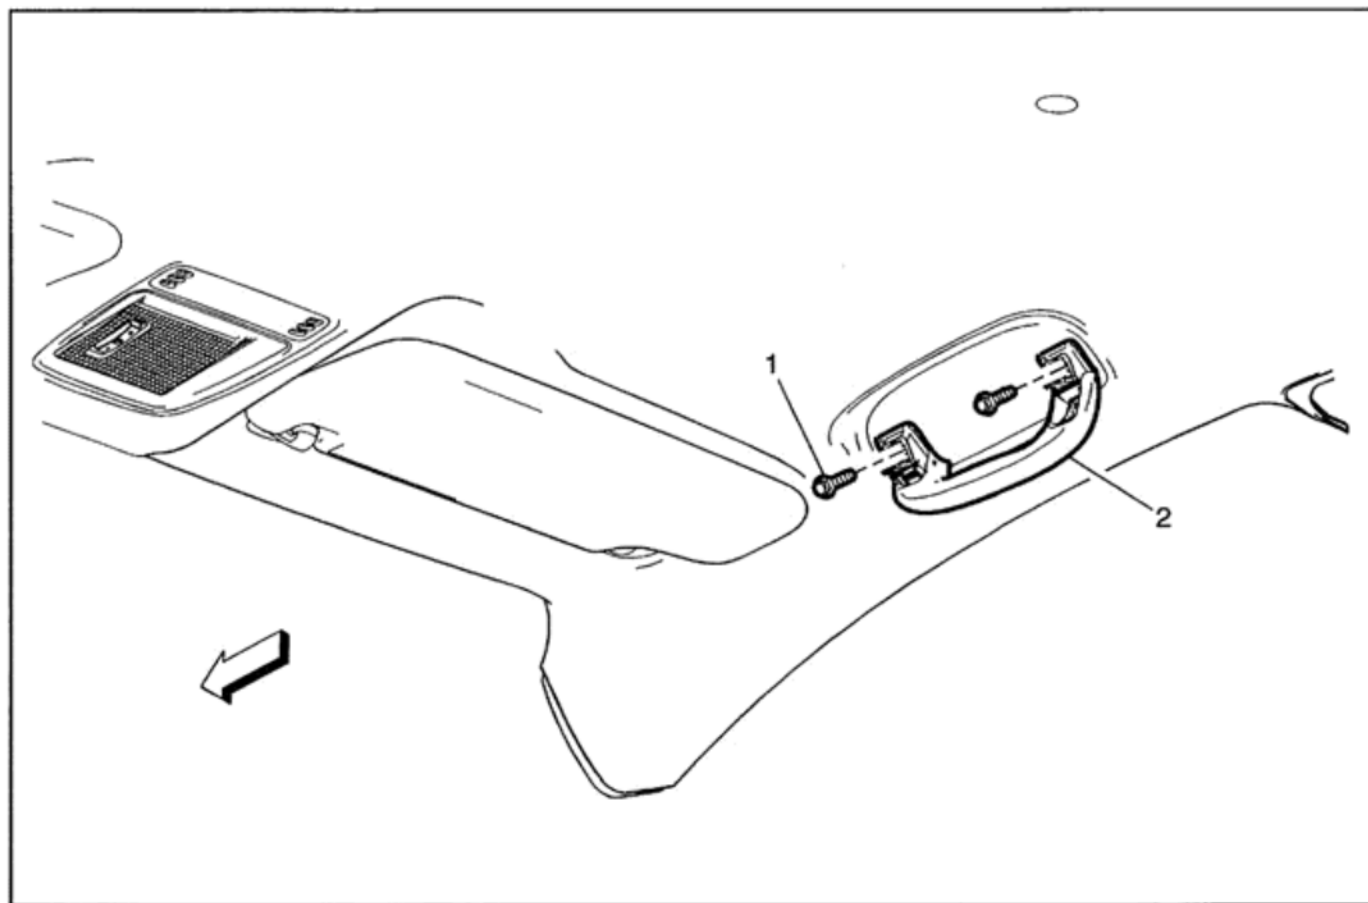


2506109

Roof Rail Front Assist Handle Replacement

Callout	Component Name
1	Roof Rail Front Assist Handle Fastener (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6N•m (53 lb in)
2	Roof Rail Front Assist Handle Assembly

Roof Rail Rear Assist Handle Replacement

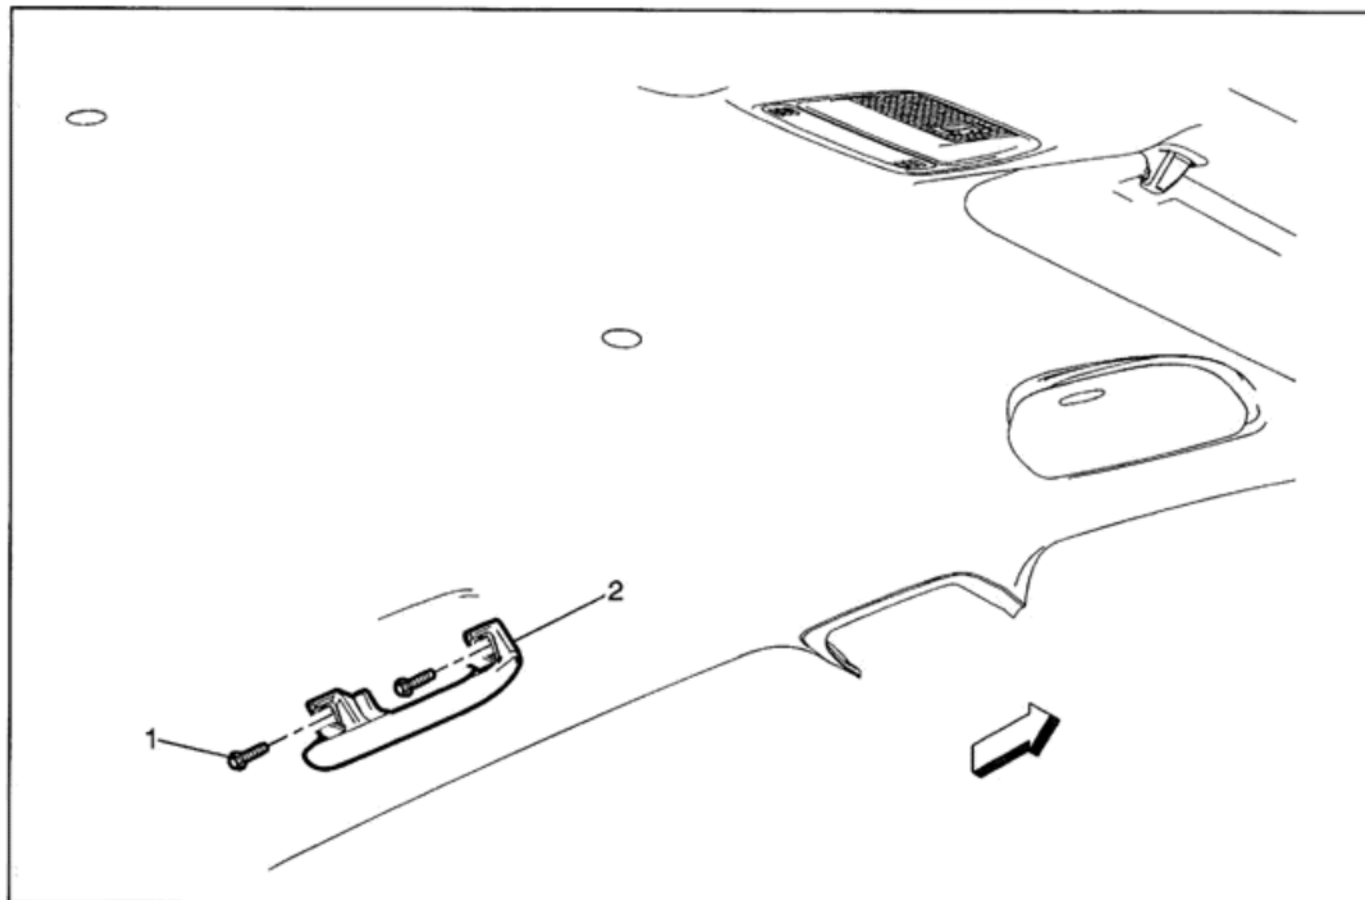


2506115

Roof Rail Rear Assist Handle Replacement

Callout	Component Name
1	Roof Rail Rear Assist Handle Fastener (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8. Procedure 1. Fold the assist handle downward and hold. 2. Use a small flat-bladed tool to open the assist handle covers to access the screws. Tighten 6 N•m (53 lb in)
2	Roof Rail Rear Assist Handle Assembly

Sunshade Replacement

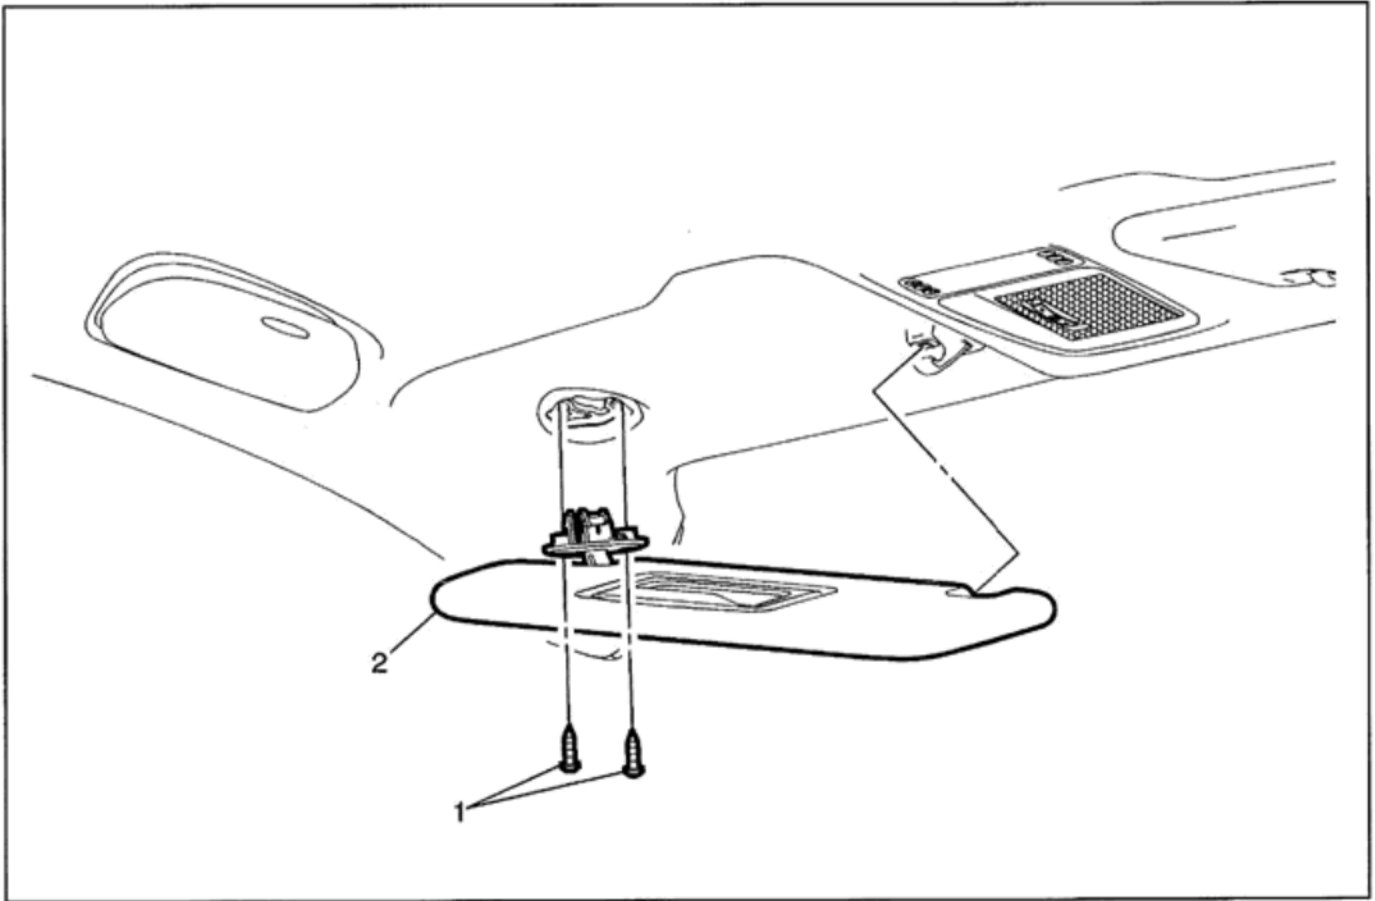


2505648

Sunshade Replacement

Callout	Component Name
Preliminary Procedure Lower the front of the headliner to access the sunshade electrical connector, if necessary. Refer to <i>Headlining Trim Panel Replacement (Sedan with Sunroof)</i> on page 2-26 or <i>Headlining Trim Panel Replacement (Hatchback with Sunroof)</i> on page 2-24 or <i>Headlining Trim Panel Replacement (Hatchback without Sunroof)</i> on page 2-25 or <i>Headlining Trim Panel Replacement (Sedan without Sunroof)</i> on page 2-27.	
1	Sunshade Fastener (Qty: 2) Caution: Refer to <i>Fastener Caution</i> on page 0-8.
2	Sunshade Assembly Procedure 1. Squeeze the tabs at the base of the sunshade assembly to remove from the headliner. 2. Disconnect the electrical connector.

Sunshade Support Replacement

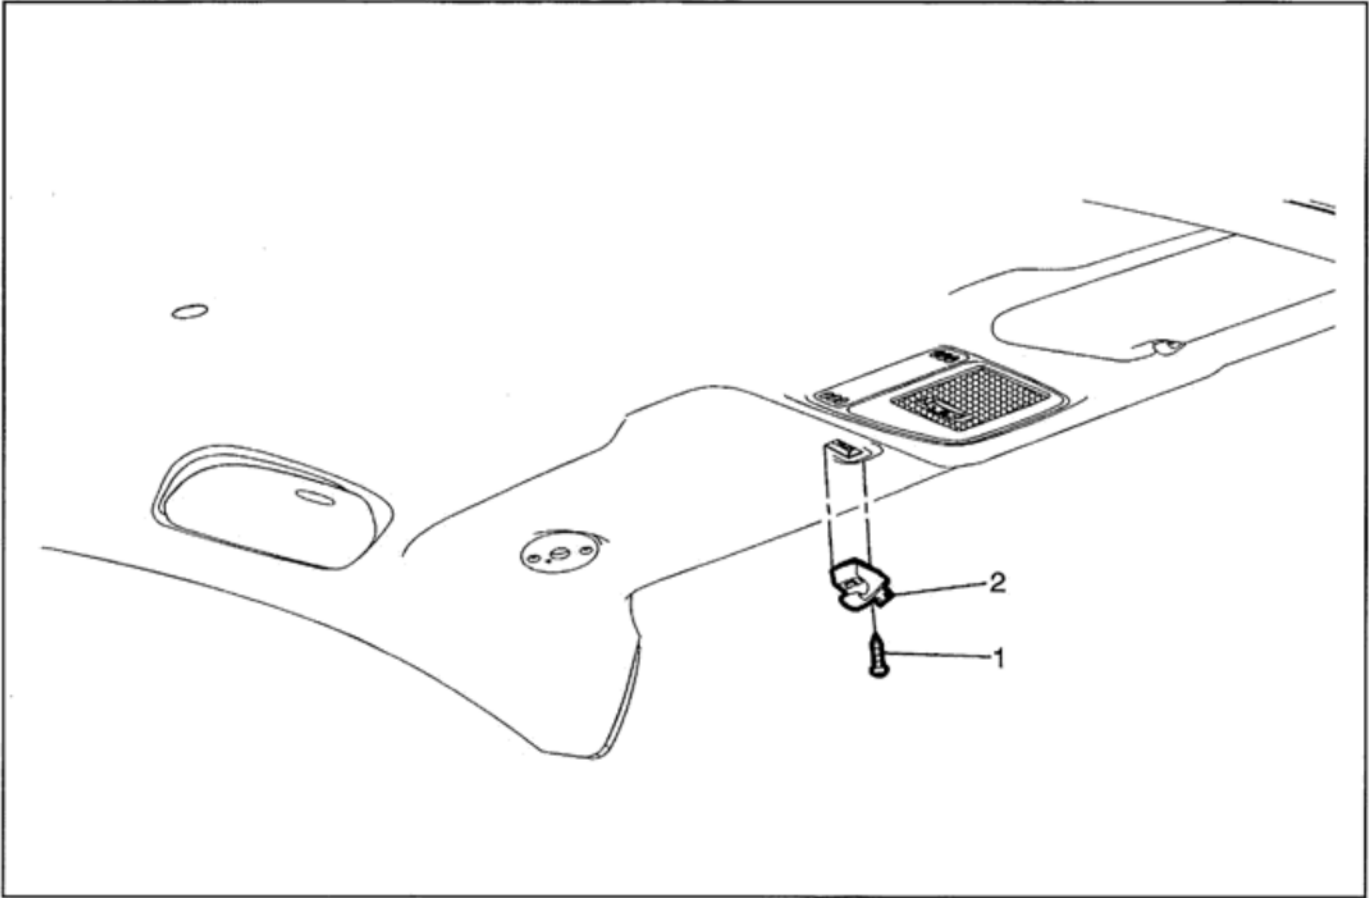


2505642

Sunshade Support Replacement

Callout	Component Name
1	Sunshade Support Fastener Caution: Refer to <i>Fastener Caution</i> on page 0-8. Note: Pull the cover downward to access the fastener.
2	Sunshade Support Assembly Procedure Unclip the sunshade from the support and reposition.

Windshield Side Garnish Molding Replacement

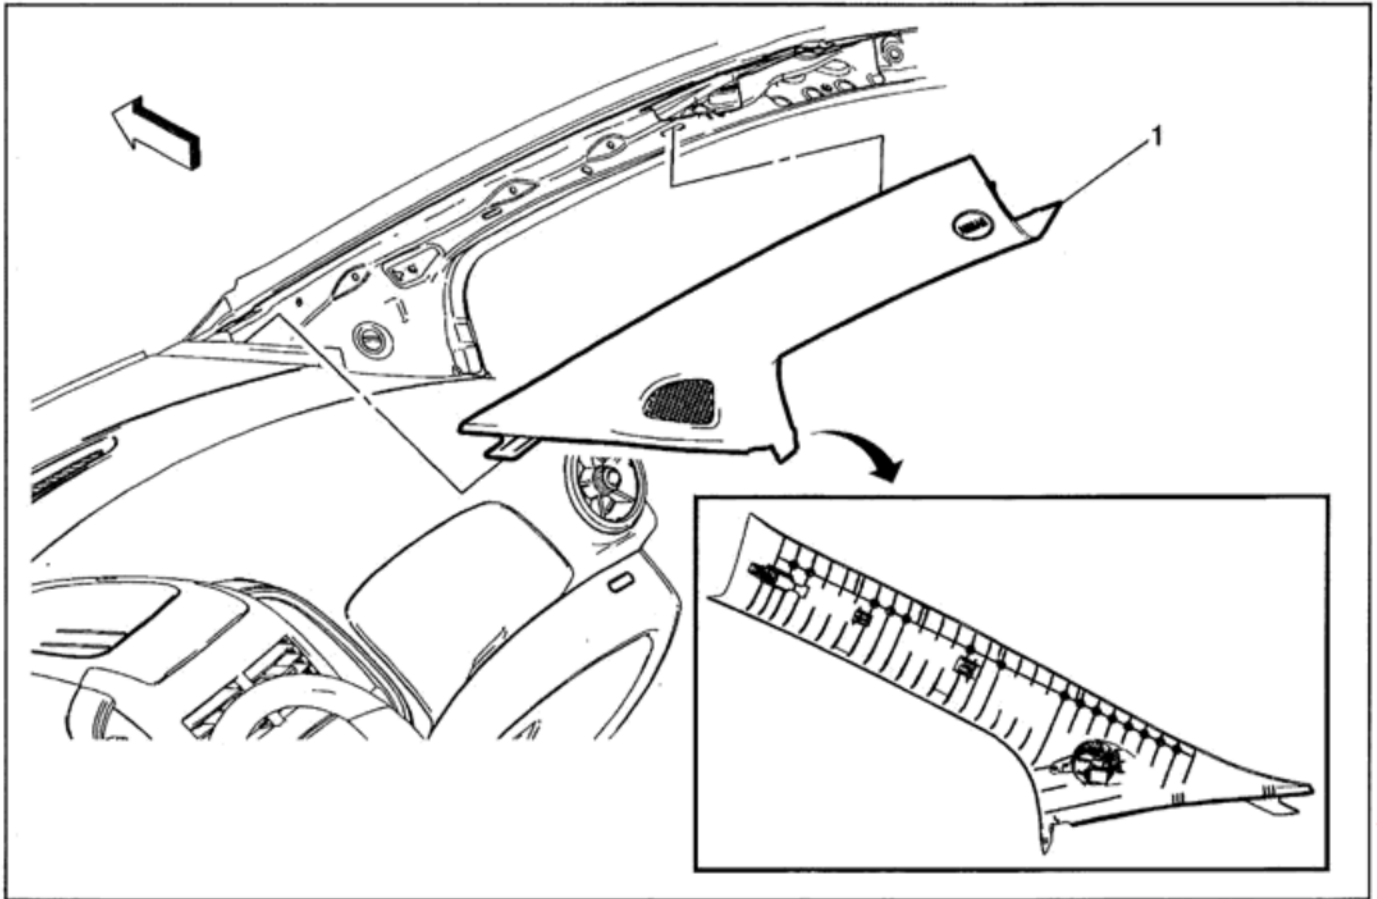


2506385

Windshield Side Garnish Molding Replacement

Callout	Component Name
Preliminary Procedures Disable the SIR system, if equipped. Refer to <i>SIR Disabling and Enabling</i> on page 13-112.	
1	Windshield Side Garnish Molding Assembly Procedure 1. Tabs must be installed prior to retainers. 2. Tabs to be fully seated in the instrument panel (I/P) trim panel retainer and valance panel. 3. Disconnect the electrical connectors. 4. Ensure the tether is reattached when installed.

Body Rear Seat Back Trim Panel Replacement (with AMA/AM7)

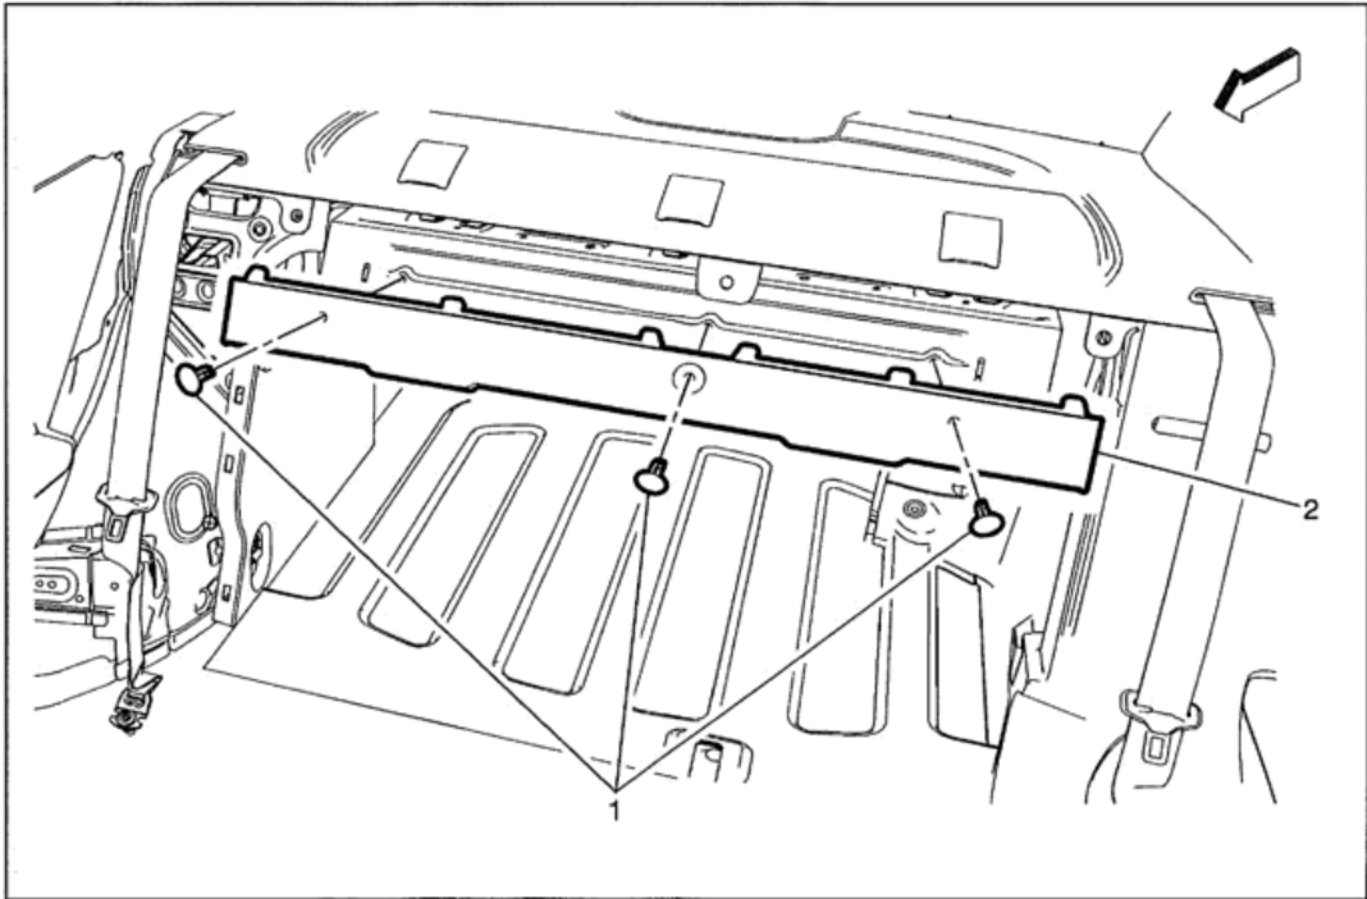


2677281

Body Rear Seat Back Trim Panel Replacement (with AMA/AM7)

Callout	Component Name
Preliminary Procedure Remove the body side trim panel. Refer to <i>Body Side Trim Panel Replacement (Sedan)</i> on page 2-80.	
1	Body Rear Seat Back Trim Panel Retainer (Qty: 3) Procedure Pull the rear seat back cushion latch release located on the top of the rear seat back cushion, and fold the rear seat back cushion forward.
2	Body Rear Seat Back Trim Panel Assembly

Center Pillar Upper Trim Panel Replacement

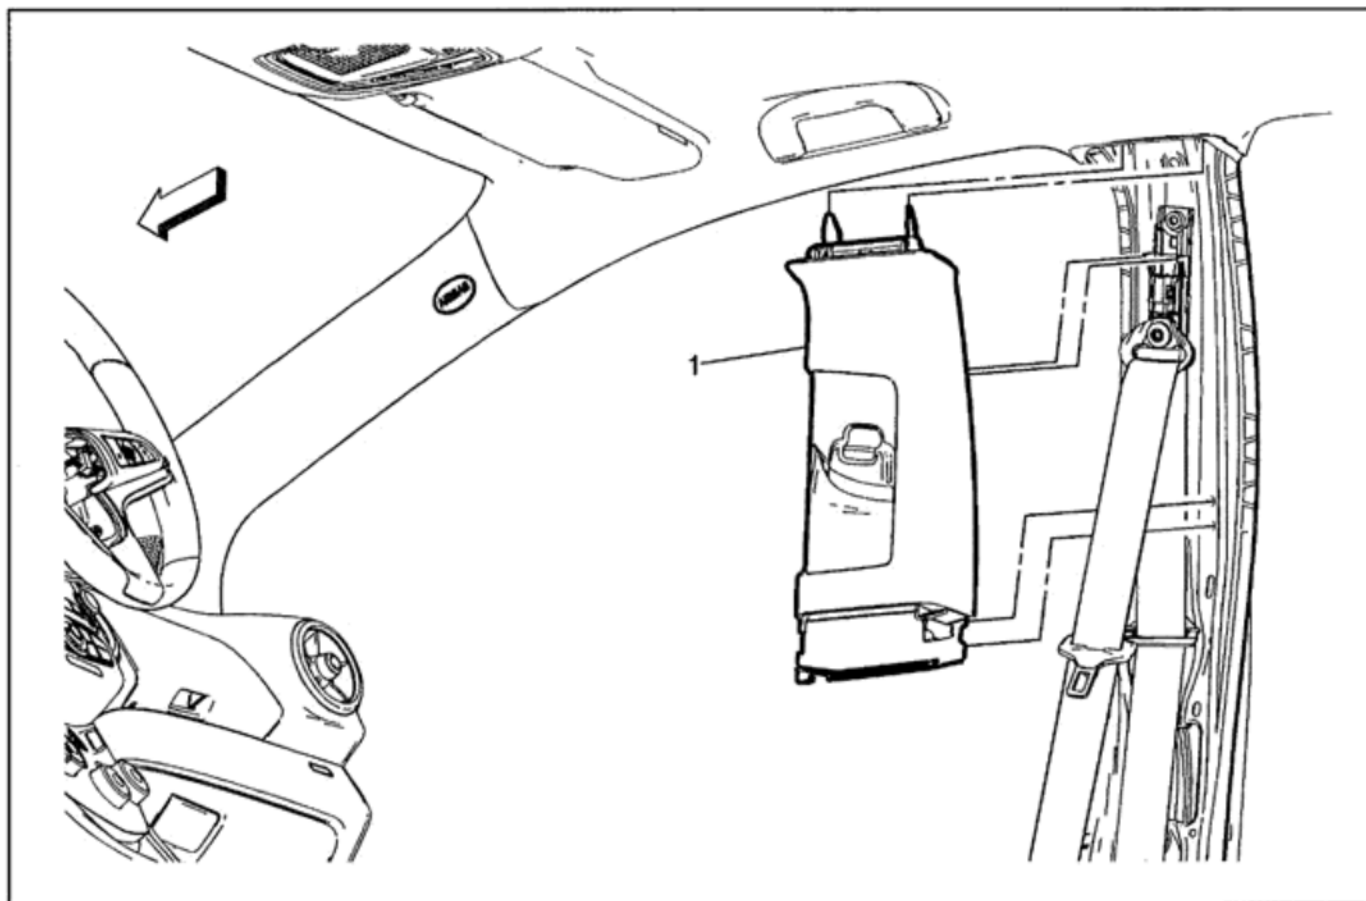


2506705

Center Pillar Upper Trim Panel Replacement

Callout	Component Name
Preliminary Procedure	
1. Remove the center pillar lower trim panel. Refer to <i>Center Pillar Lower Trim Panel Replacement</i> on page 2-76. 2. Remove the seat belt from the front seat. Refer to <i>Driver or Passenger Seat Shoulder Belt Replacement (without A69)</i> on page 13-131 or <i>Driver or Passenger Seat Shoulder Belt Replacement (with A69)</i> on page 13-133.	
1	Center Pillar Upper Trim Panel Assembly Procedure When replacing the center pillar upper trim panel, feed the seat belt through the panel.

Center Pillar Lower Trim Panel Replacement

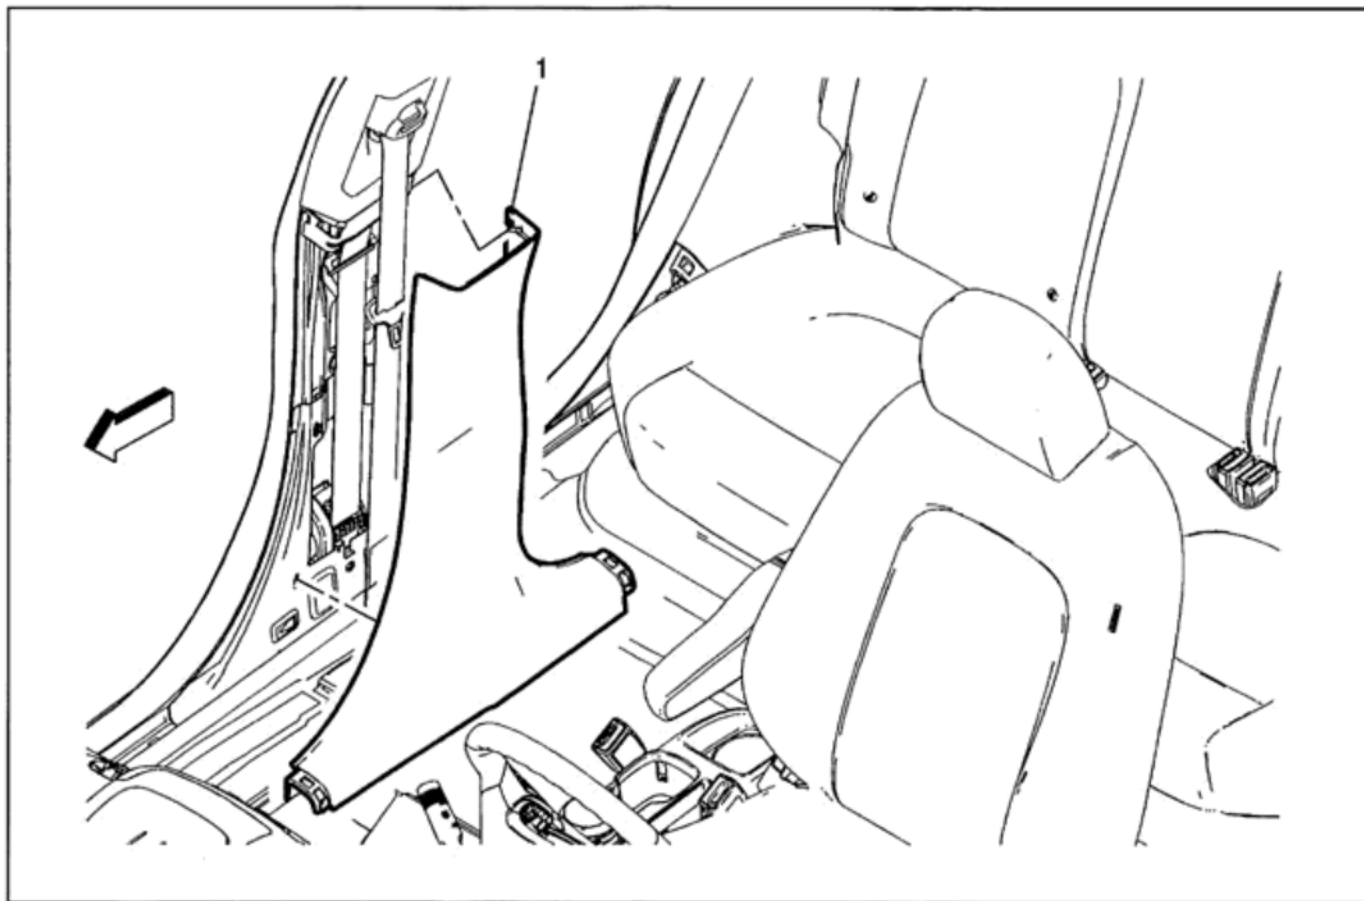


2506713

Center Pillar Lower Trim Panel Replacement

Callout	Component Name
Preliminary Procedure	
1. Remove the front side door opening floor carpet retainer. Refer to <i>Front Side Door Opening Floor Carpet Retainer Replacement</i> on page 2-20.	
2. Remove the rear side door opening floor carpet retainer. Refer to <i>Rear Side Door Opening Floor Carpet Retainer Replacement</i> on page 2-21.	
3. Move seat to full forward position.	
1	Center Pillar Lower Trim Panel Assembly Procedure Ensure the seat belt webbing does not become trapped during installation.

Body Lock Pillar Upper Trim Panel Replacement (Hatchback)

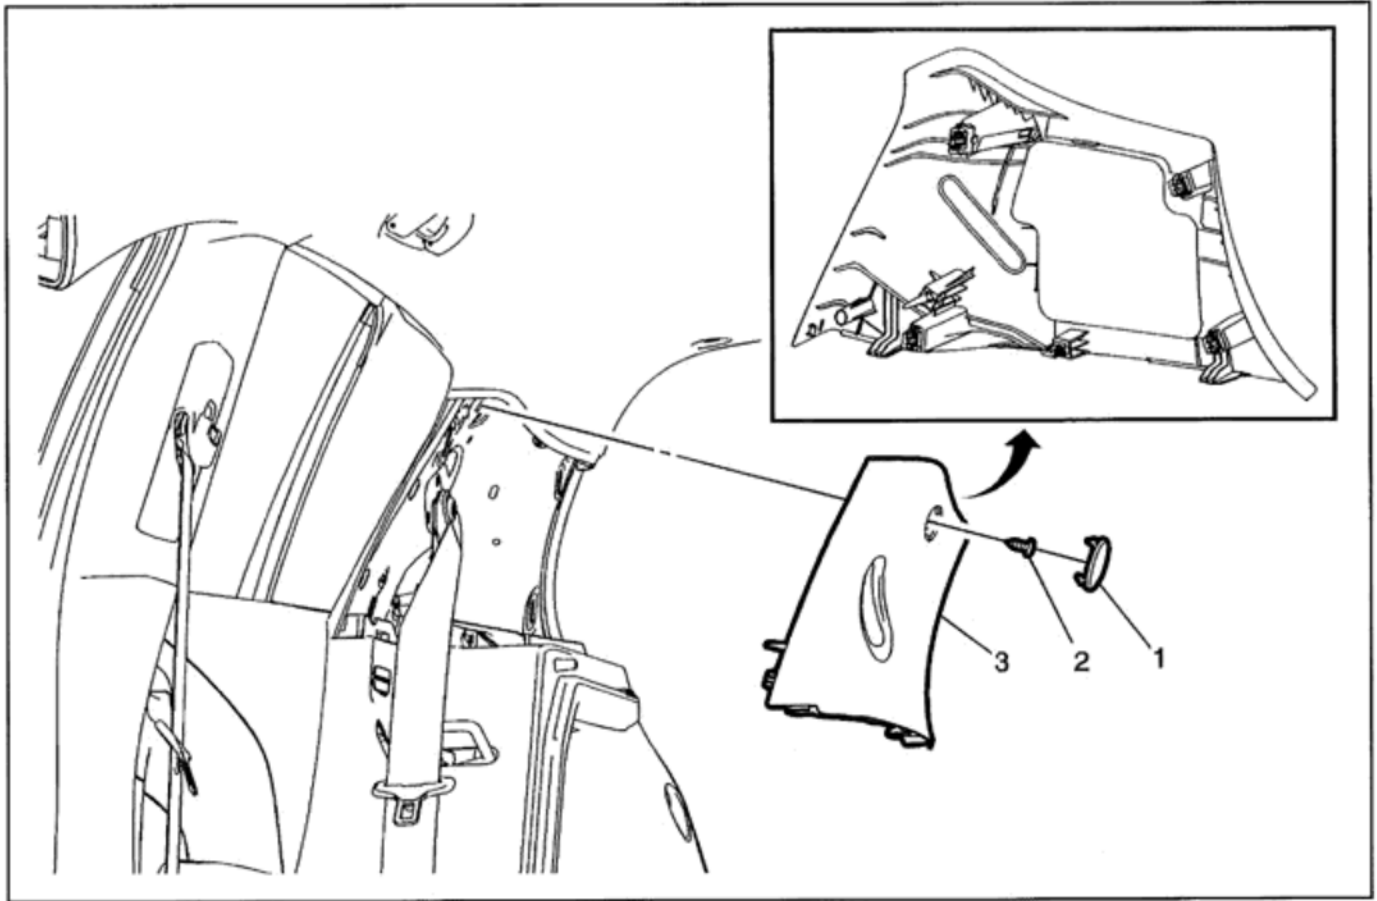


2511133

Body Lock Pillar Upper Trim Panel Replacement (Hatchback)

Callout	Component Name
Preliminary Procedure Disable the SIR system. Refer to <i>SIR Disabling and Enabling</i> on page 13-112.	
1	Inflatable Restraint Airbag Cover
2	Body Lock Pillar Upper Trim Panel Fastener Caution: Refer to <i>Fastener Caution</i> on page 0-8.
3	Body Lock Pillar Upper Trim Panel Assembly Procedure 1. Grasp the molding and pull outward to disengage the integral retainers. 2. Disconnect the electrical connector, if equipped.

Body Lock Pillar Upper Trim Panel Replacement (Sedan)

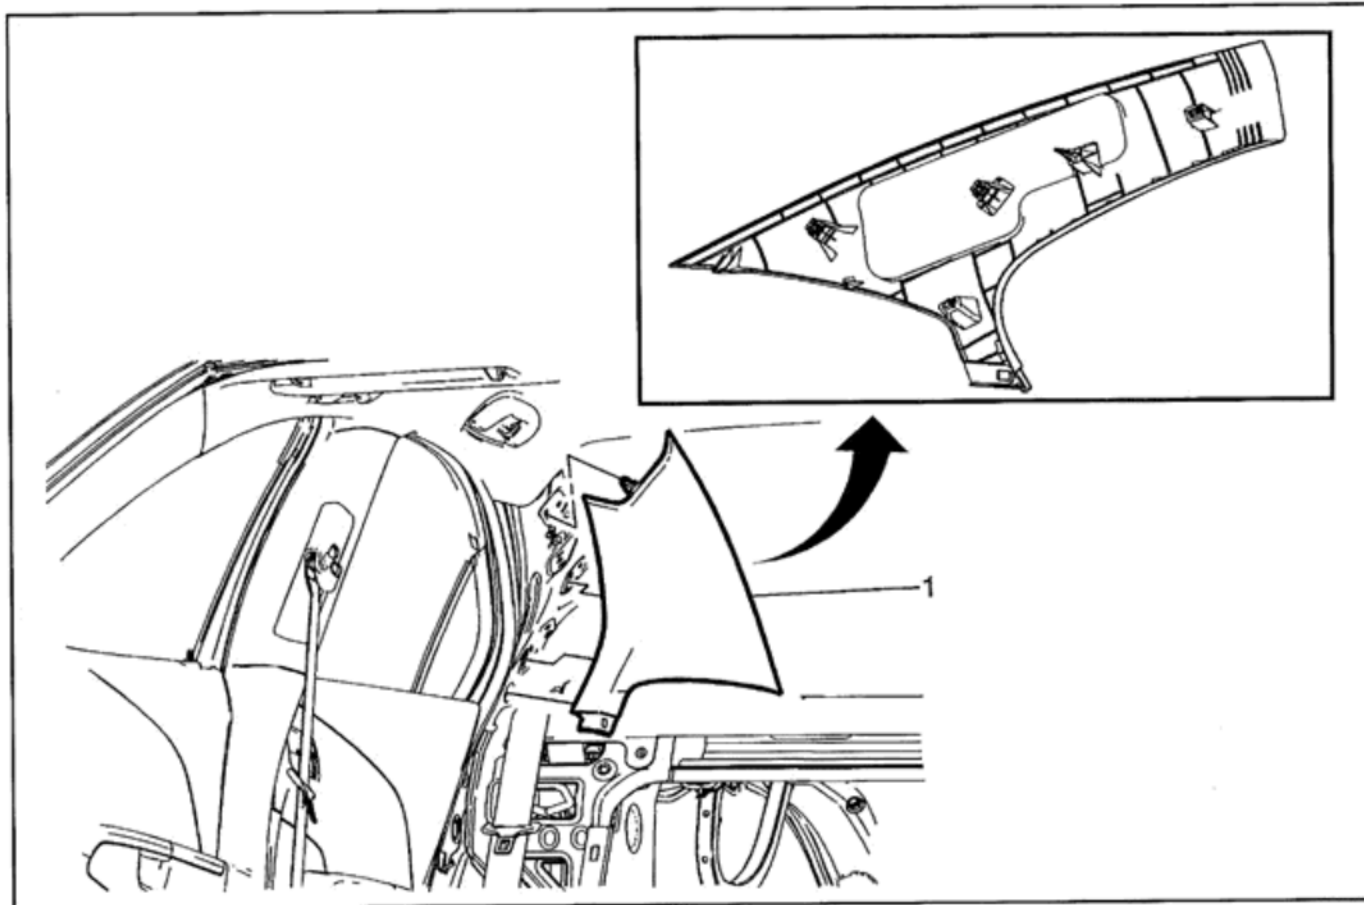


2508470

Body Lock Pillar Upper Trim Panel Replacement (Sedan)

Callout	Component Name
Preliminary Procedure	
1. Disable the SIR system. Refer to <i>SIR Disabling and Enabling</i> on page 13-112.	
2. Remove the body side trim panel. Refer to <i>Body Side Trim Panel Replacement (Sedan)</i> on page 2-80.	
1	Body Lock Pillar Upper Trim Panel Assembly Procedure Pull outward from the top front to disengage clips.

Quarter Inner Trim Finish Panel Replacement (Hatchback)

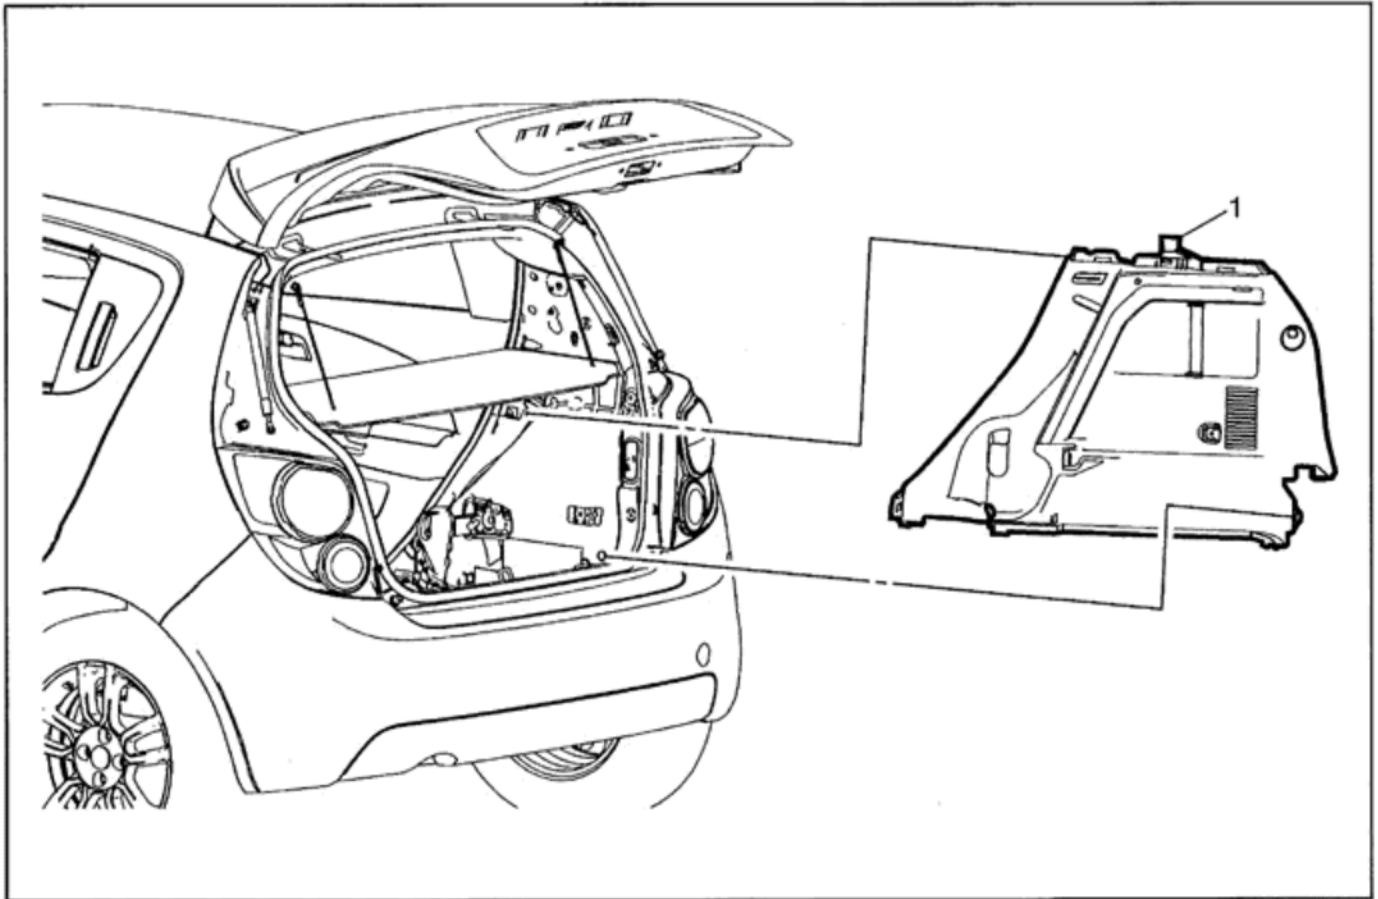


2511126

Quarter Inner Trim Finish Panel Replacement (Hatchback)

Callout	Component Name
Preliminary Procedures	
1. Remove the rear side door opening floor carpet retainer. Refer to <i>Rear Side Door Opening Floor Carpet Retainer Replacement</i> on page 2-21. 2. Remove the rear seat cushion. Refer to <i>Rear Seat Cushion Removal and Installation</i> on page 14-24. 3. Remove rear seat back. Refer to <i>Rear Seat Back Cushion Removal and Installation (40%)</i> on page 14-26 or <i>Rear Seat Back Cushion Removal and Installation (60%)</i> on page 14-27. 4. Remove the body lock pillar upper trim panel. Refer to <i>Body Lock Pillar Upper Trim Panel Replacement (Hatchback)</i> on page 2-77 or <i>Body Lock Pillar Upper Trim Panel Replacement (Sedan)</i> on page 2-78. 5. Remove the rear compartment stowage shelf. Refer to <i>Rear Compartment Stowage Shelf Replacement (Hatchback)</i> on page 2-82. 6. Remove the rear compartment sill trim plate. Refer to <i>Rear Compartment Sill Trim Plate Replacement</i> on page 2-87. 7. Remove the rear shoulder belt. Refer to <i>Shoulder Belt Replacement - Rear (Sedan)</i> on page 13-63 or <i>Shoulder Belt Replacement - Rear (Hatchback)</i> on page 13-64.	
1	Quarter Inner Trim Finish Panel Assembly Procedure Use a trim tool or equivalent to aid in removal. Note: After installation of the quarter inner trim panel, ensure the rear seat belt is not trapped under the trim panel. Pull up on the belt to verify full movement of the belt.

Body Side Trim Panel Replacement (Sedan)

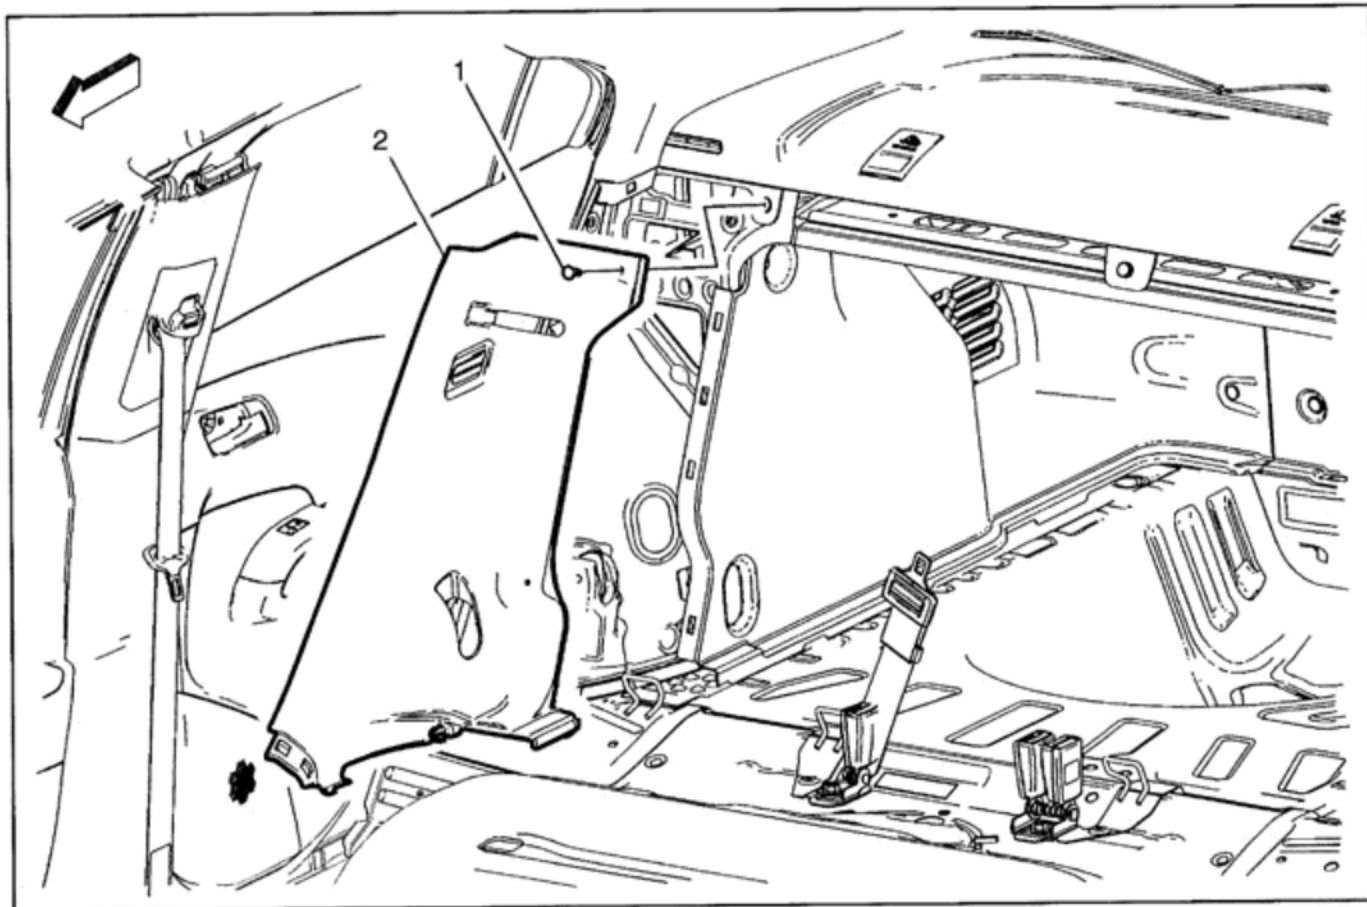


2508766

Body Side Trim Panel Replacement (Sedan)

Callout	Component Name
Preliminary Procedures	
1. Remove rear side door opening floor carpet retainer. Refer to <i>Rear Side Door Opening Floor Carpet Retainer Replacement</i> on page 2-21.	
2. Remove body rear seat back trim panel. Refer to <i>Body Rear Seat Back Trim Panel Replacement (with AMA/AM7)</i> on page 2-74.	
3. Remove lower rear shoulder belt fastener. Refer to <i>Shoulder Belt Replacement - Rear (Sedan)</i> on page 13-63 or <i>Shoulder Belt Replacement - Rear (Hatchback)</i> on page 13-64.	
1	Body Side Trim Panel Push-In Retainer
2	Body Side Trim Panel Assembly Note: Ensure seat belt assembly is routed over and through opening in panel assembly.

Rear Window Panel Trim Replacement

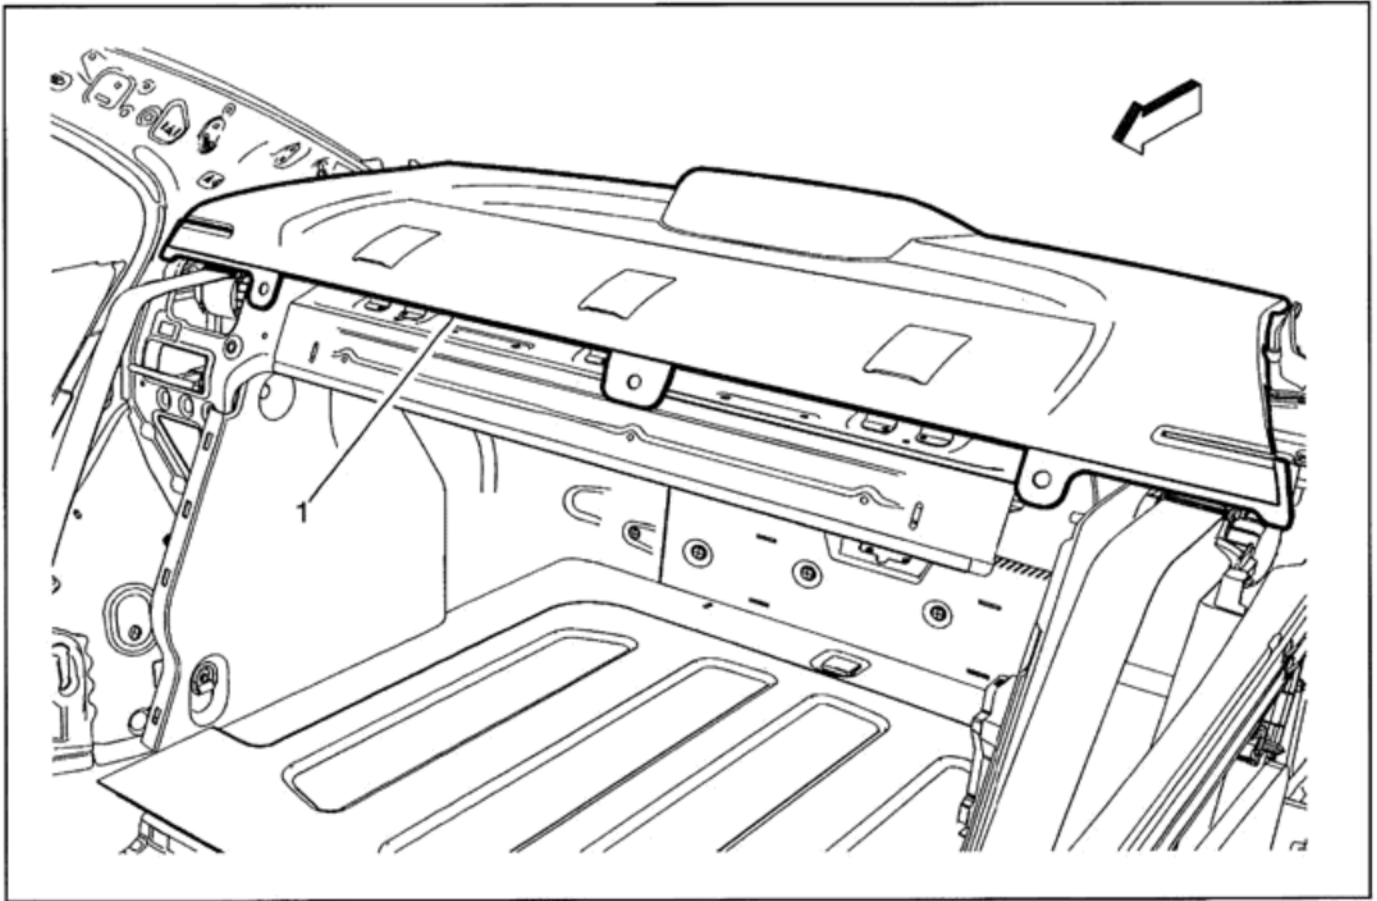


2677305

Rear Window Panel Trim Replacement

Callout	Component Name
Preliminary Procedures	
1. Remove the body lock pillar upper trim panel. Refer to <i>Body Lock Pillar Upper Trim Panel Replacement (Hatchback)</i> on page 2-77 or <i>Body Lock Pillar Upper Trim Panel Replacement (Sedan)</i> on page 2-78. 2. Remove the body rear seat back trim panel. Refer to <i>Body Rear Seat Back Trim Panel Replacement (with AMA/AM7)</i> on page 2-74.	
1	Rear Window Panel Trim Assembly Procedure When replacing the rear window panel trim assembly, transfer all necessary components.

Rear Compartment Stowage Shelf Replacement (Hatchback)

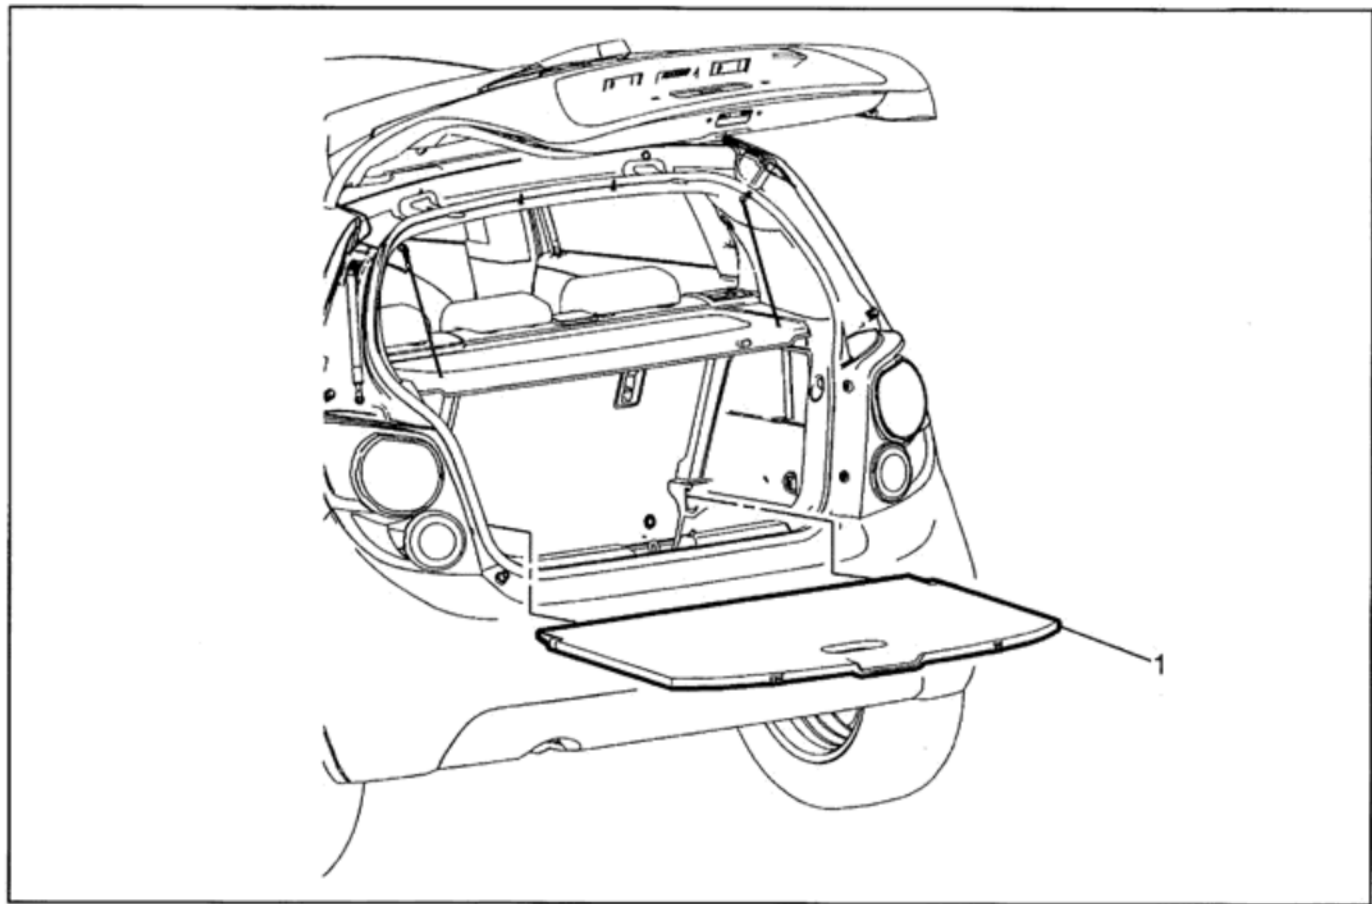


2510827

Rear Compartment Stowage Shelf Replacement (Hatchback)

Callout	Component Name
1	Rear Compartment Stowage Shelf Assembly

Rear Side Door Trim Replacement (Hatchback)

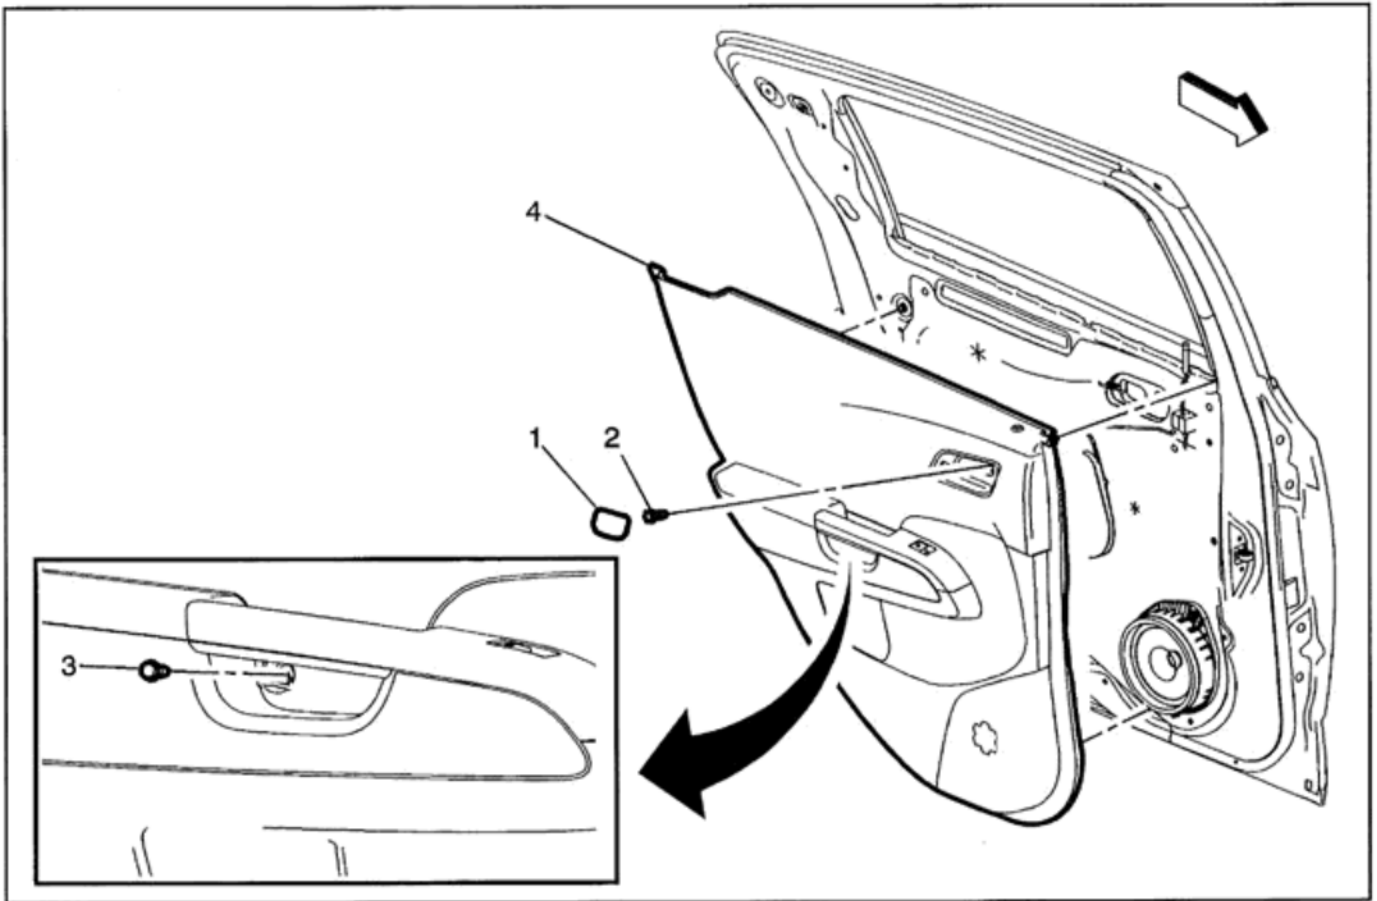


2504859

Rear Side Door Trim Replacement (Hatchback)

Callout	Component Name
Preliminary Procedure Remove the rear side door upper rear trim panel. Refer to <i>Rear Side Door Upper Rear Trim Panel Replacement (Hatchback)</i> on page 2-68.	
1	Rear Side Door Inside Handle Bolt Cap
2	Rear Side Door Inside Handle Fastener Caution: Refer to <i>Fastener Caution</i> on page 0-8. Procedure Pull handle back to remove cap. Use suitable tool to unsnap.
3	Rear Side Door Trim Fastener Procedure Use a small flat-bladed tool to open the rear side door trim integral cap to access the fastener.
4	Rear Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

Rear Side Door Trim Replacement (Sedan)

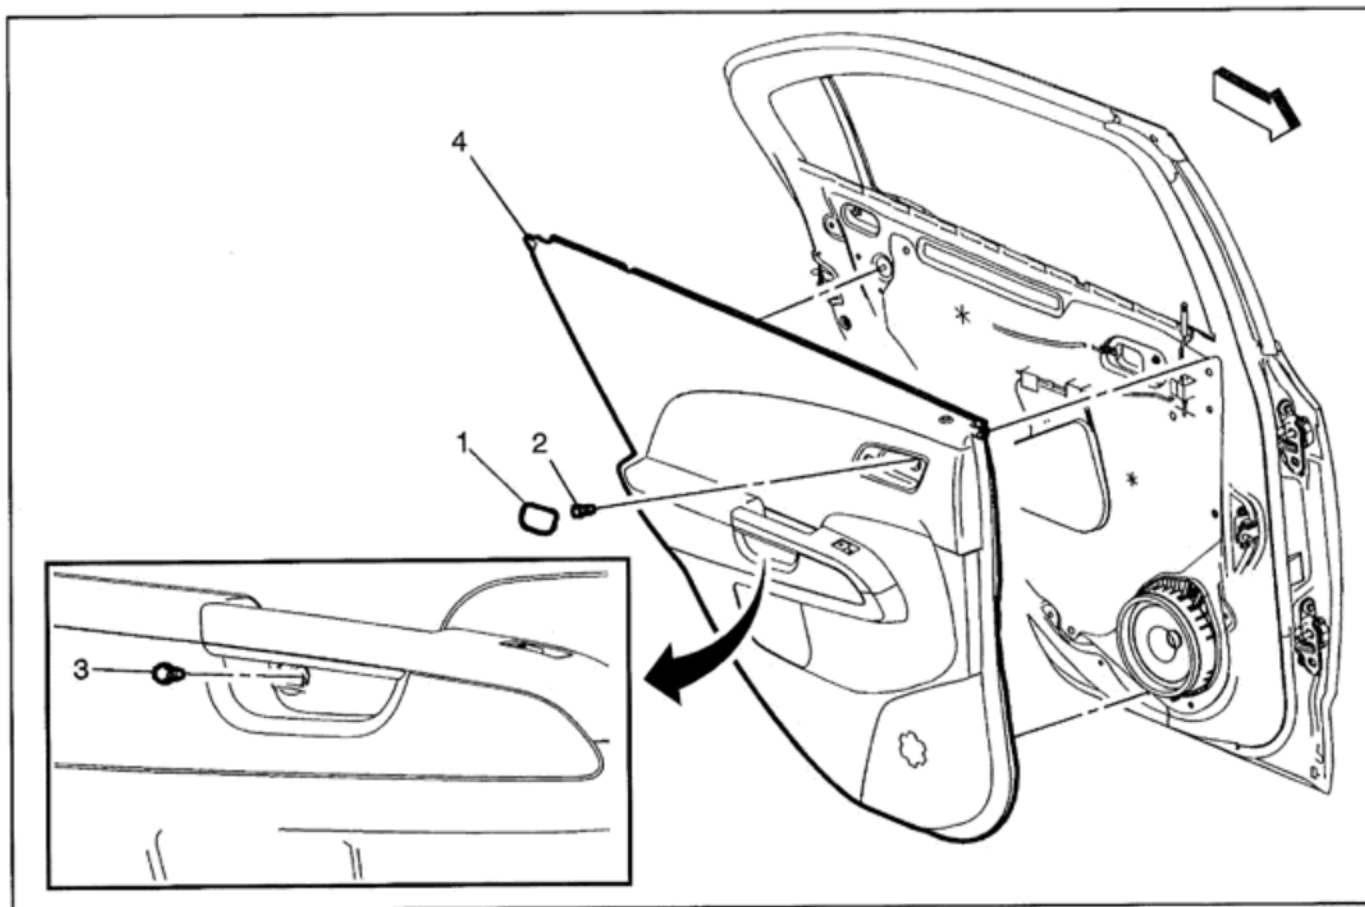


2505429

Rear Side Door Trim Replacement (Sedan)

Callout	Component Name
1	Rear Side Door Inside Handle Bolt Cap
2	Rear Side Door Inside Handle Fastener Caution: Refer to <i>Fastener Caution</i> on page 0-8. Procedure Pull handle back to remove cap. Use suitable tool to unsnap.
3	Rear Side Door Trim Fastener Procedure Use a small flat-bladed tool to open the rear side door trim integral cap to access the fastener.
4	Rear Side Door Trim Assembly Procedure 1. Use the appropriate plastic trim tool to aid in the removal of the door trim. 2. Pull upwards on the door lock retainer cable to disengage. 3. Disconnect the electrical connector.

Luggage Shade Replacement (Hatchback)

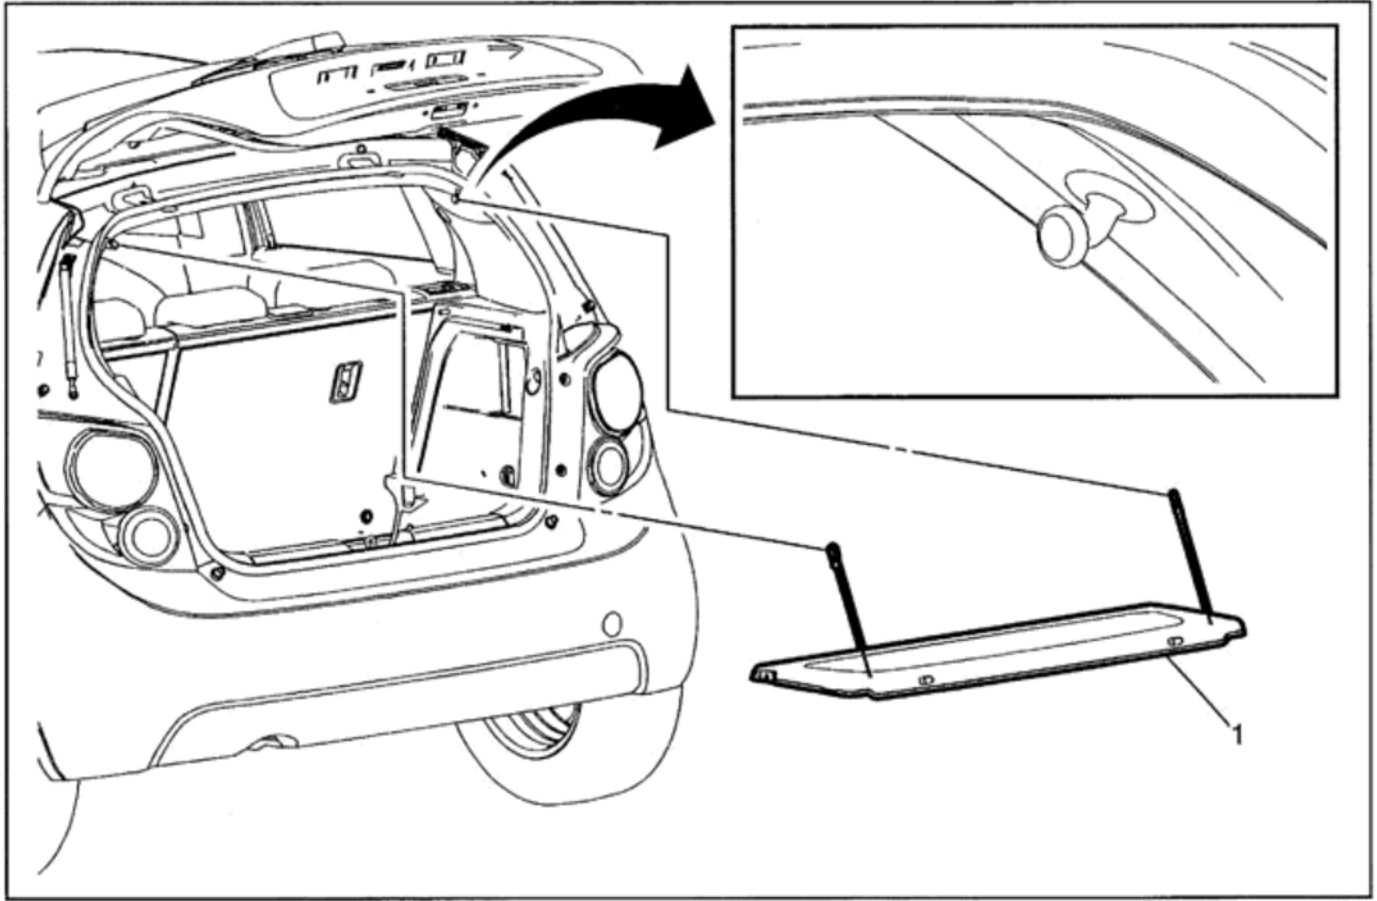


2511125

Luggage Shade Replacement (Hatchback)

Callout	Component Name
1	Luggage Shade Assembly Procedure Detach luggage shade from upper support.

Liftgate Trim Finish Panel Replacement (Hatchback)

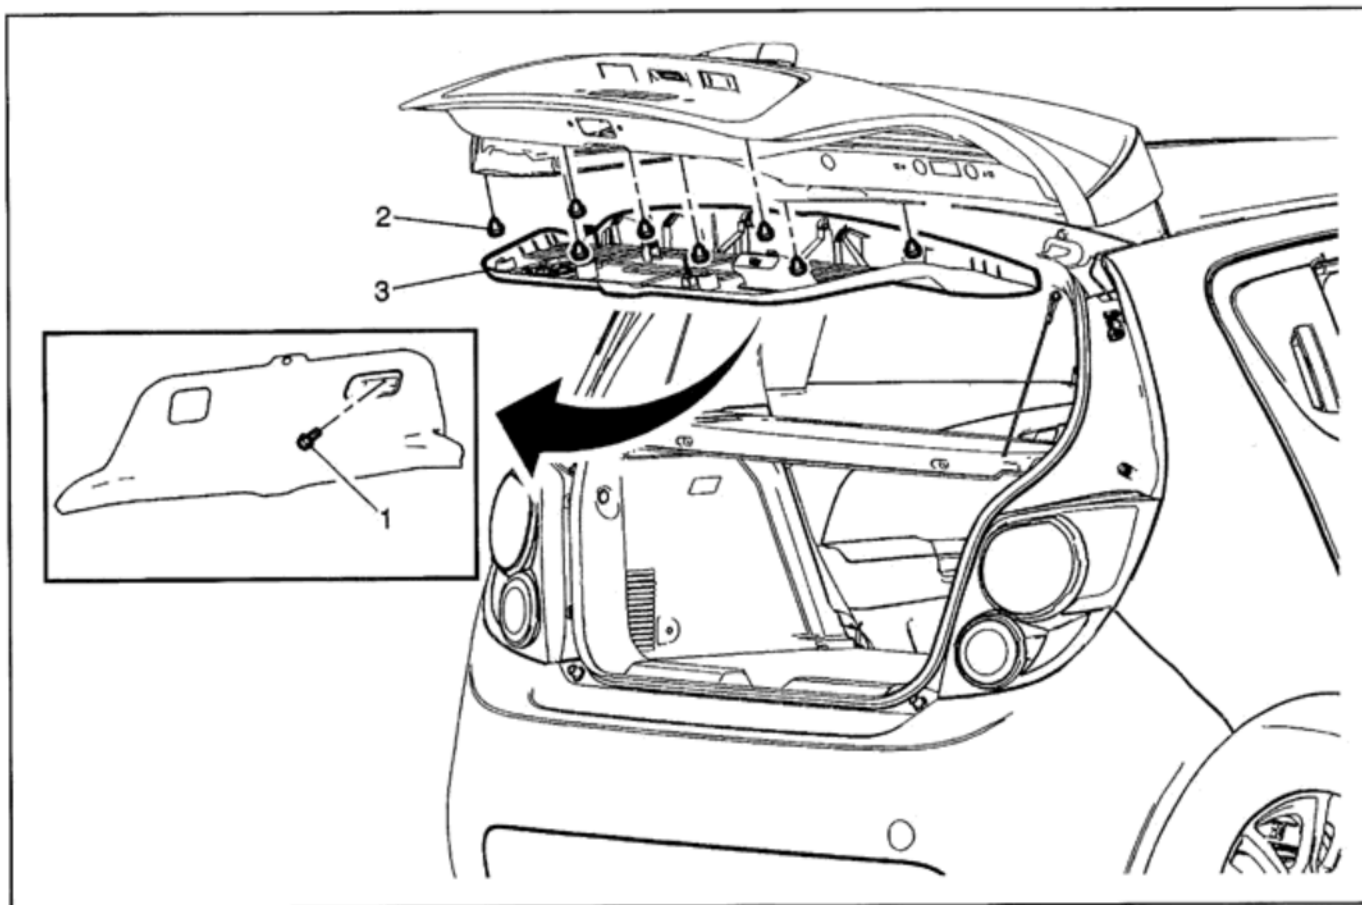


2511130

Liftgate Trim Finish Panel Replacement (Hatchback)

Callout	Component Name
1	Liftgate Trim Finish Panel Fastener Caution: Refer to <i>Fastener Caution</i> on page 0-8.
2	Liftgate Trim Finish Panel Retainer (Qty: 8)
3	Liftgate Trim Finish Panel Assembly Procedure Use a trim tool or equivalent to aid in removal.

Rear Compartment Sill Trim Plate Replacement

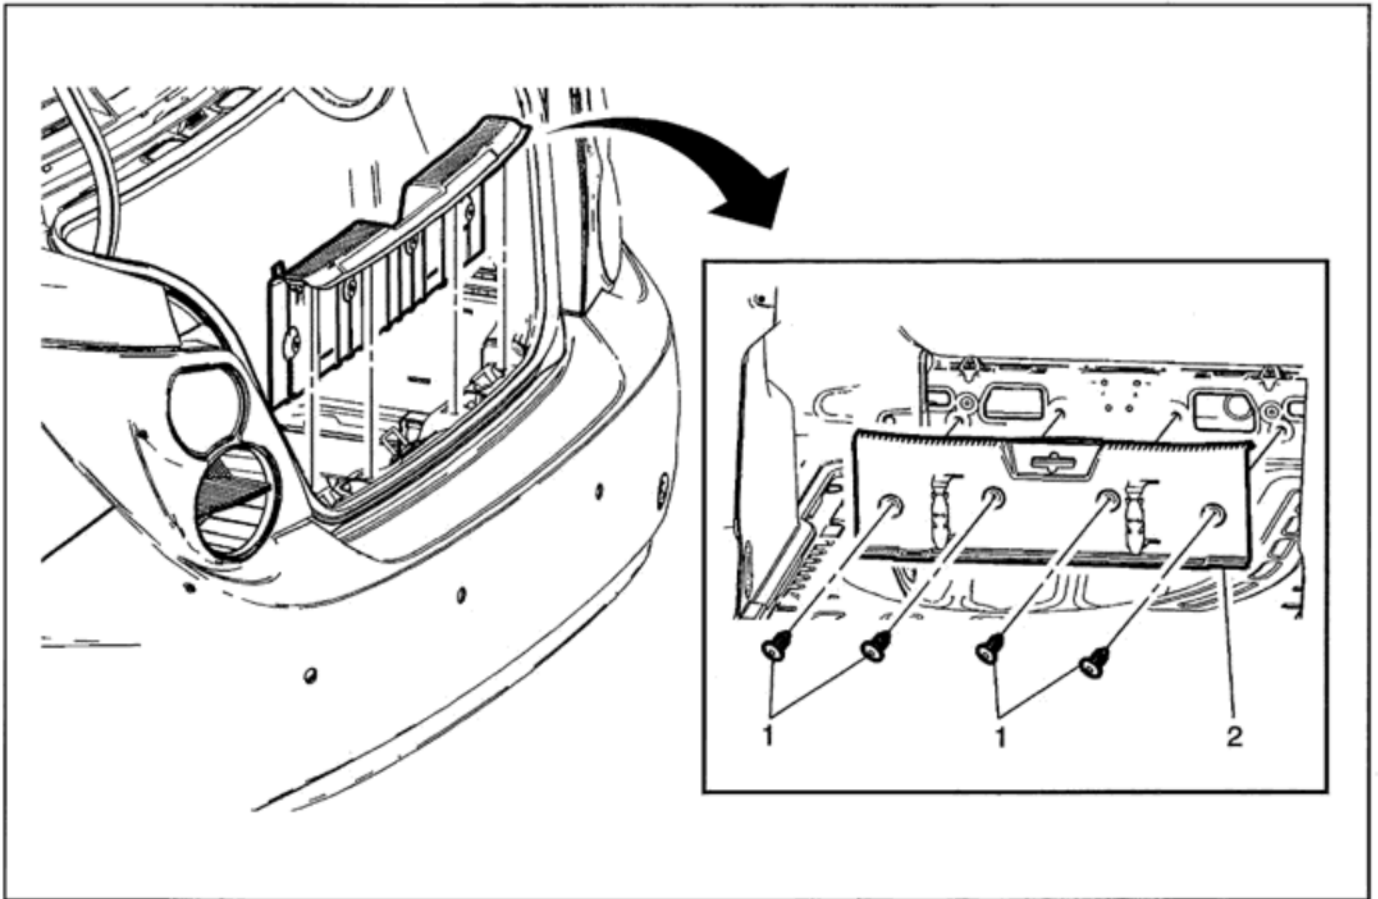


2508975

Rear Compartment Sill Trim Plate Replacement

Callout	Component Name
Preliminary Procedure	
Partially remove the rear compartment opening weatherstrip. Refer to <i>Rear Compartment Lid Weatherstrip Replacement</i> on page 3-45.	
1	Rear Compartment Sill Trim Plate Retainer (Qty: 4)
2	Rear Compartment Sill Trim Plate Assembly

Rear Compartment Lid Inner Panel Trim Replacement (Sedan)

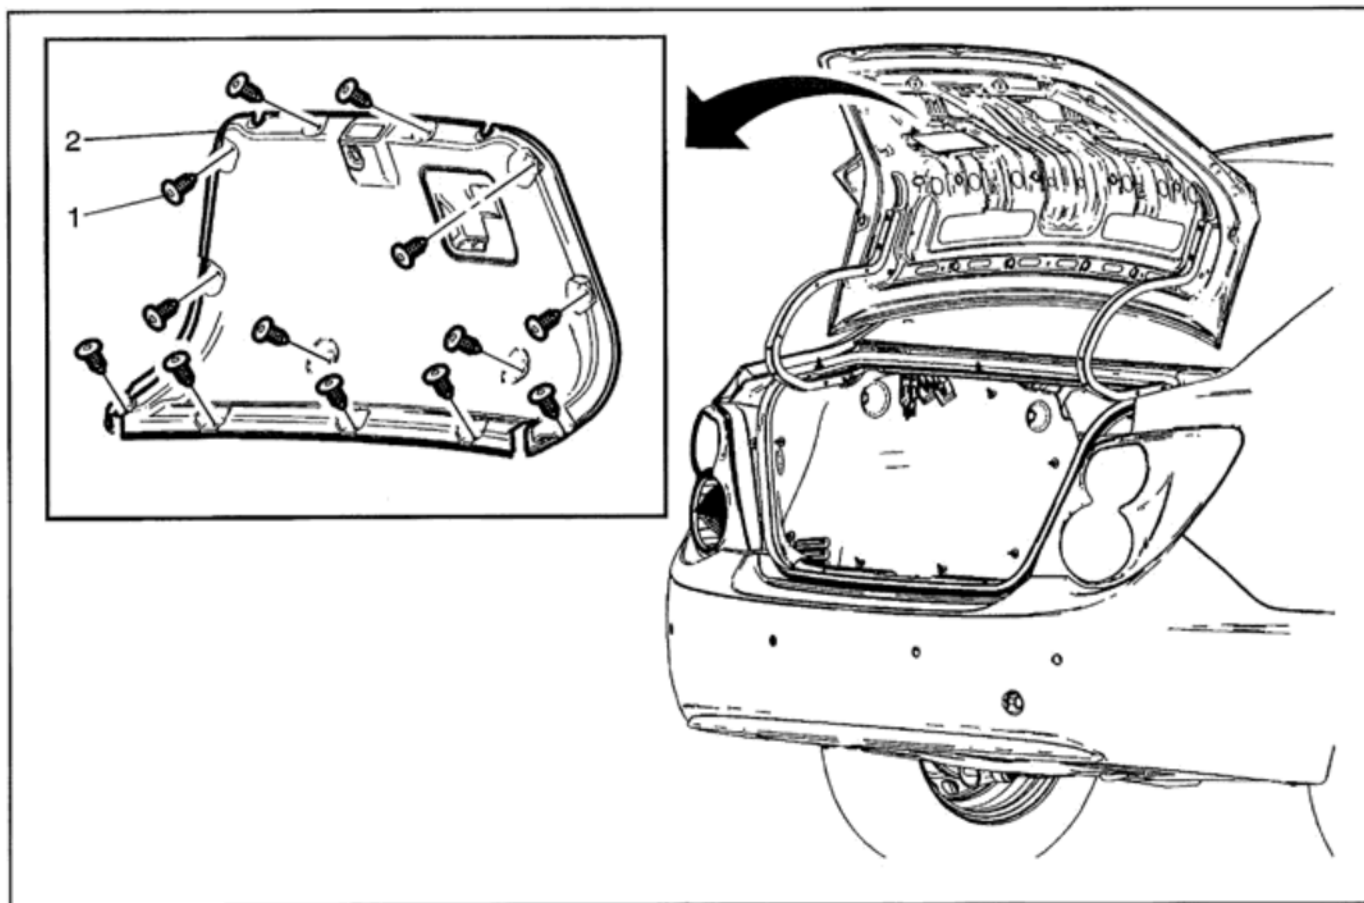


2509122

Rear Compartment Lid Inner Panel Trim Replacement (Sedan)

Callout	Component Name
Preliminary Procedures	
1. Remove the rear compartment lid outer bumpers.	
2. Remove the latch cover.	
1	Rear Compartment Lid Inner Panel Trim Retainer (Qty: 13) Procedure Use a trim removal tool to aid in the removal of the rear compartment trim panel.
2	Rear Compartment Lid Inner Panel Trim

Rear Compartment Side Trim Replacement - Left Side (Sedan)

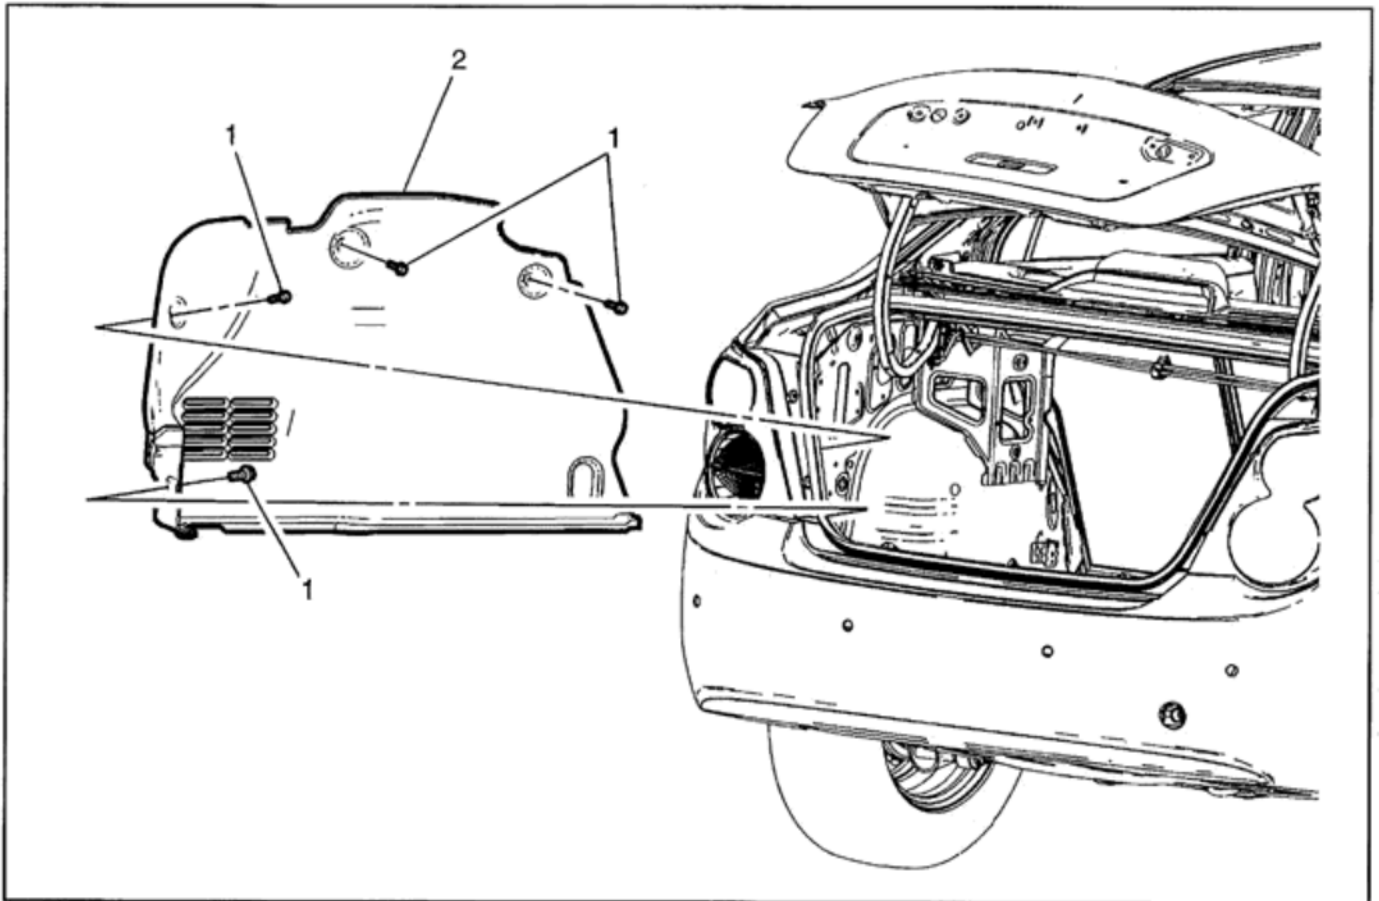


2508931

Rear Compartment Side Trim Replacement - Left Side (Sedan)

Callout	Component Name
Preliminary Procedures	
1. Remove the rear compartment floor panel carpet. Refer to <i>Rear Compartment Floor Panel Carpet Replacement (Hatchback)</i> on page 2-23 or <i>Rear Compartment Floor Panel Carpet Replacement (Sedan)</i> on page 2-22.	
2. Remove the rear compartment sill trim plate. Refer to <i>Rear Compartment Sill Trim Plate Replacement</i> on page 2-87.	
1	Rear Compartment Side Trim Retainer (Qty: 4)
2	Rear Compartment Side Trim

Rear Compartment Side Trim Replacement - Right Side (Sedan)

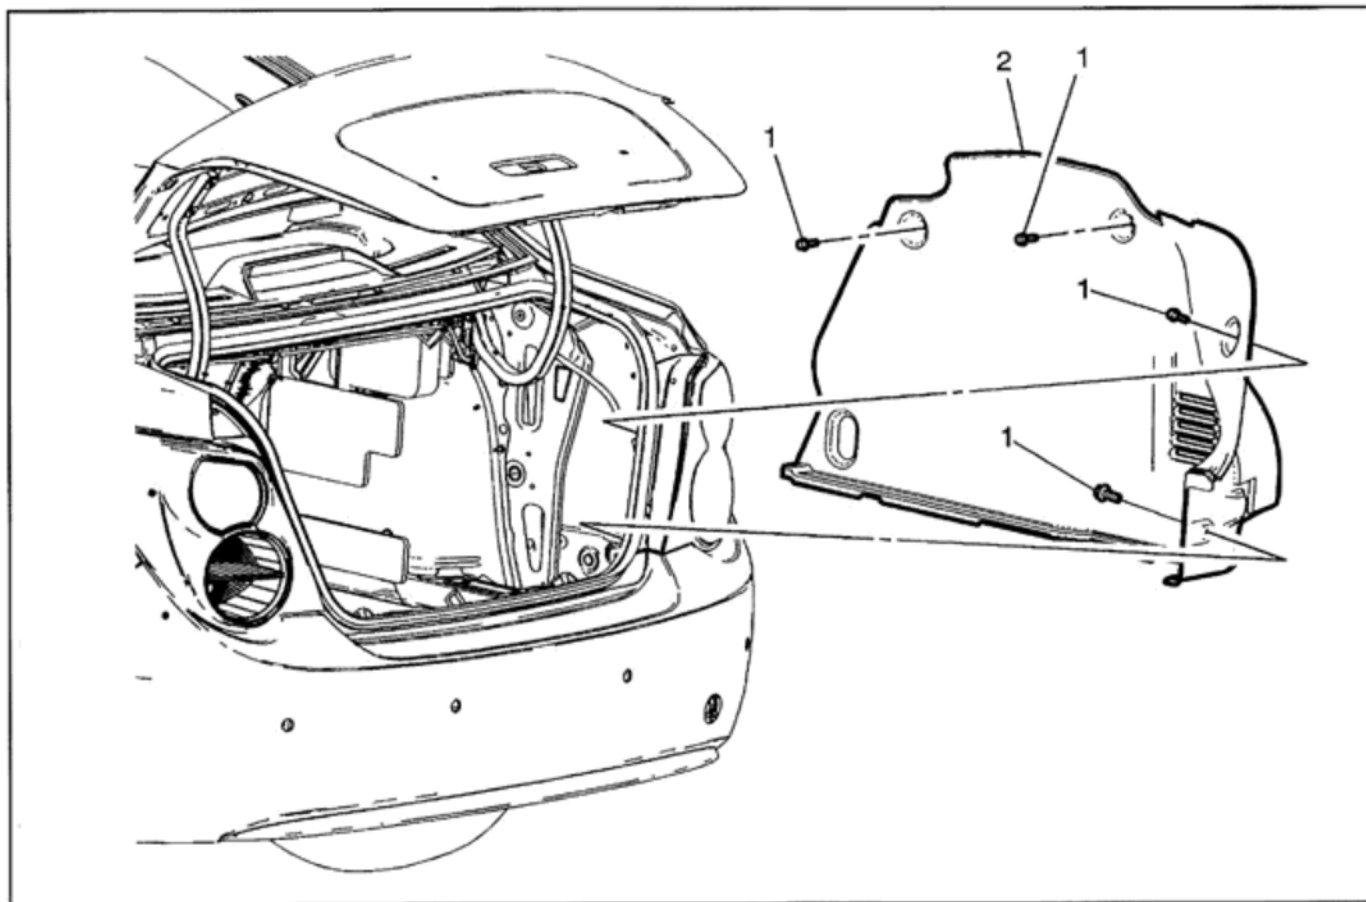


2508924

Rear Compartment Side Trim Replacement - Right Side (Sedan)

Callout	Component Name
Preliminary Procedures	
1. Remove the rear compartment floor panel carpet. Refer to <i>Rear Compartment Floor Panel Carpet Replacement (Hatchback)</i> on page 2-23 or <i>Rear Compartment Floor Panel Carpet Replacement (Sedan)</i> on page 2-22.	
2. Remove the rear compartment sill trim plate. Refer to <i>Rear Compartment Sill Trim Plate Replacement</i> on page 2-87.	
1	Rear Compartment Side Trim Retainer (Qty: 4)
2	Rear Compartment Side Trim

Cargo Tie Down Loop Replacement

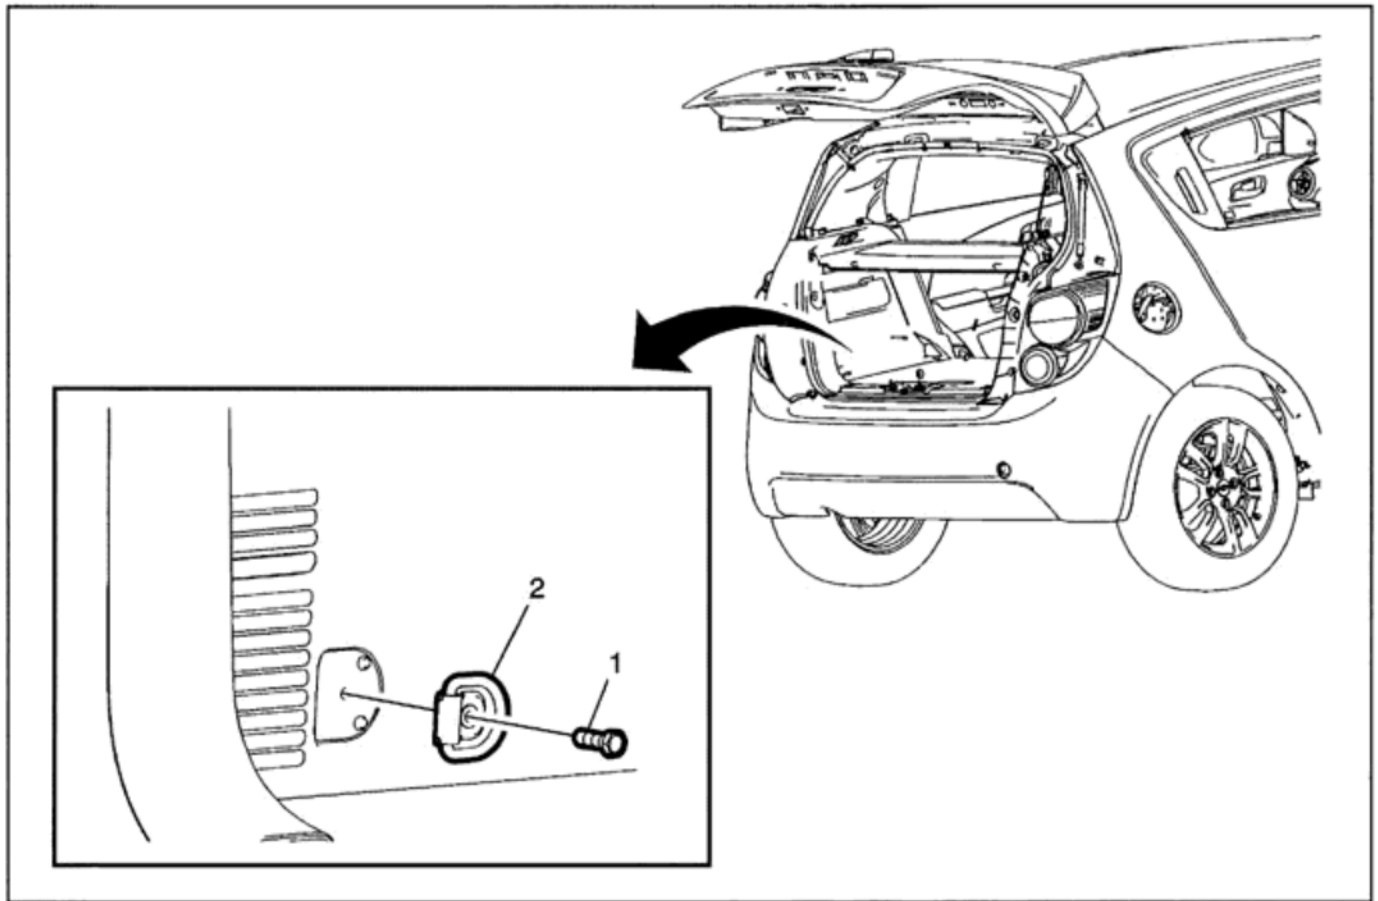


2547163

Cargo Tie Down Loop Replacement

Callout	Component Name
1	Cargo Tie Down Hook Fastener Caution: Refer to <i>Fastener Caution</i> on page 0-8. Tighten 9 N•m (80 lb in)
2	Cargo Tie Down Hook Assembly

Quarter Outer Panel Pressure Relief Valve Replacement

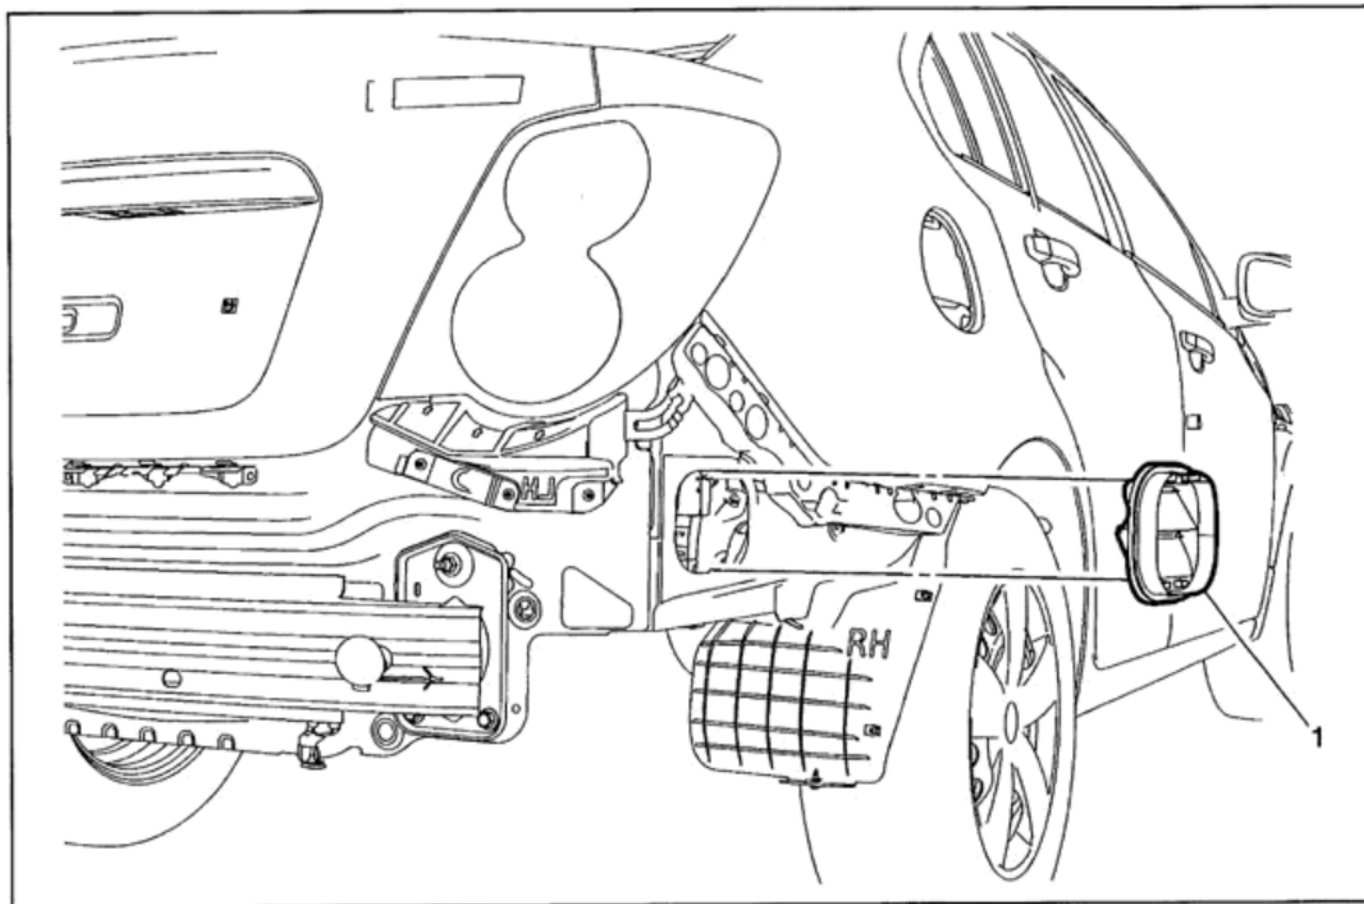

2498036

Quarter Outer Panel Pressure Relief Valve Replacement

Callout	Component Name
Preliminary Procedure	
Remove the rear bumper fascia. Refer to <i>Rear Bumper Fascia Replacement (Hatchback)</i> on page 3-62	
1	Quarter Outer Panel Pressure Relief Valve Assembly