

Fuse and Relay Information

General Information


Each system should be equipped with fuses and relays to ensure the normal operation of the vehicle electrical system.

The fuses and relays are integrated in the fuse and relay box and are installed in the following positions of the vehicle:

- The engine compartment fuse and relay box are located on the left side of engine compartment and behind the battery.
- Instrument panel fuse and relay box are located at the bottom left of the instrument panel.

Engine Compartment Fuse and Relay Box


Location of engine compartment main fuse box and engine compartment fuse and relay box

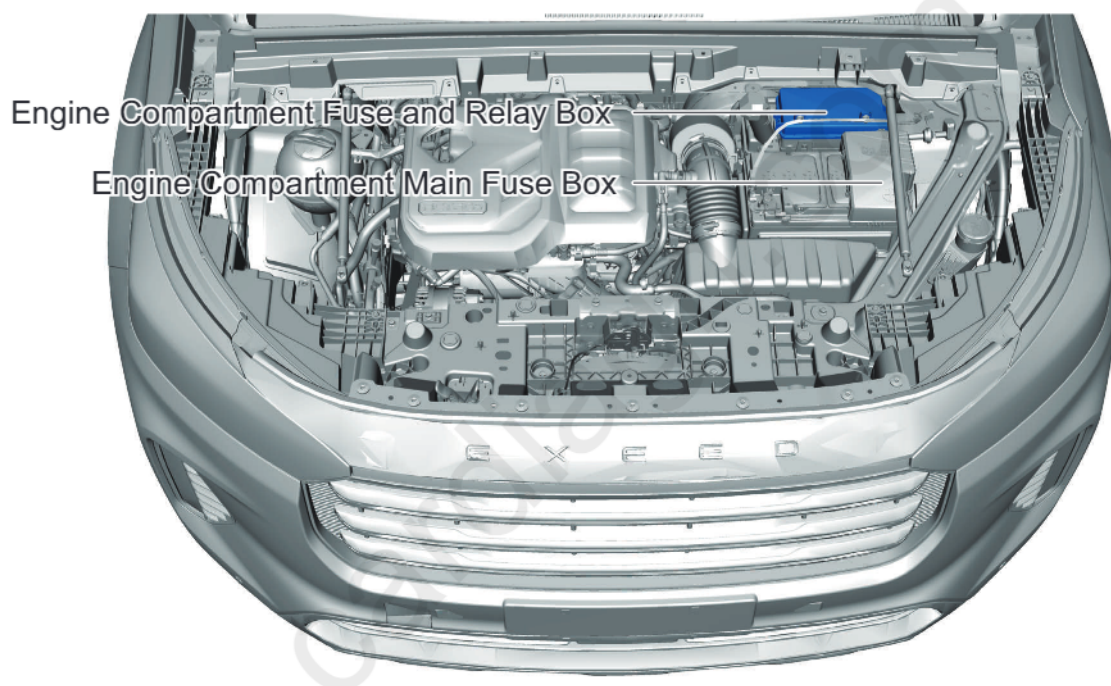

06


EFR001001





Detailed description of engine compartment main fuse box layout

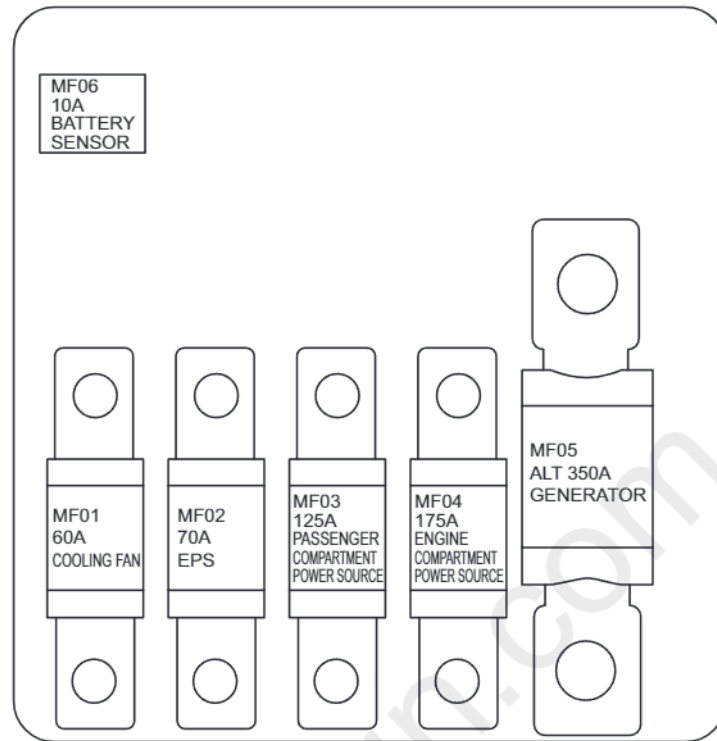

EFR002001


Detailed description of engine compartment fuse and relay box layout

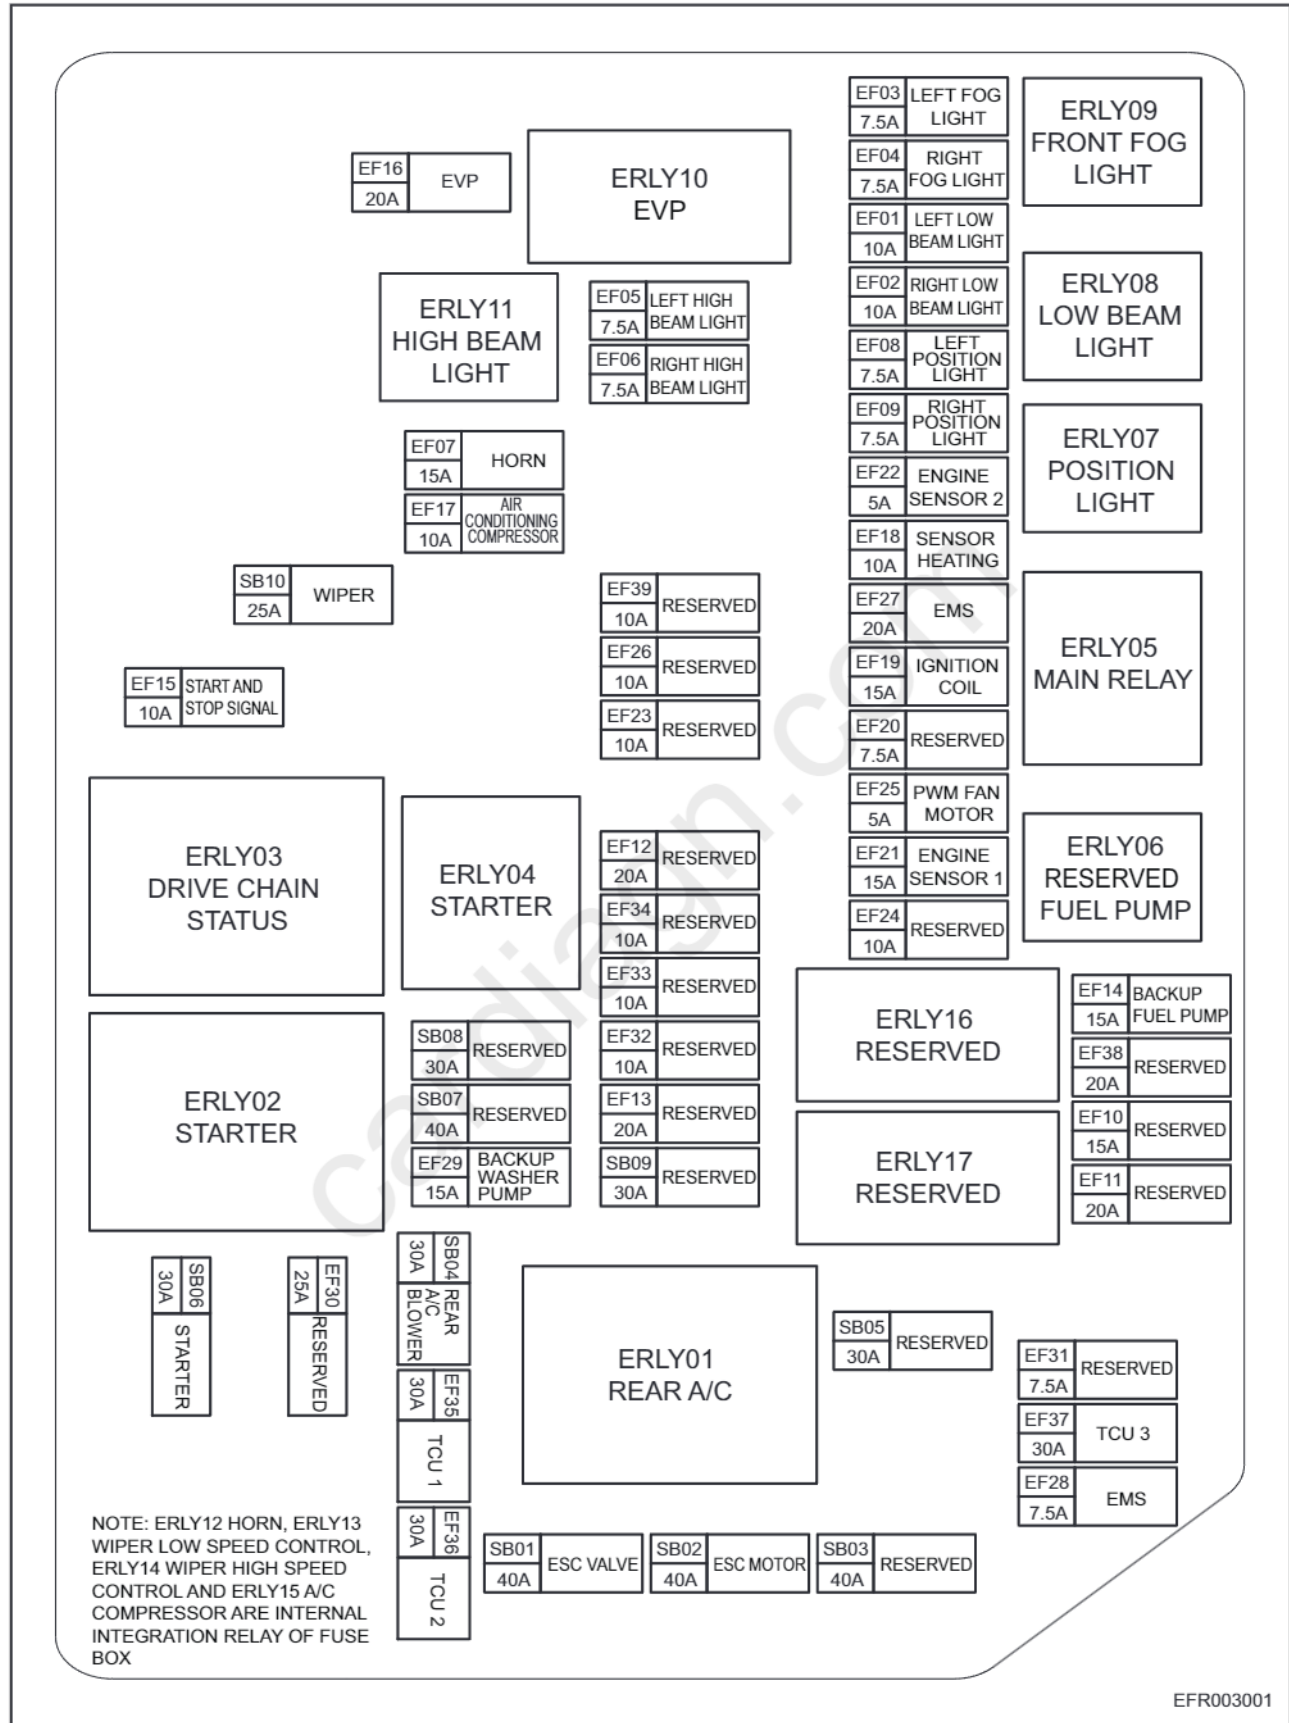

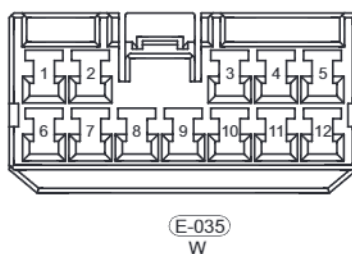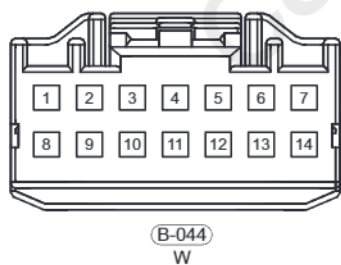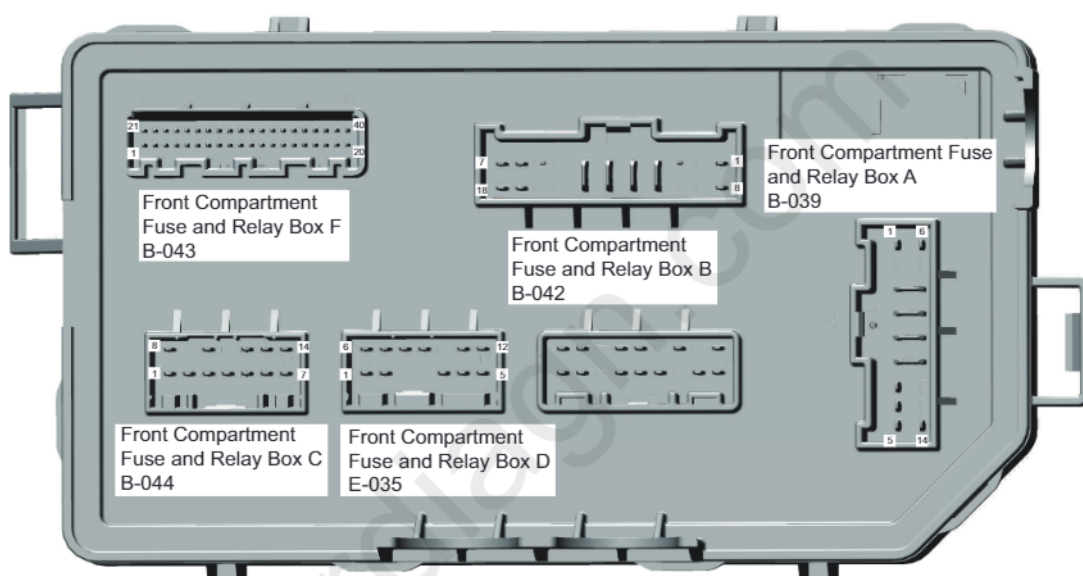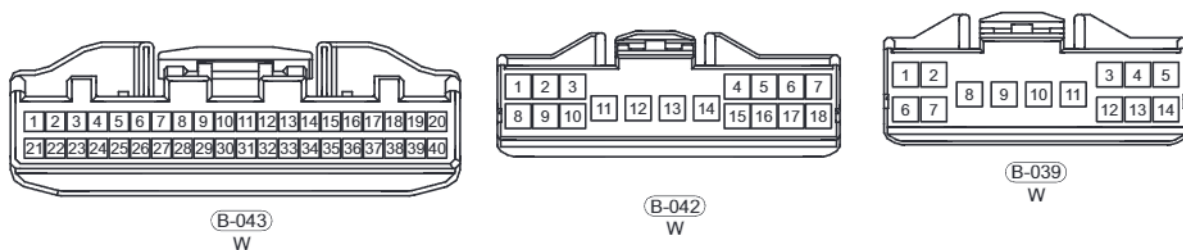


EFR012001


Internal circuit of engine compartment main fuse box and engine compartment fuse and relay box

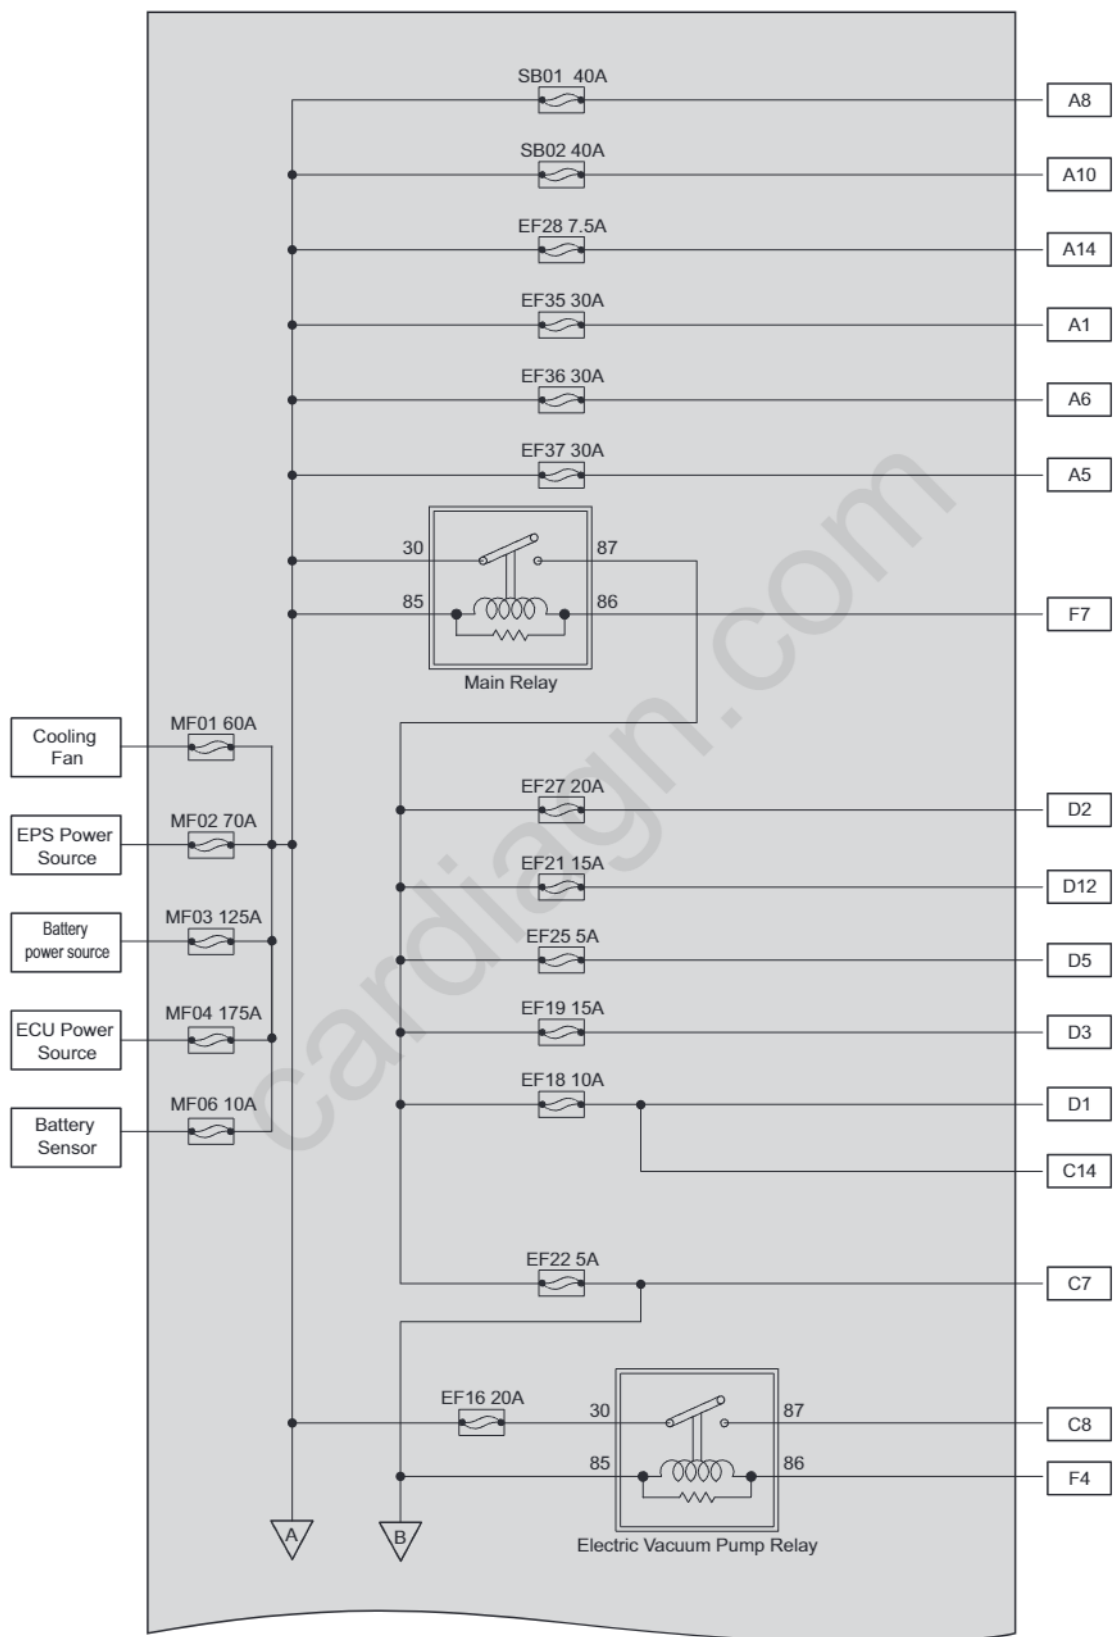

EFR004001

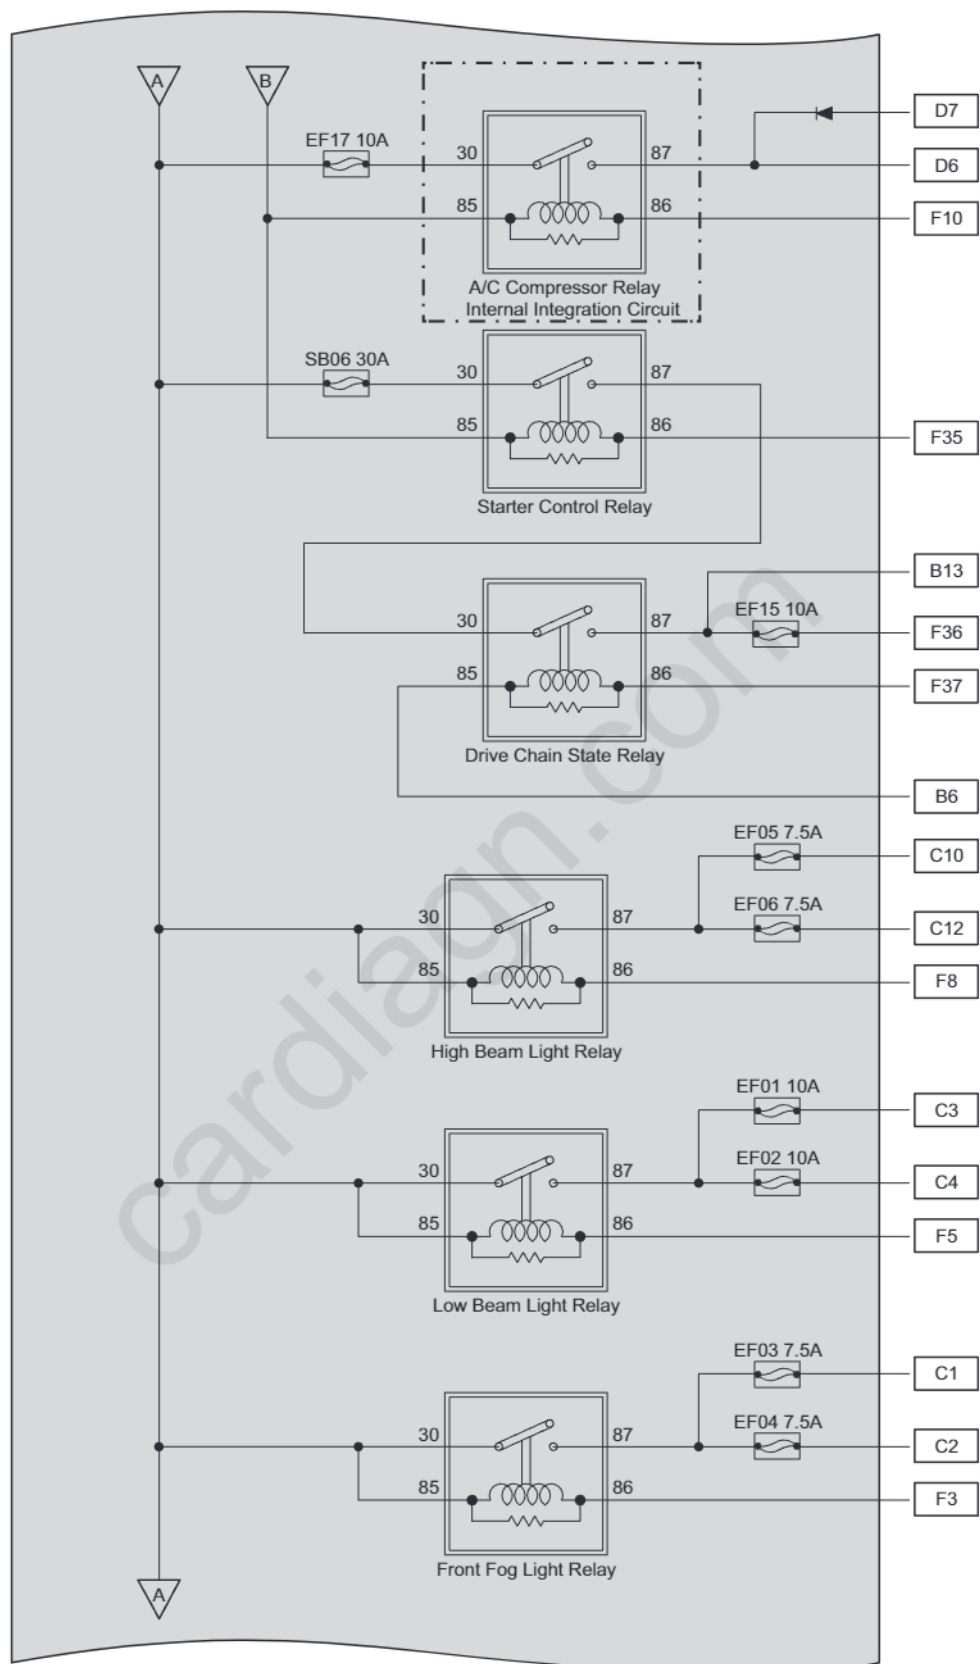


EFR005001

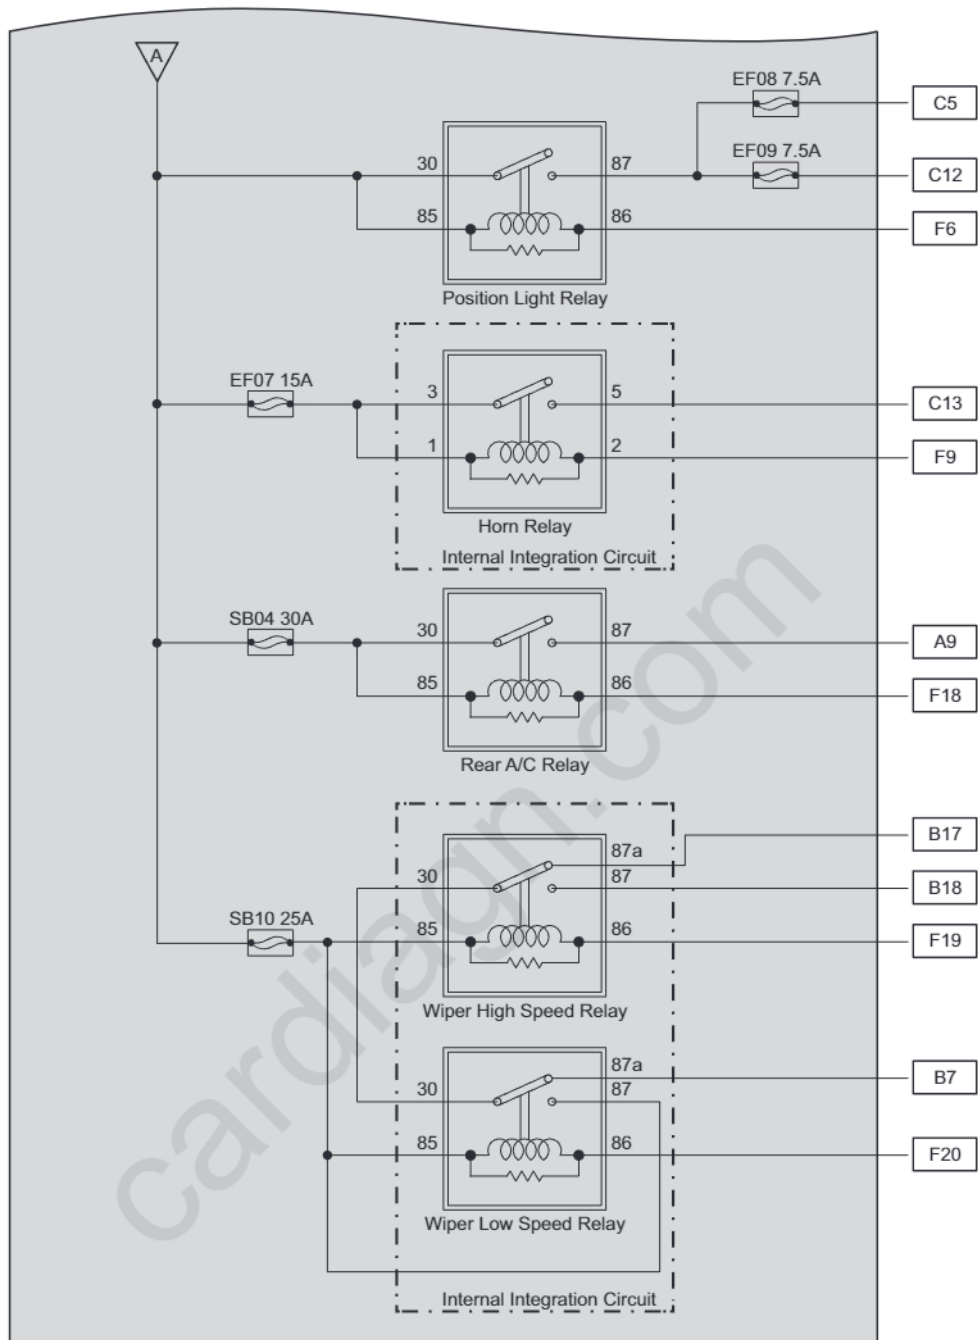


EFR006001


Instrument Panel Fuse and Relay Box

Location of instrument panel fuse and relay box

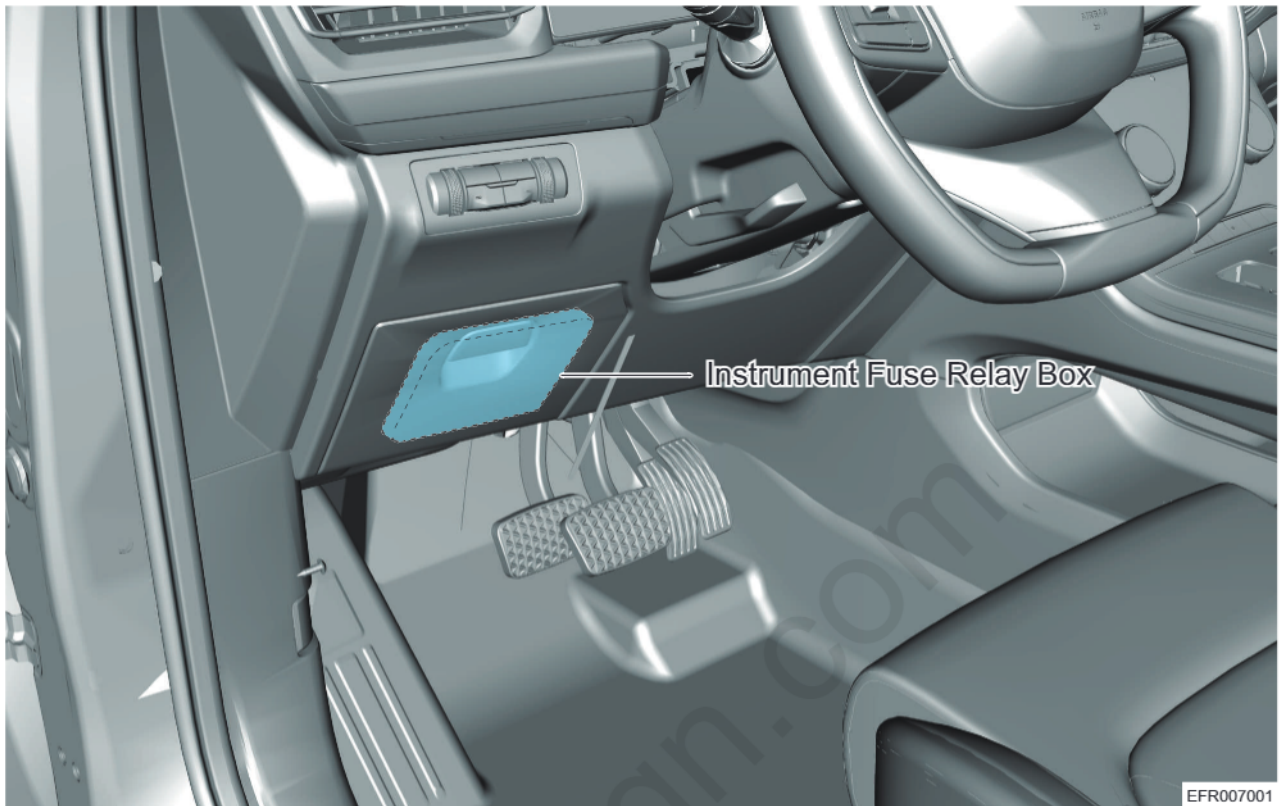


Detailed description of instrument panel fuse and relay box layout

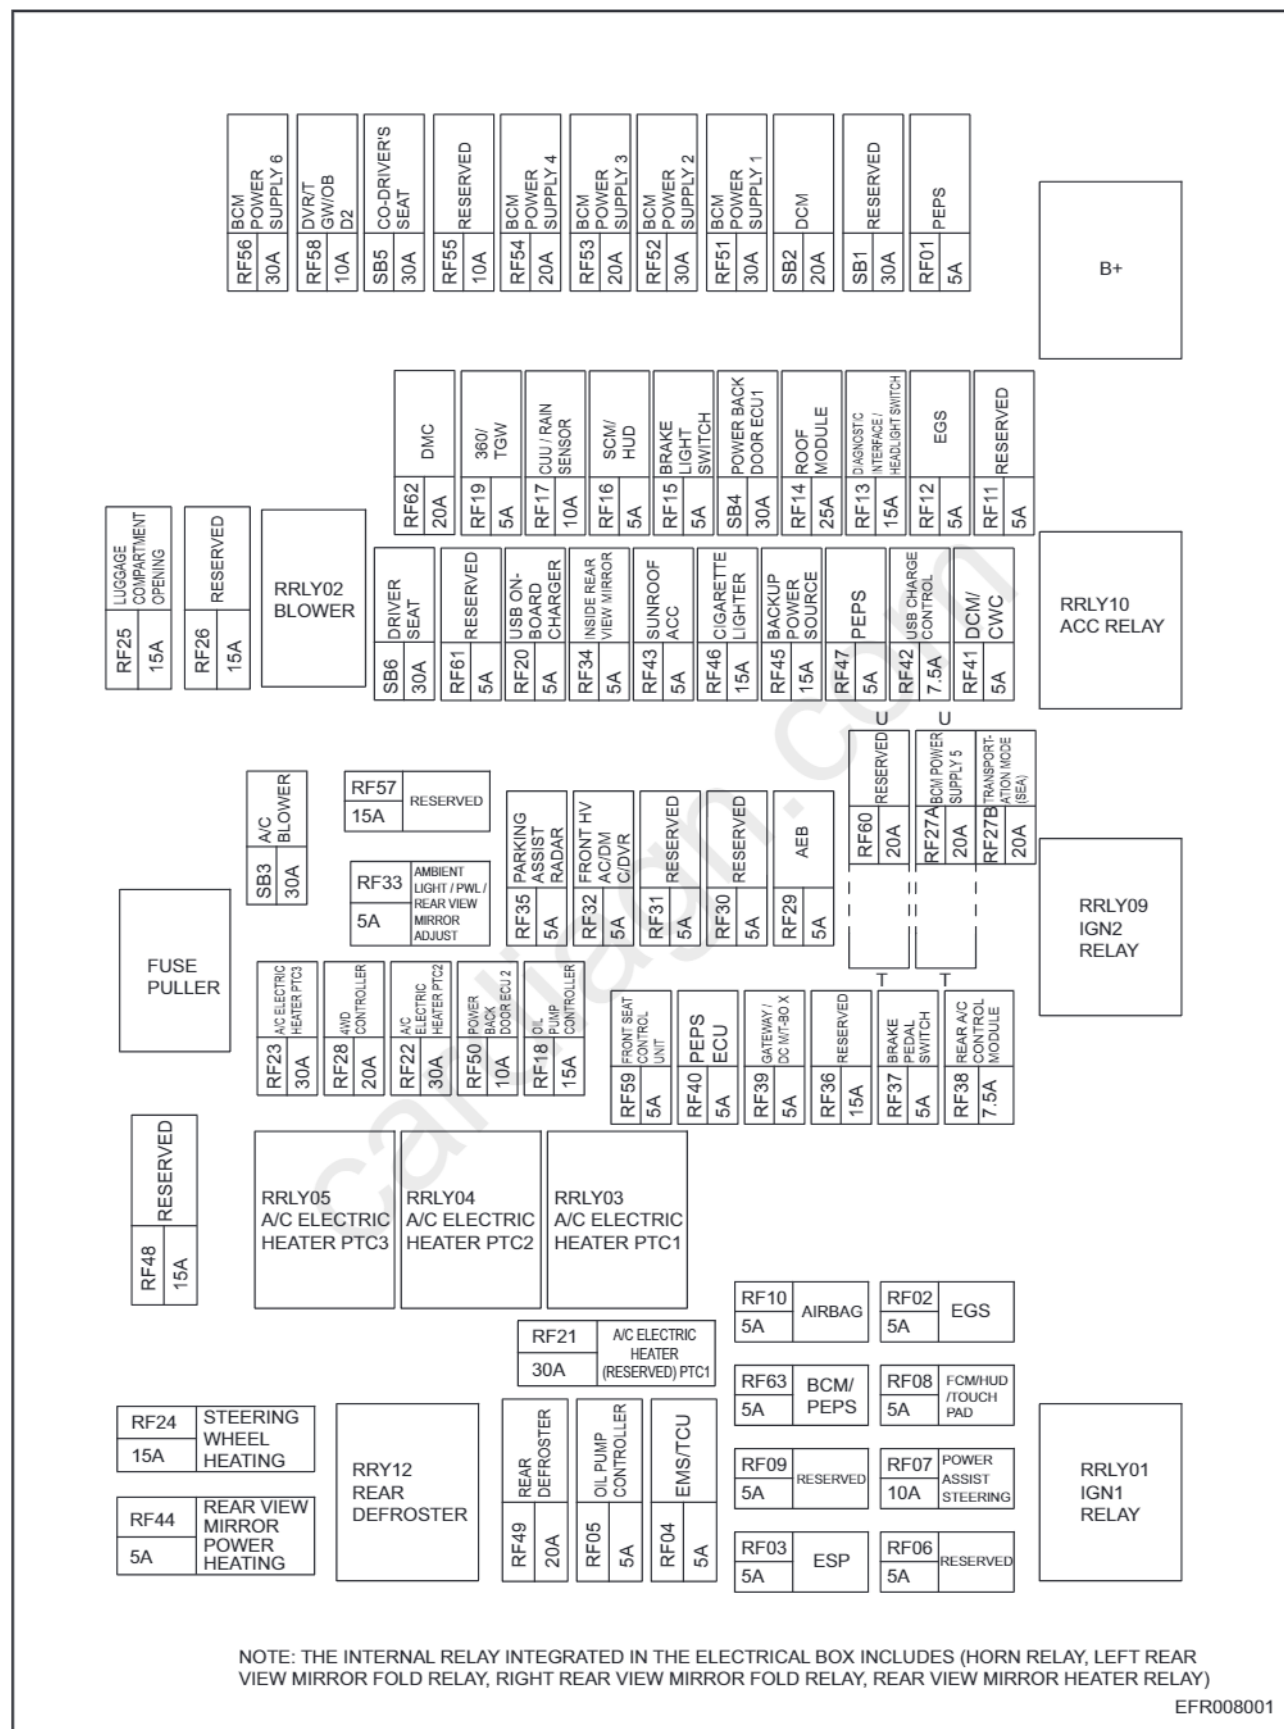


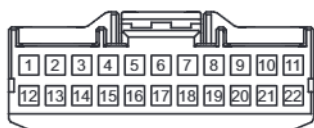



(B-143)
W

 


(B-139)
W

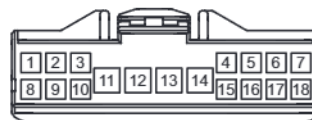

(B-144)
W

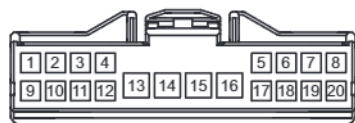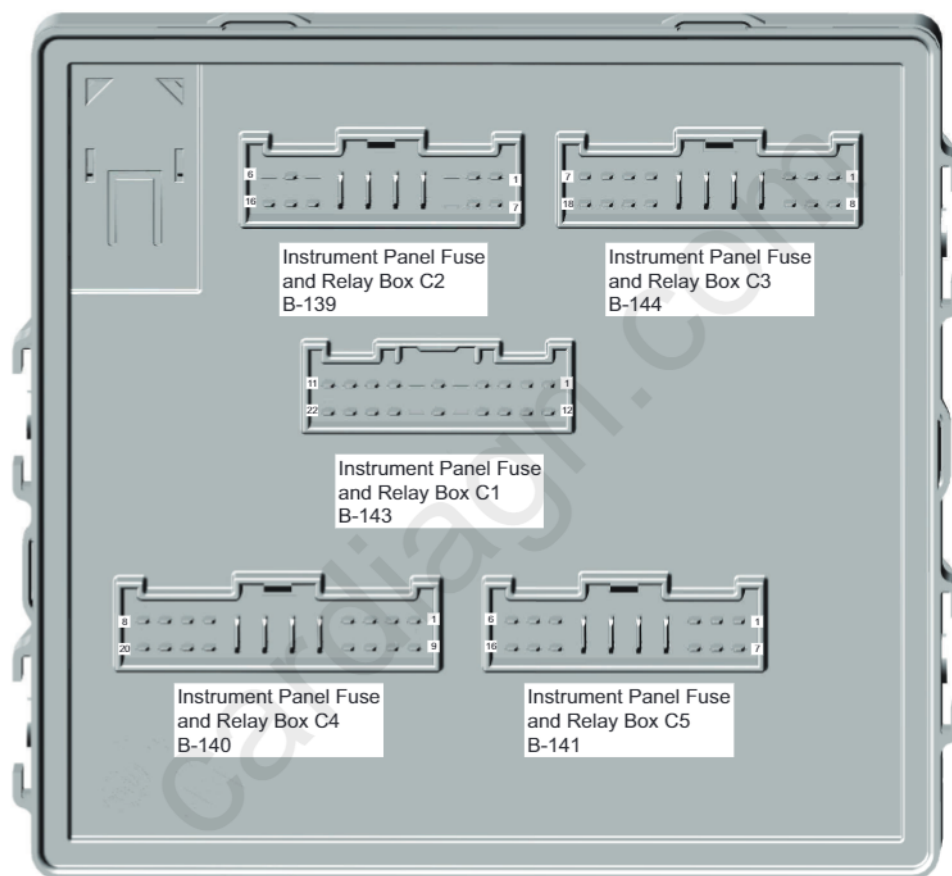


(B-140)
W

 


(B-141)
B


EFR013001

Internal circuit of instrument panel fuse and relay box

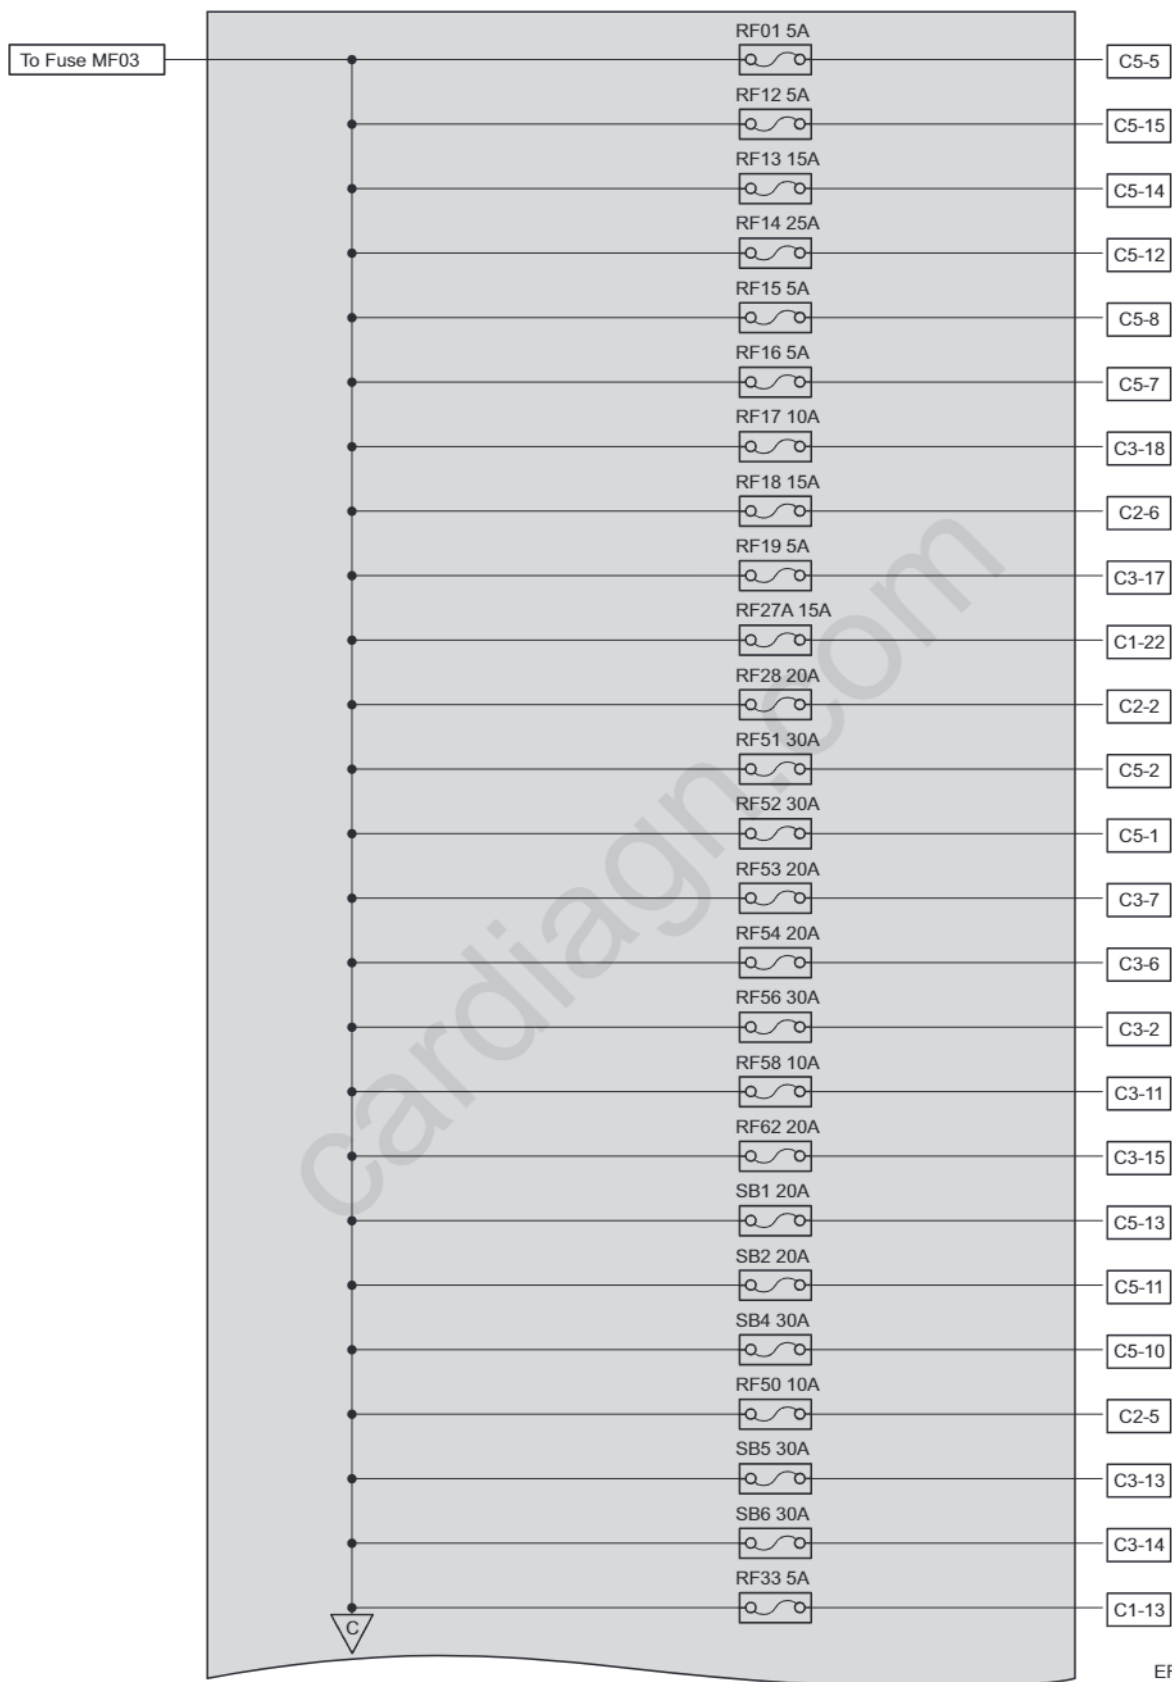

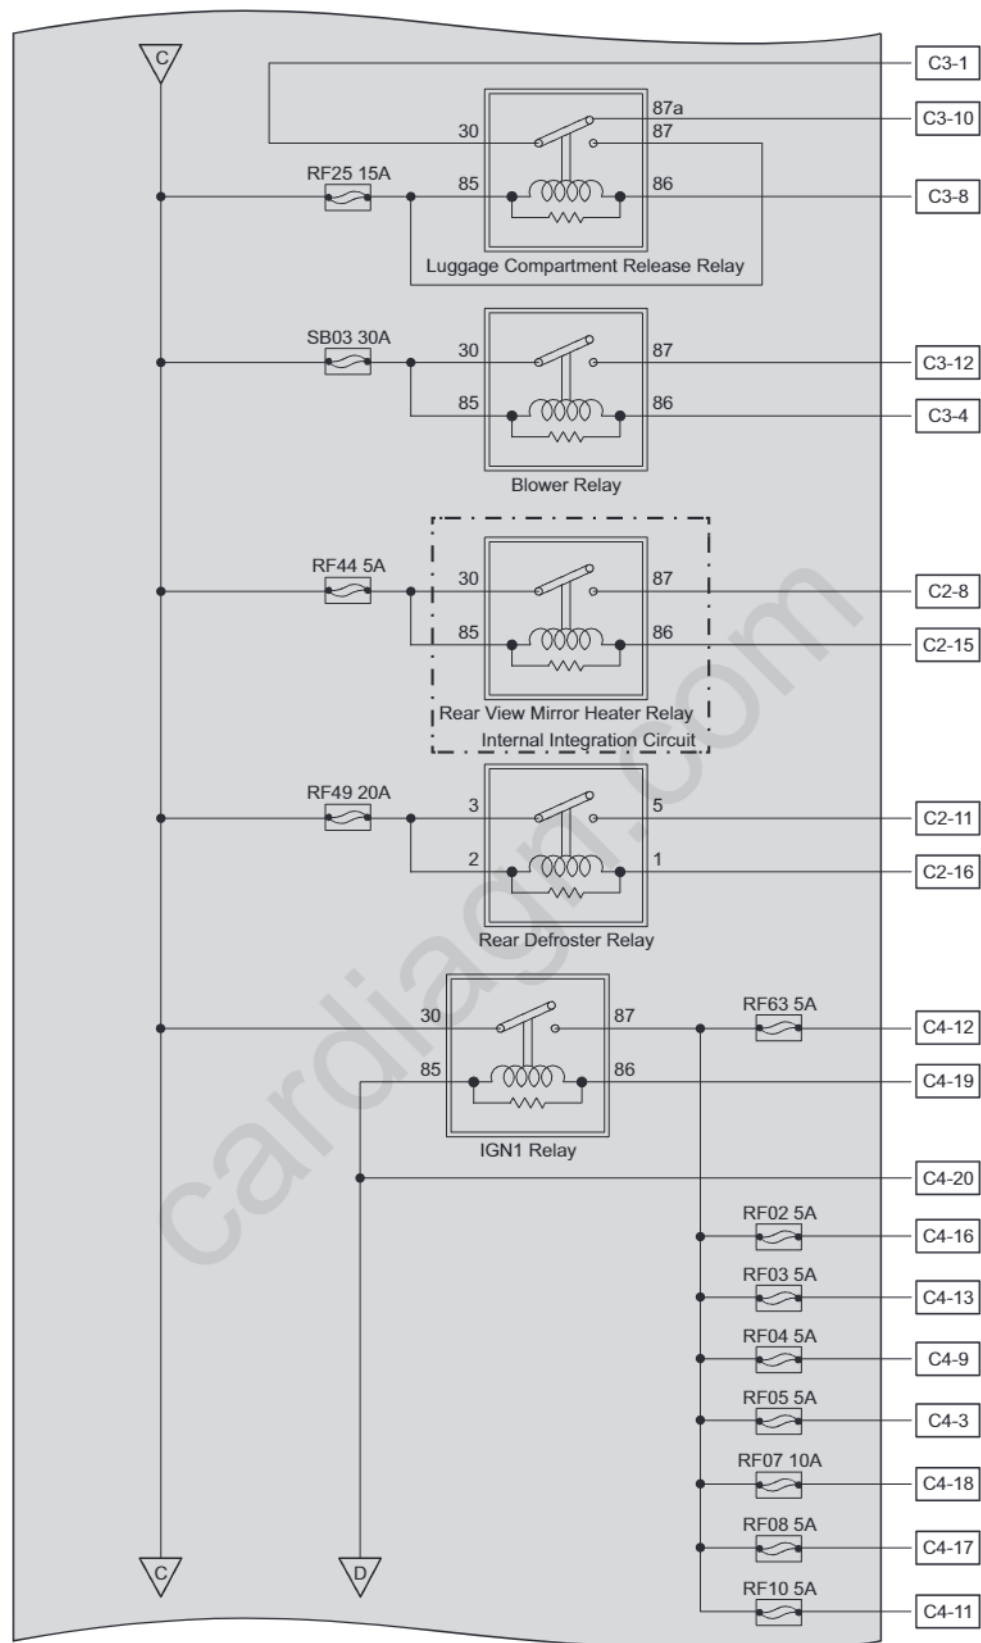

EFR010001

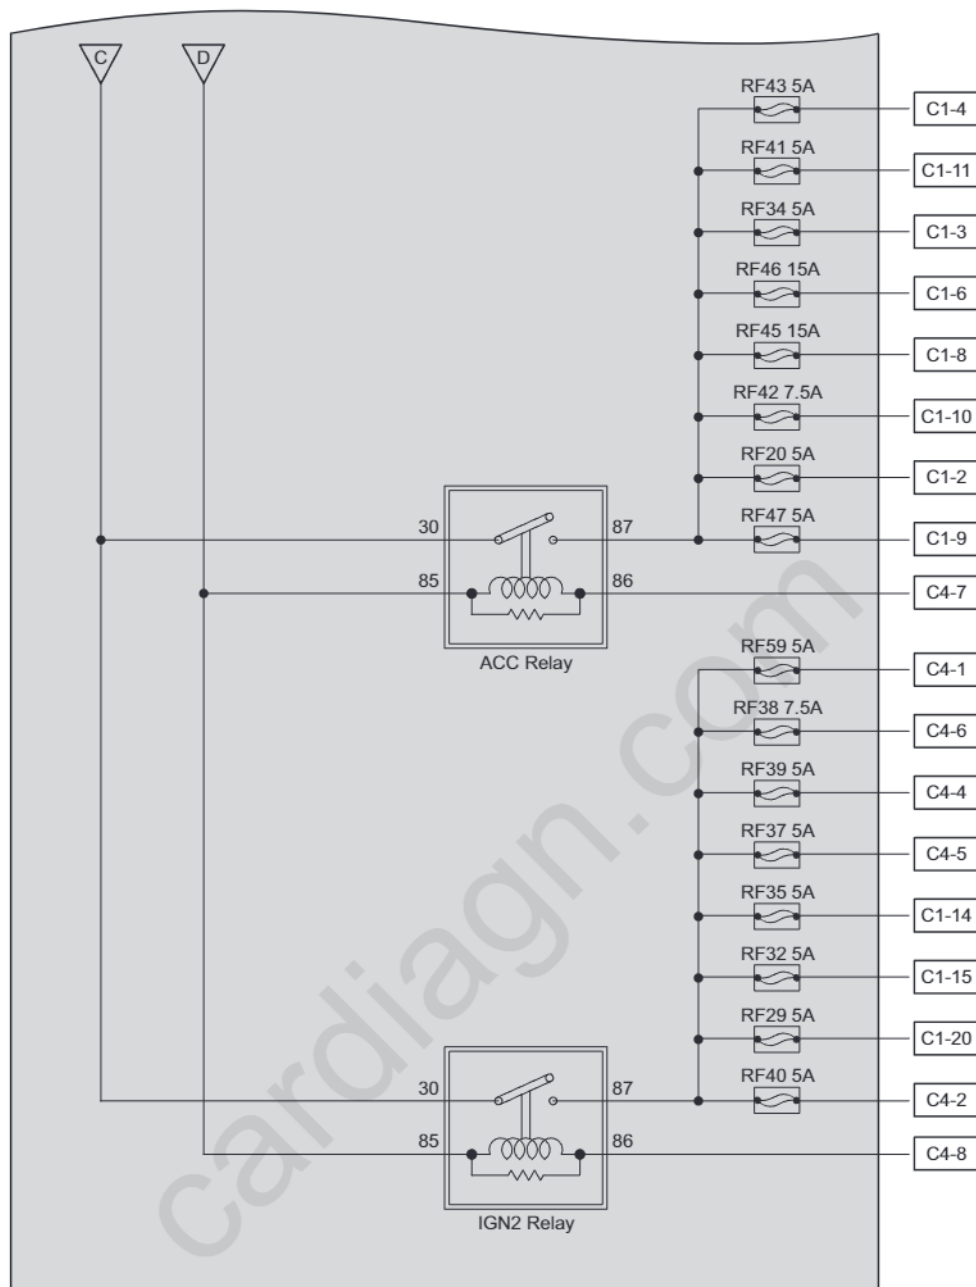

EFR011001

