


Parking aid (PDC) , (7X1),(7X2),(7X5)

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

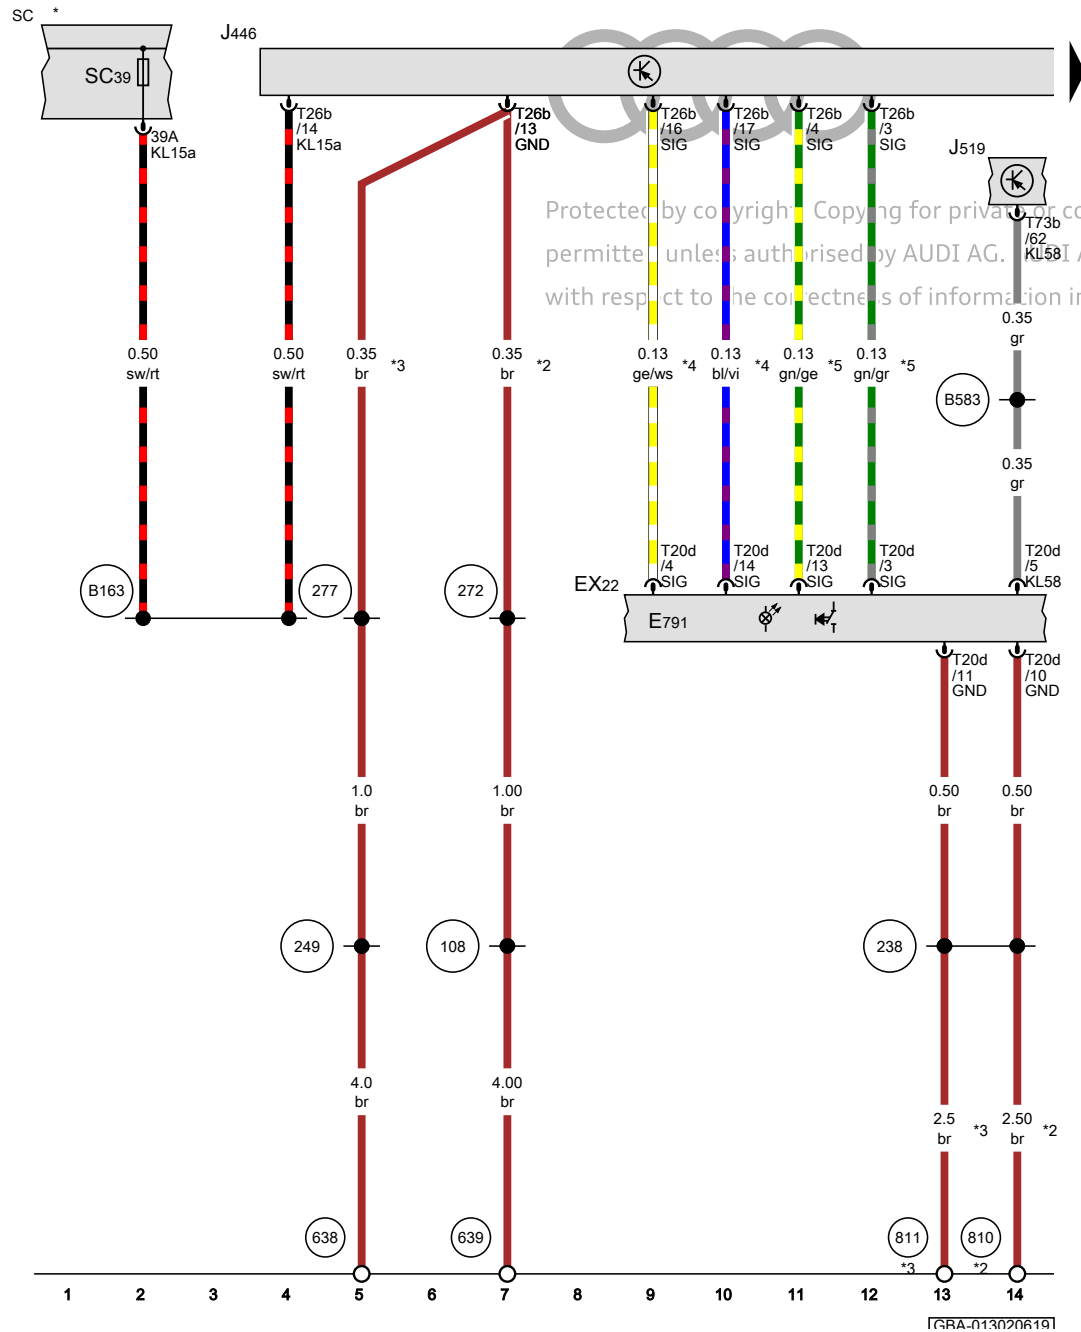

Centre switch module in dash panel, Parking aid control unit, Onboard supply control unit, Fuse holder C

- EX22 Centre switch module in dash panel
- E791 Operating unit 1 for driver and convenience functions
- J446 Parking aid control unit
- J519 Onboard supply control unit
- SC Fuse holder C
- SC39 Fuse 39 on fuse holder C
- T20d 20-pin connector, black
- T26b 26-pin connector, black
- T73b 73-pin connector, black
- 108 Earth connection 2, in front left wiring harness
- 238 Earth connection 1, in interior wiring harness
- 249 Earth connection 2, in interior wiring harness
- 272 Earth connection 4, in front wiring harness
- 277 Earth connection 3, in interior wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- B163 Positive connection 1 (15), in interior wiring harness
- B583 Positive connection (58), in interior wiring harness
- * see applicable current flow diagram for fuses in interior
- *2 For left-hand drive models
- *3 For right-hand drive models
- *4 For models with front/rear parking aid
- *5 For models with park assist steering

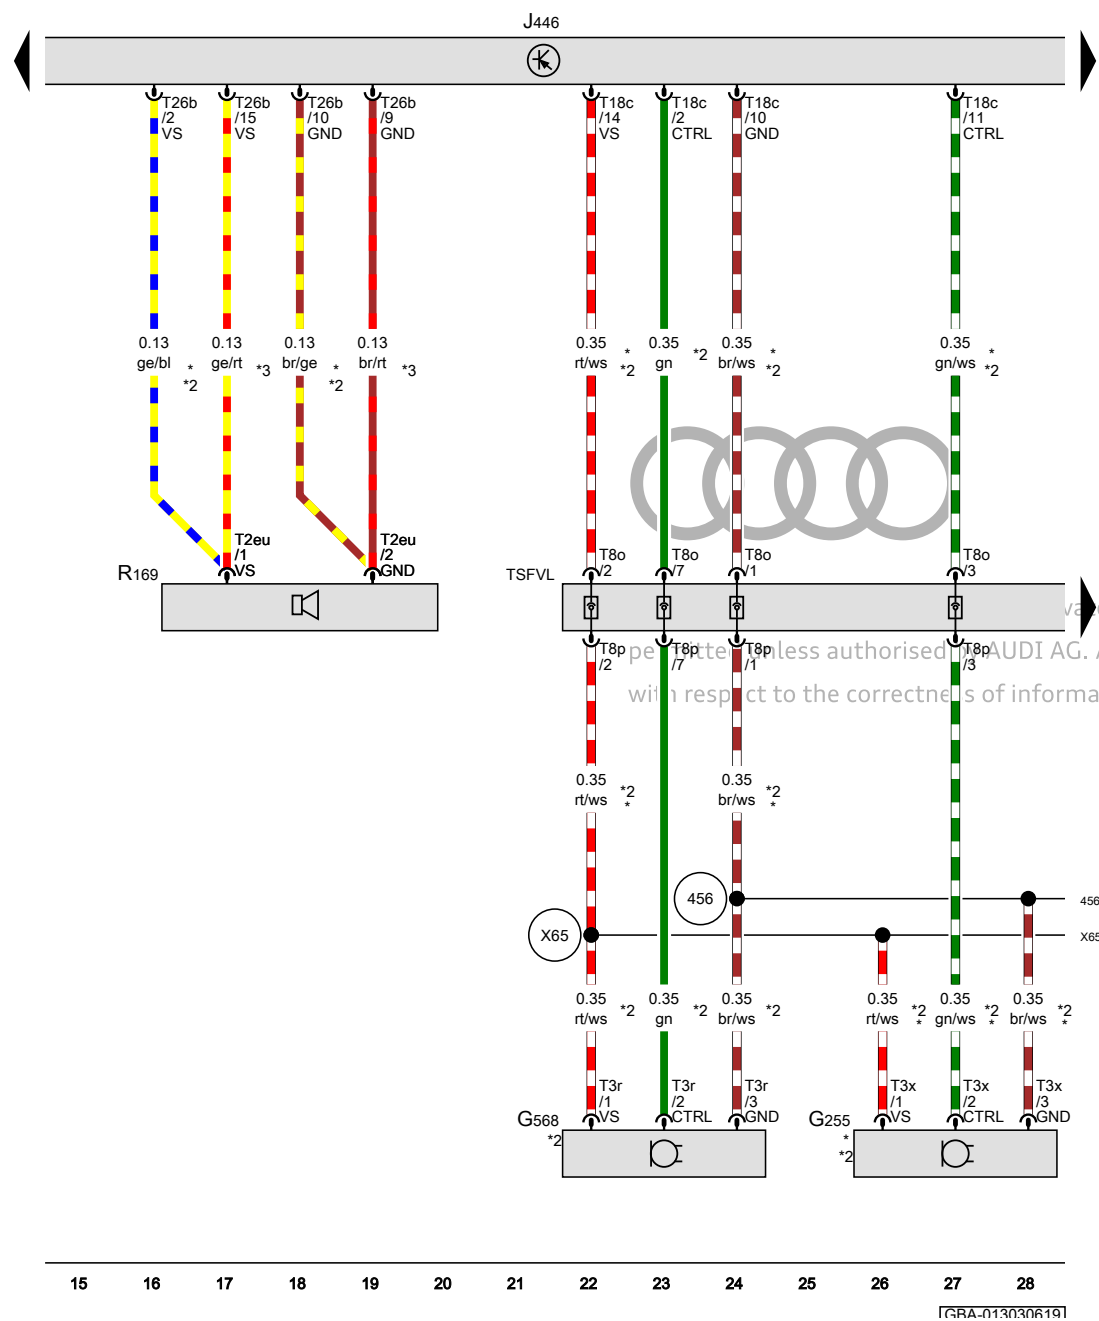

Front left parking aid sender, Front left sender for park assist
steering on left side of vehicle, Parking aid control unit,
Parking aid loudspeaker


G255	Front left parking aid sender
G568	Front left sender for park assist steering on left side of vehicle
J446	Parking aid control unit
R169	Parking aid loudspeaker
T2eu	2-pin connector, black
T3r	3-pin connector, black
T3x	3-pin connector, black
T8o	8-pin connector, black
T8p	8-pin connector, black
T18c	18-pin connector, black
T26b	26-pin connector, black
TSFVL	Coupling point on front left bumper

456 Earth connection 1, front bumper wiring harness

X65 Connection (parking aid), in front bumper wiring harness

* For models with front/rear parking aid
*2 For models with park assist steering
*3 For models with rear parking aid

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

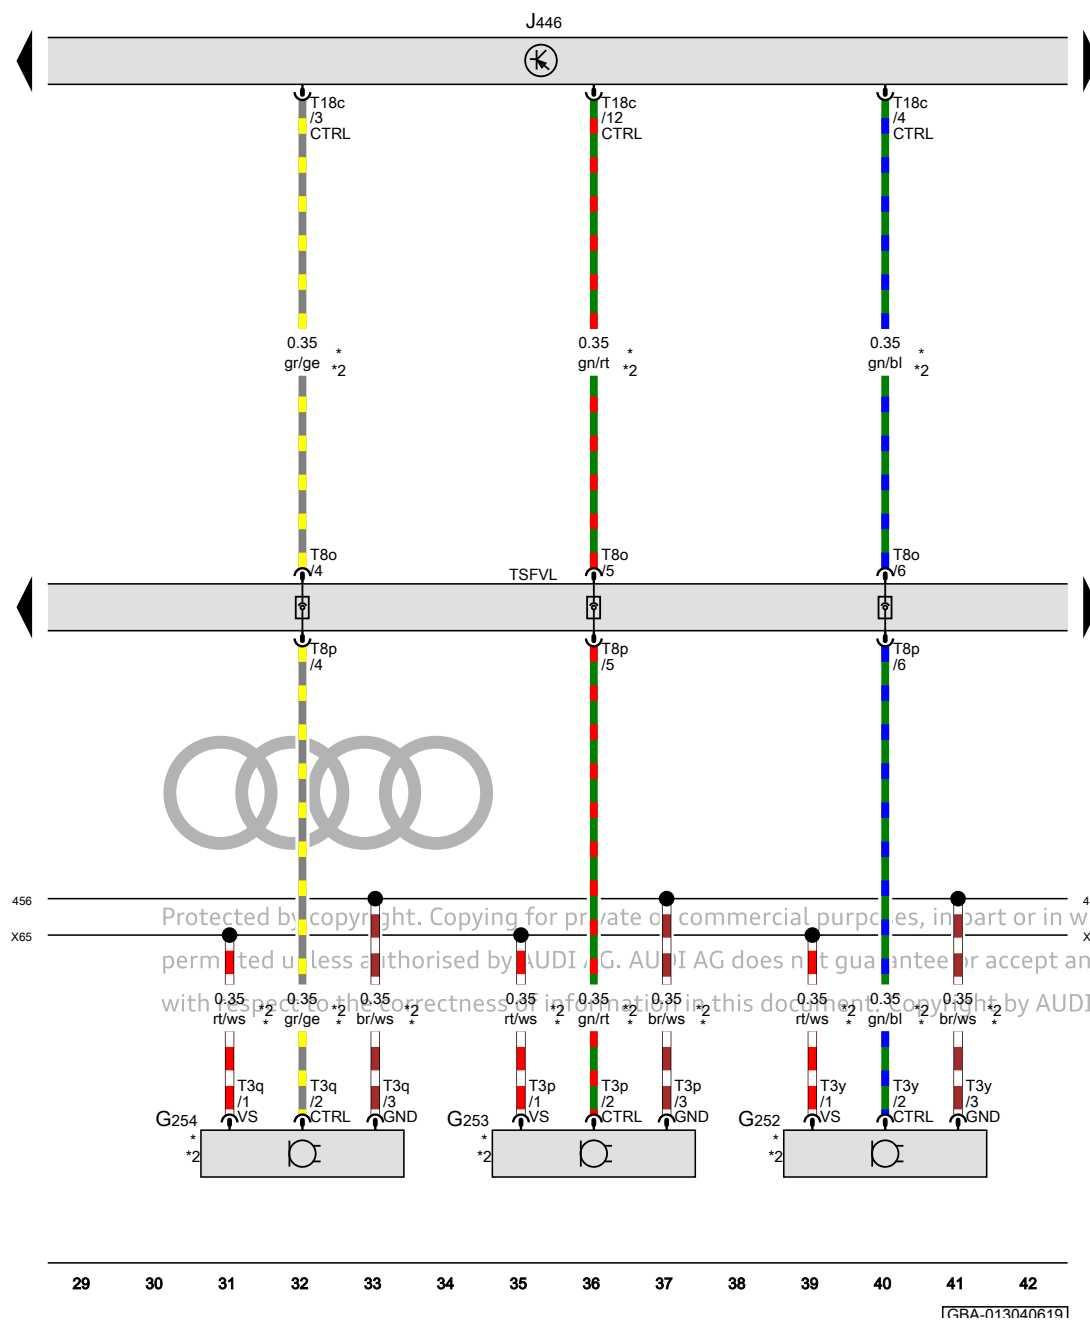


Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Parking aid control unit

- G252 Front right parking aid sender
- G253 Front centre right parking aid sender
- G254 Front centre left parking aid sender
- J446 Parking aid control unit
- T3p 3-pin connector, black
- T3q 3-pin connector, black
- T3y 3-pin connector, black
- T8o 8-pin connector, black
- T8p 8-pin connector, black
- T18c 18-pin connector, black
- TSFVL Coupling point on front left bumper

456 Earth connection 1, front bumper wiring harness

X65 Connection (parking aid), in front bumper wiring harness

- * For models with front/rear parking aid
- *2 For models with park assist steering

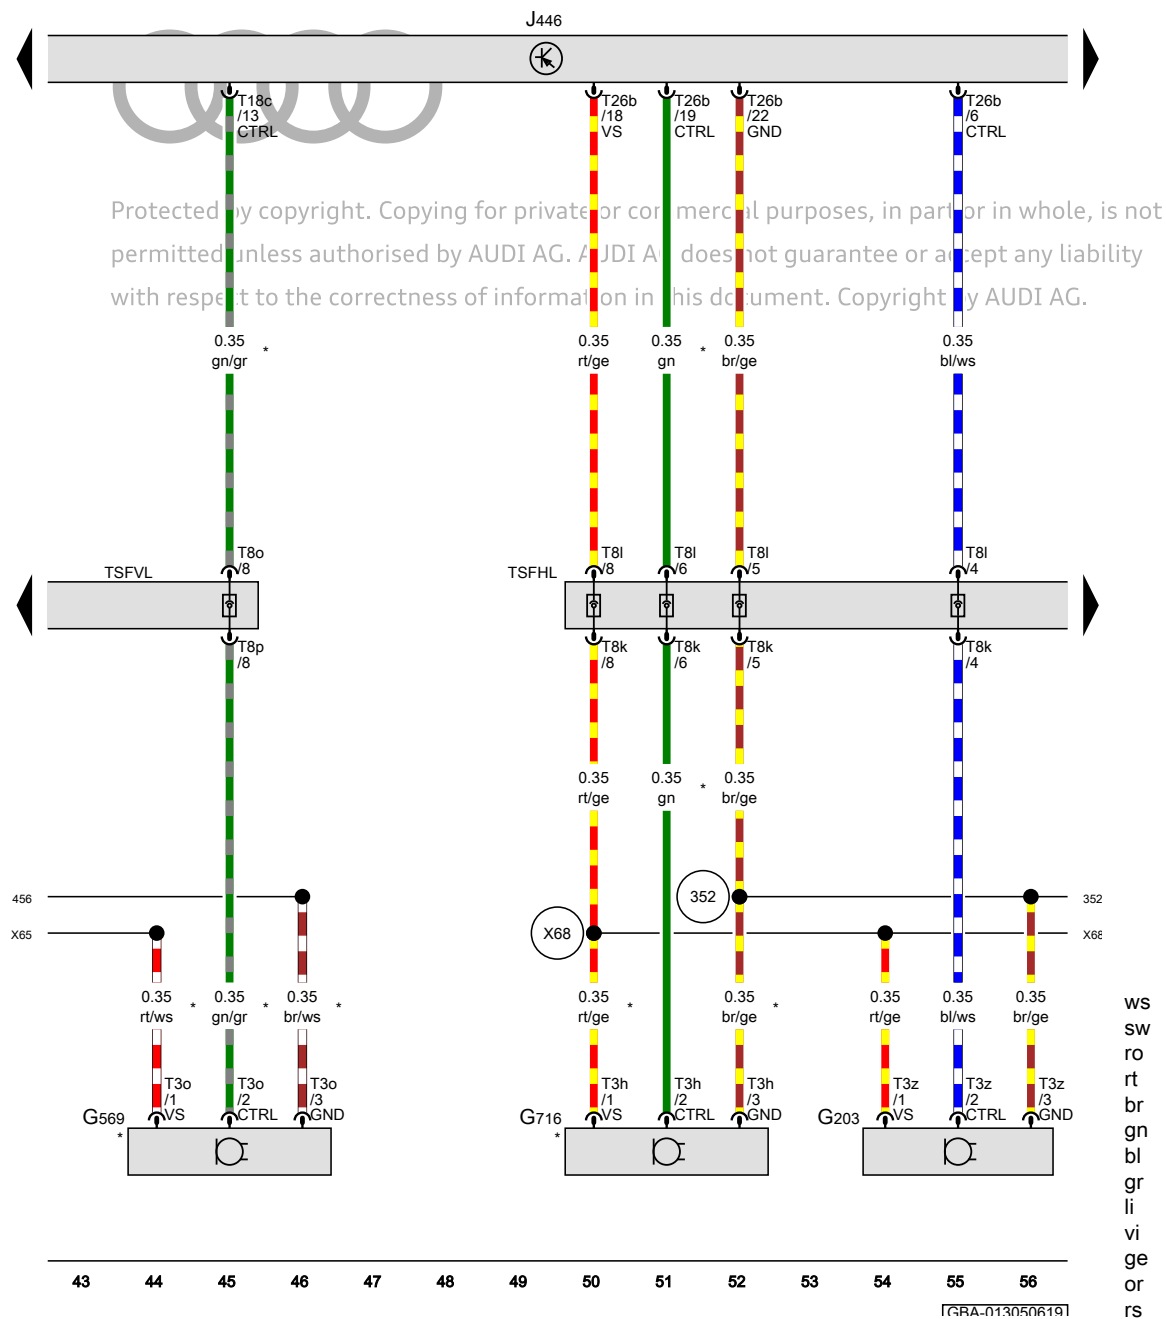

Rear left parking aid sender, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Parking aid control unit

- G203 Rear left parking aid sender
- G569 Front right sender for park assist steering on right side of vehicle
- G716 Rear left park assist steering sender
- J446 Parking aid control unit
- T3h 3-pin connector, black
- T3o 3-pin connector, black
- T3z 3-pin connector, black
- T8k 8-pin connector, black
- T8l 8-pin connector, black
- T8o 8-pin connector, black
- T8p 8-pin connector, black
- T18c 18-pin connector, black
- T26b 26-pin connector, black
- TSFHL Coupling point on rear left bumper
- TSFVL Coupling point on front left bumper

352 Earth connection (parking aid), in rear bumper wiring harness


456 Earth connection 1, front bumper wiring harness

X65 Connection (parking aid), in front bumper wiring harness

X68 Positive connection (parking aid), in rear bumper wiring harness

* For models with park assist steering

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

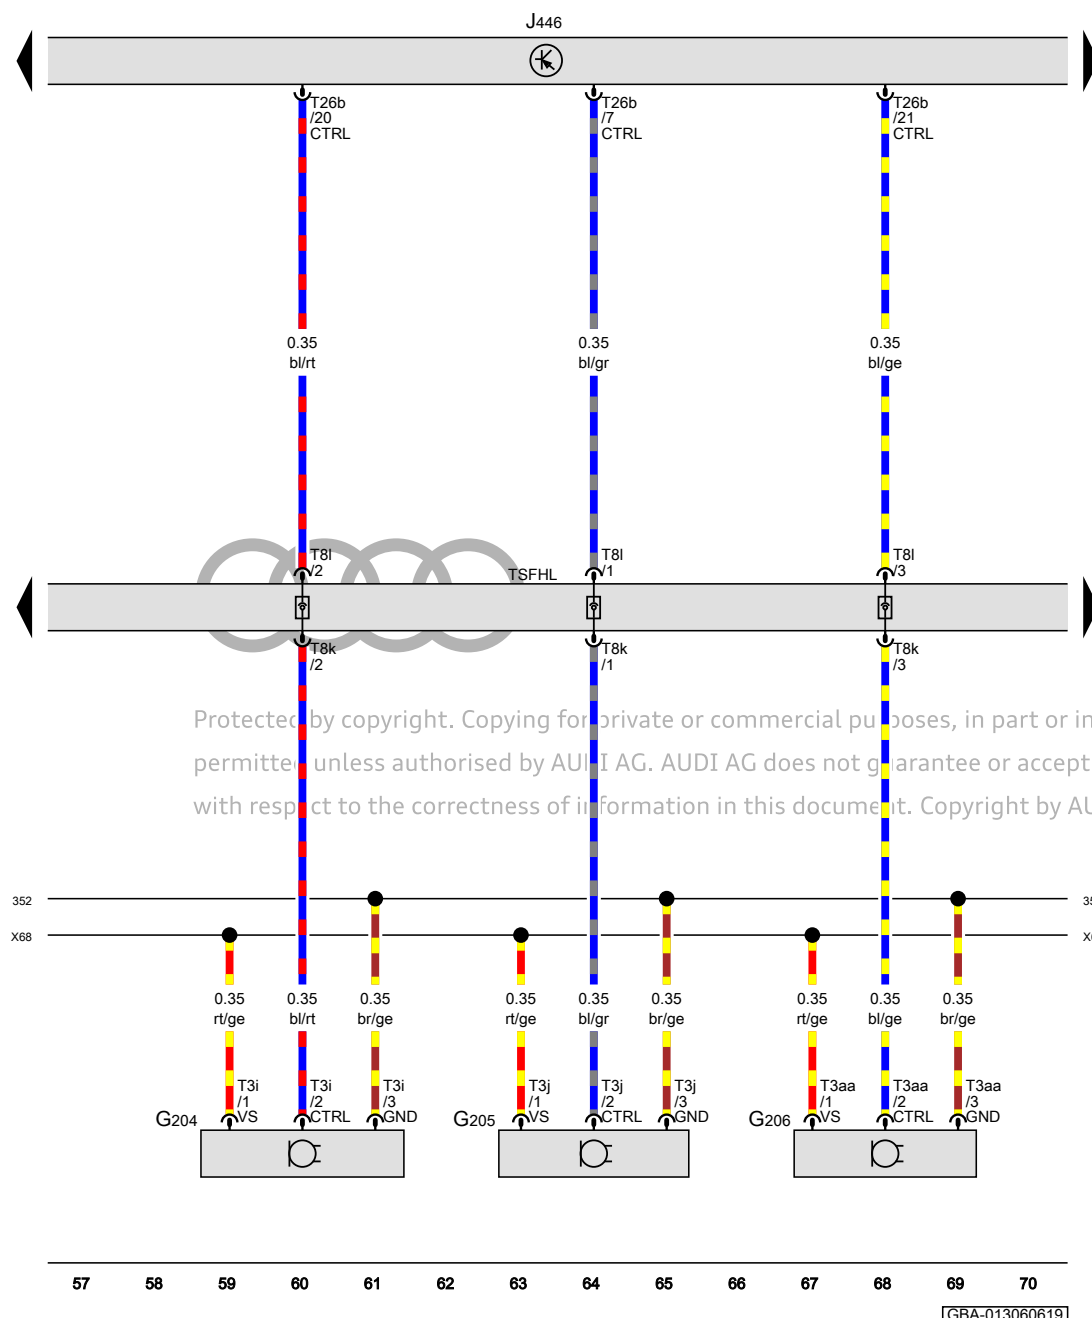


Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit

- G204 Rear centre left parking aid sender
- G205 Rear centre right parking aid sender
- G206 Rear right parking aid sender
- J446 Parking aid control unit
- T3aa 3-pin connector, black
- T3i 3-pin connector, black
- T3j 3-pin connector, black
- T8k 8-pin connector, black
- T8l 8-pin connector, black
- T26b 26-pin connector, black
- TSFHL Coupling point on rear left bumper

352 Earth connection (parking aid), in rear bumper wiring harness

X68 Positive connection (parking aid), in rear bumper wiring harness

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

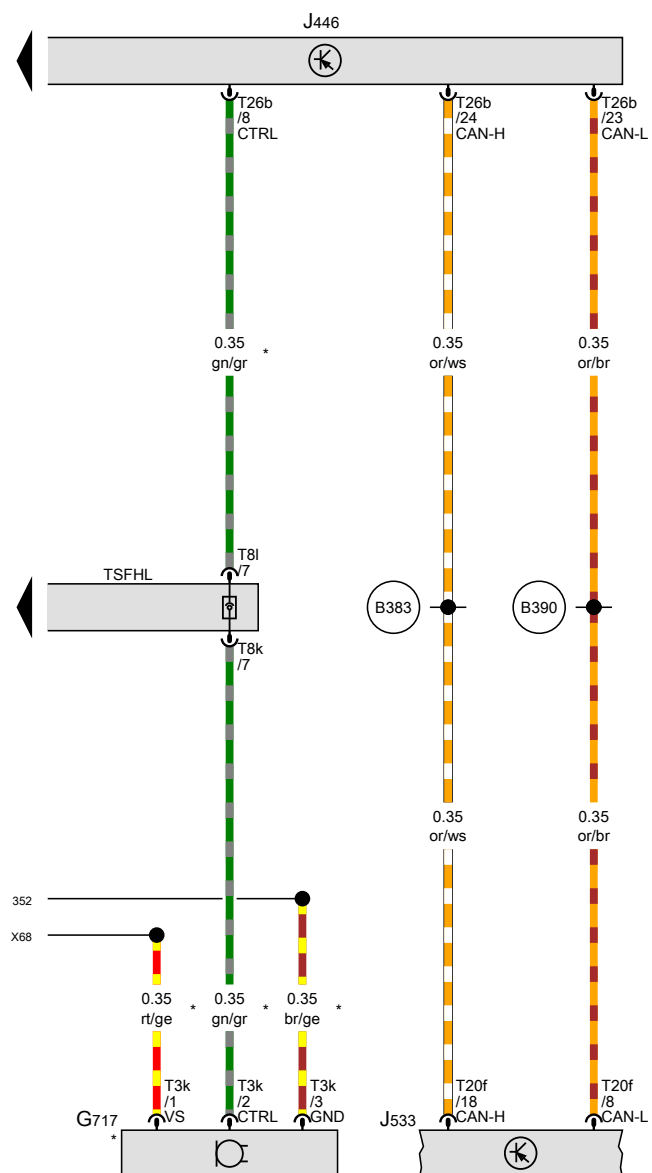

Rear right park assist steering sender, Parking aid control unit, Data bus diagnostic interface

- | | |
|-------|--|
| G717 | Rear right park assist steering sender |
| J446 | Parking aid control unit |
| J533 | Data bus diagnostic interface |
| T3k | 3-pin connector, black |
| T8k | 8-pin connector, black |
| T8l | 8-pin connector, black |
| T20f | 20-pin connector, red |
| T26b | 26-pin connector, black |
| TSFHL | Coupling point on rear left bumper |

- | | |
|------|--|
| 352 | Earth connection (parking aid), in rear bumper wiring harness |
| B383 | Connection 1 (powertrain CAN bus, high), in main wiring harness |
| B390 | Connection 1 (powertrain CAN bus, low), in main wiring harness |
| X68 | Positive connection (parking aid), in rear bumper wiring harness |
| * | For models with park assist steering |

* For models with park assist steering



ro = red
rt = red
br = brown
gn = green
bl = blue

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink