


Dynamic Chassis Control , (2H4),(2H5)

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Electronically controlled damping control unit, Data bus diagnostic interface, Fuse holder C

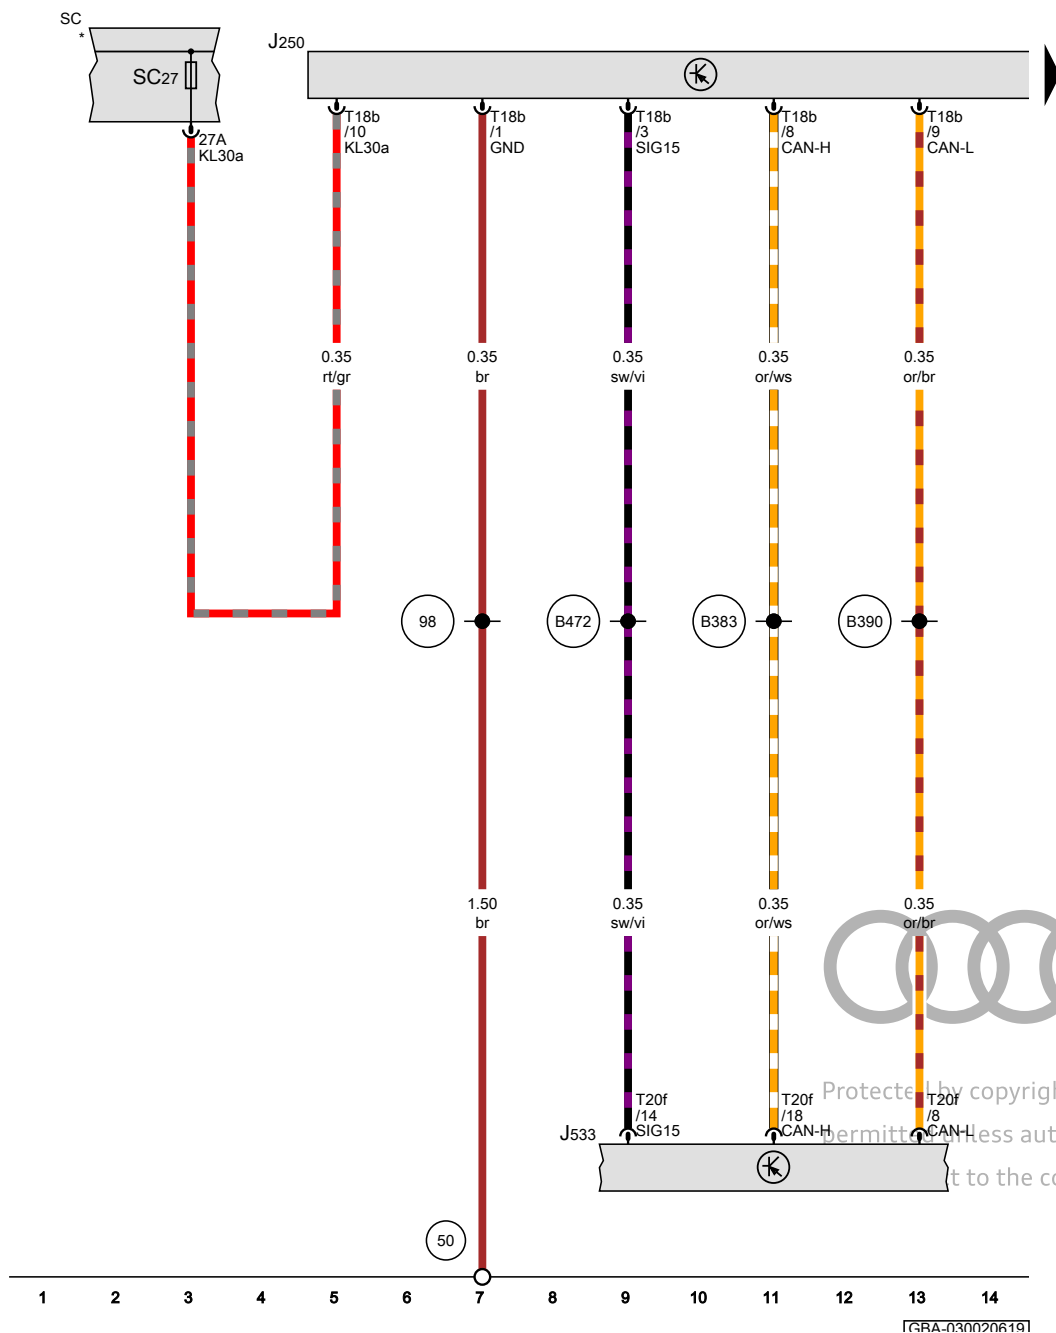

- J250 Electronically controlled damping control unit
- J533 Data bus diagnostic interface
- SC Fuse holder C
- SC27 Fuse 27 on fuse holder C
- T18b 18-pin connector, black
- T20f 20-pin connector, red
- 50 Earth point, on left in luggage compartment
- 98 Earth connection, in rear lid wiring harness
- B383 Connection 1 (powertrain CAN bus, high), in main wiring harness
- B390 Connection 1 (powertrain CAN bus, low), in main wiring harness
- B472 Connection 8, in main wiring harness
- * see applicable current flow diagram for fuses in interior

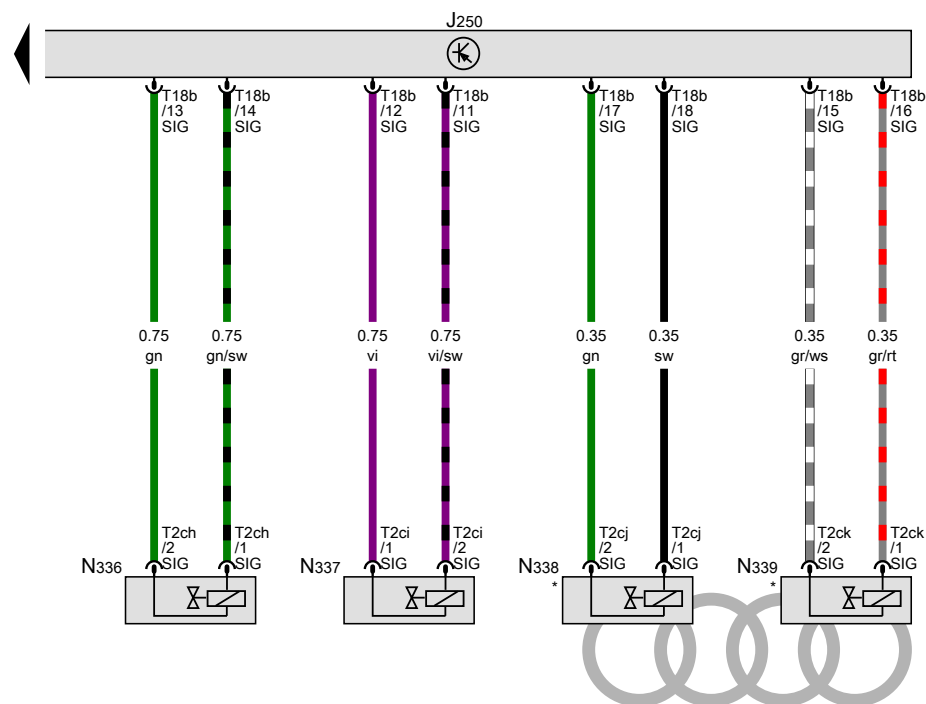

Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve

- J250 Electronically controlled damping control unit
- N336 Front left shock absorber damping adjustment valve
- N337 Front right shock absorber damping adjustment valve
- N338 Rear left shock absorber damping adjustment valve
- N339 Rear right shock absorber damping adjustment valve
- T2ch 2-pin connector, black
- T2ci 2-pin connector, black
- T2cj 2-pin connector, black
- T2ck 2-pin connector, black
- T18b 18-pin connector, black
- * Pre-wired component

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

Centre switch module in dash panel, Operating unit 1 for driver and convenience functions, Onboard supply control unit




- EX22 Centre switch module in dash panel
- E791 Operating unit 1 for driver and convenience functions
- J519 Onboard supply control unit
- T20d 20-pin connector, black
- T73b 73-pin connector, black

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- 238 Earth connection 1, in interior wiring harness
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right

- B583 Positive connection (58), in interior wiring harness

- * For left-hand drive models
- *2 For right-hand drive models

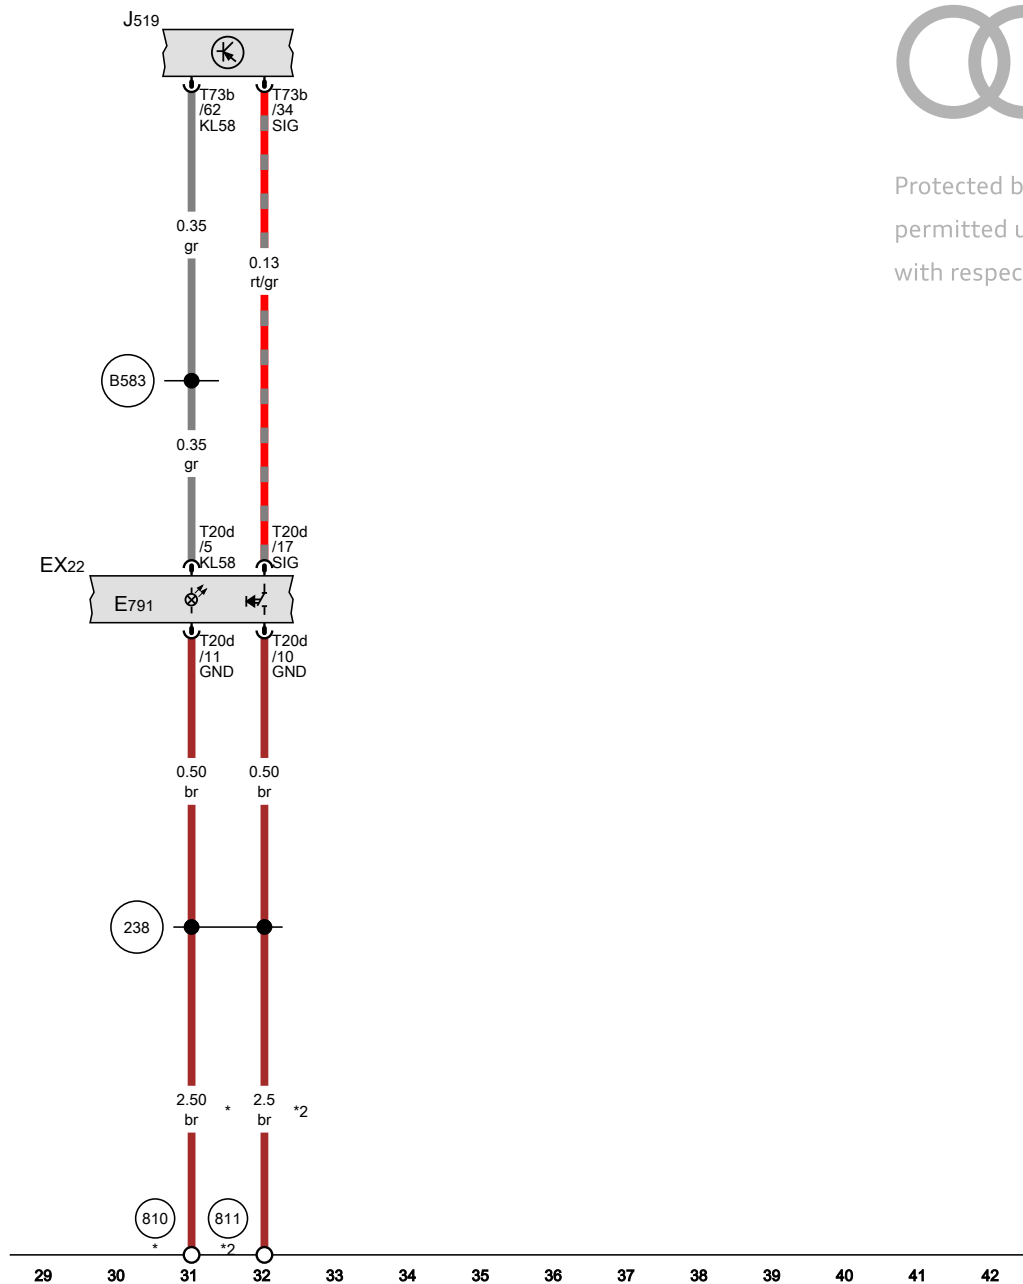

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

[6BA-030040619]