

2017 DTC INDEX

Impala

ACTIVE NOISE CANCELLATION - DIAGNOSTIC TROUBLE CODES

ACTIVE NOISE CANCELLATION - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B0560	Engine RPM Input Circuit Signal Invalid
DTC B1277, B127C, or B127D	Microphone

ANTILOCK BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

ANTILOCK BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B2745	Traction Control Switch
DTC C0035, C0040, C0045, or C0050	Wheel Speed Sensor
DTC C0110	Pump Motor
DTC C0131	Traction Control System Pressure
DTC C0161	Antilock Braking System Brake Switch
DTC C0186, C0187, C018A, C018B, C0196, C019A, C019B, C027E, C027F, C0287, or C0297	Acceleration Sensor/Yaw Rate Signal
DTC C0242	Powertrain Control Module Indicated Traction Control
DTC C0245	Wheel Speed Sensor Frequency Malfunction
DTC C0252	Vehicle Stability Control Module Sensors Correlation Malfunction
DTC C0274, C0275, or C0280	Valve High Temperature/Stability System Active Too Long
DTC C0460 or C0710	Steering Position Sensor
DTC C0552	Improper Shutdown
DTC C0558	Calibration Data Configuration Not Programmed
DTC C124F, C1250, or C1251	Lateral Acceleration Sensor
DTC P0856	Traction Control Torque Request Signal Message Counter Incorrect
DTC P15F8	Automatic Braking Engine Torque Request Signal Message Counter Incorrect

AUTOMATIC TRANSMISSION - 6T45 (MHG) - DIAGNOSTIC TROUBLE CODES

AUTOMATIC TRANSMISSION - 6T45 (MHG) - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC P0601, P0603, P0604, or P062F	Transmission Control Module
DTC P0634	Transmission Control Module Overtemperature
DTC P0658 or P0659	Actuator High Control Circuit Group 1 Low/High Voltage
DTC P0667, P0668, or P0669	Transmission Control Module Temperature Sensor
DTC P06AC, P06AD, or P06AE	Transmission Control Module Power Up Temperature Sensor
DTC P0711-P0713	Transmission Fluid Temperature Sensor

DTC	Description
<u>DTC P0716, P0717, P07BF, or P07C0</u>	Input Speed Sensor
<u>DTC P0722, P0723, P077C, or P077D</u>	Output Speed Sensor
<u>DTC P0741 or P0742</u>	Torque Converter Clutch (TCC) System Stuck Off/On - Transmission Hydraulic/Mechanical Performance
<u>DTC P0751 or P0752</u>	Shift Solenoid Valve 1 Performance - Stuck Off/On - Transmission Hydraulic/Mechanical Performance
<u>DTC P0776 or P0777</u>	Pressure Control Solenoid Valve 2 Stuck Off/On - Transmission Hydraulic/Mechanical Performance
<u>DTC P0796 or P0797</u>	Pressure Control Solenoid Valve 3 Stuck Off/On - Transmission Hydraulic/Mechanical Performance
<u>DTC P0815, P0816, or P0826</u>	Shift Switch Circuits
<u>DTC P0850-P0852</u>	Park/Neutral Position Switch Circuit
<u>DTC P0961-P0963</u>	Line Pressure Control Solenoid Valve
<u>DTC P0965-P0967</u>	Pressure Control Solenoid Valve 2
<u>DTC P0969-P0971</u>	Pressure Control Solenoid Valve 3
<u>DTC P0973 or P0974</u>	Shift Solenoid Valve 1 Control Circuit Low/High Voltage
<u>DTC P171A-P171C</u>	Transmission Fluid Pressure Accumulator Solenoid Valve Control Circuit
<u>DTC P171D</u>	Transmission Fluid Pressure Accumulator System Performance
<u>DTC P1761</u>	Up and Down Shift Switch Signal Message Counter Incorrect
<u>DTC P182E or P1915</u>	Internal Mode Switch
<u>DTC P2714 or P2715</u>	Pressure Control Solenoid Valve 4 Stuck Off/On - Transmission Hydraulic/Mechanical Performance
<u>DTC P2719-P2721</u>	Pressure Control Solenoid Valve 4
<u>DTC P2723 or P2724</u>	Pressure Control Solenoid Valve 5 Stuck Off/On - Transmission Hydraulic/Mechanical Performance
<u>DTC P2728-P2730</u>	Pressure Control Solenoid Valve 5
<u>DTC P2762, P2763, or P2764</u>	Torque Converter Clutch (TCC) Pressure Control Solenoid Valve

AUTOMATIC TRANSMISSION - 6T70 (M7W) - DIAGNOSTIC TROUBLE CODES

AUTOMATIC TRANSMISSION - 6T70 (M7W) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0601, P0603, P0604, or P062F</u>	Control Module
<u>DTC P0634</u>	Control Module Overtemperature
<u>DTC P0658 or P0659</u>	Actuator High Control Circuit Group 1 Low/High Voltage
<u>DTC P0667, P0668, or P0669</u>	Control Module Temperature Sensor
<u>DTC P06AC-P06AE</u>	Control Module Power Up Temperature Sensor
<u>DTC P0711-P0713</u>	Transmission Fluid Temperature Sensor
<u>DTC P0716 or P0717</u>	Input Speed Sensor
<u>DTC P0722 or P0723</u>	Output Speed Sensor
<u>DTC P0741 or P0742</u>	Torque Converter Clutch (TCC) System Stuck Off
<u>DTC P0751 or P0752</u>	Shift Solenoid Valve 1 Performance
<u>DTC P0756</u>	Shift Solenoid Valve 2 Performance
<u>DTC P0776 or P0777</u>	Pressure Control Solenoid Valve 2
<u>DTC P0796 or P0797</u>	Pressure Control Solenoid Valve 3
<u>DTC P0815, P0816, or P0826</u>	Up and Down Shift Switch

DTC	Description
<u>DTC P0851</u>	Park/Neutral Position Switch Circuit Low Voltage
<u>DTC P0961-P0963</u>	Line Pressure Control Solenoid Valve
<u>DTC P0965-P0967</u>	Pressure Control Solenoid Valve 2
<u>DTC P0969-P0971</u>	Pressure Control Solenoid Valve 3
<u>DTC P0973 or P0974</u>	Shift Solenoid Valve 1
<u>DTC P0976 or P0977</u>	Shift Solenoid Valve 2
<u>DTC P175F</u>	Acceleration Sensor Signal Message Counter Incorrect
<u>DTC P1761</u>	Up and Down Shift Switch Signal Message Counter Incorrect
<u>DTC P182E or P1915</u>	Internal Mode Switch
<u>DTC P2714 or P2715</u>	Pressure Control Solenoid Valve 4
<u>DTC P2719-P2721</u>	Pressure Control Solenoid Valve 4
<u>DTC P2723 or P2724</u>	Pressure Control Solenoid Valve 5
<u>DTC P2728-P2730</u>	Pressure Control Solenoid Valve 5
<u>DTC P2762, P2763, or P2764</u>	Torque Converter Clutch (TCC) Pressure Control Solenoid Valve

BATTERY, CHARGING SYSTEM AND STARTING SYSTEM - DIAGNOSTIC TROUBLE CODES

BATTERY, CHARGING SYSTEM AND STARTING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1325, B1327-B1330, B1395, B1415, B1424, B1425, B1439, B1517, C0800, C0805, C0870, C0880, C0895, C0899, C0900, P0560, P0562, P0563, P0611, P129B, P129C, P15AE, or P15AF</u>	Device Voltage/Device Power/Control Module/Battery Voltage/System Voltage/Fuel Injector Control Module
<u>DTC B1516</u>	Battery Current Sensor
<u>DTC B151A</u>	Battery Capacity Performance
<u>DTC B151C</u>	Battery Sensor Module Internal Malfunction
<u>DTC B1527</u>	Parasitic Load
<u>DTC P058B</u>	Battery Monitor Module Current Monitoring Performance
<u>DTC P058D</u>	Battery Monitor Module Voltage Monitoring Performance
<u>DTC P0615, P0616, or P0617</u>	Starter Relay Control (Without KL9)
<u>DTC P0615, P0616, or P0617</u>	Starter Relay Control (KL9)
<u>DTC P0621</u>	Generator L-Terminal Circuit
<u>DTC P0622</u>	Generator F-Terminal Circuit
<u>DTC P0625 or P0626</u>	Generator F-Terminal Circuit
<u>DTC P118C or P118D</u>	Low-Voltage Battery Current Sensor
<u>DTC P2500 or P2501</u>	Generator L-Terminal Circuit
<u>DTC P2505</u>	Engine Control Module (ECM) Supply Voltage Circuit
<u>DTC P26E4-P26E6</u>	Starter Drive Pinion Relay Control
<u>DTC P305F</u>	Dual Battery Control Module Performance

BOLTED EXTERIOR BODY PANELS AND CLOSURES - DIAGNOSTIC TROUBLE CODES

BOLTED EXTERIOR BODY PANELS AND CLOSURES - DIAGNOSTIC TROUBLE CODES

DTC	Description

DTC	Description
<u>DTC B3006</u>	Hood Ajar Circuit
<u>DTC P257D-P257F</u>	Engine Hood Switch

BUMPERS AND FASCIAS - DIAGNOSTIC TROUBLE CODES

BUMPERS AND FASCIAS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P059F or P151E</u>	Active Grille Air Shutter 1 Performance

CELLULAR SYSTEM, ENTERTAINMENT SYSTEM, AND NAVIGATION SYSTEM - DIAGNOSTIC TROUBLE CODES

CELLULAR SYSTEM, ENTERTAINMENT SYSTEM, AND NAVIGATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0997</u>	Auxiliary Electronic Control Unit Performance
<u>DTC B1024</u>	Circuit Board Temperature Sensor Above Maximum Threshold (Audio Amplifier)
<u>DTC B1024</u>	Circuit Board Temperature Sensor (Human Machine Interface Control Module)
<u>DTC B1025-B1135</u>	Audio Output Circuits
<u>DTC B124B</u>	USB 1 Circuit (with IO3)
<u>DTC B124B</u>	USB 1 Circuit (with IO5/IO6)
<u>DTC B124C</u>	USB 2 Circuit
<u>DTC B124F</u>	Universal Serial Bus (USB) Programming
<u>DTC B125A</u>	Antenna Signal Circuit
<u>DTC B125C</u>	Satellite Antenna Circuit
<u>DTC B125E</u>	Digital Audio Broadcast (DAB) Circuit (except IO6 with CW1)
<u>DTC B125E</u>	Digital Audio Broadcast (DAB) Circuit (IO6 with CW1)
<u>DTC B1265</u>	Entertainment System Remote Enable Circuit
<u>DTC B1271</u>	Theft Protection Active
<u>DTC B1277</u>	Microphone 1 Input Signal Circuit (except IO6 with CW1)
<u>DTC B1277</u>	Microphone 1 Input Signal Circuit (IO6 with CW1)
<u>DTC B127E</u>	Front Video Display Output Signal (IO5/IO6)
<u>DTC B127E</u>	Front Video Display Output Signal (IO3)
<u>DTC B12A1</u>	Audio Control Request Circuit
<u>DTC B12A3</u>	Display Control Request Circuit
<u>DTC B12A4</u>	Infotainment Faceplate Control Module A
<u>DTC B12A6</u>	Info Display Module Internal Malfunction
<u>DTC B12A7</u>	Optical Media Drive
<u>DTC B12A8</u>	Optical Media Drive Theft Locked
<u>DTC B1446 or B1447</u>	Backup Power Source
<u>DTC B2455</u>	Cellular Phone Microphone Circuit
<u>DTC B2462</u>	Global Positioning System (without IO6 & CW1)
<u>DTC B2462</u>	Global Positioning System Signal (with IO6 & CW1)
<u>DTC B2470</u>	Cellular Phone Antenna Circuit Malfunction
<u>DTC B2476 or B2482</u>	Cellular Phone Select Service Switch
<u>DTC B2485</u>	Wireless Communication (BT) Antenna Circuit

CRUISE CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

CRUISE CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B3623</u>	Steering Wheel Controls Distance Sensing Cruise Control Gap Up/Down Signal Circuit
<u>DTC C0460</u>	Steering Wheel Angle Sensor Module - Incorrect Component Installed (Distance Sensing Cruise Control)
<u>DTC C0561</u>	Driven Wheel Speed - Non Driven Wheel Speed Not Plausible
<u>DTC C0565</u>	Vehicle Identification Number Malfunction
<u>DTC C056E</u>	Electronic Control Unit Software - Calibration Not Learned (Distance Sensing Cruise Control)
<u>DTC C1002</u>	Distance Sensing Cruise Control Module Performance
<u>DTC P0571</u>	Cruise Control Brake Switch Circuit
<u>DTC P0572 or P0573</u>	Brake Switch Circuit 1 Low/High Voltage
<u>DTC P0575</u>	Cruise Control Switch Signal Message Counter Incorrect
<u>DTC P0703</u>	Brake Switch Signal Message Counter Incorrect
<u>DTC P1553</u>	Distance Sensing Cruise Control Signal Message Counter Incorrect
<u>DTC P158A</u>	Cruise Control Calibration Incorrect
<u>DTC P15F6</u>	Front Object Detection Control Module Torque Request Signal Message Counter Incorrect (Distance Sensing Cruise Control)
<u>DTC B3794, P0564, P0565, P0567, P0568, P056C, P0580, P0581, P155A-P155C, or P162C</u>	Cruise Control Malfunction

DATA COMMUNICATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DATA COMMUNICATION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1000</u>	Electronic Control Unit
<u>DTC B1001</u>	Option Configuration
<u>DTC B101D</u>	Electronic Control Unit Hardware
<u>DTC B101E</u>	Electronic Control Unit Software
<u>DTC C056D</u>	Electronic Control Unit Hardware
<u>DTC C056E</u>	Electronic Control Unit Software
<u>DTC P0601-P0607, P060A-P060C, P0610, P062F, P16E9-P16F0, or P262B</u>	Control Module
<u>DTC U0020</u>	Low Speed CAN Bus
<u>DTC U0028</u>	MOST Bus
<u>DTC U0029</u>	MOST Bus Performance
<u>DTC U0073 or U2100</u>	Control Module Communication Bus A Off/CAN Bus Communication
<u>DTC U0074</u>	Control Module Communication Powertrain Expansion CAN Bus Off Malfunction
<u>DTC U0077</u>	Control Module Communication Chassis Expansion CAN Bus Off
<u>DTC U0078</u>	Control Module Communication Low Speed CAN Bus Off
<u>DTC U007B</u>	Control Module Communication High Speed Extension CAN Bus Off

DTC	Description
<u>DTC U007C</u>	Control Module Communication High Speed Extension CAN Bus 2 Off
<u>DTC U007D</u>	Control Module Communication Low Speed Extension CAN Bus Off
<u>DTC U0100-U02FF</u>	Control Module U Code List
<u>DTC U0300-U0336</u>	Control Module U Code List
<u>DTC U0400-U05FF</u>	Control Module U Code List
<u>DTC U1340-U135F</u>	Control Module U Code List
<u>DTC U1500-U15FF</u>	Control Module U Code List
<u>DTC U1814</u>	Powertrain Wake-Up Communication Circuit
<u>DTC U1833</u>	Lost Communication with Electronic Brake Control Module on Chassis Expansion CAN Bus
<u>DTC U18A2</u>	Lost Communication with Fuel Pump Driver Control Module
<u>DTC U18B9-U18BF</u>	Primary High Speed CAN Bus Subnet Configuration List
<u>DTC U2098</u>	MOST Communication Enable Circuit
<u>DTC U2099</u>	High Speed Communication Enable Circuit
<u>DTC U2616</u>	Fuel Pump Driver Control Module Lost Communication with ECM

ENGINE CONTROLS/FUEL - 2.5L (LCV) - DIAGNOSTIC TROUBLE CODES

ENGINE CONTROLS/FUEL - 2.5L (LCV) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0010, P0013, or P2088-P2091</u>	Intake/Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit
<u>DTC P0011 or P0014</u>	Intake/Exhaust Camshaft Position System Performance
<u>DTC P0016 or P0017</u>	Crankshaft Position - Intake/Exhaust Camshaft Position Not Plausible
<u>DTC P0030-P0032, P0036-P0038, P0053, P0054, P0135, or P0141</u>	HO2S Heaters
<u>DTC P0068 or P1101</u>	Throttle Body Air Flow Performance/Intake Air Flow System Performance
<u>DTC P0089, P00C6, P228C, or P228D</u>	Fuel Pressure Regulator Performance/Fuel Rail Pressure Low During Engine Cranking
<u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>	Fuel Pressure Regulator Control Circuits
<u>DTC P0096 or P0111</u>	Intake Air Temperature (IAT) Sensor 1/2 Performance
<u>DTC P0097, P0098, or P0099</u>	Intake Air Temperature (IAT) Sensor 2 Circuit
<u>DTC P00F4-P00F6</u>	Intake Air Humidity Sensor Circuit
<u>DTC P0101</u>	Mass Air Flow (MAF) Sensor Performance
<u>DTC P0102 or P0103</u>	Mass Air Flow (MAF) Sensor Circuit Low/High Frequency
<u>DTC P0106</u>	Manifold Absolute Pressure (MAP) Sensor Performance
<u>DTC P0107 or P0108</u>	Manifold Absolute Pressure (MAP) Sensor Circuit Low/High Voltage
<u>DTC P0112, P0113, or P0114</u>	Intake Air Temperature (IAT) Sensor 1 Circuit
<u>DTC P0116</u>	Engine Coolant Temperature (ECT) Sensor Performance
<u>DTC P0117, P0118, or P0119</u>	Engine Coolant Temperature (ECT) Sensor Circuit

DTC	Description
<u>DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135</u>	Throttle Position Sensors 1-2/Sensor Communication Circuit
<u>DTC P0128</u>	Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature
<u>DTC P0131, P0132, P0137, or P0138</u>	HO2S Circuit Low/High Voltage Sensor 1-2
<u>DTC P0133, P013A, P013B, P013E, P013F, P015A, P015B, P2270, or P2271</u>	HO2S
<u>DTC P0171 or P0172</u>	Fuel Trim System Lean/Rich
<u>DTC P018B-P018D</u>	Fuel Pressure Sensor (Chassis Control Module)
<u>DTC P0191, P0192, or P0193</u>	Fuel Rail Pressure Sensor
<u>DTC P0201-P0204, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P1248, P1249, P124A, P124B, P2147, P2148, P2150, P2151, P2153, P2154, P2156, or P2157</u>	Cylinder 1-4 Injector Control Circuits
<u>DTC P0231, P0232, or P023F</u>	Fuel Pump Control Circuit (Chassis Control Module)
<u>DTC P025A</u>	Fuel Pump Control Module Enable Circuit (Chassis Control Module)
<u>DTC P0300-P0304</u>	Misfire Detected
<u>DTC P0315</u>	Crankshaft Position System Variation Not Learned
<u>DTC P0324, P0326, P0331, P06B6, or P06B7</u>	Knock Sensors
<u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>	Knock Sensor Circuits
<u>DTC P0335 or P0336</u>	Crankshaft Position Sensor
<u>DTC P0340, P0341, P0365, or P0366</u>	Intake/Exhaust Camshaft Position Sensor
<u>DTC P034A or P034B</u>	Crankshaft Position Sensor
<u>DTC P0351-P0354, P2300, P2301, P2303, P2304, P2306, P2307, P2309, or P2310</u>	Ignition Coil 1-4 Control Circuits
<u>DTC P0420</u>	Catalyst System Low Efficiency
<u>DTC P0442</u>	Evaporative Emission (EVAP) System Small Leak Detected
<u>DTC P0443, P0458, or P0459</u>	Evaporative Emission (EVAP) Purge Solenoid Valve Control Circuit
<u>DTC P0446</u>	Evaporative Emission (EVAP) Vent System Performance
<u>DTC P0449, P0498, or P0499</u>	Evaporative Emission (EVAP) Vent Solenoid Valve Control Circuit
<u>DTC P0451-P0454</u>	Fuel Tank Pressure Sensor
<u>DTC P0455</u>	Evaporative Emission (EVAP) System Large Leak Detected
<u>DTC P0496</u>	Evaporative Emission (EVAP) System Flow During Non-Purge
<u>DTC P0506 or P0507</u>	Idle Speed Low/High
<u>DTC P050D</u>	Cold Start Rough Idle
<u>DTC P057B-P057D</u>	Brake Pedal Position Sensor
<u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B</u>	Control Module (ECM)
<u>DTC P0627-P0629</u>	Fuel Pump Enable Circuit
<u>DTC P0641, P0651, P0697, or P06A3</u>	5V Reference 1-4 Circuits (ECM)
<u>DTC P0641 or P06A6</u>	5V Reference Circuit/5V Reference 1 Performance (Chassis Control Module)
<u>DTC P0650, P263A, or P263B</u>	Malfunction Indicator Lamp (MIL) Control Circuit

DTC	Description
<u>DTC P0685-P0687, P0689, P0690, or P1682</u>	Engine Controls Ignition Relay/Ignition 1 Switch Circuit 2
<u>DTC P069E</u>	Fuel Pump Control Module Requested MIL Illumination
<u>DTC P0700</u>	Transmission Control Module Requested MIL Illumination
<u>DTC P1255 or P064A</u>	Fuel Pump Control Module (Chassis Control Module)
<u>DTC P135A</u>	Ignition Coil Supply Voltage Circuit Bank 1
<u>DTC P1400</u>	Cold Start Emission Reduction Control System
<u>DTC P150C</u>	Transmission Control Module Engine Speed Request Signal Message Counter Incorrect
<u>DTC P1516, P2101, P2119, or P2176</u>	Throttle Actuator Control (TAC) Module
<u>DTC P163A</u>	Control Module Fuel Pressure Regulator 1 Control System Circuitry Performance
<u>DTC P2096 or P2097</u>	Post Catalyst Fuel Trim System Low/High Limit
<u>DTC P2122, P2123, P2127, P2128, or P2138</u>	Accelerator Pedal Position (APP) Sensor 1-2
<u>DTC P2199</u>	Intake Air Temperature (IAT) Sensors 1-2 Not Plausible
<u>DTC P219A</u>	Fuel Trim Cylinder Balance
<u>DTC P2227-P2230</u>	Barometric Pressure (BARO) Sensor
<u>DTC P2544</u>	Transmission Torque Request Circuit Message Counter Incorrect
<u>DTC P2618 or P2619</u>	Crankshaft Position Signal Output Circuit Low/High Voltage
<u>DTC P2635</u>	Fuel Pump Flow Performance (Chassis Control Module)

ENGINE CONTROLS/FUEL - 3.6L (LFX) - DIAGNOSTIC TROUBLE CODES

ENGINE CONTROLS/FUEL - 3.6L (LFX) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P000A-P000D, P0011, P0014, P0021, or P0024</u>	Intake/Exhaust Camshaft Position System Slow Response Bank (LFR)
<u>DTC P0010, P0013, P0020, P0023, P2088, P2089, P2090, P2091, P2092, P2093, P2094, or P2095</u>	Intake/Exhaust Camshaft Position Actuator Solenoid Valve Control Circuit Bank
<u>DTC P0011, P0014, P0021, or P0024</u>	Intake/Exhaust Camshaft Position System Performance Bank
<u>DTC P0016, P0017, P0018, or P0019</u>	Crankshaft Position
<u>DTC P0030-P0032, P0036-P0038, P0050-P0054, P0056-P0060, P0135, P0141, P0155, or P0161</u>	HO2S Heater
<u>DTC P0068 or P1101</u>	Throttle Body Air Flow Performance/Intake Air Flow System Performance
<u>DTC P0089, P00C6, P228C, or P228D</u>	Fuel Pressure Regulator
<u>DTC P0090-P0092, P00C8, P00C9, or P00CA</u>	Fuel Pressure Regulator
<u>DTC P0096 or P0111</u>	Intake Air Temperature (IAT) Sensor
<u>DTC P0097, P0098, or P0099</u>	Intake Air Temperature (IAT) Sensor
<u>DTC P00F4-P00F6</u>	Intake Air Humidity Sensor
<u>DTC P0101</u>	Mass Air Flow (MAF) Sensor Performance
<u>DTC P0102 or P0103</u>	Mass Air Flow (MAF) Sensor
<u>DTC P0106</u>	Manifold Absolute Pressure (MAP) Sensor Performance (LFX)

DTC	Description
<u>DTC P0107 or P0108</u>	Manifold Absolute Pressure (MAP) Sensor (LFX)
<u>DTC P0112, P0113, or P0114</u>	Intake Air Temperature (IAT) Sensor
<u>DTC P0116</u>	Engine Coolant Temperature (ECT) Sensor Performance
<u>DTC P0117, P0118, or P0119</u>	Engine Coolant Temperature (ECT) Sensor
<u>DTC P0121-P0123, P0222, P0223, P16A0-P16A2, or P2135</u>	Throttle Position Sensor/Sensor Communication Circuit
<u>DTC P0128</u>	Engine Coolant Temperature (ECT) Below Thermostat Regulating Temperature
<u>DTC P0131, P0132, P0137, P0138, P0151, P0152, P0157, or P0158</u>	HO2S Circuit
<u>DTC P0133, P013A-P013F, P014A, P014B, P0153, P015A-P015D, or P2270-P2273</u>	HO2S
<u>DTC P0171, P0172, P0174, or P0175</u>	Fuel Trim System
<u>DTC P018B-P018D</u>	Fuel Pressure Sensor (Chassis Control Module)
<u>DTC P0191</u>	Fuel Rail Pressure Sensor Performance
<u>DTC P0192 or P0193</u>	Fuel Rail Pressure Sensor
<u>DTC P0201, P0202, P0203, P0204, P0205, P0206, P0261, P0262, P0264, P0265, P0267, P0268, P0270, P0271, P0273, P0274, P0276, or P0277</u>	Cylinder Injector Control (LFX)
<u>DTC P0231, P0232, or P023F</u>	Fuel Pump Control (Chassis Control Module)
<u>DTC P025A</u>	Fuel Pump Control Module Enable Circuit (Chassis Control Module)
<u>DTC P0300-P0306, P1328, P1329, or P132A-P132E</u>	Engine/Cylinder Misfire Detected
<u>DTC P0315</u>	Crankshaft Position System Variation Not Learned
<u>DTC P0324, P0326, P0331, P06B6, or P06B7</u>	Knock Sensor System
<u>DTC P0325, P0327, P0328, P0330, P0332, or P0333</u>	Knock Sensor Circuit
<u>DTC P0335 or P0336</u>	Crankshaft Position Sensor
<u>DTC P0340, P0341, P0345, P0346, P0365, P0366, P0390, or P0391</u>	Intake/Exhaust Camshaft Position Sensor (LFX)
<u>DTC P0351-P0356, P2300, P2301, P2303, P2304, P2306, P2307, P2309, P2310, P2312, P2313, P2315, or P2316</u>	Ignition Coil Control
<u>DTC P0411</u>	Secondary Air Injection System Incorrect Air Flow Detected
<u>DTC P0412, P041F, or P044F</u>	Secondary Air Injection Valve Control
<u>DTC P0418, P2257, or P2258</u>	Secondary Air Injection Pump Relay Control
<u>DTC P0420 or P0430</u>	Catalyst System Low Efficiency Bank
<u>DTC P0442</u>	Evaporative Emission (EVAP) System Small Leak Detected
<u>DTC P0443, P0458, or P0459</u>	Evaporative Emission (EVAP) Purge Solenoid Valve Control
<u>DTC P0446</u>	Evaporative Emission (EVAP) Vent System Performance
<u>DTC P0449, P0498, or P0499</u>	Evaporative Emission (EVAP) Vent Solenoid Valve Control
<u>DTC P0451-P0454</u>	Fuel Tank Pressure Sensor
<u>DTC P0455 or P0497</u>	Evaporative Emission (EVAP) System
<u>DTC P0496</u>	Evaporative Emission (EVAP) System Flow During Non-Purge

DTC	Description
<u>DTC P0506 or P0507</u>	Idle Speed
<u>DTC P050B</u>	Cold Start Ignition Timing Performance
<u>DTC P050D</u>	Cold Start Rough Idle
<u>DTC P05CC-P05CF</u>	Cold Start Intake Camshaft Position System Performance Bank
<u>DTC P057B-P057D</u>	Brake Pedal Position Sensor
<u>DTC P0601-P0604, P0606, P062B, P062F, P0630, P16F3, or P262B</u>	Control Module (ECM)
<u>DTC P0628</u>	Fuel Pump Enable Circuit Low Voltage
<u>DTC P0641 or P06A6</u>	5V Reference (Chassis Control Module)
<u>DTC P0641, P0651, P0697, or P06A3</u>	5V Reference (ECM)
<u>DTC P0650, P263A, or P263B</u>	Malfunction Indicator Lamp (MIL) Control
<u>DTC P0685-P0687, P0689, P0690, or P1682</u>	Engine Controls Ignition/Ignition 1 Switch Circuit 2
<u>DTC P069E</u>	Fuel Pump Control Module Requested MIL Illumination
<u>DTC P0700</u>	Transmission Control Module Requested MIL Illumination
<u>DTC P1011-P1014</u>	Intake/Exhaust Camshaft Position Actuator Park Position Bank
<u>DTC P1248-P124D</u>	Cylinder Injector High Control Circuit
<u>DTC P1255 or P064A</u>	Fuel Pump Control Module (Chassis Control Module)
<u>DTC P135A or P135B</u>	Ignition Coil Supply Voltage Circuit Bank
<u>DTC P1400</u>	Cold Start Emission Reduction Control System
<u>DTC P150C</u>	Transmission Control Module Engine Speed Request Signal Message Counter Incorrect
<u>DTC P1516, P2101, P2119, or P2176</u>	Throttle Actuator Control (TAC) Module Throttle Actuator Position Performance
<u>DTC P163A</u>	Control Module Fuel Pressure Regulator 1 Control System Circuitry Performance
<u>DTC P2096 or P2098</u>	Post Catalyst Fuel Trim System (LFX)
<u>DTC P2097 or P2099</u>	Post Catalyst Fuel Trim System (LFX)
<u>DTC P2122, P2123, P2127, P2128, or P2138</u>	Accelerator Pedal Position (APP) Sensor
<u>DTC P2147, P2148, P2150, P2151, P2153, P2154, P2156, P2157, P216B, P216C, P216E, or P216F</u>	Cylinder Injector High Control
<u>DTC P2199</u>	Intake Air Temperature (IAT) Sensors 1-2 Not Plausible
<u>DTC P219A or P219B</u>	Fuel Trim Cylinder Balance Bank (LFX)
<u>DTC P2227-P2230</u>	Barometric Pressure (BARO) Sensor (LFX)
<u>DTC P2269</u>	Water in Fuel
<u>DTC P2430, P2431, P2435, or P2436</u>	Secondary Air Injection System Pressure Sensor
<u>DTC P2432, P2433, P2437, or P2438</u>	Secondary Air Injection System Pressure Sensor
<u>DTC P2440</u>	Secondary Air Injection System Cut-Off Valve Stuck Open
<u>DTC P2444</u>	Secondary Air Injection System Pump Stuck On
<u>DTC P2544</u>	Transmission Torque Request Circuit Message Counter Incorrect
<u>DTC P25A5-P25A7</u>	Fuel Mode Selector Switch
<u>DTC P2635</u>	Fuel Pump Flow Performance (Chassis Control Module)
<u>DTC P2668, P26E2, or P26E3</u>	Fuel Mode Indicator Control

ENGINE COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

ENGINE COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P0480, P0481, P0691, P0692, P0693, or P0694</u>	Cooling Fan Relays
<u>DTC P1258</u>	Engine Coolant Overtemperature - Protection Mode Active

ENGINE MECHANICAL - 2.5L (LCV) - DIAGNOSTIC TROUBLE CODES

ENGINE MECHANICAL - 2.5L (LCV) - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC P06DA-P06DC</u>	Engine Oil Pressure Control Solenoid Valve Control Circuit
<u>DTC P06DD or P06DE</u>	Engine Oil Pressure Control Solenoid Valve Stuck Off/On

FIXED AND MOVEABLE WINDOWS - DIAGNOSTIC TROUBLE CODES

FIXED AND MOVEABLE WINDOWS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0283</u>	Rear Defogger Circuit
<u>DTC B316B, B317A, B318A, or B319A</u>	Window Switch
<u>DTC B3205</u>	Driver Window Motor

HORN SYSTEM - DIAGNOSTIC TROUBLE CODES

HORN SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B2750</u>	Horn Relay Secondary Circuit

HVAC SYSTEM - AUTOMATIC - DIAGNOSTIC TROUBLE CODES

HVAC SYSTEM - AUTOMATIC - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0163</u>	Passenger Compartment Temperature Sensor Circuit
<u>DTC B0173, B0178, B0509, B0514 or B3933</u>	Duct Air Temperature Sensor Circuits/Air Conditioning Evaporator Temperature Sensor Circuit
<u>DTC B018A, B048C, B048F, or B1395</u>	Windshield Temperature Sensor/Humidity Sensor/Control Module Voltage Reference Output Circuit
<u>DTC B0183</u>	Solar Load Sensor Circuit
<u>DTC B0193</u>	Front Blower Motor Speed Circuit
<u>DTC B0223, B022A, B0233, B023A, B0408, or B0418</u>	Recirculate Position Command 1-2 Circuits/Air Flow Control Circuit/HVAC Actuators Supply Voltage/Main Temperature Control Circuit/Right Temperature Control Circuit
<u>DTC B269A, B269C, or B269D</u>	Heater Coolant Pump Control Circuit
<u>DTC B393B</u>	Air Conditioning Compressor Valve Control Circuit
<u>DTC P0532 or P0533</u>	Air Conditioning (A/C) Refrigerant Pressure Sensor Circuit Low/High Voltage
<u>DTC P0645, P0646, or P0647</u>	Air Conditioning (A/C) Compressor Clutch Relay Control Circuit

HVAC SYSTEM - MANUAL - DIAGNOSTIC TROUBLE CODES

HVAC SYSTEM - MANUAL - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B0193	Front Blower Motor Speed
DTC B0223, B0233, B023A, or B0408	Recirculate Position Command 1/Air Flow Control/HVAC Actuators Supply Voltage/Main Temperature Control
DTC B3933	Air Conditioning Evaporator Temperature Sensor
DTC B393B	Air Conditioning Compressor Valve
DTC P0532 or P0533	Air Conditioning (A/C) Refrigerant Pressure Sensor
DTC P0645, P0646, or P0647	Air Conditioning (A/C) Compressor

HYDRAULIC BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

HYDRAULIC BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC C025E	Brake Booster Vacuum Sensor Circuit
DTC C0267	Low Brake Fluid Indicated
DTC C0273	Brake Fluid Level Switch Circuit
DTC C027B	Brake Booster Electric Vacuum Pump
DTC C0299	Brake Booster Large Vacuum Leak Detected
DTC P050F	Brake Booster Weak Vacuum
DTC P0556, P0557, or P0558	Brake Booster Pressure Sensor

IMMOBILIZER SYSTEM - DIAGNOSTIC TROUBLE CODES

IMMOBILIZER SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B2955	Security Sensor Data Circuit (with BTM)
DTC B2955	Security Sensor Data Circuit (without BTM)
DTC B302A	Mobile Telephone Communications Interface Requested Immobilization
DTC B3031	Security Controller In Learn Mode
DTC B3055	No Transponder Modulation or No Transponder
DTC B305C	Immobilizer Transponder of Wrong Type Programmed
DTC B3060	Unprogrammed Transponder Identification Code Received
DTC B389A	Environment Identification
DTC B3902	Incorrect Immobilizer Identifier Received
DTC B3924-B3928	Incorrect Environmental Identifier
DTC B3935	Transponder Authentication
DTC B3976	Unconfigured Transponder
DTC B3978-B3982	Incorrect Environmental Identifier
DTC B3984	Device 1 Environment Identifier Not Programmable
DTC P0513	Immobilizer Key Incorrect
DTC P0633	Immobilizer Key Not Programmed
DTC P162B	Remote Vehicle Speed Limiting Signal Message Counter Incorrect
DTC P1631	Immobilizer Fuel Enable Signal Not Correct

DTC	Description
<u>DTC P1649</u>	Immobilizer Security Code Not Programmed

INSTRUMENT PANEL SYSTEM DISPLAYS AND GAUGES - DIAGNOSTIC TROUBLE CODES

INSTRUMENT PANEL SYSTEM DISPLAYS AND GAUGES - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B0158</u>	Ambient Air Temperature Sensor Circuit
<u>DTC B0550</u>	Odometer Circuit
<u>DTC B071F</u>	Transmission Range Indicator
<u>DTC B0931</u>	Compass Circuit
<u>DTC B124F</u>	Universal Serial Bus (USB) Programming
<u>DTC B3567</u>	Info Display Select Switch
<u>DTC P0070</u>	Ambient Air Temperature Sensor Circuit
<u>DTC P0071-P0074</u>	Ambient Air Temperature Sensor
<u>DTC P0461-P0464</u>	Fuel Level Sensor
<u>DTC P0520</u>	Engine Oil Pressure Switch Circuit (LFX)
<u>DTC P0520</u>	Engine Oil Pressure Switch Circuit (LUK)
<u>DTC P0521, P0522, or P0523</u>	Engine Oil Pressure Sensor

KEYLESS ENTRY SYSTEM AND REMOTE FUNCTIONS - DIAGNOSTIC TROUBLE CODES

KEYLESS ENTRY SYSTEM AND REMOTE FUNCTIONS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B3101</u>	Keyless Entry Data Link Circuit
<u>DTC B3105</u>	Keyless Entry Transmitters
<u>DTC B3106</u>	Keyless Entry Data Link
<u>DTC B3109-B3113</u>	Keyless Entry Transmitter 1-5 Battery
<u>DTC B310D-B310F</u>	Keyless Entry Transmitter 6-8 Battery
<u>DTC B3119</u>	Keyless Entry Antenna 1
<u>DTC B3120</u>	Keyless Entry Antenna 2
<u>DTC B3121</u>	Keyless Entry Antenna 3
<u>DTC B3122</u>	Keyless Entry Antenna 4
<u>DTC B3123</u>	Keyless Entry Antenna 5
<u>DTC B3124</u>	Keyless Entry Antenna 6

LIGHTING SYSTEM - DIAGNOSTIC TROUBLE CODES

LIGHTING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1395</u>	Control Module Voltage Reference Output 1 Circuit Low/High Voltage
<u>DTC B1480</u>	Battery Rundown Protection Circuit Short to Ground
<u>DTC B2545</u>	Backup Lamps Circuit Short to Ground
<u>DTC B255F</u>	Interior Door Handle Backlight Circuit
<u>DTC B2570</u>	Trunk Lamp Control Circuit
<u>DTC B2575 or B2699</u>	Headlamp Control Circuits
<u>DTC B257A</u>	Headlamp Switch Input Signals Correlation Malfunction

DTC	Description
<u>DTC B2580</u>	Headlamp High Beam Control Circuit
<u>DTC B2585 or B3867</u>	Left/Right Park Lamps Control Circuit
<u>DTC B258A</u>	Low Beam Control Circuit
<u>DTC B2600 or B2605</u>	Left/Right Daytime Running Lamps Control Circuit
<u>DTC B2610</u>	Passenger Compartment Dimming 1 Circuit
<u>DTC B2615</u>	Passenger Compartment Dimming 2 Circuit Short to Ground
<u>DTC B2625</u>	Display Dimming Pulse Width Modulation Output Circuit
<u>DTC B263A</u>	Exterior Illumination Lamp Circuit
<u>DTC B2645</u>	Ambient Light Sensor Circuit Low/High Voltage
<u>DTC B3596</u>	Hazard Lamps Request Circuit Malfunction
<u>DTC B3600</u>	Passenger Compartment Dimming Request Signal Circuit Low/High Voltage
<u>DTC B3650</u>	High Beam Request Signal Circuit Performance - Signal Invalid
<u>DTC B3806</u>	High Beam and Headlamp Flash Select Circuit Malfunction
<u>DTC B3883</u>	License Plate Lamp Circuit
<u>DTC B3884</u>	Center High Mounted Brake Lamp Circuit Short to Ground
<u>DTC B3948 or B3949</u>	Left/Right Front Turn Signal Circuit
<u>DTC B3950 or B3951</u>	Left/Right Rear Turn Signal Circuit
<u>DTC C0277 or C0890</u>	Brake Pedal Position Sensor Circuit/Control Module Voltage Reference Output 3 Circuit
<u>DTC C0297</u>	Brake Applied Output Circuit Short

MIRROR SYSTEM - DIAGNOSTIC TROUBLE CODES

MIRROR SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B154A or B154B</u>	Driver/Passenger Mirror Internal Malfunction

OBJECT DETECTION SYSTEM AND PEDESTRIAN PROTECTION SYSTEM - DIAGNOSTIC TROUBLE CODES

OBJECT DETECTION SYSTEM AND PEDESTRIAN PROTECTION SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B094B or B094C</u>	Left/Right Side Object Detection Control Module
<u>DTC B094D or B094E</u>	Left/Right Side Object Detection Indicator Circuit
<u>DTC B0958, B0959, B0960, or B0961</u>	Parking Assist Rear Sensor Circuits
<u>DTC B0967 or B0968</u>	Parking Assist On/Off Switch Circuit/Parking Assist On/Off Switch Indicator Circuit
<u>DTC B0987</u>	Vehicle Direction Camera Indicator Circuit
<u>DTC B1011</u>	System Disabled Information Stored Malfunction
<u>DTC B1015</u>	Vehicle Identification Number Information
<u>DTC B101D</u>	Electronic Control Unit Hardware (DTC set in K109 Frontview Camera Module)
<u>DTC B127B</u>	Rearview Camera Input Signal Circuit Missing Reference

DTC	Description
<u>DTC B1405</u>	Control Module Voltage Reference Output 2 Circuit
<u>DTC B356A</u>	Vehicle Direction Warning Switch Circuit Short to Ground
<u>DTC P15F6</u>	Front Object Detection Control Module Torque Request Signal Message Counter Incorrect

PARKING BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

PARKING BRAKE SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C028A, C028B, or C028F</u>	Park Brake Motor Circuits/Park Brake Solenoid Actuator Circuit
<u>DTC C027D or C028D</u>	Park Brake Slip Detected/Park Brake Pad
<u>DTC C028E</u>	Park Brake Solenoid Actuator Current Sensor Circuit
<u>DTC C0293</u>	Park Brake Switch Circuit
<u>DTC C0298</u>	Park Brake Unlatch Switch Circuit
<u>DTC C0558</u>	Calibration Data
<u>DTC C0561</u>	System Disabled Information Stored Invalid Data
<u>DTC C056D</u>	Electronic Control Unit Hardware
<u>DTC C056E</u>	Electronic Control Unit Software
<u>DTC C0574</u>	Printed Circuit Board Temperature Sensor

POWER DOOR LOCK SYSTEM AND RELEASE SYSTEMS - DIAGNOSTIC TROUBLE CODES

POWER DOOR LOCK SYSTEM AND RELEASE SYSTEMS - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1474 or B3849</u>	Passenger/Driver Exterior Door Handle Switch Circuit
<u>DTC B1534 or B1535</u>	Left/Right Rear Door Handle Switch Circuit
<u>DTC B2494</u>	Liftgate Handle Switch Circuit
<u>DTC B2730</u>	Interior Trunk Lid Unlatch Switch Circuit
<u>DTC B297B or B297C</u>	Driver Door Open Switch Circuit
<u>DTC B3125, B3130, or B3135</u>	Driver Door Only Unlock Circuit/All Doors Unlock Circuit/All Doors Lock Circuit
<u>DTC B3140, B3145, B3150, or B3155</u>	Door Unlock/Lock Switch Circuits
<u>DTC B3265</u>	Trunk Lid Unlatch Output Circuit
<u>DTC B3618</u>	Exterior Liftgate Window Unlatch Switch Circuit
<u>DTC B3930</u>	Child Security Lock Motors Circuit

POWER SEAT SYSTEM - DIAGNOSTIC TROUBLE CODES

POWER SEAT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B1405, B1825, B2355, B2365, or B2375</u>	Control Module Voltage/Position Sensor
<u>DTC B1735, B1740, B1745, B1750, B1755, B1760, B1815, B1820, B1830, B1835, B1840, or B1845</u>	Seat Switch Circuits
<u>DTC B2755 or B2765</u>	Memory Switch Circuits

DTC	Description
DTC B3920	Seat Motors Group 1 Common Circuit

POWER STEERING SYSTEM - DIAGNOSTIC TROUBLE CODES

POWER SEAT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC C005B	Power Steering Softstops Learn (NJ1)
DTC C0176	Control Module Temperature Sensor High Temperature (NJ1)
DTC C0176	Control Module Temperature Sensor High Temperature (NJ2)
DTC C044A	Steering System Engine Speed Signal Circuit Invalid Data (NJ1)
DTC C0456	Steering Position Sensor Calibration not Learned (NJ1)
DTC C0460	Steering Wheel Angle Sensor
DTC C0475	Electric Steering Motor (NJ1)
DTC C0475	Electric Steering Motor Circuit Malfunction (NJ2)
DTC C047A	Electric Steering Motor Position Sensor Circuit Malfunction (NJ1)
DTC C0544	Steering Wheel Angle Sensor Signal Not Plausible (NJ1)
DTC C0544	Steering Wheel Angle Sensor Signal Not Plausible (NJ2)
DTC C0545	Steering Wheel Torque Sensor Malfunction (NJ1)
DTC C0545	Steering Wheel Torque Sensor (NJ2)
DTC C055C	Steering Gear Performance (NJ1)
DTC C055C	Steering Gear Performance Malfunction (NJ2)
DTC C0565	Vehicle Identification Number Not Plausible (NJ1)
DTC C0569	System Configuration Incorrect Component Installed (NJ1)
DTC C0569	Internal Check Sum Error/Calibration Not Programmed/Configuration Not Programmed (NJ2)
DTC C056D	Electronic Control Unit Hardware (Power Steering Control Module)
DTC C056E	Electronic Control Unit Software
DTC C0710	Steering Position Signal Invalid Data (NJ1, NJ2)

SEAT BELT SYSTEM - DIAGNOSTIC TROUBLE CODES

SEAT BELT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B0072 or B0073	Driver/Passenger Seat Belt Switch Circuit
DTC B059A	Passenger Seat Belt Indicator Circuit

SEAT HEATING SYSTEM AND SEAT COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

SEAT HEATING SYSTEM AND SEAT COOLING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B191A or B191B	Front/Right Heated Seat Module

SECONDARY AND CONFIGURABLE CUSTOMER CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

SECONDARY AND CONFIGURABLE CUSTOMER CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B3622	Steering Wheel Controls Signal Circuit

SHIFT LOCK CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

SHIFT LOCK CONTROL SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B270A	Park Lock Solenoid Control

STEERING WHEEL AND STEERING COLUMN - DIAGNOSTIC TROUBLE CODES

STEERING WHEEL AND STEERING COLUMN - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B285A	Steering Column Position

SUNROOF SYSTEM - DIAGNOSTIC TROUBLE CODES

SUNROOF SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B3664	Sunroof Position Select Switch High Signal Circuit Short to Ground
DTC B3697	Sunroof Actuator
DTC B369B	Sunroof Sunshade Position Select Switch
DTC B369D	Sunroof Sunshade Actuator

SUPPLEMENTAL INFLATABLE RESTRAINT SYSTEM - DIAGNOSTIC TROUBLE CODES

SUPPLEMENTAL INFLATABLE RESTRAINT SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
DTC B0012 or B0013	Driver Steering Wheel Air Bag Deployment Loops
DTC B0014, B0021, B0031, or B0038	Seat Side Air Bag Deployment Loops
DTC B0015, B001A, B001B, or B0022	Seat Belt Retractor Pretensioner Deployment Loops/Seat Belt Anchor Pretensioner Deployment Loops
DTC B0016, B0018, B0023, or B0025	Left/Right Roof Rail Air Bag Deployment Loops
DTC B0017 or B0024	Driver/Passenger Knee Air Bag Deployment Loops
DTC B0019 or B0020	Passenger Instrument Panel Air Bag Deployment Loop Stage 1-2
DTC B0052	Deployment Commanded
DTC B0074	Passenger Presence Sensor
DTC B0081	Passenger Presence Module (Inflatable Restraint Sensing and Diagnostic Module)
DTC B0081	Passenger Presence Module (Passenger Presence Module)
DTC B0083 or B0084	Left/Right Front Impact Sensor
DTC B0085 or B0088	Left Front/Right Rear Side Impact Sensors

DTC	Description
<u>DTC B0086 or B0087</u>	Right Front/Left Rear Side Impact Sensors
<u>DTC B067F or B0680</u>	Passenger Air Bag On/Off Indicator Circuit
<u>DTC B1001</u>	Option Configuration (Inflatable Restraint Sensing and Diagnostic Module)
<u>DTC B1001</u>	Option Configuration Error (Passenger Presence System)
<u>DTC B1019</u>	System Configuration Error

TIRE PRESSURE MONITORING SYSTEM - DIAGNOSTIC TROUBLE CODES

TIRE PRESSURE MONITORING SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC C0569</u>	System Configuration Malfunction
<u>DTC C0750, C0755, C0760, or C0765</u>	Tire Pressure Sensors
<u>DTC C0775</u>	Tire Pressure Monitoring System Sensors Malfunction

WIPER SYSTEM AND WASHER SYSTEM - DIAGNOSTIC TROUBLE CODES

WIPER SYSTEM AND WASHER SYSTEM - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B370A</u>	Rain Sensor
<u>DTC B3715 or B3875</u>	Windshield Wiper Relay Circuits
<u>DTC B3873</u>	Windshield Washer

WIRING SYSTEMS AND POWER MANAGEMENT - DIAGNOSTIC TROUBLE CODES

WIRING SYSTEMS AND POWER MANAGEMENT - DIAGNOSTIC TROUBLE CODES

DTC	Description
<u>DTC B097B</u>	Power Mode Start Switch Circuit
<u>DTC B097C</u>	Power Mode Run/Start Indicator Circuit
<u>DTC B1370</u>	Control Module Ignition On and Start Circuit (Instrument Cluster)
<u>DTC B1370, B1380, or B1441</u>	Body Control Module Ignition ON and Start Circuit/Accessory Circuit/Off, Run, and Crank Circuit
<u>DTC B1445</u>	Body Control Module Voltage Output Circuit
<u>DTC B144A</u>	RUN Power Relay Circuit
<u>DTC B144B</u>	Run/Crank Power Relay Circuit
<u>DTC B1451</u>	Accessory Power Circuit
<u>DTC B147E or B147F</u>	Battery Saver Relay Set/Reset Secondary Circuits
<u>DTC P2534 or P2535</u>	Ignition On/Start Switch Circuit Low/High Voltage
<u>DTC P2537</u>	Ignition Accessory Switch Circuit Low Voltage