

ABBREVIATIONS USED IN THIS MANUAL

IN050-08

A/C	Air Conditioner
ACSD	Automatic Cold Start Device
A/T	Automatic Transmission
BTDC	Before Top Dead Center
EX	Exhaust
FIPG	Formed in Place Gasket
HAC	High Altitude Compensator
H—Fuse	High Current Fuse
IFS	Independent Front Suspension
IN	Intake
M—Fuse	Medium Current Fuse
MP	Multipurpose
M/T	Manual Transmission
O/S	Oversized
PCV	Positive Crankcase Ventilation
PS	Power Steering
SSM	Special Service Materials
SST	Special Service Tools
STD	Standard
TDC	Top Dead Center
TCV	Timing Control Valve
U/S	Undersize
VSV	Vacuum Switching Valve
w/	With
w/o	Without