




INJECTION PUMP COMPONENTS

FU05P-02

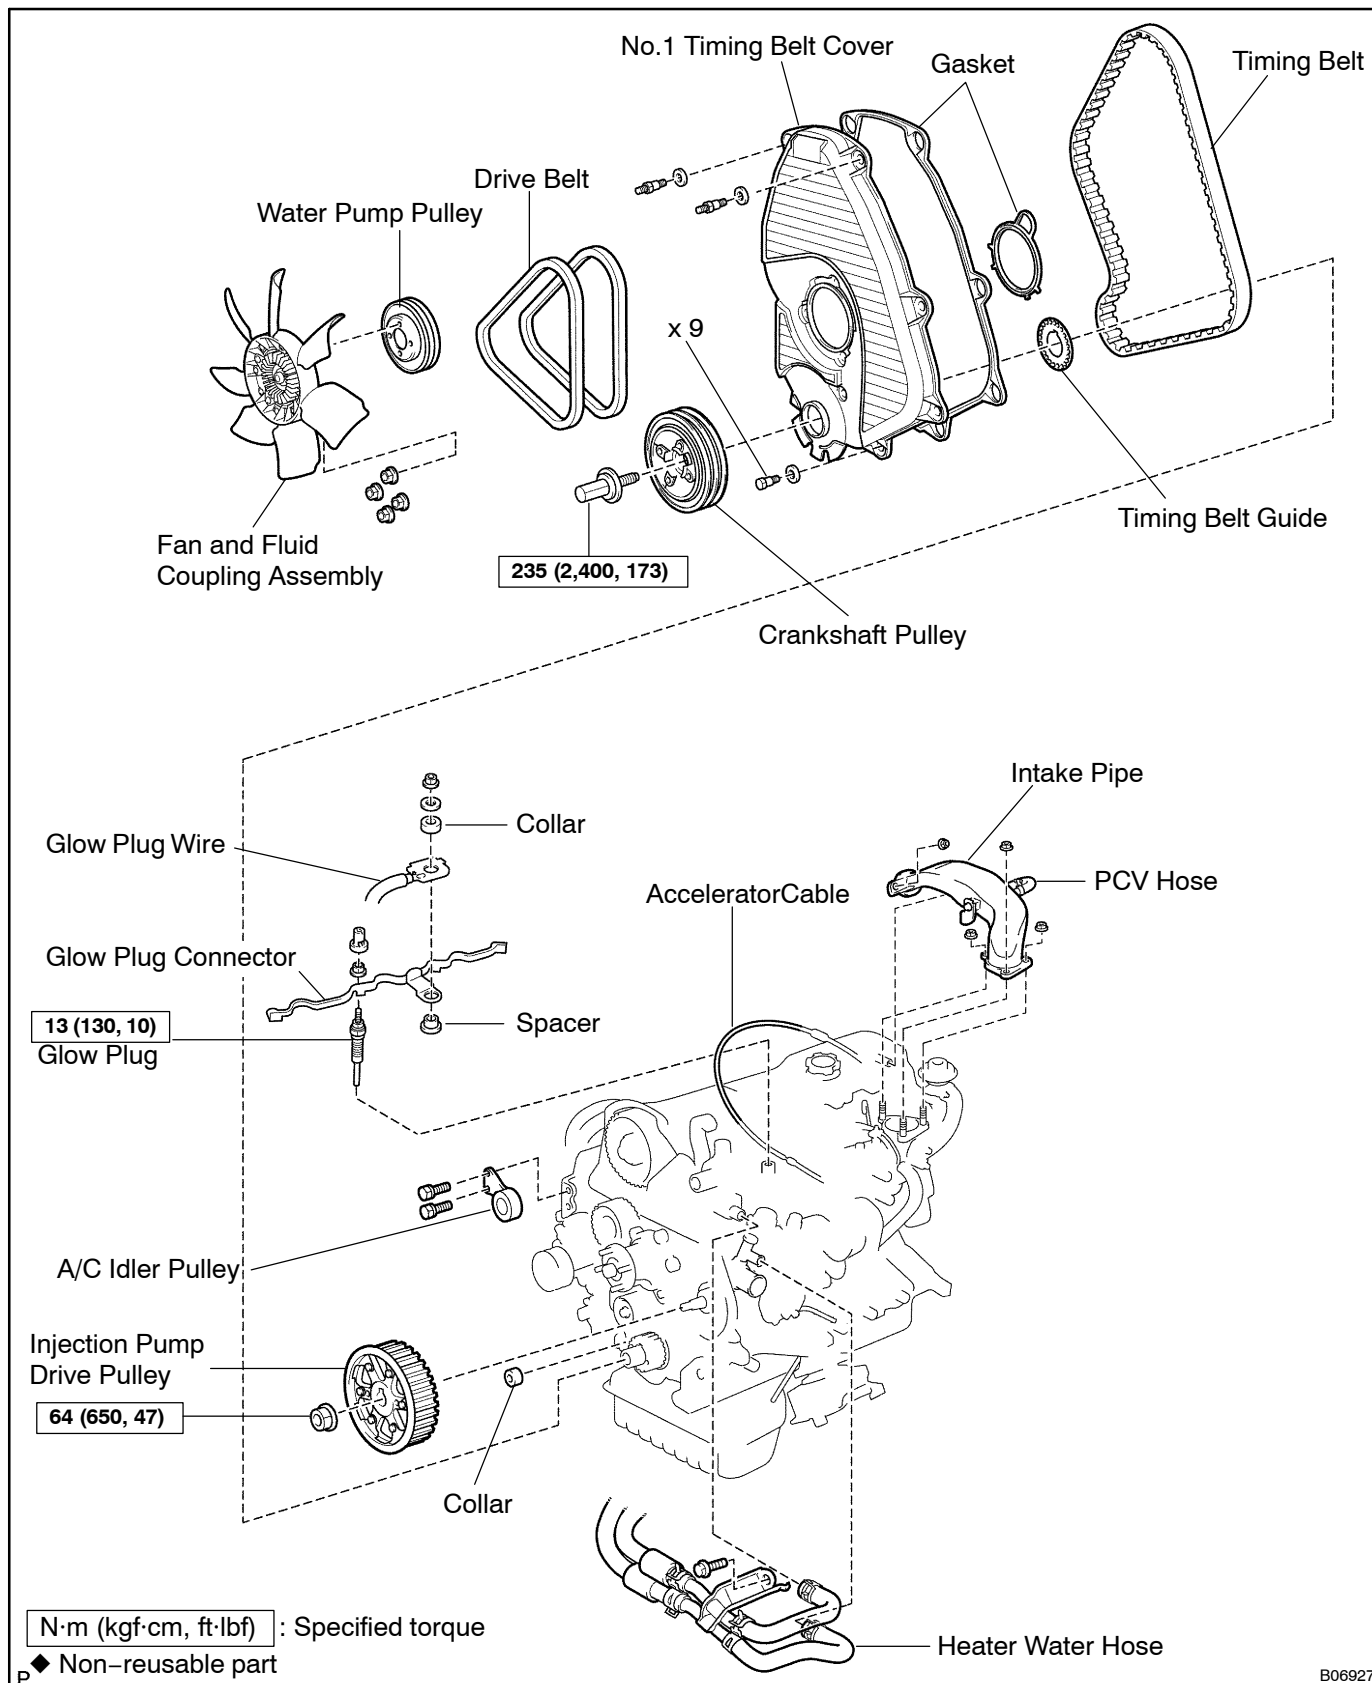

B06927


Injection Pump (with Fuel Pipe)

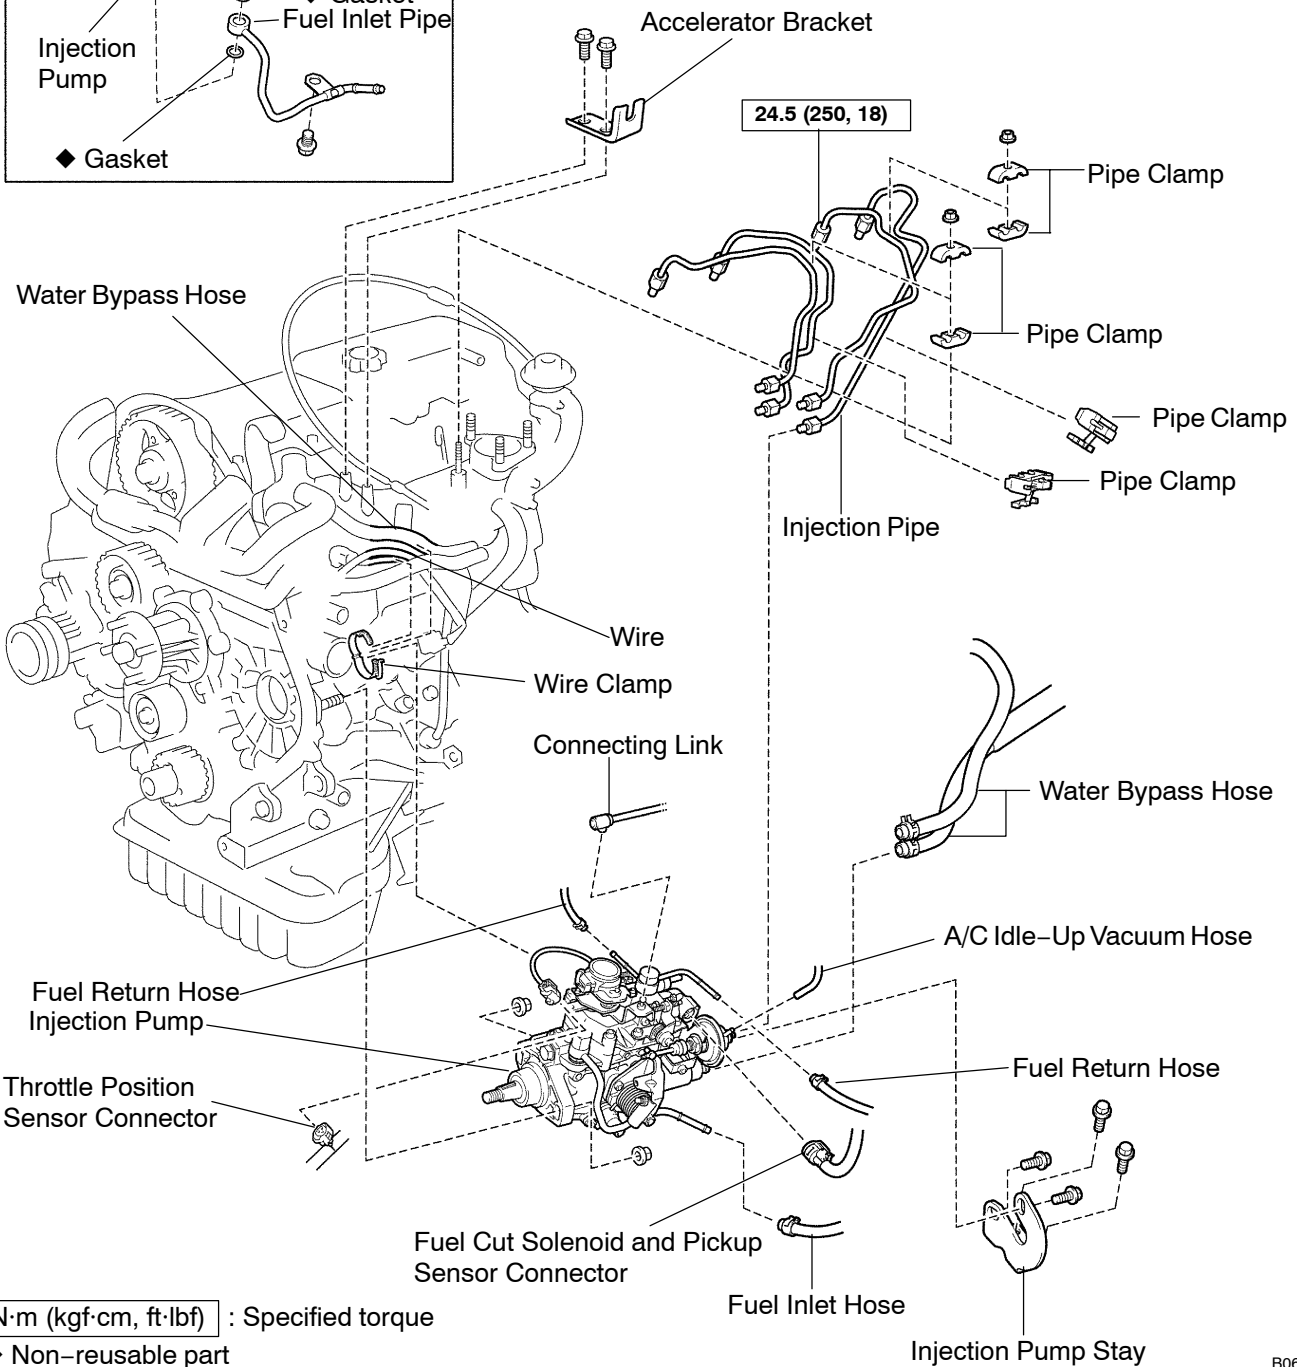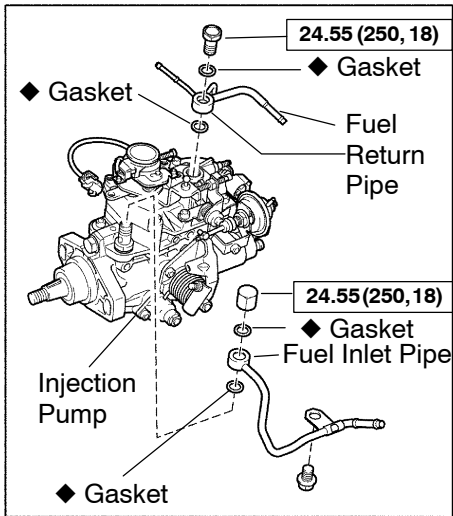

N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non-reusable part

B06928

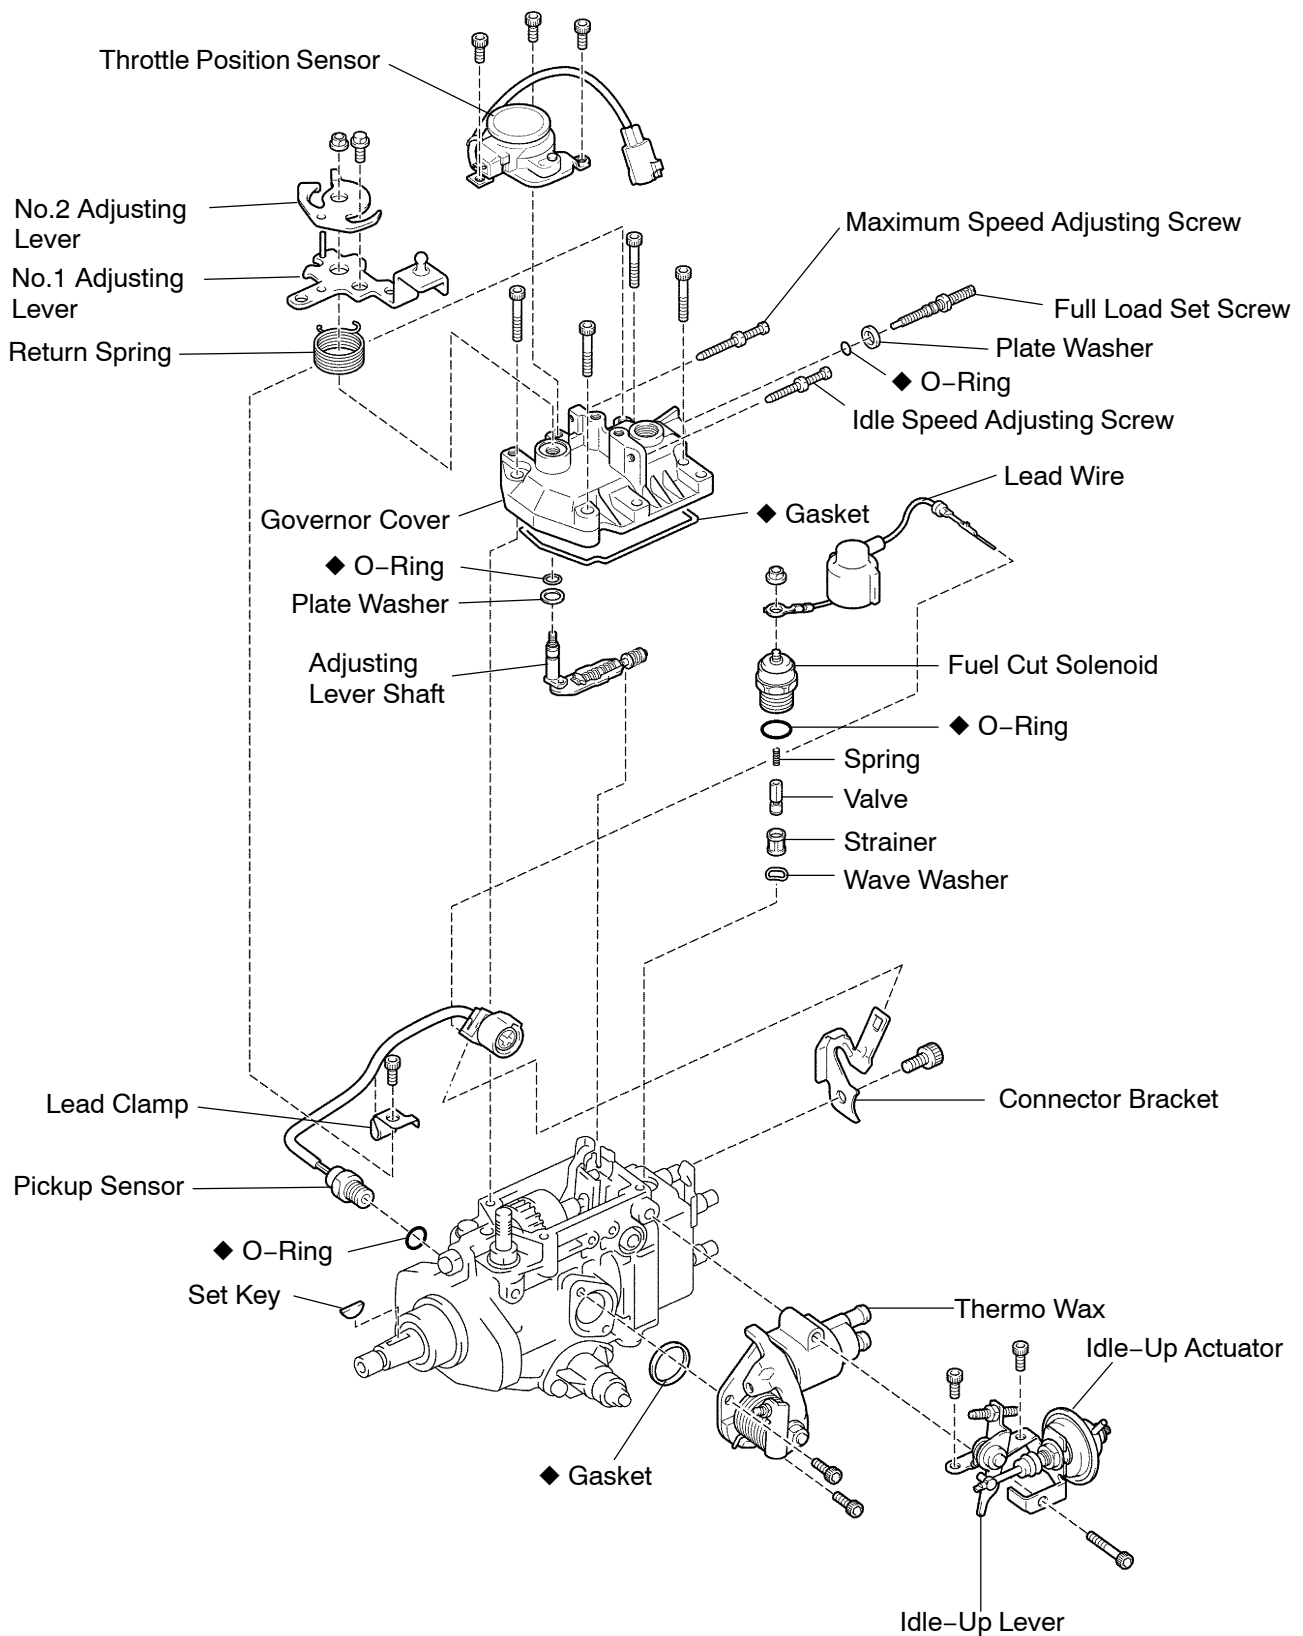

◆ Non-reusable part

 B05448



2L, 3L, 5L ENGINE SUP (RM671E)