

REPLACEMENT

1. **DISCONNECT THROTTLE FULL SWITCH CONNECTOR**
2. **DISCONNECT THROTTLE CONTROL MOTOR CONNECTOR**
3. **DISCONNECT WIRE CLAMP BRACKET FROM THROTTLE BODY**

Remove the bolt, and disconnect the wire clamp bracket.

4. **REMOVE INTAKE AIR PRESSURE SENSOR**

- (a) Disconnect the intake air pressure sensor connector.
- (b) Remove the 2 bolts and intake air pressure sensor.

5. **REMOVE INTAKE AIR CONNECTOR AND THROTTLE BODY**

- (a) Disconnect the wire clamp from the wire clamp bracket on the intake air connector.
- (b) Remove the bolt, 3 nuts, wire clamp bracket, intake air connector and gasket.
- (c) Remove the throttle body and gasket.

6. **INSTALL THROTTLE BODY AND INTAKE AIR CONNECTOR**

- (a) Install a new gasket and the throttle body.
- (b) Install a new gasket, intake air connector and wire clamp bracket with the bolt and 3 nuts.

Torque: 12 N·m (120 kgf·cm, 18 ft·lbf)

- (c) Install the wire clamp to the wire clamp bracket on the intake air connector.

7. **REINSTALL INTAKE AIR PRESSURE SENSOR**

- (a) Install the intake air pressure sensor with the 2 bolts.
- (b) Connect the intake air pressure sensor connector.

8. **REINSTALL WIRE CLAMP BRACKET TO THROTTLE BODY**

Install the wire clamp bracket with the bolt.

9. **RECONNECT THROTTLE FULL SWITCH CONNECTOR**

10. **RECONNECT THROTTLE CONTROL MOTOR CONNECTOR**