



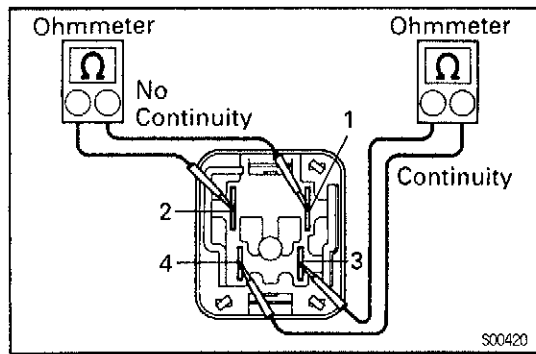

2. INSPECT STARTER RELAY

A. Inspect relay continuity

- Using an ohmmeter, check that there is no continuity between terminals 1 and 2.
If there is continuity, replace the relay.
- Check that there is continuity between terminals 3 and 4.
If there is no continuity, replace the relay.

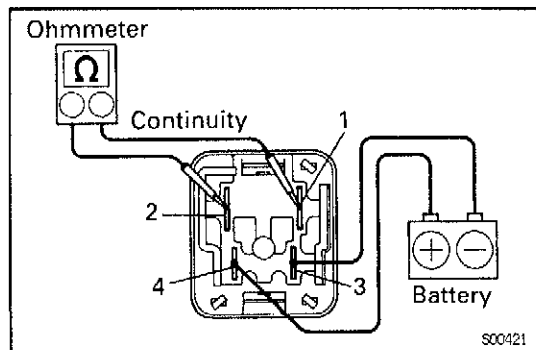

B. Inspect relay operation

- Apply battery voltage across terminals 3 and 4.
- Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.

3. REINSTALL STARTER RELAY


STARTER RELAY (LN, LY)

ST007-01

STARTER RELAY INSPECTION

1. REMOVE STARTER RELAY


LOCATION: See relay locations in Electrical Wiring Diagram.

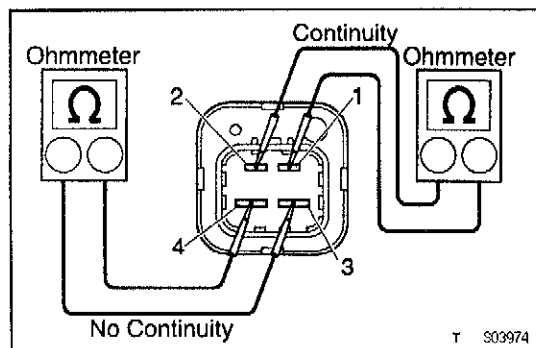

2. INSPECT STARTER RELAY

A. Inspect relay continuity

- Using an ohmmeter, check that there is no continuity between terminals 1 and 2.
If there is continuity, replace the relay.
- Check that there is continuity between terminals 3 and 4.
If there is no continuity, replace the relay.

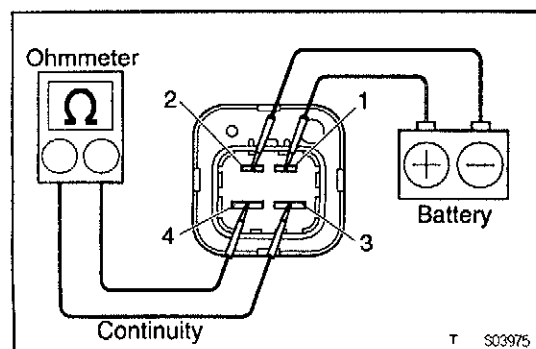

B. Inspect relay operation

- Apply battery voltage across terminals 3 and 4.
- Using an ohmmeter, check that there is continuity between terminals 1 and 2.
If there is no continuity, replace the relay.

3. REINSTALL STARTER RELAY