

TROUBLESHOOTING

Diesel Electrical System Diagnosis (Engine does not start cold)


STOFN-01

HINT:

- Battery voltage at 12 V — Ignition switch OFF.
- Engine cranks normally.
- Fusible link okay.
- Check the voltage marked with an asterisk (*) just as the ignition switch is placed at ON because the voltage will change.


PRE-HEATING SYSTEM (Super Glow Type/with Resistor)

ST

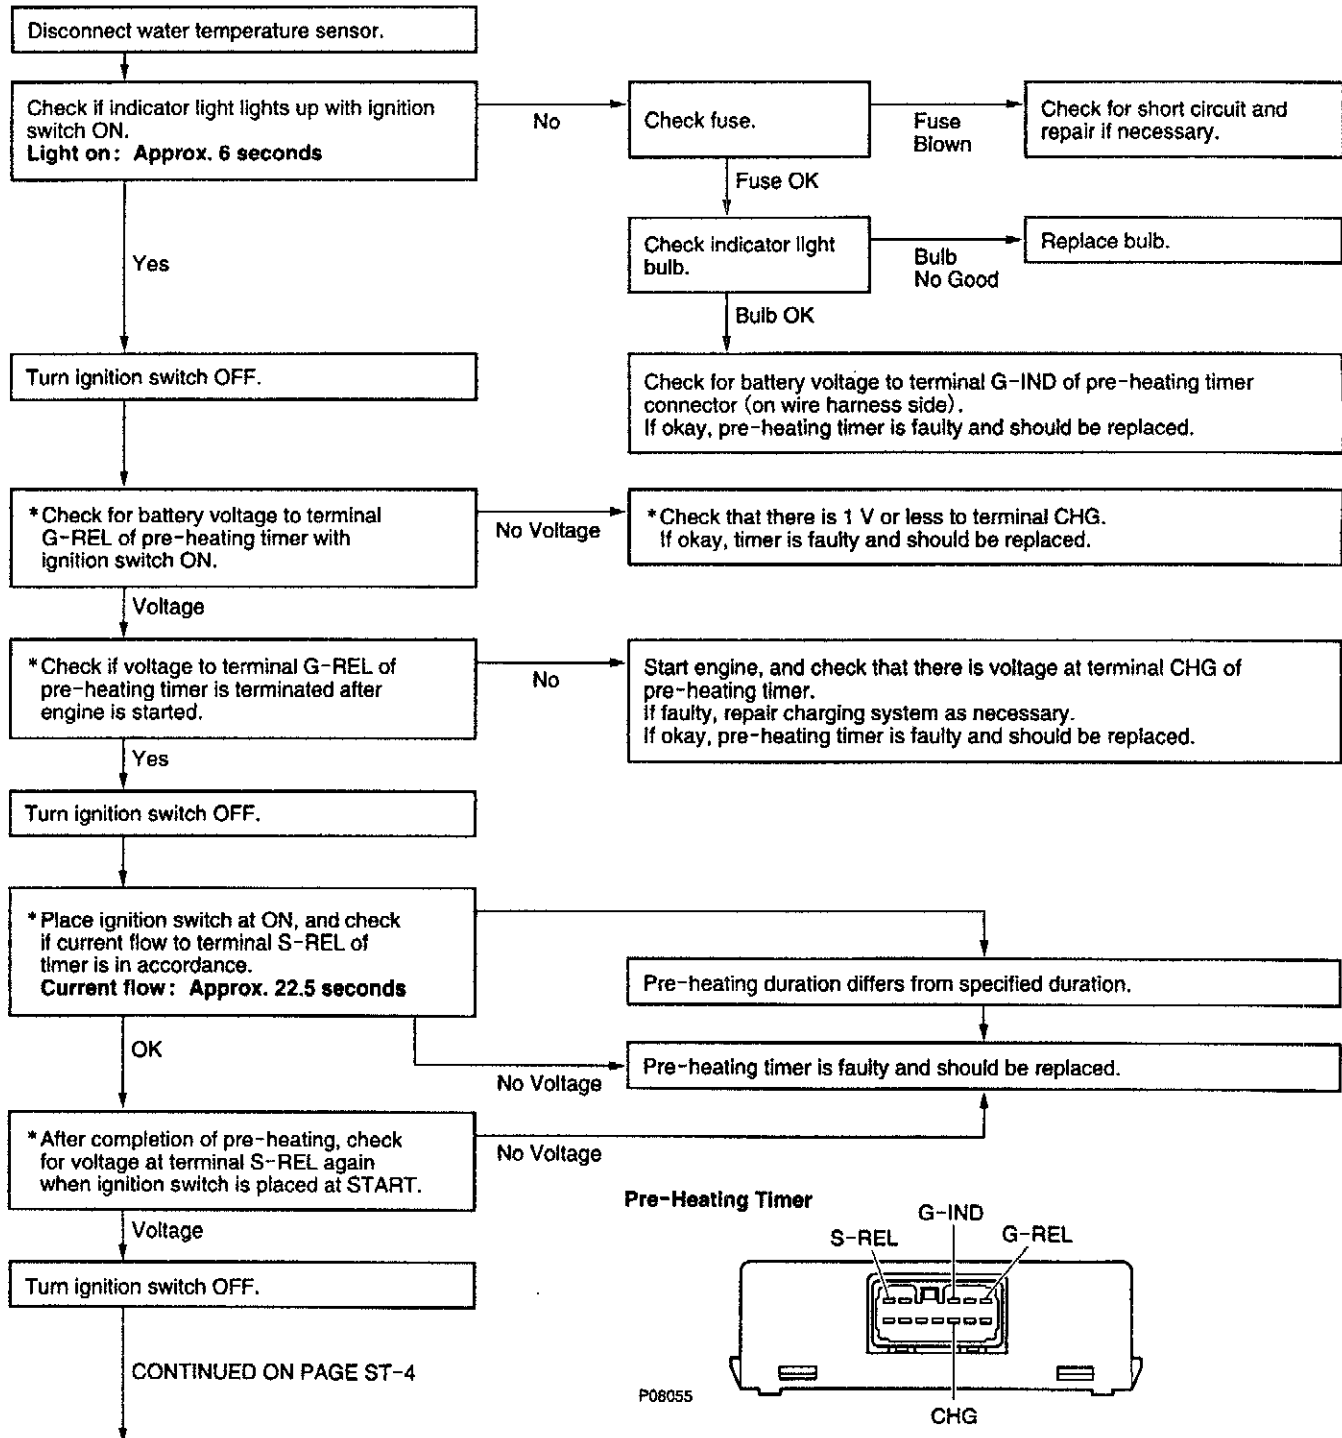


CONTINUED FROM PAGE ST-3

ST

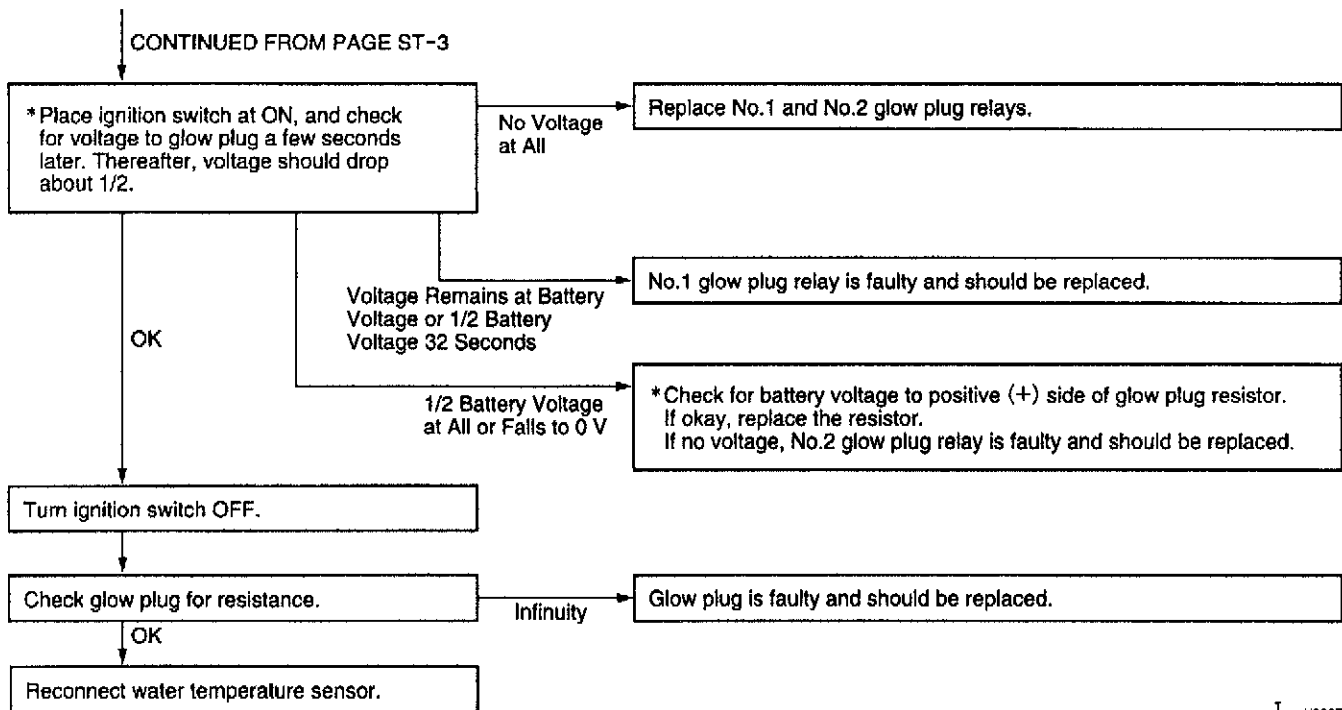


T V08078

PRE-HEATING SYSTEM (Super Glow Type/without Resistor)

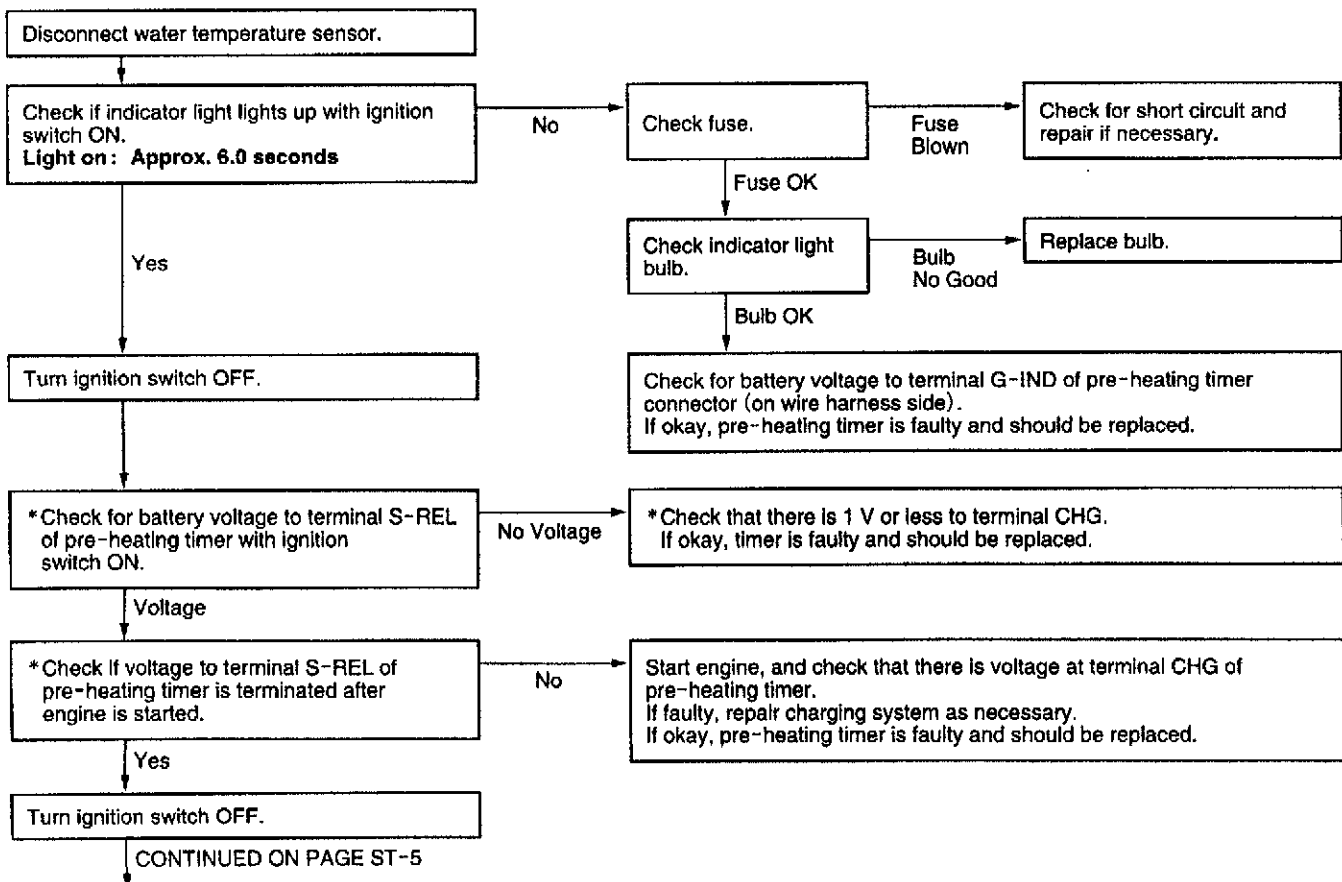


T V08079

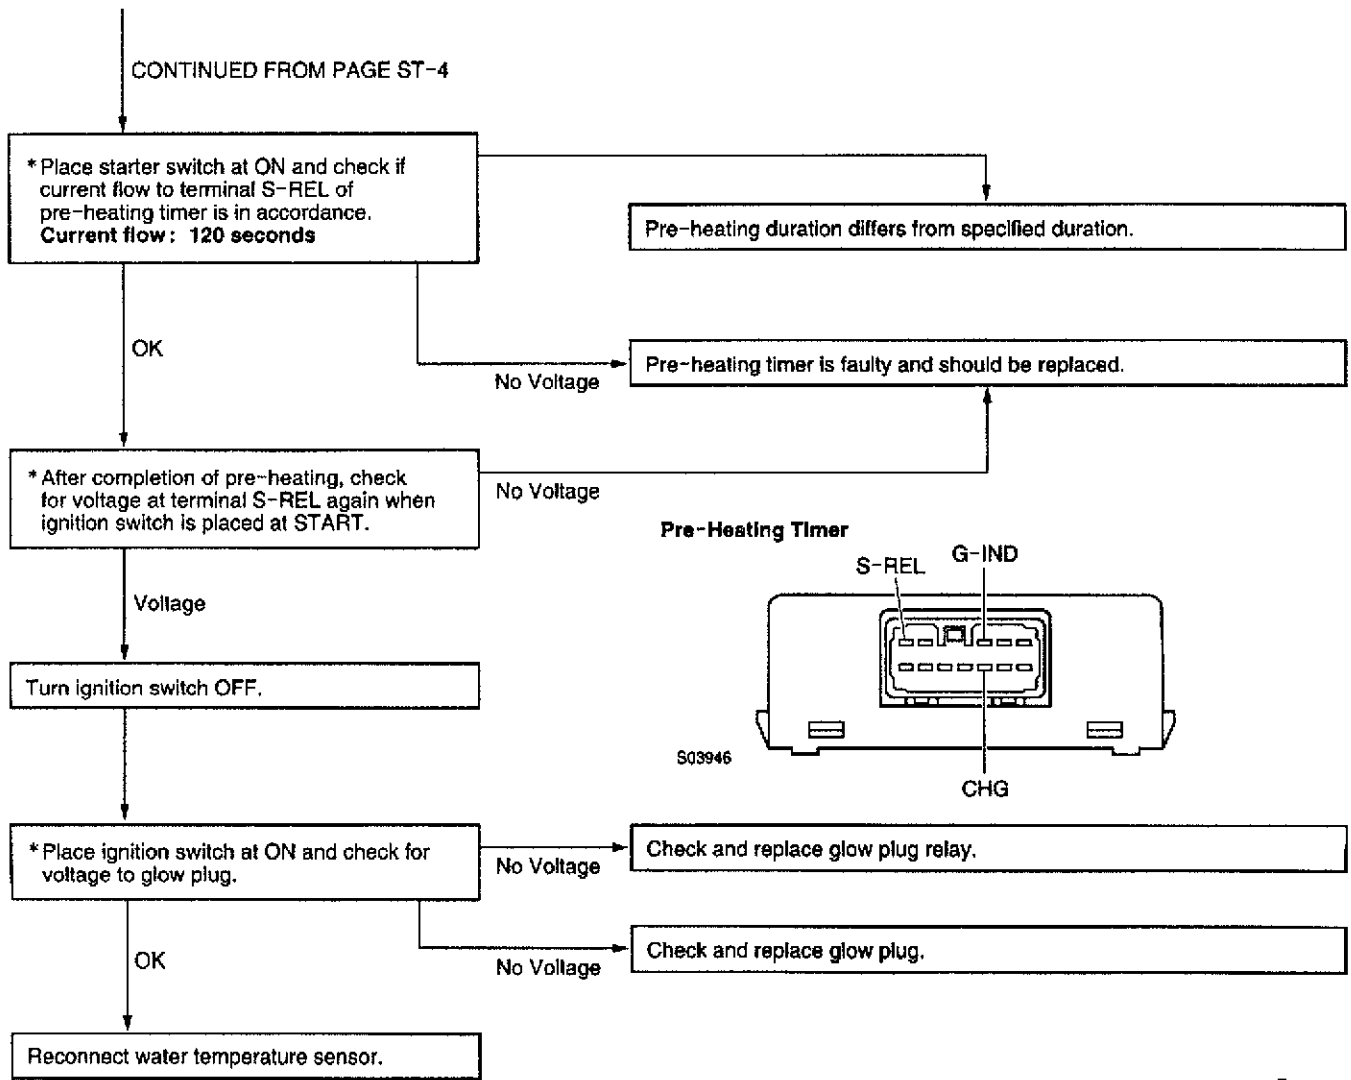

ST

T V08080

FUEL CUT SOLENOID VALVE

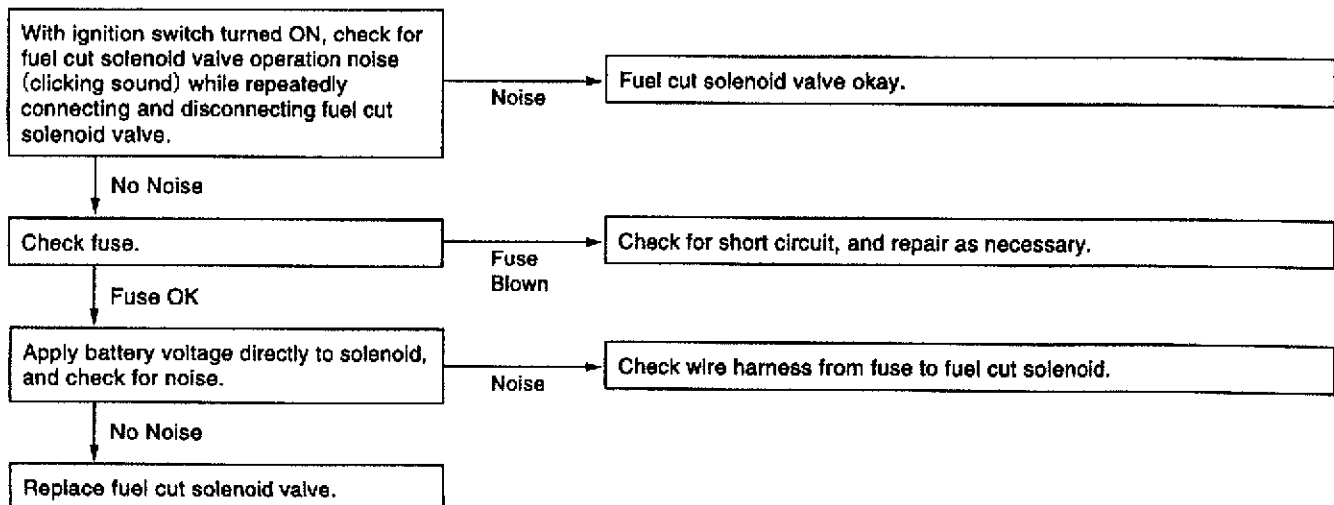

T V07859