


DTC	42	Vehicle Speed Sensor Signal Circuit Malfunction
-----	----	---

CIRCUIT DESCRIPTION

This sensor is mounted in the combination meter. It contains a magnet which is rotated by the speedometer cable.

Turning the reed switch ON and OFF 4 times for every revolution of the speedometer.

It is then transmitted to the ECU. The ECU determines the vehicle speed based on the frequency of these pulse signals.

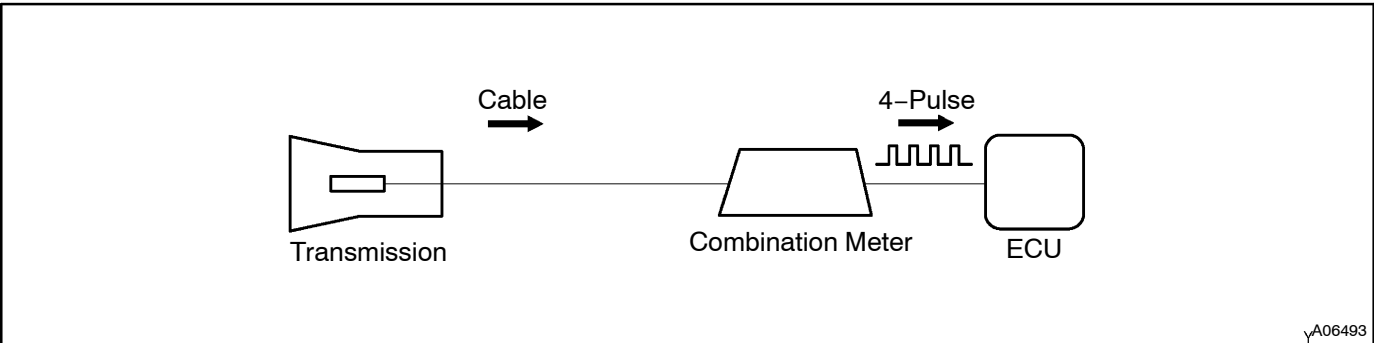


DTC No.	DTC Detecting Condition	Trouble Area
42	All conditions below are detected continuously for 8 sec. or more: (a) Vehicle speed signal: 0 km/h (0 mph) (b) Engine speed: 2,000 – 3,200 rpm (c) Engine coolant temp.: 80°C (176°F) or more (d) Load driving	• Open or short in vehicle speed sensor circuit • Vehicle speed sensor • Combination meter • Emission ECU

HINT:

In test mode, DTC 42 is output when the vehicle speed is 5 km/h (3 mph) or below.

WIRING DIAGRAM

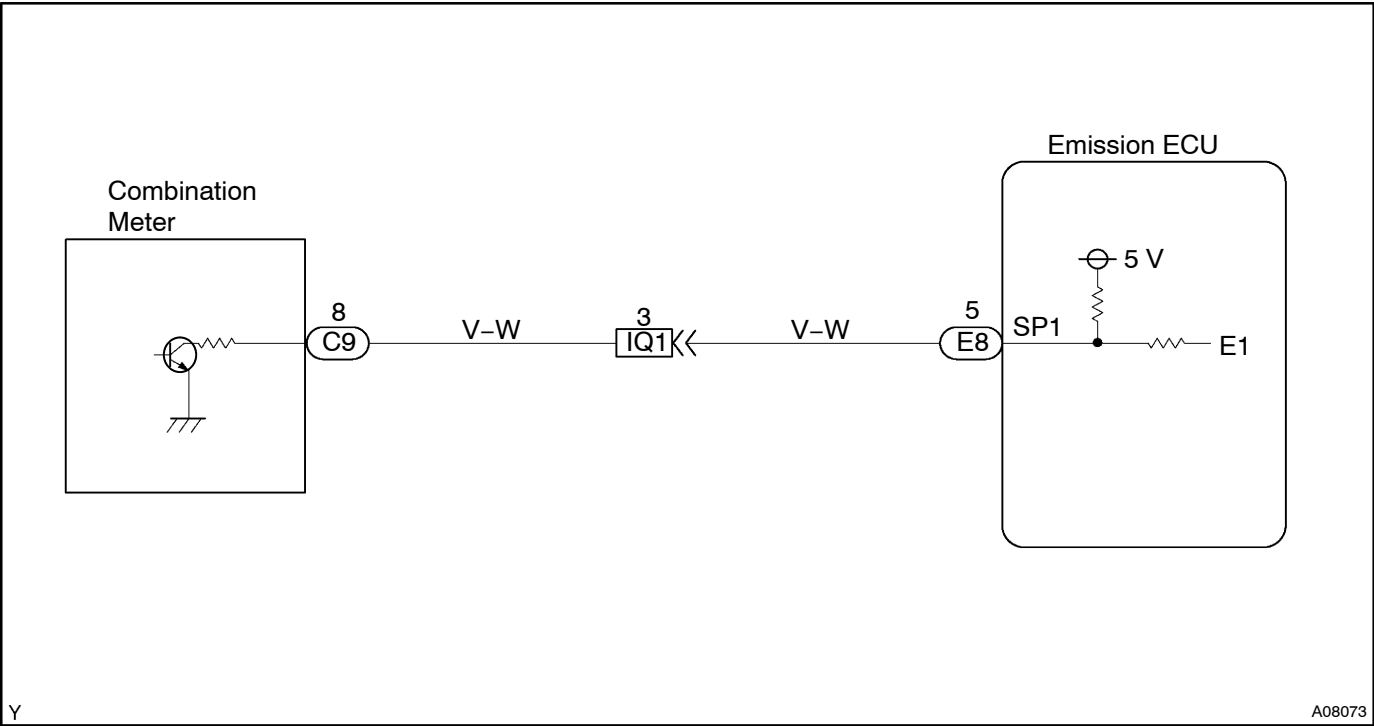

INSPECTION PROCEDURE

1 Check operation of speedometer.

CHECK:

Drive the vehicle and check if the operation of the speedometer in the combination meter is normal.

HINT:


The vehicle speed sensor is operating normally if the speedometer display is normal.

NG

Check speedometer.

OK

2 Check voltage between terminal SP1 of emission ECU and body ground.

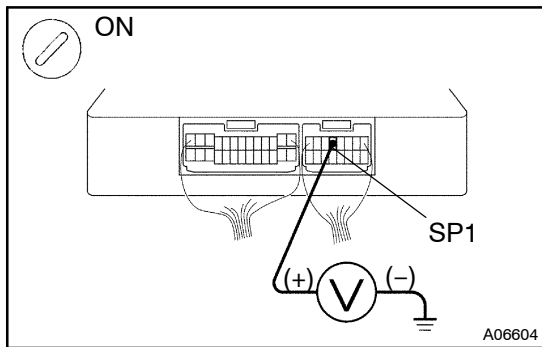**PREPARATION:**


- (a) Disconnect the emission ECU from the body panel (See page EC-3).
- (b) Shift the shift lever to neutral.
- (c) Jack up one of the rear wheels.
- (d) Turn the ignition switch ON.

CHECK:

Measure the voltage between terminal SP1 of the emission ECU and body ground when the wheel is turned slowly.

OK:

Voltage is generated intermittently.

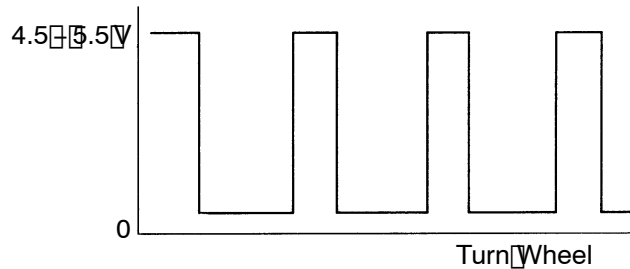

AT7809

NG

Check and repair harness and connector between combination meter and emission ECU.

OK

Check and replace emission ECU.