


# ENGINE

## HOW TO PROCEED WITH TROUBLESHOOTING

DI027-05

When using hand-held tester, troubleshoot in accordance with the procedure on the following pages.

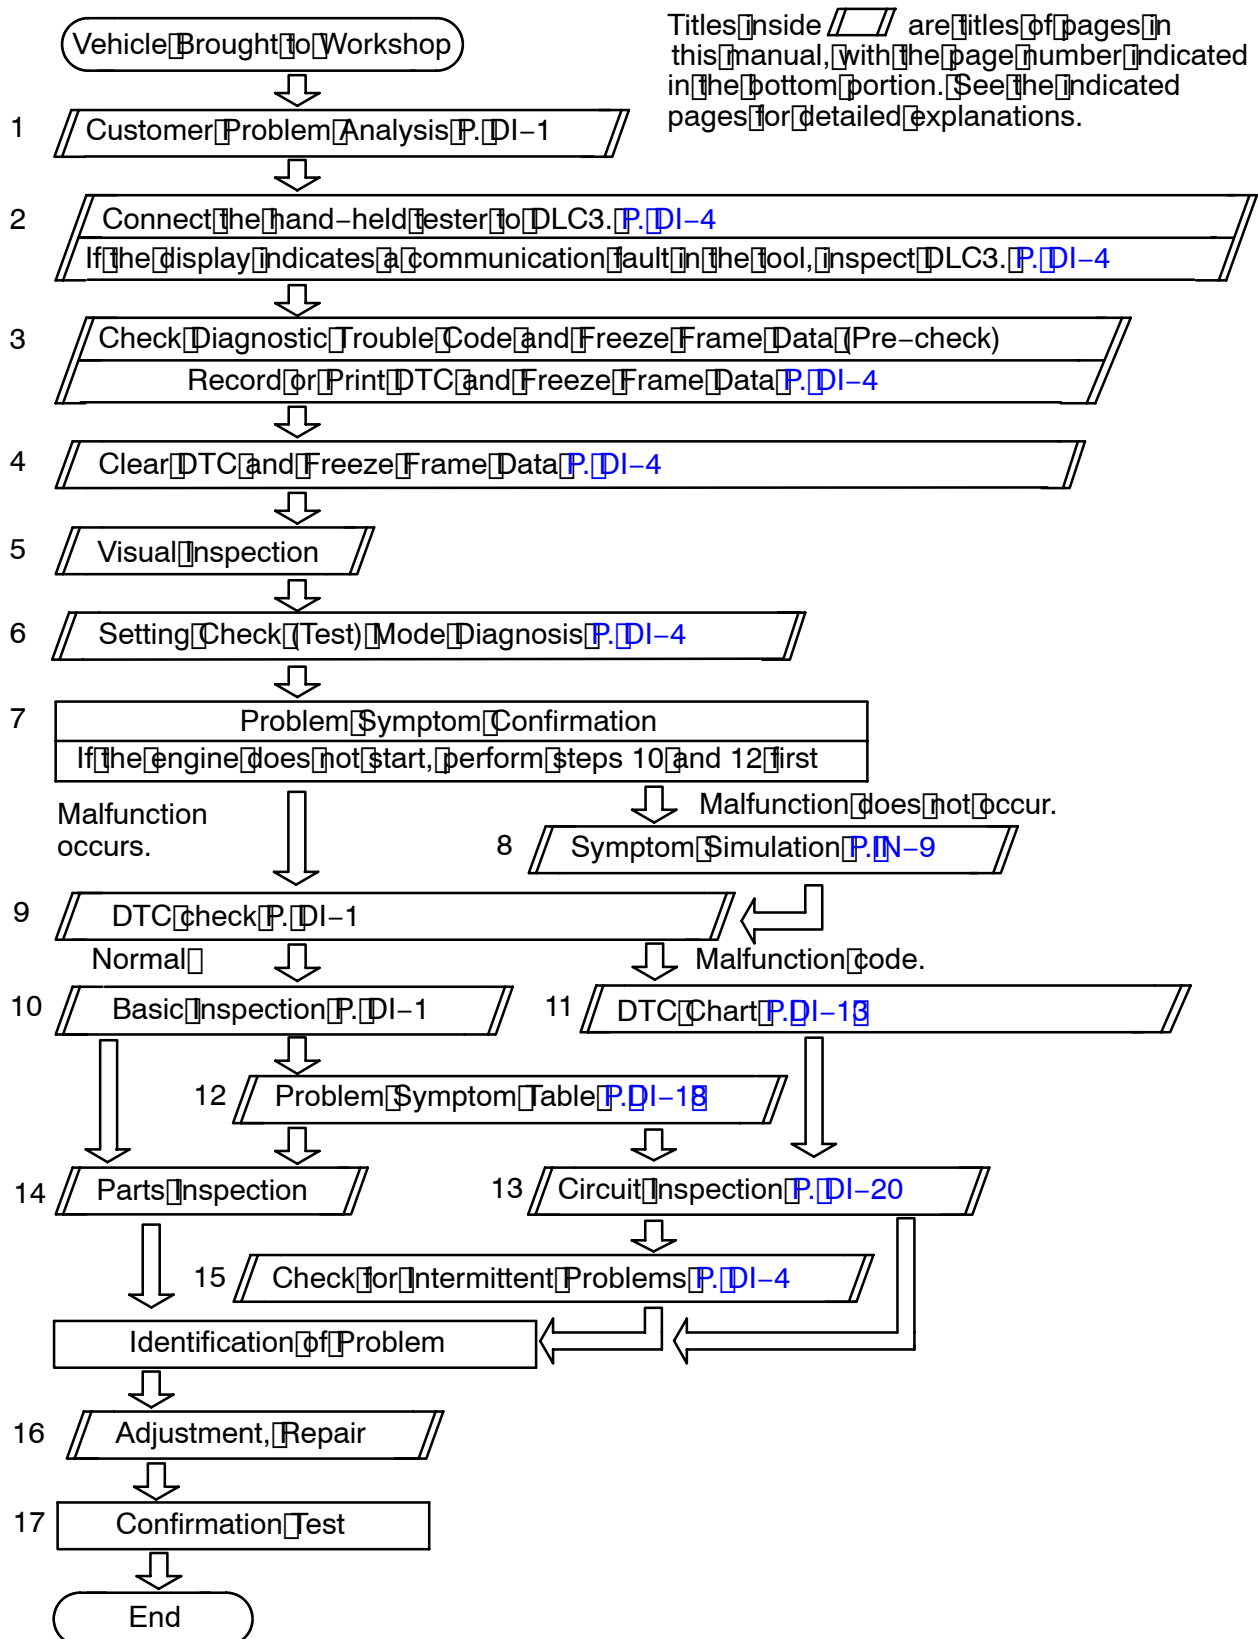

When not using hand-held tester, troubleshoot in accordance with the procedure on the following pages.

