

DIAGNOSTIC TROUBLE CODE CHART

HINT:

Parameters listed in the chart may not be exactly the same as your readings due to the type of instrument or other factors.

If a malfunction code is displayed during the DTC check in the check (test) mode, check the circuit for that code listed in the table below. For details of each code, refer to the "See page" under the respective DTC No." in the DTC chart.

DTC No. (See Page)	Detection Item	Trouble Area	*1 Check Engine Warning Light Normal Mode/ Test Mode)	*2 Memory
12 (DI-20)	Crankshaft Position Sensor Circuit Malfunction	• Open or short in crankshaft position sensor circuit • Crankshaft position sensor • Engine ECU	ON/ON	○
13 (DI-22)	Engine Speed Sensor Circuit Malfunction	• Open or short in engine speed sensor circuit • Engine speed sensor • Engine ECU	ON/ON	○
14 (DI-23)	Timing Control System Malfunction	• Open or short in timing control valve circuit • Fuel filter (clogging) • Fuel (freezing, air in) • Injection pump (internal pressure and timing control valve) • Engine ECU	ON/N.A.	○
15 (DI-26)	Throttle Control Motor Circuit Malfunction	• Open or short in throttle control motor circuit • Throttle control motor • Throttle valve • Throttle body • Engine ECU	ON/N.A.	○
17	Interior IC Malfunction	• Engine ECU	ON/N.A.	○
18 (DI-28)	Spill Control Circuit Malfunction	• Open or short in spill control valve circuit • Spill control valve • Engine ECU	ON/N.A.	○
19(1) (DI-31)	Accelerator Pedal Position Sensor Circuit Malfunction (Open/Short)	• Open or short in accelerator pedal position sensor circuit • Accelerator pedal position sensor • Engine ECU	ON/ON	○
19(2) (DI-37)	Accelerator Pedal Position Sensor Circuit Malfunction (IDL Switch / Range)	• Open or short in accelerator pedal position sensor circuit • Accelerator pedal position sensor • Engine ECU	ON/N.A.	○
19(3) (DI-42)	Accelerator Pedal Closed Position Switch Circuit Malfunction (Short)	• Short in accelerator pedal closed position switch circuit • Accelerator pedal closed position switch • Engine ECU	ON/N.A.	○
19(4) (DI-42)	Accelerator Pedal Closed Position Switch Circuit Malfunction (Open)	• Open in accelerator pedal closed position switch circuit • Accelerator pedal closed position switch • Engine ECU	ON/N.A.	○
22 (DI-44)	Water Temp. Sensor Circuit Malfunction	• Open or short in water temp. sensor circuit • Water temp. sensor • Engine ECU	ON/ON	○
24 (DI-49)	Intake Air Temp. Sensor Circuit Malfunction	• Open or short in intake air temp. sensor circuit • Intake air temp. sensor • Engine ECU	OFF/ON	○
32 (DI-54)	Injection Pump System Malfunction	• Injection pump correction unit circuit • Injection pump correction unit • Engine ECU	OFF/N.A.	○

DTC No. (See Page)	Detection Item	Trouble Area	*1 Check Engine Warning Light Normal Mode/ Test Mode	*2 Memory
35 (DI-56)	Intake Air Pressure Sensor Circuit Malfunction	• Open or short in turbo pressure sensor circuit • Intake air pressure sensor • Engine ECU	ON/ON	○
39 (DI-60)	Fuel Temp. Sensor Circuit Malfunction	• Open or short in fuel temp. sensor circuit • Fuel pressure sensor • Engine ECU	ON/ON	○
42 (DI-65)	Vehicle Speed Sensor Signal Circuit Malfunction	• Open or short in fuel temp. sensor circuit • Vehicle speed sensor • Combination meter • Engine ECU	ON/ON	○
96 (DI-67)	EGR Valve Lift Sensor Circuit Malfunction	• Open or short in EGR valve lift sensor circuit • EGR valve lift sensor • Engine ECU	ON/ON	○

*1: "ON" in the diagnosis mode column indicates that the check engine warning light is lights up when a malfunction is detected. "OFF" indicates that the "CHECK ENGINE" does not light up during malfunction diagnosis, even if a malfunction is detected. "N.A." indicates that the item is not included in the malfunction diagnosis.

*2: "○" in the memory column indicates that a DTC is recorded in the ECU memory when a malfunction occurs.