

BUZZERS, RELAYS & TIMERS

BUZZERS, RELAYS & TIMERS LOCATION

Component	Location
Brake Booster Relay	Left side of dash. See Fig. 22 .
Coolant Circulation Pump Relay	Left rear of engine compartment. See Fig. 40 .
Front Parking Warning Buzzer	Behind center of dash. See Fig. 63 .
Fuel Pump (FP) 2 Relay	Left side of dash. See Fig. 64 .
Horn Relay	On relay & fuse panel at left side of dash. See Fig. 84 .
Load Reduction Relay	Left side of dash. See Fig. 106 .
Locking Relay For Starter (Clutch Pedal Switch)	Left rear of engine compartment. See Fig. 111 .
Motronic Engine Control Module (ECM) Power Supply Relay	Left rear of engine compartment. See Fig. 116 .
Park/Neutral Position (PNP) Relay	Left rear of engine compartment. See Fig. 123 .
Secondary Air Injection (AIR) Pump Relay	Left rear of engine compartment. See Fig. 133 .
Starter Interlock Alarm System Relay (A/T)	Left rear of engine compartment. See Fig. 143 .
Warning Buzzer (Parking) (Avant)	Left side of cargo area. See Fig. 157 .
Warning Buzzer (Parking) (Sedan)	Under package shelf. See Fig. 158 .

CIRCUIT PROTECTION DEVICES

CIRCUIT PROTECTION DEVICES LOCATION

Component	Location
Rear Shade Circuit Breaker	Left side of dash. See Fig. 125 .

CONTROL UNITS

CONTROL UNITS LOCATION

Component	Location
ABS Control Module (W/EDL)	At left side of engine compartment. See Fig. 14 .
Air Bag Control Module	Below center console. See Fig. 16 .
Central Control Module (Comfort System)	Below driver's seat. See Fig. 33 .
Coolant FC (Fan Control) Control Module	Front of engine compartment. See Fig. 41 .
Door Control Module (Driver Side)	Integrated in driver's door window regulator motor. See Fig. 54 .
Door Control Module (Left Rear)	Integrated in left rear door window regulator motor. See Fig. 56 .

Door Control Module (Passenger Side)	Integrated in right front door window regulator motor. See Fig. 55 .
Door Control Module (Right Rear)	Integrated in right rear door window regulator motor. See Fig. 57 .
Fresh Air Blower Control Module	Below right side of dash. See Fig. 34 .
Headlight Range Control Module	Behind right side of dash. See Fig. 80 .
Heated Seat Control Module (Left Rear)	Rear of center console. See Fig. 103 .
Heated Seat Control Module (Right Rear)	Rear of center console. See Fig. 130 .
Heated Windshield Control Module	Rear center of engine compartment. See Fig. 82 .
Instrument Cluster Control Module	Behind instrument cluster. See Fig. 39 .
Memory Seat Control Module	Under driver's seat. See Fig. 114 .
Motronic Engine Control Module (ECM)	Left rear of engine compartment, in plenum chamber. See Fig. 115 .
Navigation Control Module W/CD (Avant)	Left rear of cargo area. See Fig. 35 .
Navigation Control Module W/CD (Sedan)	Left side of trunk. See Fig. 36 .
Parking Aid Control Module (Avant)	Left side of cargo area. See Fig. 37 .
Parking Aid Control Module (Sedan)	Left side of trunk. See Fig. 38 .
Rear Window Shade Control Module	Under package shelf. See Fig. 126 .
Servotronic Control Module	At left side of dash. See Fig. 142 .
Steering Column Electronic Systems Control Module	On steering column, behind steering wheel. See Fig. 145 .
Telephone/Telematic Control Module	Under passenger's seat. See Fig. 147 .
Throttle Valve Control Module (1.8L Turbo)	On throttle body. See Fig. 149 .
Throttle Valve Control Module (3.0L)	Behind intake manifold, on throttle valve housing. See Fig. 150 .
Transmission Control Module (TCM) (CVT)	At rear of transmission. See Fig. 152 .
Transmission Control Module (TCM) (5 Speed A/T)	Left rear of engine compartment. See Fig. 151 .
Vehicle Electrical System Control Module	At left side of dash. See Fig. 156 .

MOTORS

MOTORS LOCATION

Component	Location
ABS Hydraulic Unit	Left side of engine compartment. See Fig. 15 .
Brake System Vacuum Pump (A/T)	Left side of engine compartment. See Fig. 25 .
Leak Detection Pump (LDP)	In left rear wheel well. See Fig. 100 .
Lock Unit For Central Locking (Driver's)	Rear of driver's door. See Fig. 107 .
Lock Unit For Central Locking (Left Rear)	Rear of left rear door. See Fig. 109 .
Lock Unit For Central Locking (Passenger's)	Rear of passenger's door. See Fig. 108 .
Lock Unit For Central Locking (Right Rear)	Rear of right rear door. See Fig. 110 .
Secondary Air Injection (AIR) Pump Motor (3.0L)	Right front of engine compartment. See Fig. 132 .

SENDING UNITS/SENSORS

SENDING UNITS & SENSORS LOCATION

Component	Location
Accelerator Pedal Position Sender 2	At accelerator pedal. See Fig. 136 .
Brake Pressure Sensor 1	Left side of engine compartment. See Fig. 24 .
Camshaft Position (CMP) Sensor (1.8L Turbo)	Front of engine. See Fig. 29 .
Camshaft Position (CMP) Sensor 2 (3.0L)	Left rear of engine. See Fig. 31 .
Camshaft Position (CMP) Sensor (3.0L)	Rear of right cylinder bank. See Fig. 30 .
Camshaft Position (CMP) Sensor 4 (3.0L)	Rear of left cylinder head. See Fig. 32 .
Engine Coolant Temperature (ECT) Sensor (1.8L Turbo)	Rear of engine. See Fig. 59 .
Engine Coolant Temperature (ECT) Sensor (3.0L)	Right rear of engine. See Fig. 60 .
Front Air Bag Crash Sensor (Driver's Side)	Left front of engine compartment. See Fig. 58 .
Front Air Bag Crash Sensor (Passenger's Side)	Right front of engine compartment. See Fig. 124 .
Heated Oxygen Sensor (HO2S) (1.8L Turbo)	Right side of engine compartment. See Fig. 81 .
High Pressure Sensor	Left side of A/C condenser. See Fig. 83 .
Intake Air Temperature (IAT) Sensor (1.8L Turbo)	Left side of engine. See Fig. 96 .
Knock Sensor (KS) 1 (1.8L Turbo)	On top of engine. See Fig. 98 .
Knock Sensor (KS) 2 (1.8L Turbo)	On top of engine. See Fig. 99 .
Light Recognition Sensor	Top of windshield, in rearview mirror assembly. See Fig. 105 .
Mass Air Flow (MAF) Sensor (1.8L Turbo)	On intake air duct. See Fig. 112 .
Mass Air Flow (MAF) Sensor (3.0L)	On air intake duct. See Fig. 113 .
Outside Air Temperature Sensor	Behind front bumper. See Fig. 118 .
Oxygen Sensor (O2S) Behind TWC (1.8L Turbo)	Right rear of engine compartment. See Fig. 119 .
Oxygen Sensor (O2S) Heater 1 Behind TWC (1.8L Turbo)	Right rear of engine. See Fig. 122 .
Oxygen Sensor (O2S) Heater (1.8L Turbo)	Right side of engine compartment. See Fig. 120 .
Parking Aid Sensor (Left Front)	In front bumper. See Fig. 102 .
Parking Aid Sensor (Left Front Center)	In front bumper. See Fig. 101 .
Parking Aid Sensor (Left Rear)	On rear bumper. See Fig. 138 .
Parking Aid Sensor (Left Rear Center)	On rear bumper. See Fig. 139 .
Parking Aid Sensor (Right Front)	Front bumper. See Fig. 129 .
Parking Aid Sensor (Right Front Center)	On front bumper. See Fig. 128 .
Parking Aid Sensor (Right Rear)	On rear bumper. See Fig. 140 .
Parking Aid Sensor (Right Rear Center)	On rear bumper. See Fig. 141 .
Rotation Rate Sender	Under front of center console. See Fig. 137 .
Sensor (O2S) Heater (3.0L)	Right rear of engine. See Fig. 121 .
Side Air Bag Crash Sensor (Driver's Side)	At left "B" pillar. See Fig. 42 .
Side Air Bag Crash Sensor (Left Rear)	At bottom of left "C" pillar. See Fig. 104 .

Side Air Bag Crash Sensor (Passenger's Side)	At right "B" pillar. See Fig. 43 .
Side Air Bag Crash Sensor (Right Rear)	At bottom of right "C" pillar. See Fig. 131 .
Steering Angle Sensor	Behind steering wheel. See Fig. 144 .
Throttle Position Sensor (3.0L)	On accelerator pedal. See Fig. 148 .
Ultra-Sound Sensor For Anti-Theft	In roof console. See Fig. 153 .

SOLENOIDS & SOLENOID VALVES

SOLENOIDS & SOLENOID VALVES LOCATION

Component	Location
ABS Hydraulic Unit	Left side of engine compartment. See Fig. 15 .
Camshaft Adjustment Valve 1 (Exhaust) (3.0L)	Right front of engine. See Fig. 27 .
Camshaft Adjustment Valve 1 (1.8L Turbo)	Rear of engine. See Fig. 26 .
Camshaft Adjustment Valve 2 (Exhaust) (3.0L)	Left front of engine. See Fig. 28 .
Evaporative Emissions (EVAP) Canister Purge Regulator Valve (1.8L Turbo)	Right side of engine compartment. See Fig. 61 .
Evaporative Emissions (EVAP) Canister Purge Regulator Valve (3.0L)	Right side of engine compartment. See Fig. 62 .
Fuel Injector No. 1 (1.8L Turbo)	Top Of Engine. See Fig. 44 .
Fuel Injector No. 1 (3.0L)	Right side of engine. See Fig. 48 .
Fuel Injector No. 2 (1.8L Turbo)	On top of engine. See Fig. 45 .
Fuel Injector No. 2 (3.0L)	Right side of engine. See Fig. 49 .
Fuel Injector No. 3 (1.8L Turbo)	Top of engine. See Fig. 46 .
Fuel Injector No. 3 (3.0L)	Right side of engine. See Fig. 50 .
Fuel Injector No. 4 (1.8L Turbo)	Top of engine. See Fig. 47 .
Fuel Injector No. 4 (3.0L)	Left side of engine. See Fig. 51 .
Fuel Injector No. 5 (3.0L)	Left side of engine. See Fig. 52 .
Fuel Injector No. 6 (3.0L)	Left side of engine. See Fig. 53 .
Intake Manifold Change-Over Valve (3.0L)	Front of engine. See Fig. 97 .
Recirculating Valve For Turbocharger (1.8L Turbo)	Left side of engine. See Fig. 127 .
Secondary Air Injection (AIR) Solenoid Valve (1.8 Turbo)	Left side of engine compartment. See Fig. 134 .
Secondary Air Injection (AIR) Solenoid Valve (3.0L)	Rear of engine. See Fig. 135 .
Valve 1 For Camshaft Adjustment (3.0L)	Right front of engine. See Fig. 154 .
Valve 2 For Camshaft Adjustment (3.0L)	Left front of engine. See Fig. 155 .
Wastegate Bypass Regulator Valve (1.8L Turbo)	Right front of engine compartment. See Fig. 159 .

SWITCHES

SWITCHES LOCATION

11:34:52 PM	Page 4

Component	Location
Ambient Temperature Switch	Front of vehicle. See Fig. 17 .
Brake Fluid Level Warning Switch	On brake fluid reservoir. See Fig. 23 .
Multi-Function Transmission Range (TR) Switch	Left side of transmission. See Fig. 117 .

MISCELLANEOUS

 
 
MISCELLANEOUS LOCATION

Component	Location
Amplifier (Avant)	Right side of cargo area. See Fig. 18 .
Amplifier (Sedan)	Right side of trunk. See Fig. 19 .
Antenna Splitter	Below front passenger's seat. See Fig. 21 .
Antenna (Telephone)	Right front of vehicle. See Fig. 20 .
Antenna 2 (Telephone)	Under right rear of vehicle. See Fig. 146 .
Diagnostic Connector (DLC)	Under left side of dash. See Fig. 1 .
Ignition Coil 1 With Power Output Stage (1.8L Turbo)	Top of engine. See Fig. 85 .
Ignition Coil 1 With Power Output Stage (3.0L)	Right side of engine. See Fig. 89 .
Ignition Coil 2 With Power Output Stage (1.8L Turbo)	Top of engine. See Fig. 86 .
Ignition Coil 2 With Power Output Stage (3.0L)	Right side of engine. See Fig. 90 .
Ignition Coil 3 With Power Output Stage (1.8L Turbo)	Top of engine. See Fig. 87 .
Ignition Coil 3 With Power Output Stage (3.0L)	Right side of engine. See Fig. 91 .
Ignition Coil 4 With Power Output Stage (1.8L Turbo)	Top of engine. See Fig. 88 .
Ignition Coil 4 With Power Output Stage (3.0L)	Left side of engine. See Fig. 92 .
Ignition Coil 5 With Power Output Stage (3.0L)	Left side of engine. See Fig. 93 .
Ignition Coil 6 With Power Output Stage (3.0L)	Left side of engine. See Fig. 94 .
Induction Coil (Anti-Theft Immobilizer)	Right side of steering column. See Fig. 95 .

CONNECTORS

CONNECTORS LOCATION

Component	Location
T3a (1.8L Turbo) (3 Pin)	Rear of engine compartment. See Fig. 4 .
T3b (1.8L Turbo) (3 Pin)	Rear of engine compartment. See Fig. 2 .
T3b (3.0L) (3 Pin)	Rear of engine compartment. See Fig. 6 .
T3e (3.0L) (3 Pin)	Rear of engine compartment. See Fig. 7 .
T3 (1.8L Turbo) (3 Pin)	Rear of engine compartment. See Fig. 3 .
T3 (3.0L) (3 Pin)	Rear of engine compartment. See Fig. 5 .

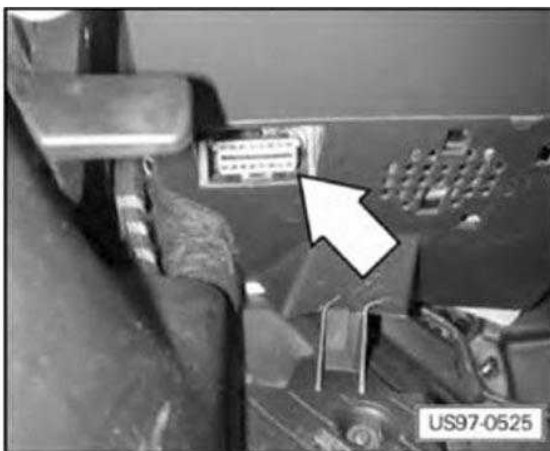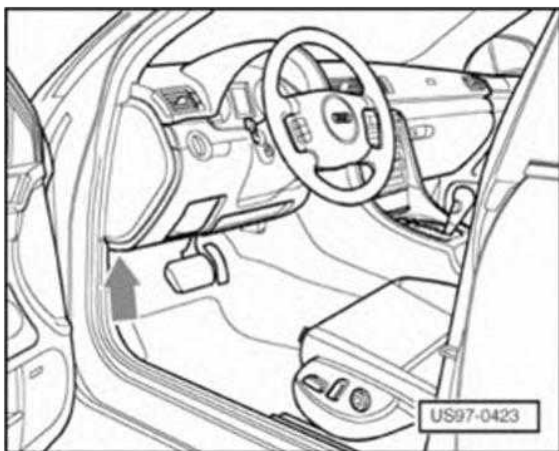


T16 16-Pin Connector –T16–, diagnostic connector

G00418592

Fig. 1: Left Side Of Dash

 Courtesy of AUDI OF AMERICA, INC.


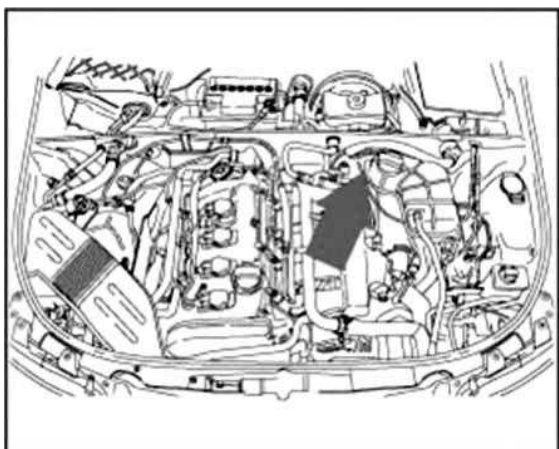


T3b 3-Pin Connector (1.8 liter turbo engine)

G00418593

Fig. 2: Rear Of Engine Compartment

 
 
Courtesy of AUDI OF AMERICA, INC.

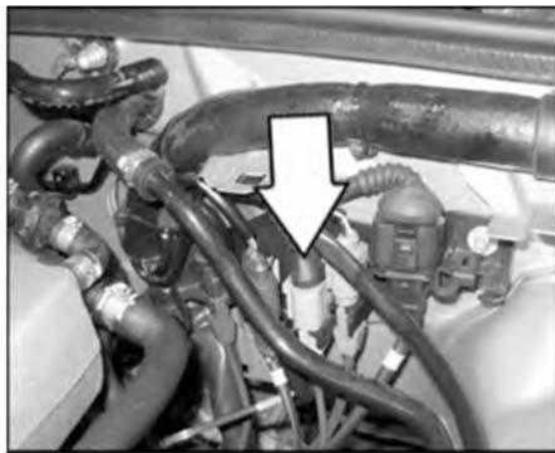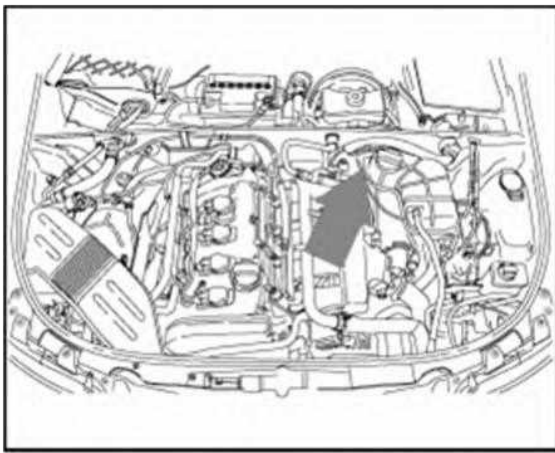

T3 3-Pin Connector (1.8 liter turbo engine)

G00418594

 
 
Fig. 3: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

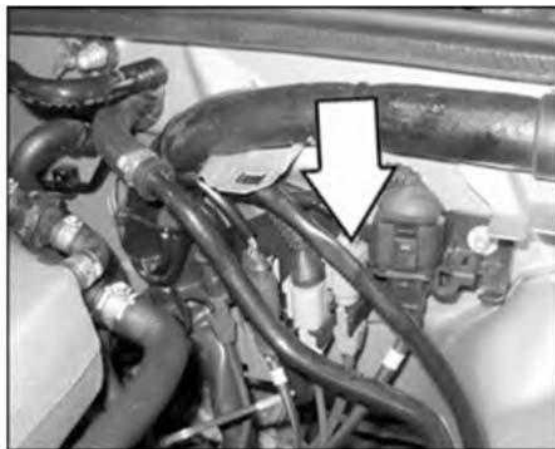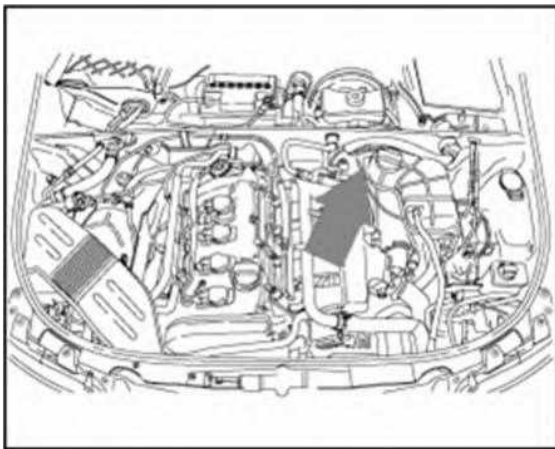

T3a 3-Pin Connector (1.8 liter turbo engine)

G00418595

 
 
Fig. 4: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

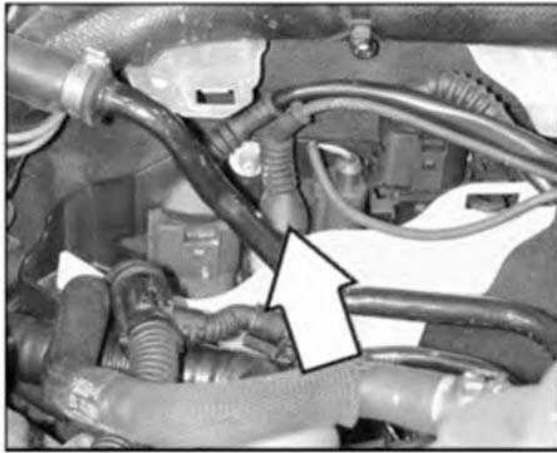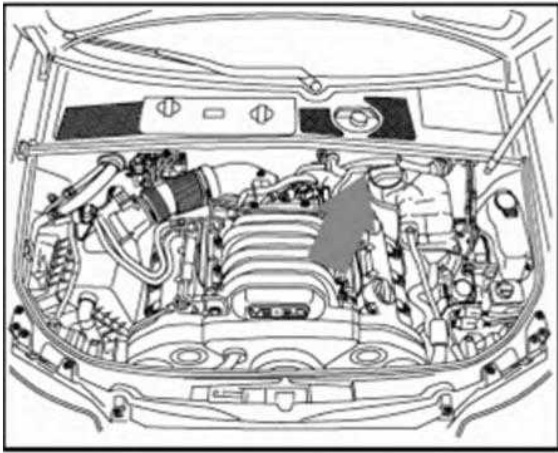

T3 **3-Pin Connector (3.0 ltr. engine)**

G00418596

  
Fig. 5: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

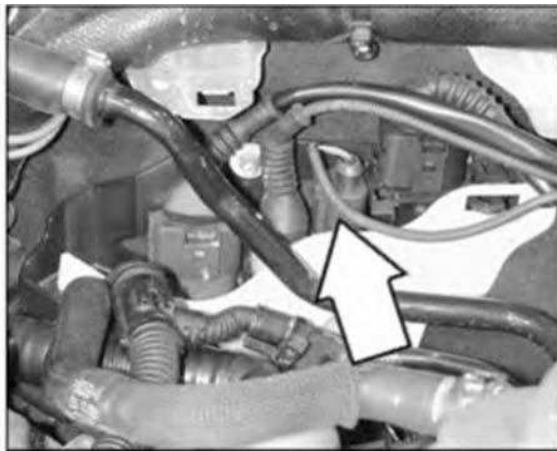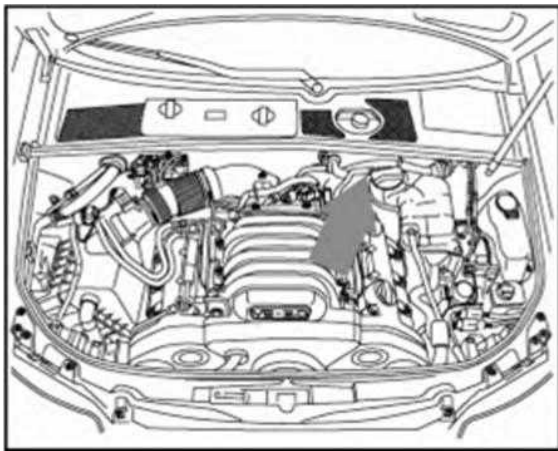

T3b **3-Pin Connector (3.0 ltr. engine)**

G00418597


 
Fig. 6: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

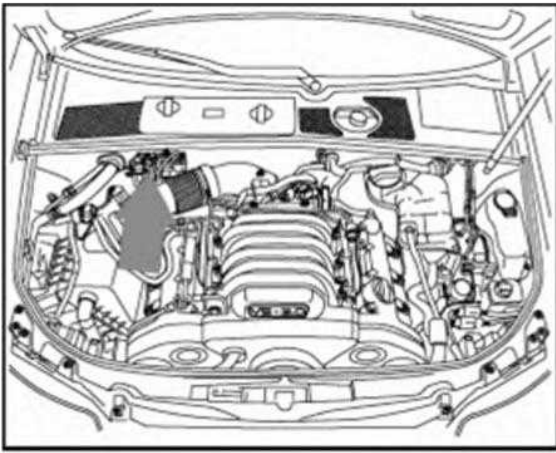

T3e 3-Pin Connector (3.0 ltr. engine)

G00418598

 
 
Fig. 7: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

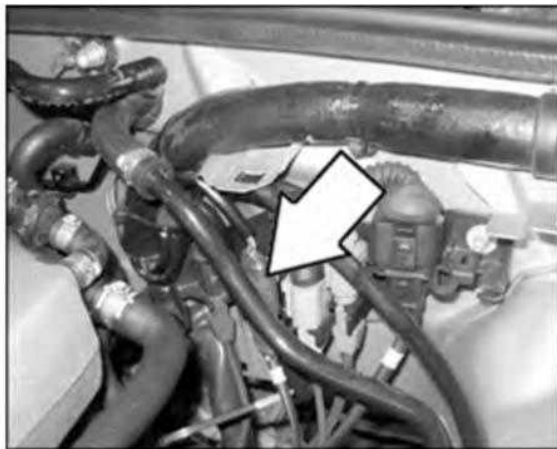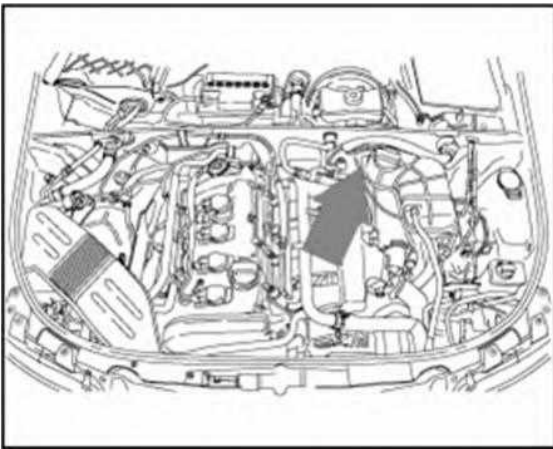

T4 4-Pin Connector (1.8 liter turbo engine)

G00418599

 
 
Fig. 8: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

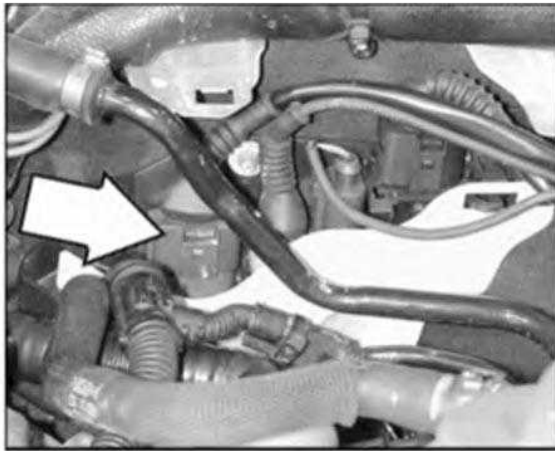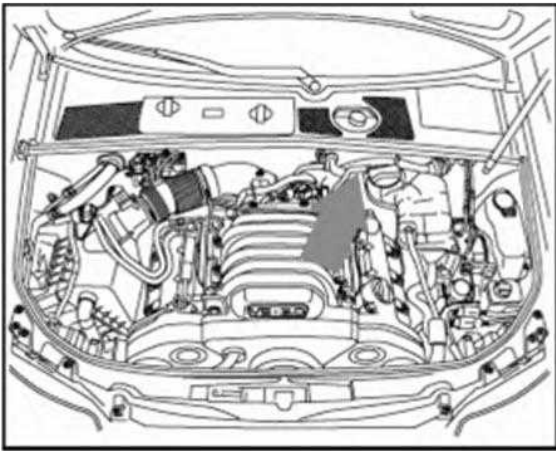

T4c 4-Pin Connector (3.0 ltr. engine)

G00418600

 
 
Fig. 9: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

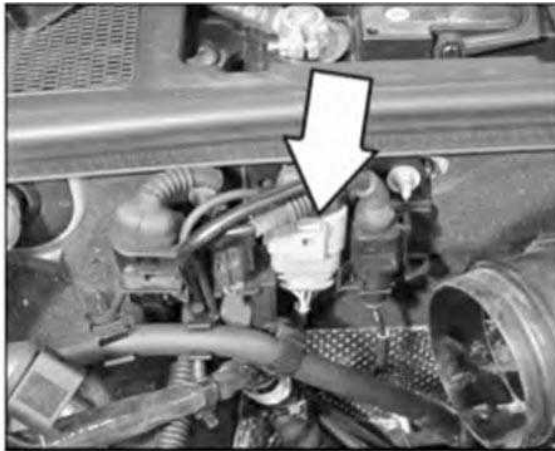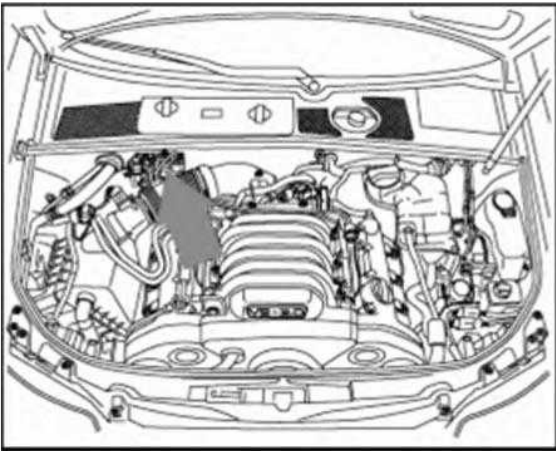

T4a 4-Pin Connector (3.0 ltr. engine)

G00418601

  
Fig. 10: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

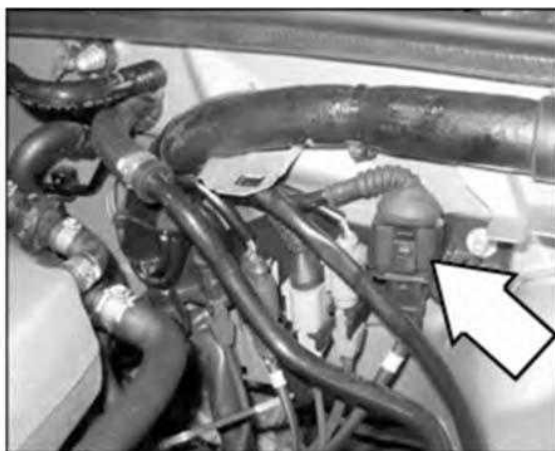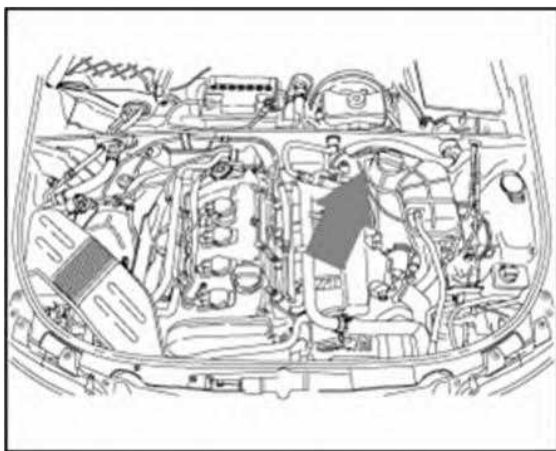

T6 6-Pin Connector (1.8 liter turbo engine)

G00418602


 
Fig. 11: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

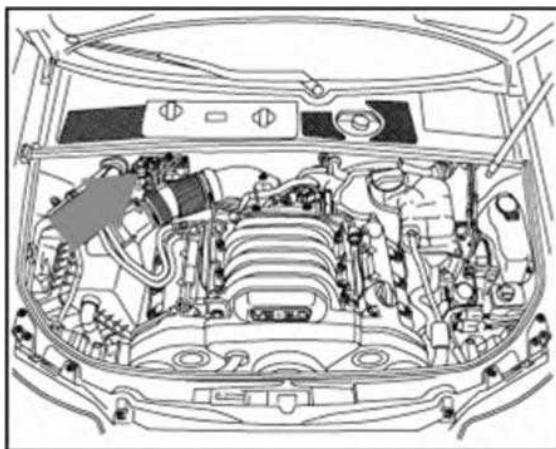

T6 6-Pin Connector (3.0 ltr. engine)

G00418603

  
Fig. 12: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

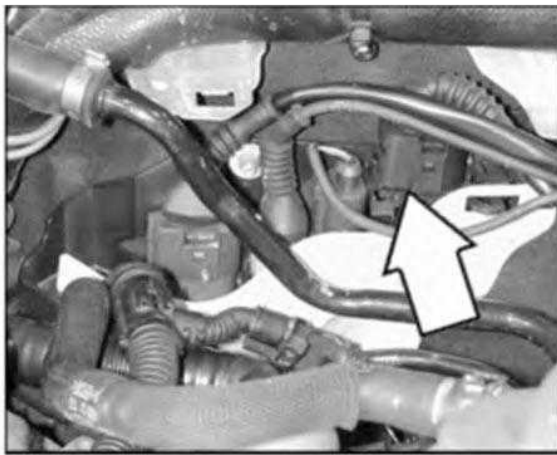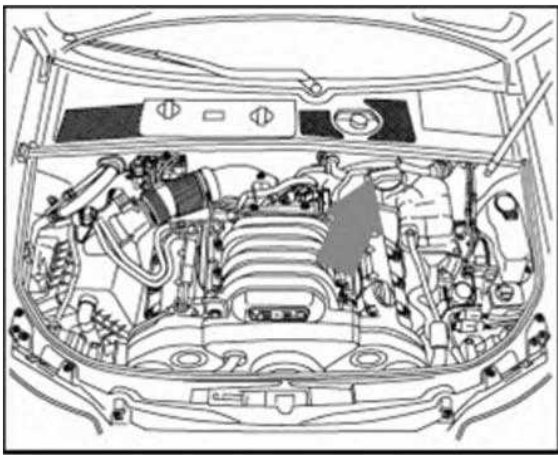

T6a 6-Pin Connector (3.0 ltr. engine)

G00418604

 
Fig. 13: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

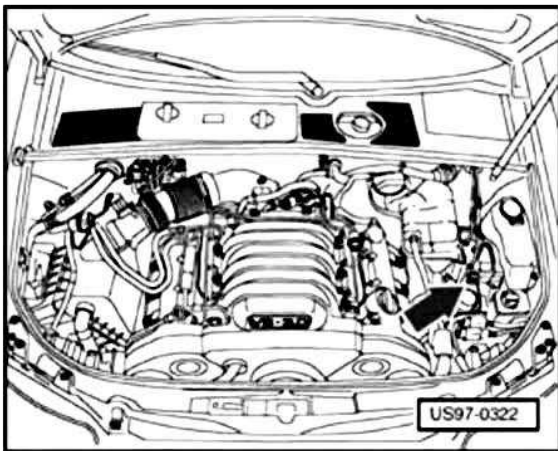

J104 ABS Control Module (w/EDL)

G00418605

 
Fig. 14: Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

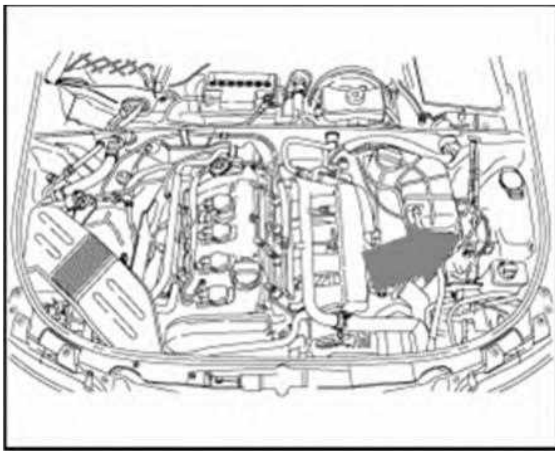

N55 **ABS Hydraulic Unit**

G00418606

 
Fig. 15: Left Side Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

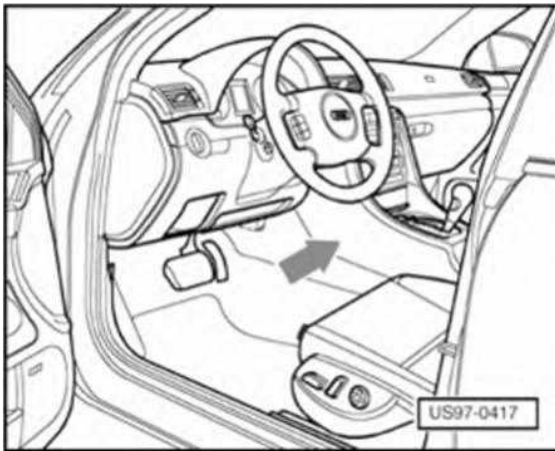

J234 **Airbag Control Module**

G00418607

 Fig. 16: Below Center Console
Courtesy of AUDI OF AMERICA, INC.

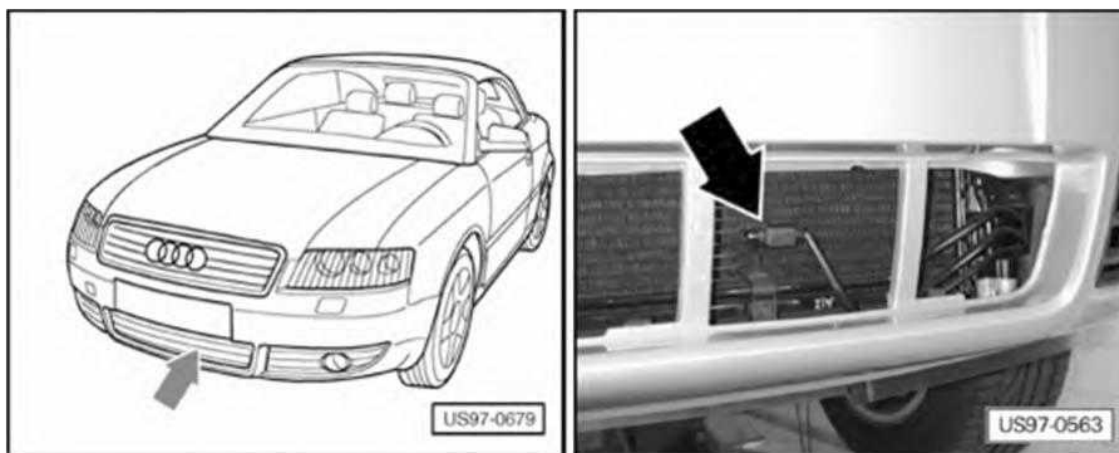


F38 Ambient Temperature Switch

G00418608

Fig. 17: Front Of Vehicle

 Courtesy of AUDI OF AMERICA, INC.


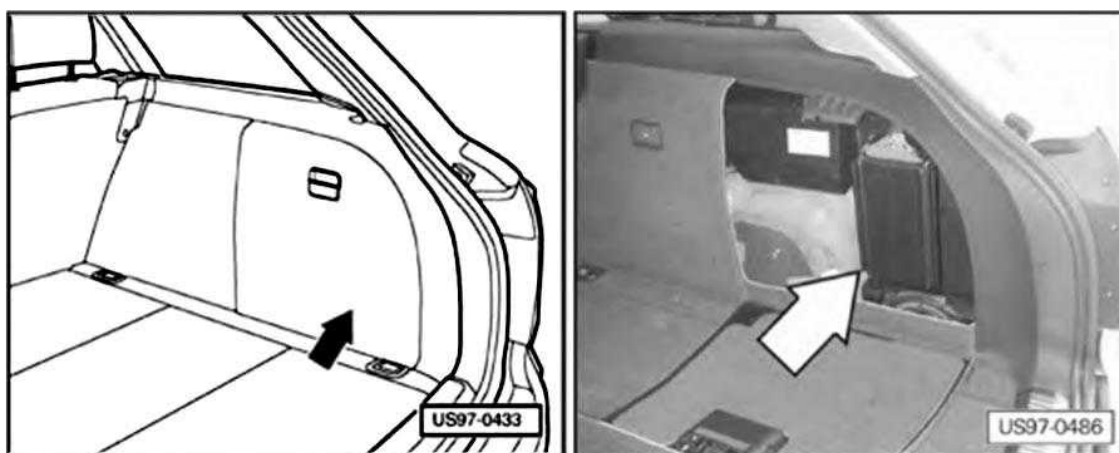


R12 Amplifier (Avant)

G00418609

Fig. 18: Right Rear Of Vehicle (Avant)

 
 
Courtesy of AUDI OF AMERICA, INC.

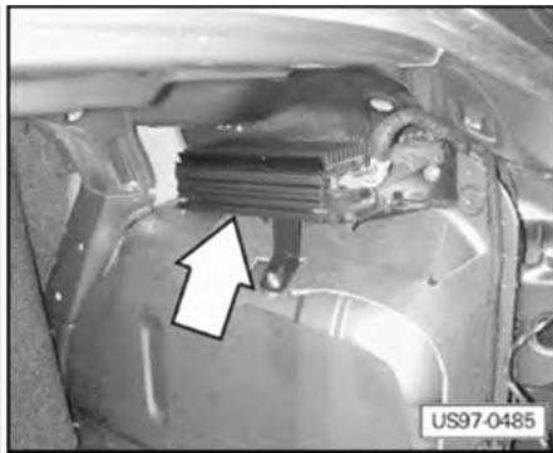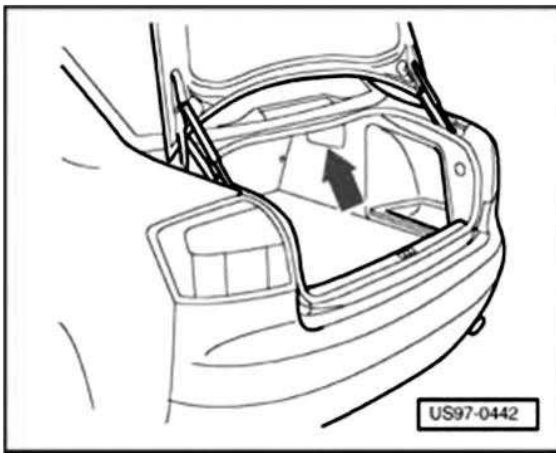

R12 Amplifier (Sedan)

G00418610

  
Fig. 19: Right Side Of Trunk (Sedan)
Courtesy of AUDI OF AMERICA, INC.

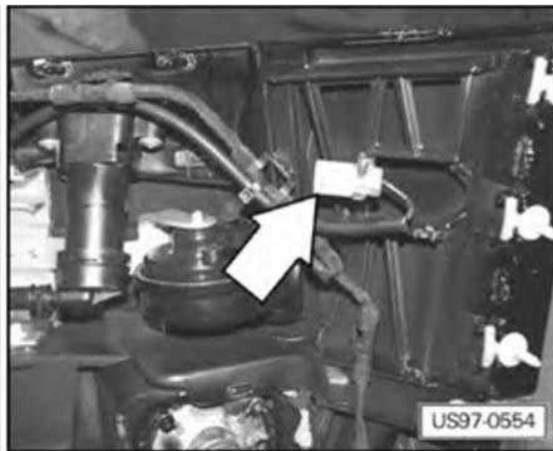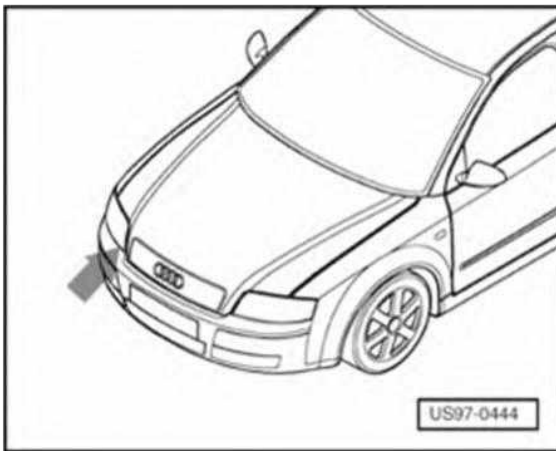

R65 Antenna for telephone

G00418611

 Fig. 20: Right Front Of Vehicle
Courtesy of AUDI OF AMERICA, INC.

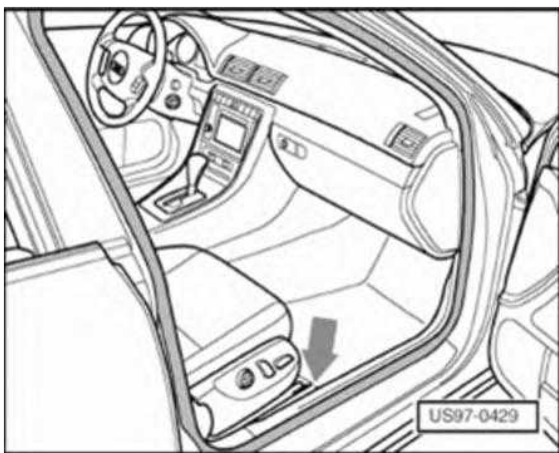

R87 Antenna Splitter

G00418612


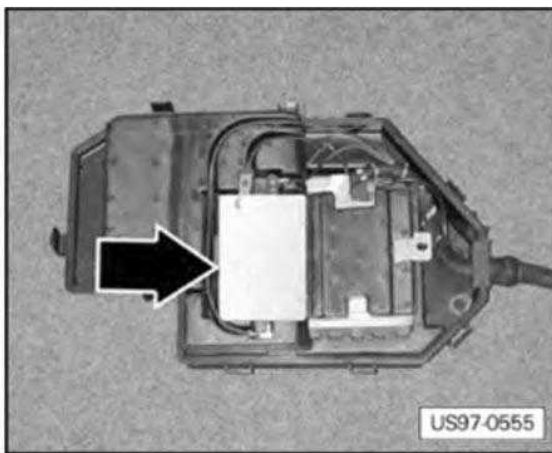 


Fig. 21: Below Front Passenger's Seat
Courtesy of AUDI OF AMERICA, INC.

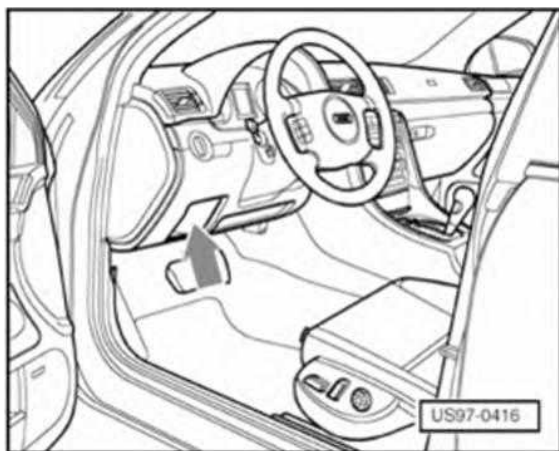 


J569 Brake Booster Relay

G00418613




 
Fig. 22: Left Side Of Dash
Courtesy of AUDI OF AMERICA, INC.

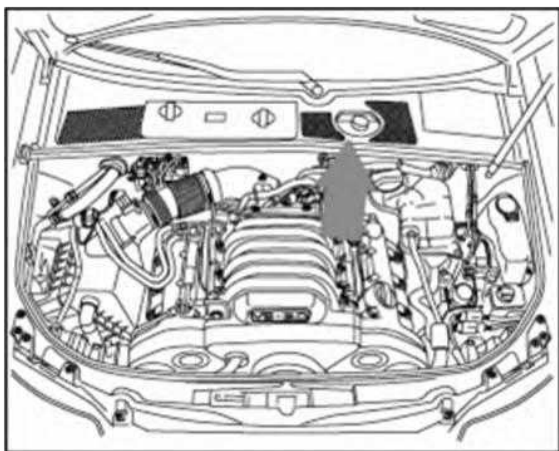

F34 Brake Fluid Level Warning Switch

G00418614

 
 
Fig. 23: Left Rear Of Engine Compartment
 Courtesy of AUDI OF AMERICA, INC.

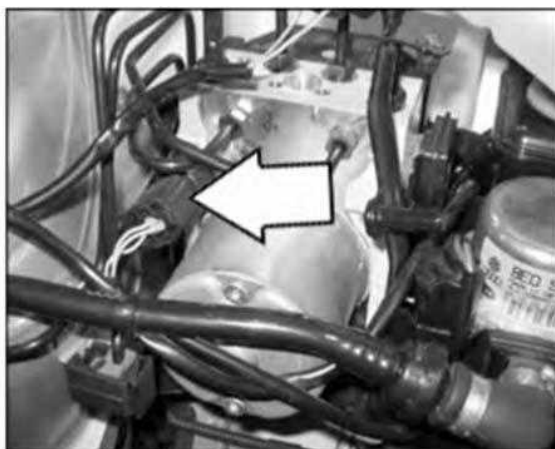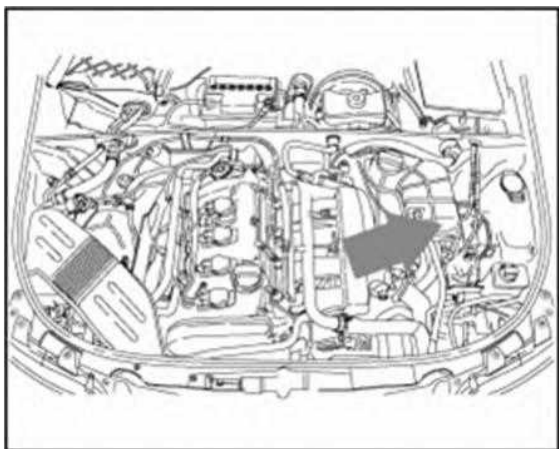

G201 Brake Pressure Sensor 1

G00418615

 
 
Fig. 24: Left Side Of Engine Compartment
 Courtesy of AUDI OF AMERICA, INC.

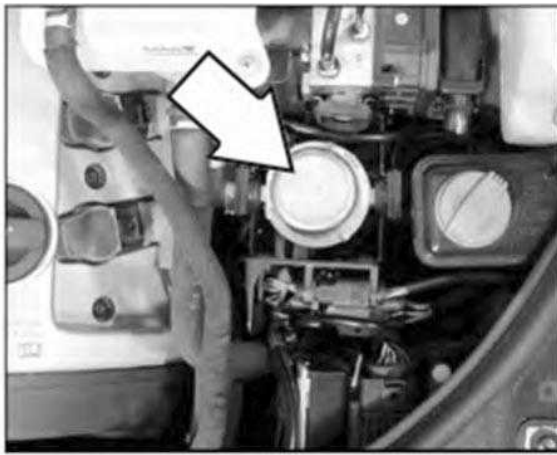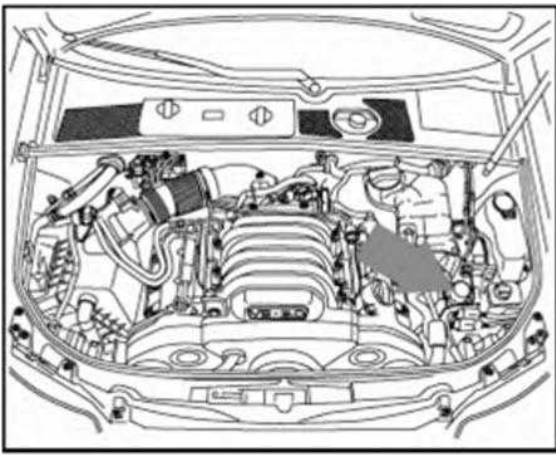

V192 Brake System Vacuum Pump (Automatic transmission)

G00418616

 
 
Fig. 25: Left Side Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

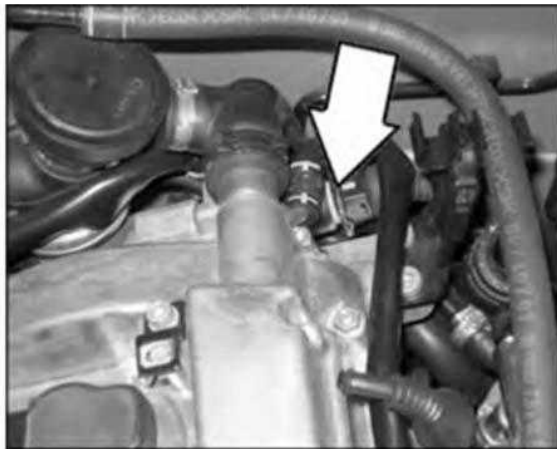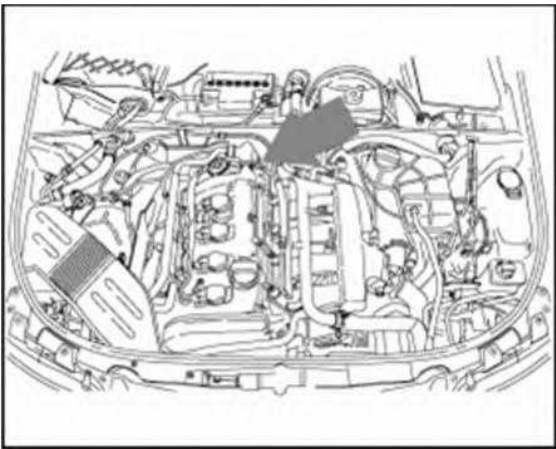

N205 Camshaft Adjustment Valve 1 (1.8 liter turbo engine)

G00418617

  Fig. 26: Rear Of Engine (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

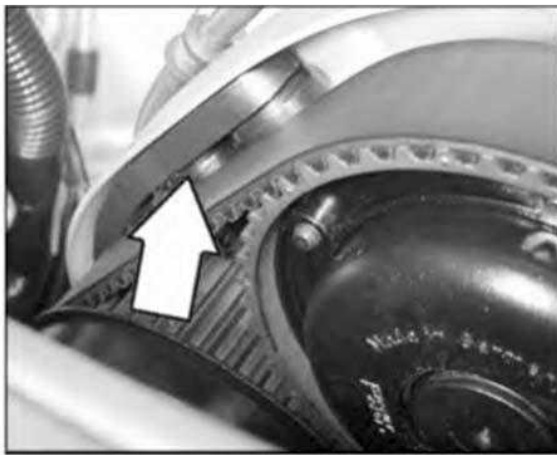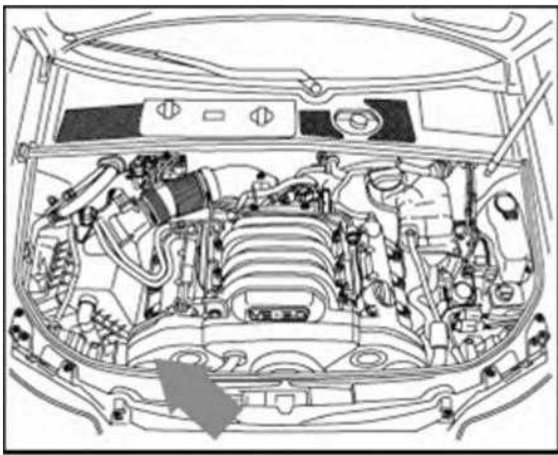


N318 Camshaft Adjustment Valve 1 (exhaust) (3.0 ltr. engine)

G00418618

Fig. 27: Right Front Of Engine

 Courtesy of AUDI OF AMERICA, INC.


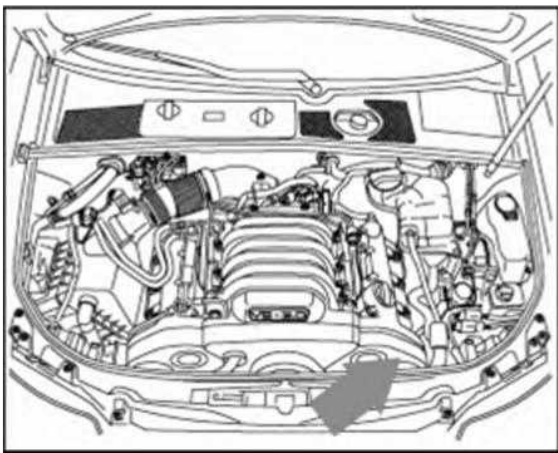


N319 Camshaft adjustment valve 2 (exhaust) (3.0 ltr. engine)

G00418619

Fig. 28: Left Front Of Engine

  Courtesy of AUDI OF AMERICA, INC.

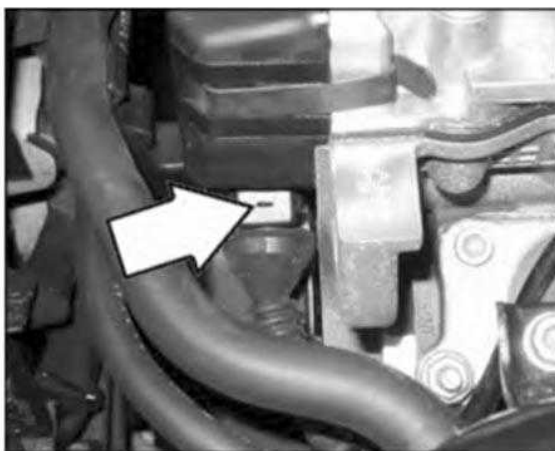
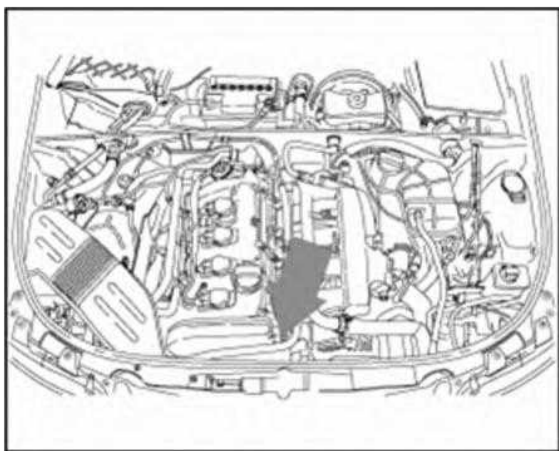


G40 Camshaft Position (CMP) Sensor (1.8 liter turbo engine)

G00418620

Fig. 29: Front Of Engine (1.8L Turbo)

  Courtesy of AUDI OF AMERICA, INC.

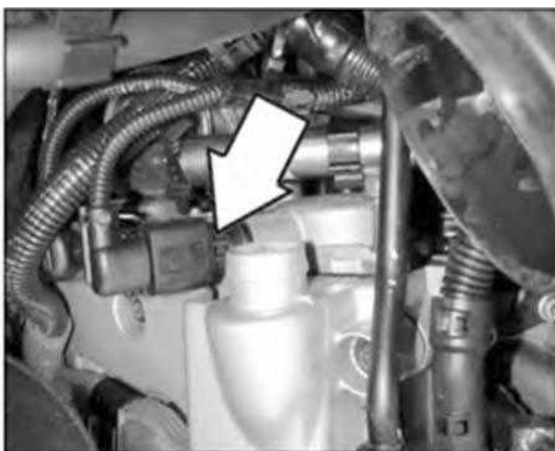
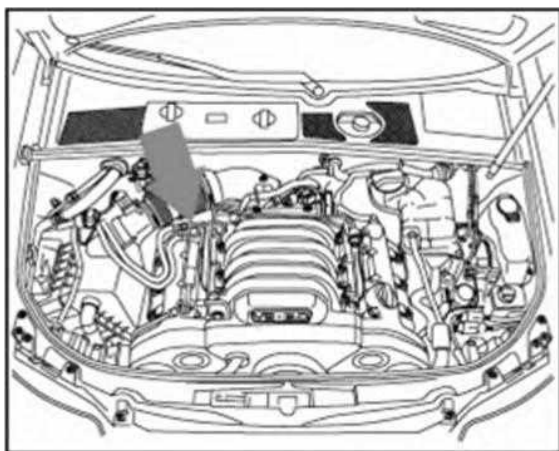


G40 Camshaft Position (CMP) Sensor (3.0 ltr. engine)

G00418621

Fig. 30: Right Rear Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

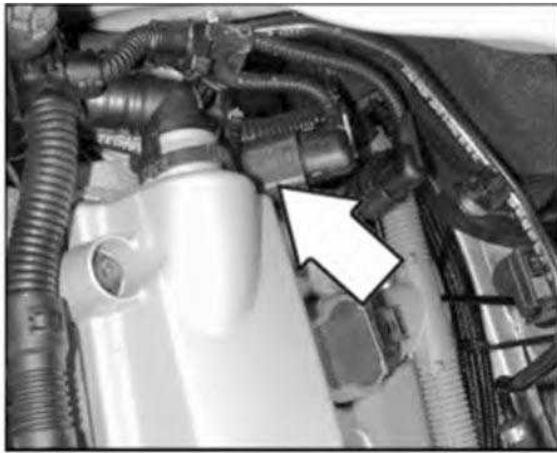
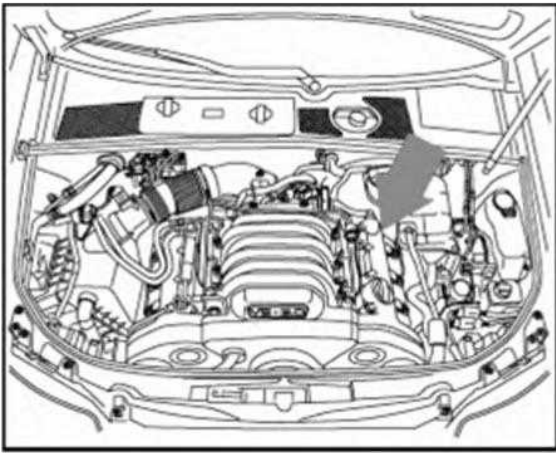


G163 Camshaft Position (CMP) Sensor 2 (3.0 ltr. engine)

G00418622

Fig. 31: Left Rear Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

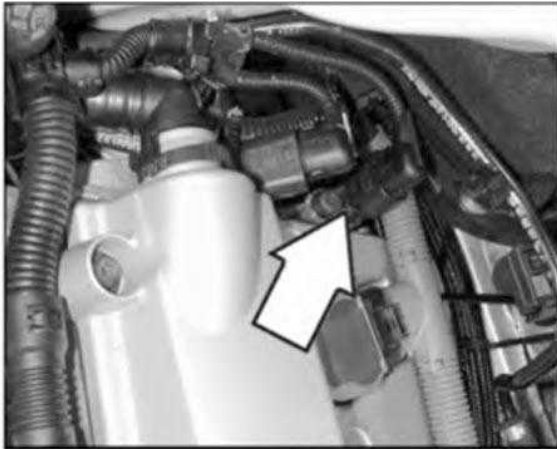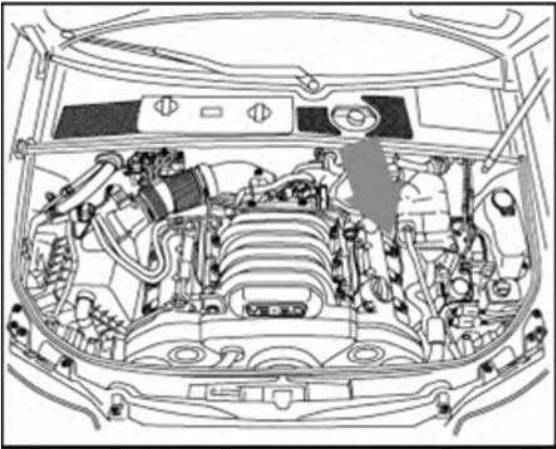


G301 Camshaft Position (CMP) Sensor 4 (3.0 ltr. engine)

G00418624

Fig. 32: Left Rear Of Engine (3.0L)

 
Courtesy of AUDI OF AMERICA, INC.

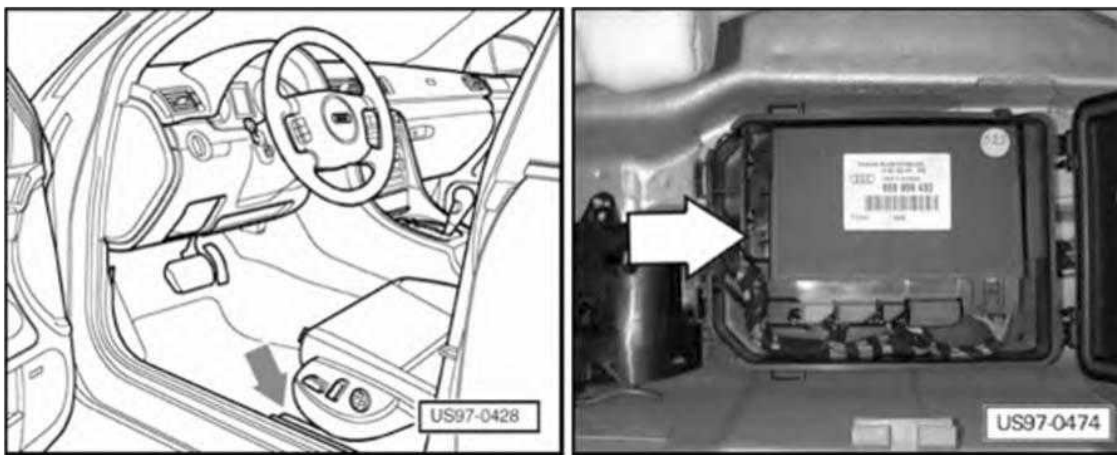

J393 Central control module for comfort system

G00418625

 
Fig. 33: Below Driver's Seat
Courtesy of AUDI OF AMERICA, INC.

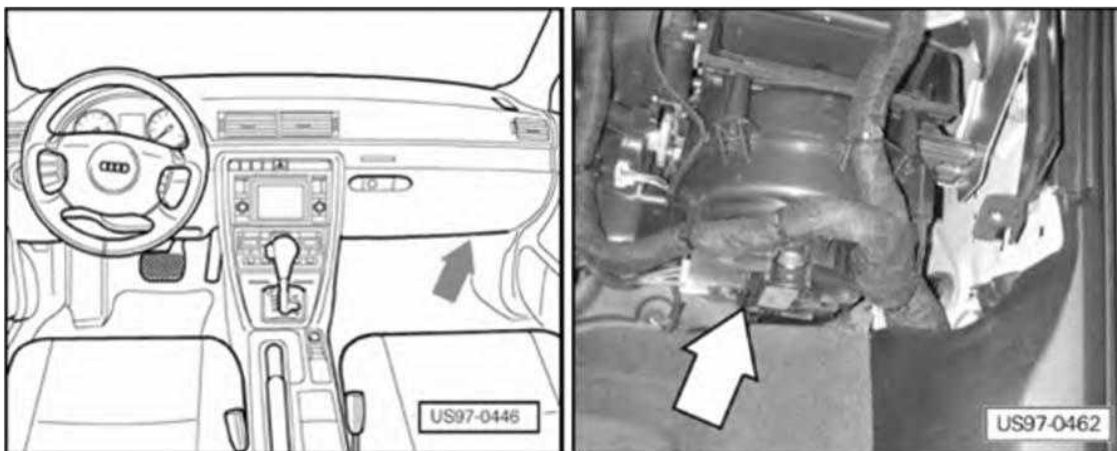

J126 Control module for fresh air blower

G00418626

 
Fig. 34: Below Right Side Of Dash
Courtesy of AUDI OF AMERICA, INC.

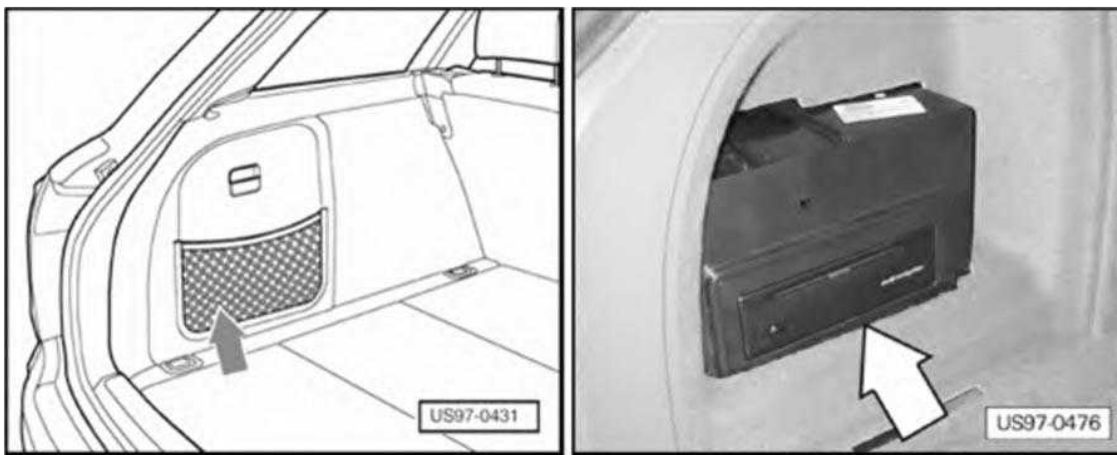

J401 Control module for navigation with CD-mechanism (Avant)

G00418627

 
Fig. 35: Left Side Of Cargo Area (Avant)
Courtesy of AUDI OF AMERICA, INC.

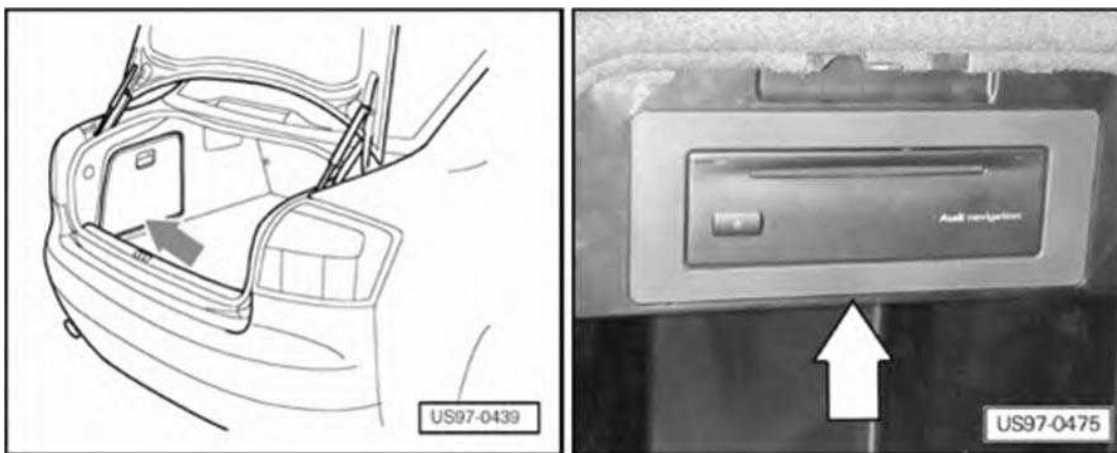

J401 Control module for navigation with CD-mechanism (Sedan)

G00418628

 
Fig. 36: Left Side Of Trunk (Sedan)
Courtesy of AUDI OF AMERICA, INC.

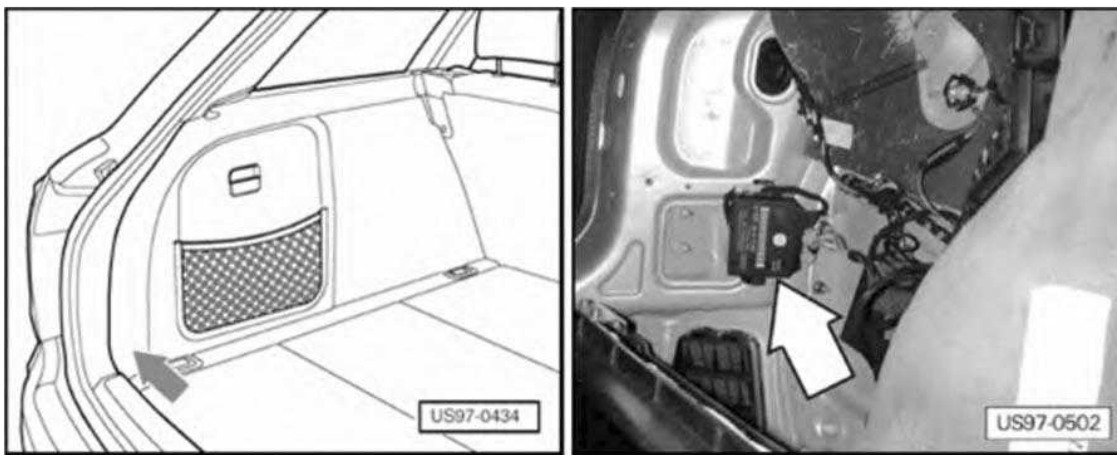

J446 Control module for parking aid (Avant)

G00418629

 
Fig. 37: Left Side Of Cargo Area (Avant)
Courtesy of AUDI OF AMERICA, INC.

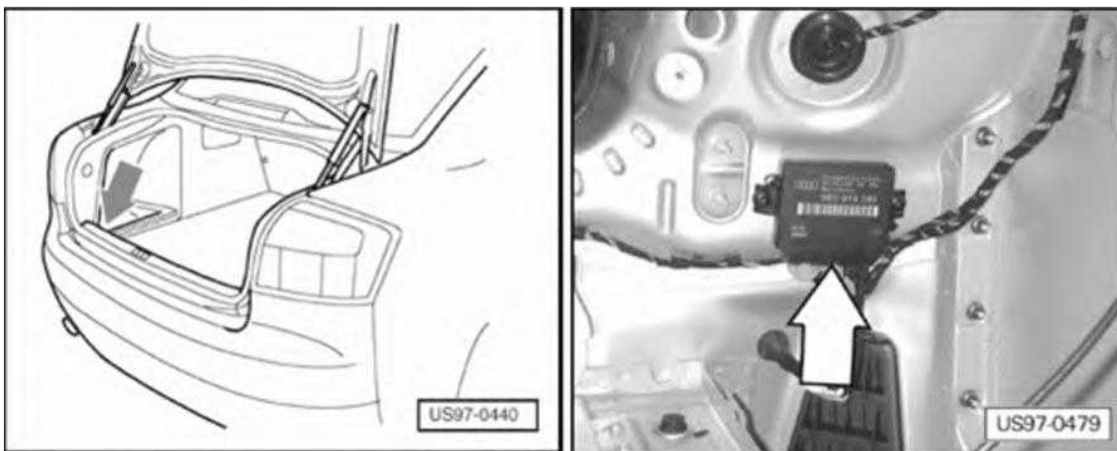

J446 Control module for parking aid (Sedan)

G00418630

 Fig. 38: Left Side Of Trunk
Courtesy of AUDI OF AMERICA, INC.


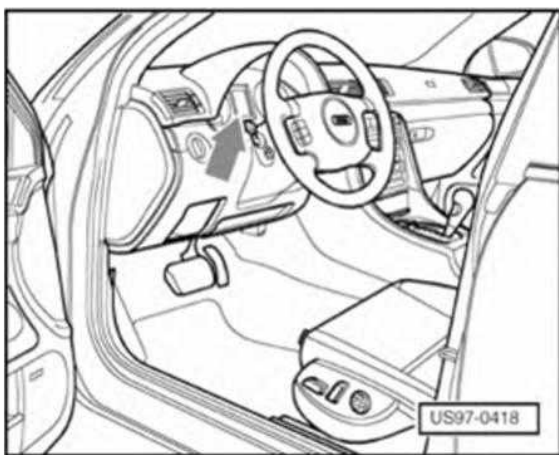


J285 Control module with indicator unit in instrument panel insert

G00418631

Fig. 39: Left Side Of Dash

  Courtesy of AUDI OF AMERICA, INC.

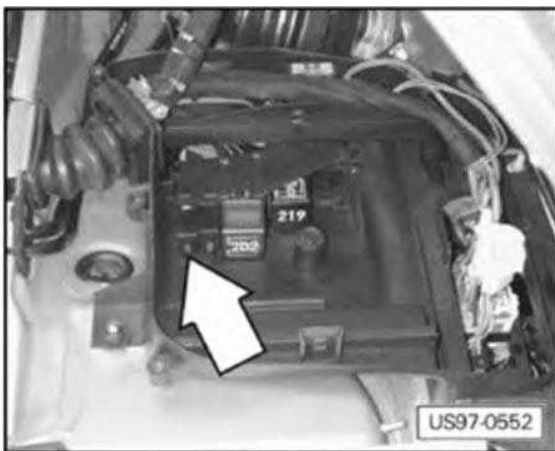
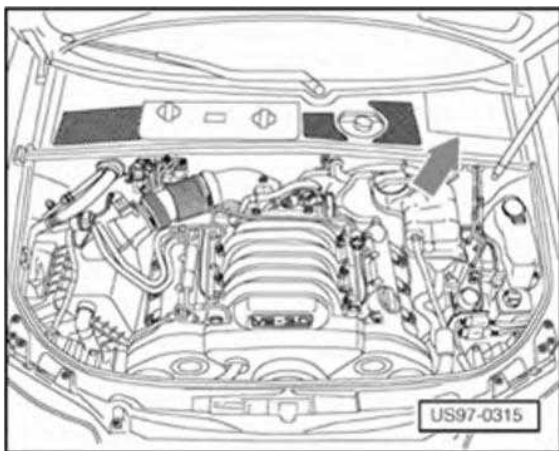


J151 Coolant Circulation Pump Relay

G00418635

Fig. 40: Left Rear Of Engine Compartment

  
Courtesy of AUDI OF AMERICA, INC.

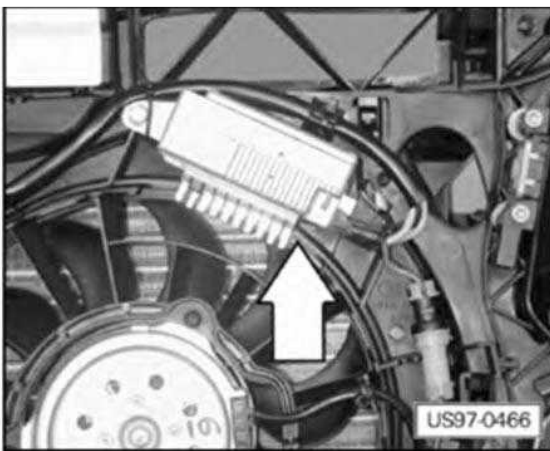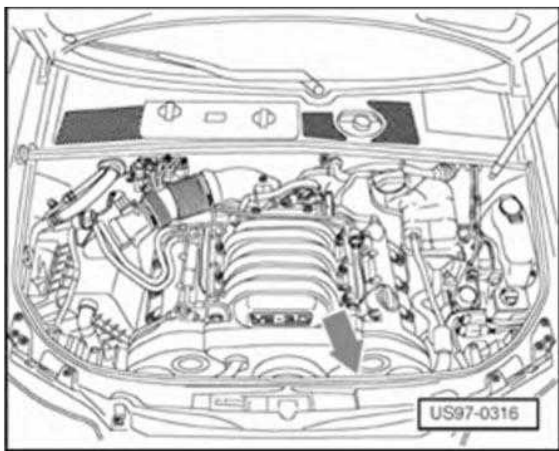

J293 Coolant FC (Fan Control) Control Module

G00418636

 
Fig. 41: Front Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

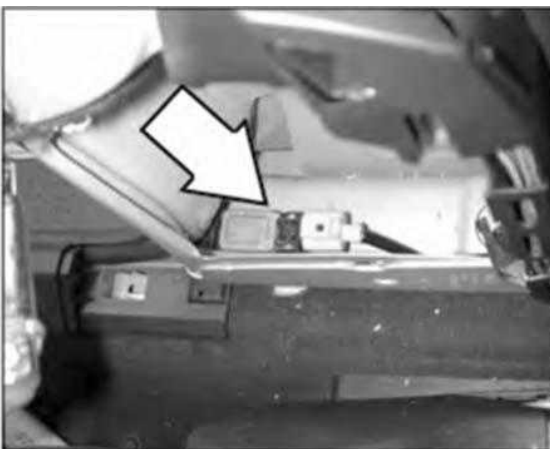

G179 Crash sensor for side airbag, driver's side

G00418637

 Fig. 42: Left "B" Pillar
Courtesy of AUDI OF AMERICA, INC.

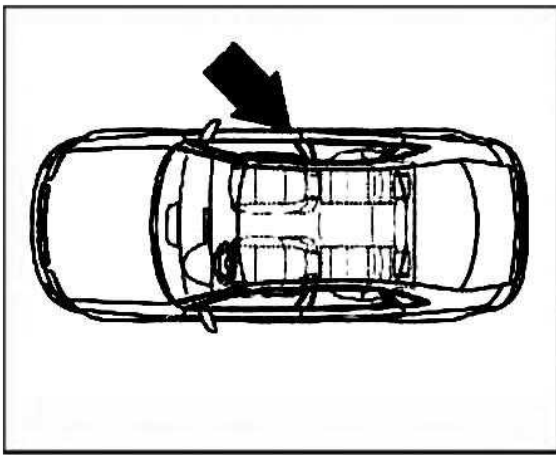


G180 Crash sensor for side airbag, passenger side

G00418638

Fig. 43: Right "B" Pillar

 Courtesy of AUDI OF AMERICA, INC.


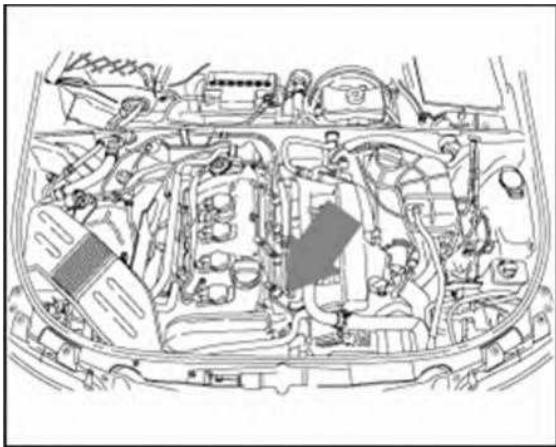


N30 Cylinder 1 Fuel Injector (1.8 liter turbo engine)

G00418639

Fig. 44: Top Of Engine (1.8L Turbo)

 
 
Courtesy of AUDI OF AMERICA, INC.

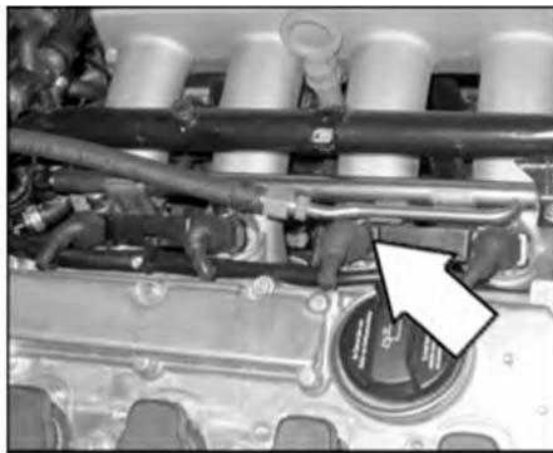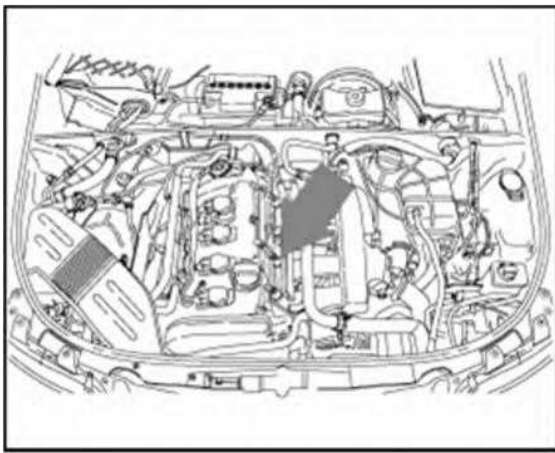

N31 **Cylinder 2 Fuel Injector (1.8 liter turbo engine)**

G00418641

 
 
Fig. 45: Top Of Engine (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

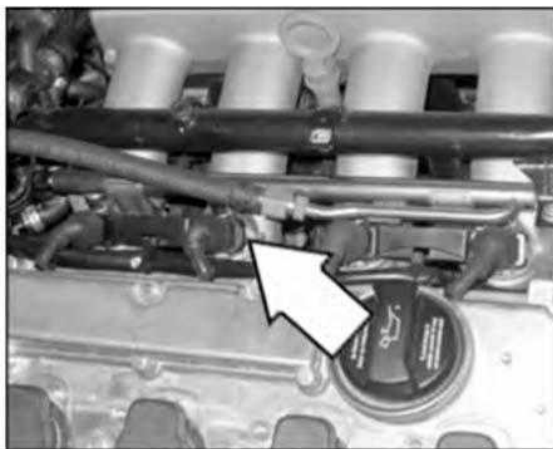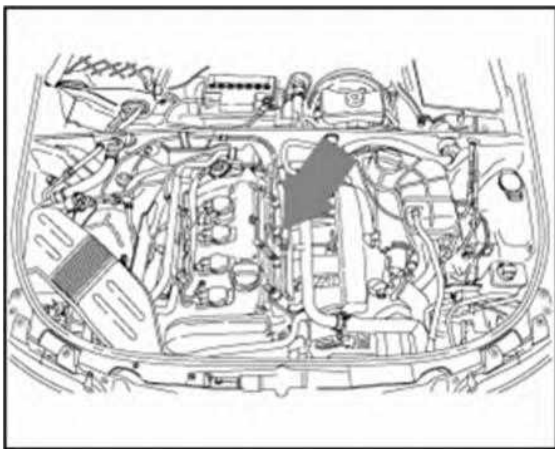

N32 **Cylinder 3 Fuel Injector (1.8 liter turbo engine)**

G00418643

  Fig. 46: Top Of Engine (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

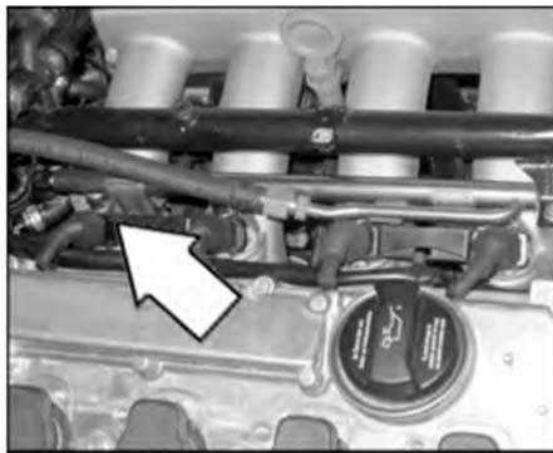
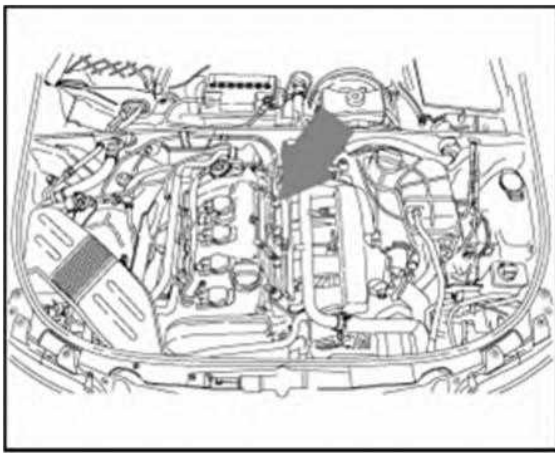


N33 **Cylinder 4 Fuel Injector (1.8 liter turbo engine)**

G00418645

Fig. 47: Top Of Engine (1.8L Turbo)

  Courtesy of AUDI OF AMERICA, INC.

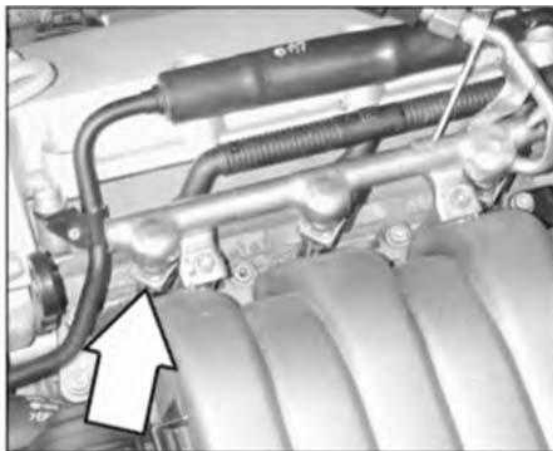
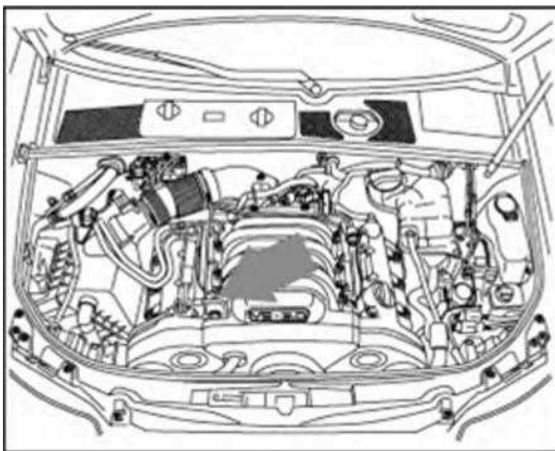


N30 **Cylinder 1 Fuel Injector (3.0 ltr. engine)**

G00418640

Fig. 48: Right Side Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

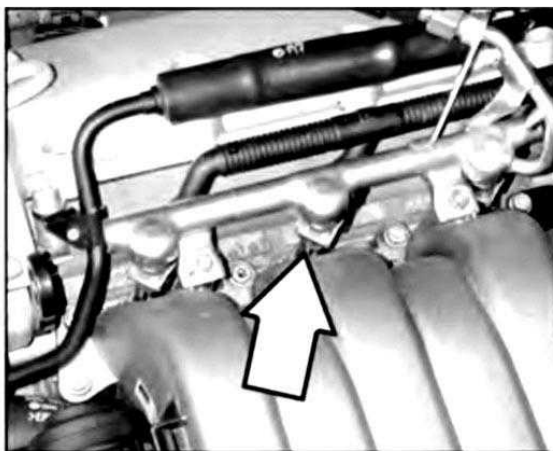
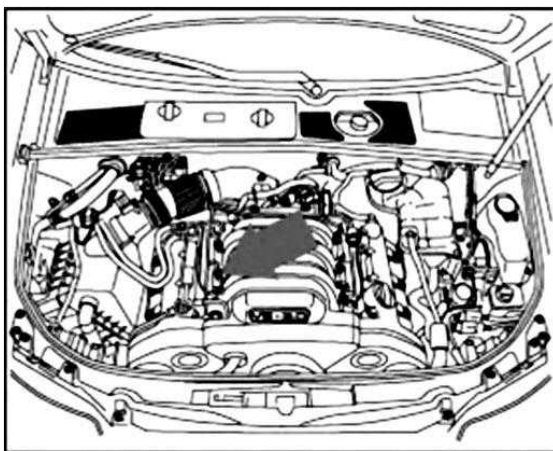


N31 **Cylinder 2 Fuel Injector (3.0 ltr. engine)**

G00418642

Fig. 49: Right Side Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

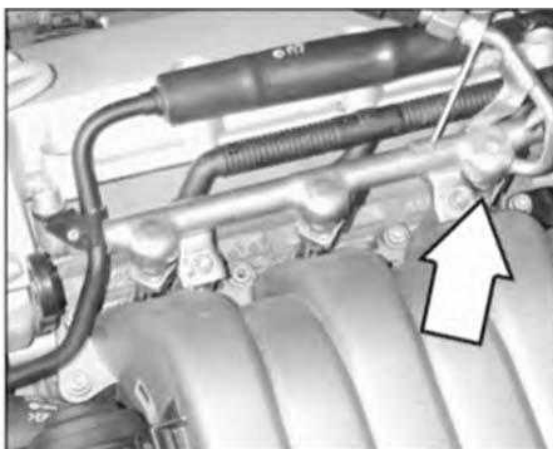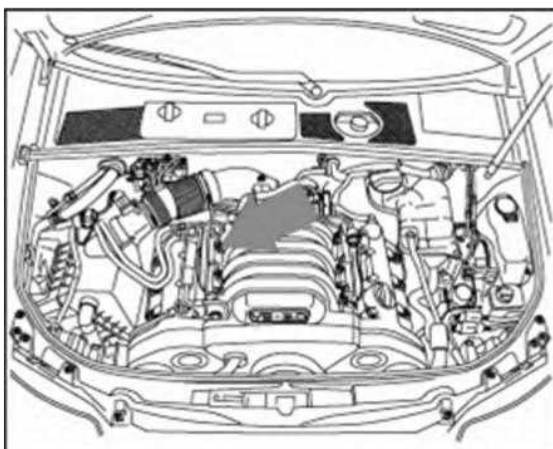


N32 **Cylinder 3 Fuel Injector (3.0 ltr. engine)**

G00418644

Fig. 50: Right Side Of Engine (3.0L)

 Courtesy of AUDI OF AMERICA, INC.


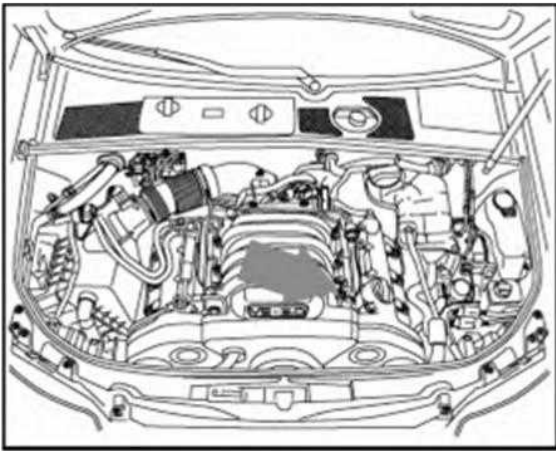


N33 **Cylinder 4 Fuel Injector (3.0 ltr. engine)**

G00418646

Fig. 51: Left Side Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

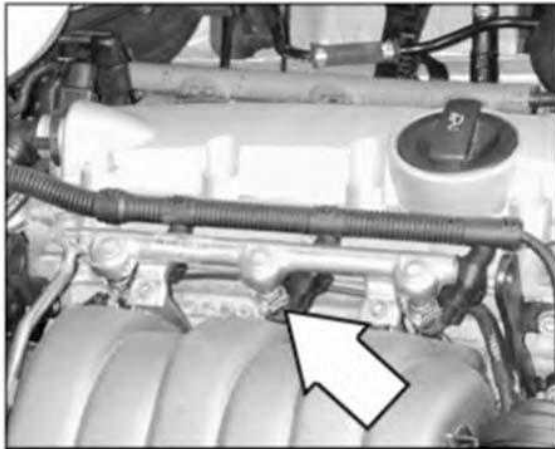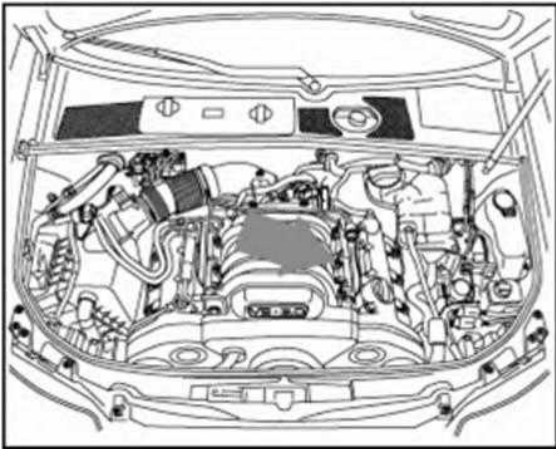


N83 **Cylinder 5 Fuel Injector (3.0 ltr. engine)**

G00418647

Fig. 52: Left Side Of Engine (3.0L)

 Courtesy of AUDI OF AMERICA, INC.

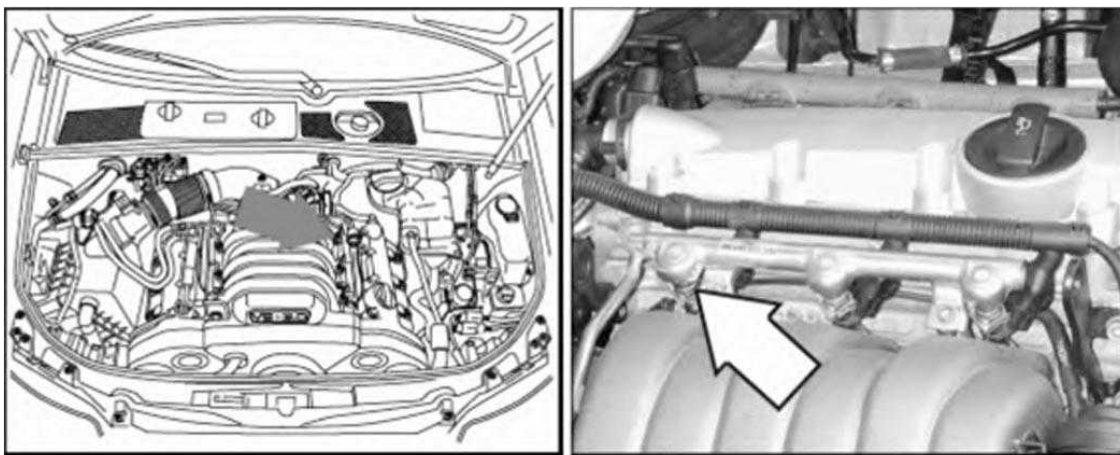


N84 **Cylinder 6 Fuel Injector (3.0 ltr. engine)**

G00418648

Fig. 53: Left Side Of Engine (3.0L)

 Courtesy of AUDI OF AMERICA, INC.

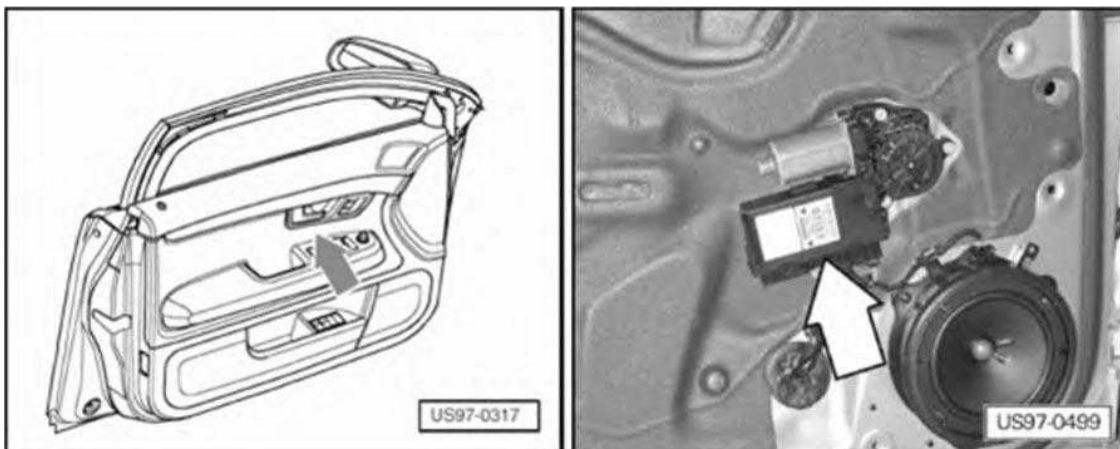


J386 **Door control module, driver side**

G00418649

Fig. 54: Driver's Door

 Courtesy of AUDI OF AMERICA, INC.

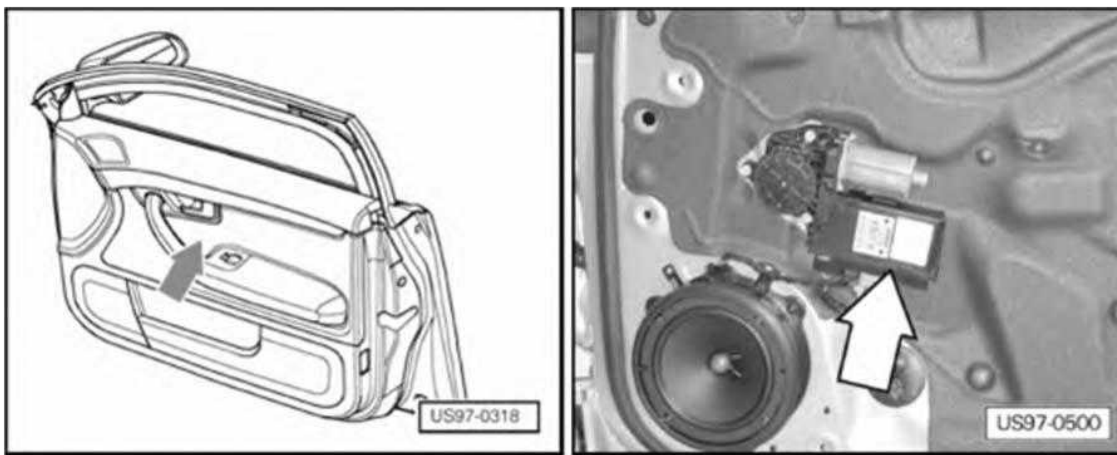


J387 Door control module, passenger side

G00418650

Fig. 55: Passenger's Door

 Courtesy of AUDI OF AMERICA, INC.

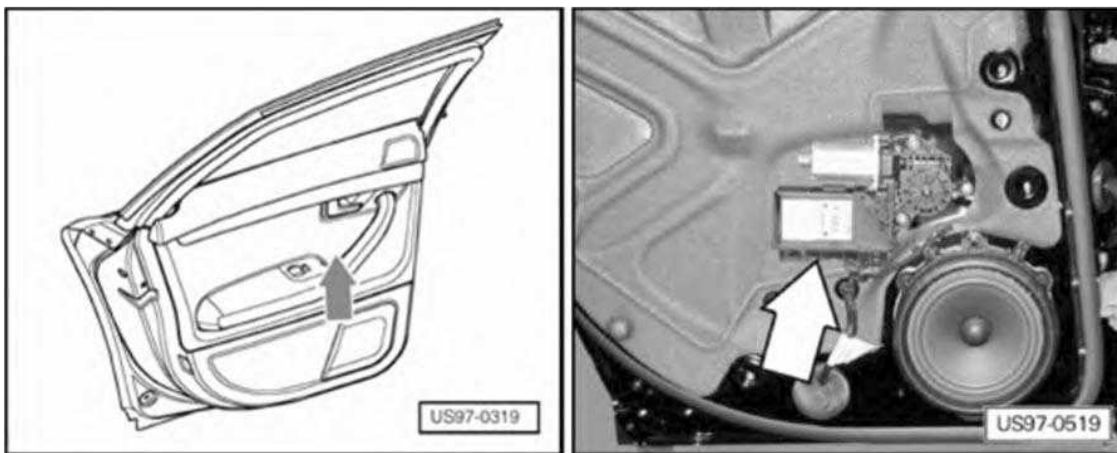


J388 Door control module, rear, left

G00418651

Fig. 56: Left Rear Door

 Courtesy of AUDI OF AMERICA, INC.


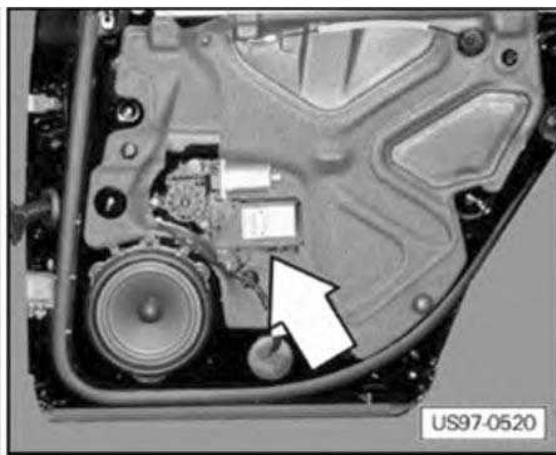


J389 Door control module, rear, right

G00418652

Fig. 57: Right Rear Door

  Courtesy of AUDI OF AMERICA, INC.

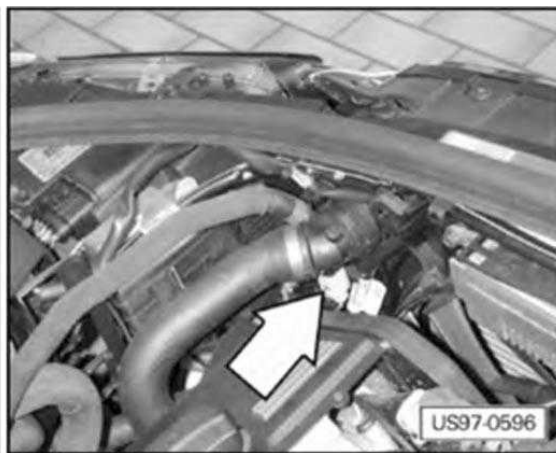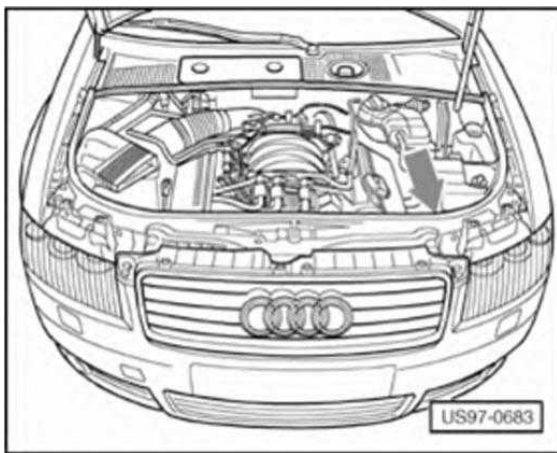


G283 Drivers Front Airbag Crash Sensor

G00418653

Fig. 58: Left Front Of Engine Compartment

 
Courtesy of AUDI OF AMERICA, INC.

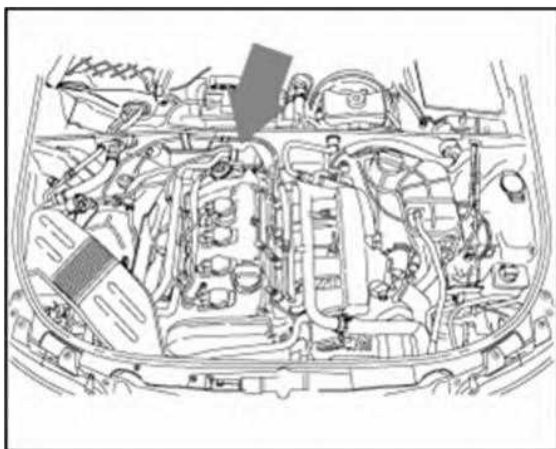

G62 Engine Coolant Temperature (ECT) Sensor (1.8 liter turbo engine)

G00418654


 
Fig. 59: Rear Of Engine (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

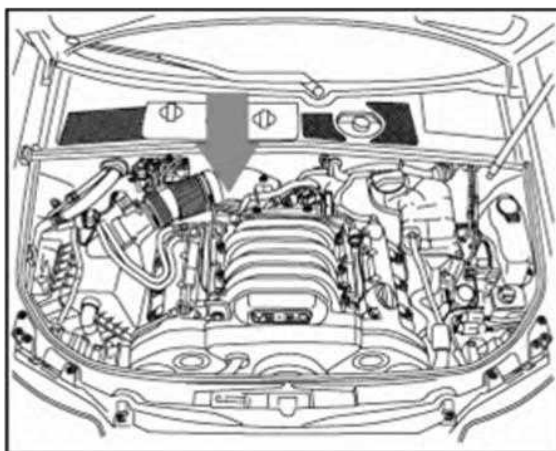

G62 Engine Coolant Temperature (ECT) Sensor (3.0 ltr. engine)

G00418655

 
 
Fig. 60: Right Rear Of Engine (3.0L)
Courtesy of AUDI OF AMERICA, INC.

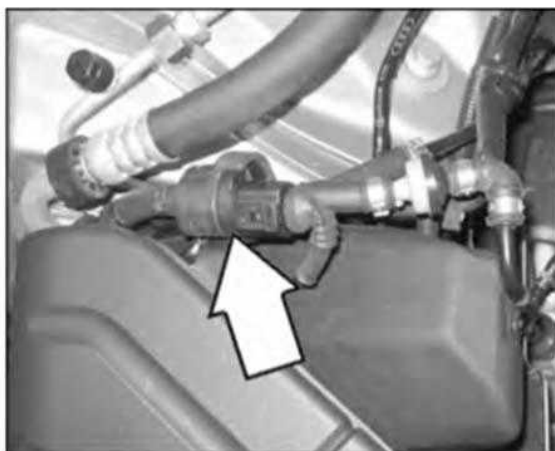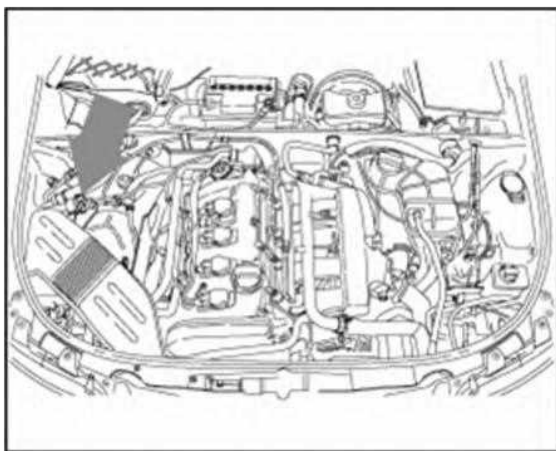

N80 **Evaporative Emission (EVAP) Canister Purge Regulator Valve (1.8 liter turbo engine)**

G00418656

  
Fig. 61: Right Side Of Engine Compartment (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

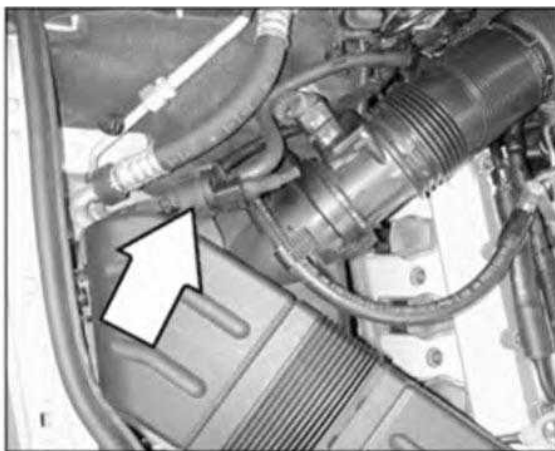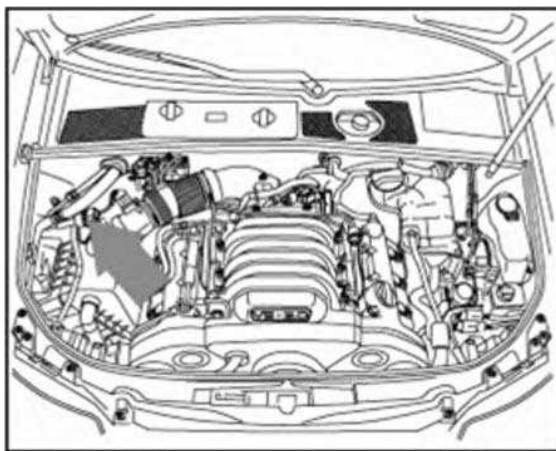

N80 **Evaporative Emission (EVAP) Canister Purge Regulator Valve (3.0 ltr. engine)**

G00418657

 Fig. 62: Right Side Of Engine Compartment (3.0L)
Courtesy of AUDI OF AMERICA, INC.

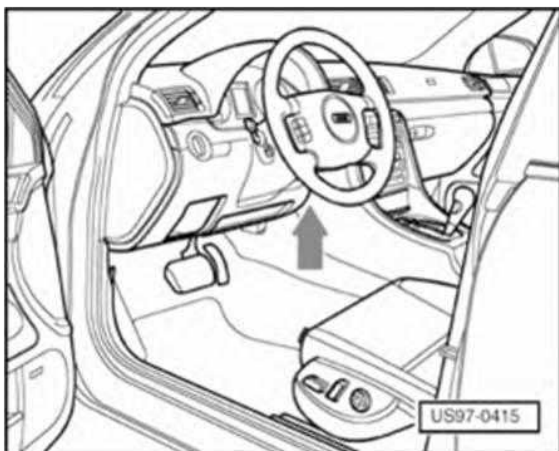


H22 Front Parking Aid Warning Buzzer

G00418658

Fig. 63: Behind Center Of Dash

 Courtesy of AUDI OF AMERICA, INC.


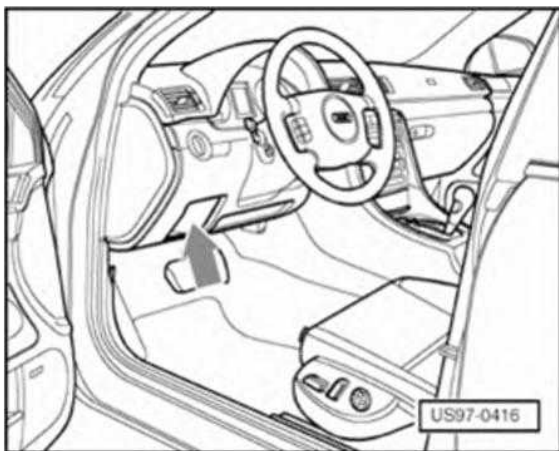


J17 Fuel Pump (FP) Relay

G00418659

Fig. 64: Under Left Side Of Dash

  Courtesy of AUDI OF AMERICA, INC.

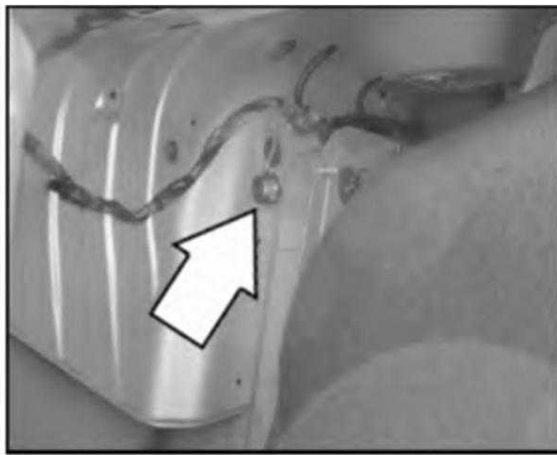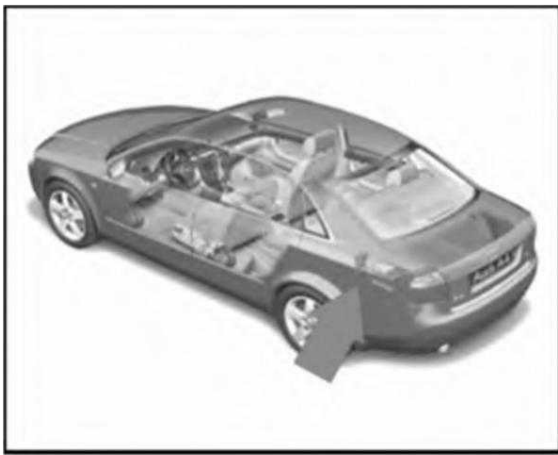



50

Ground Connection

G00418660

Fig. 65: Left Rear Of Vehicle

  Courtesy of AUDI OF AMERICA, INC.

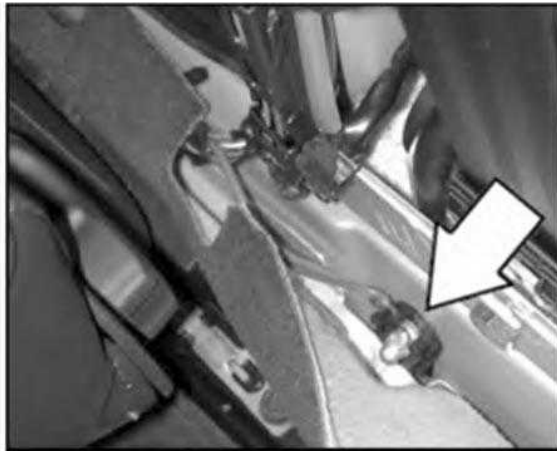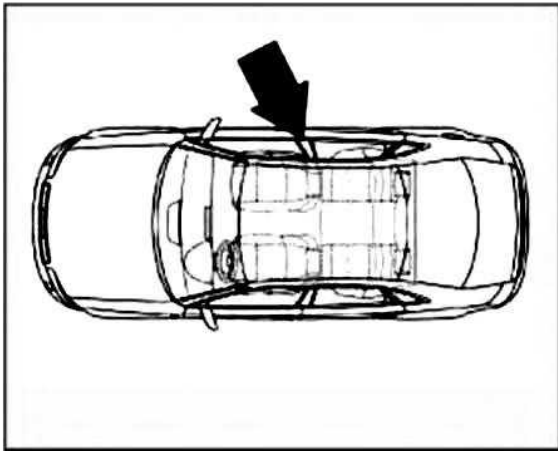


78

Ground Connection

G00418661

Fig. 66: Right "B" Pillar

 Courtesy of AUDI OF AMERICA, INC.

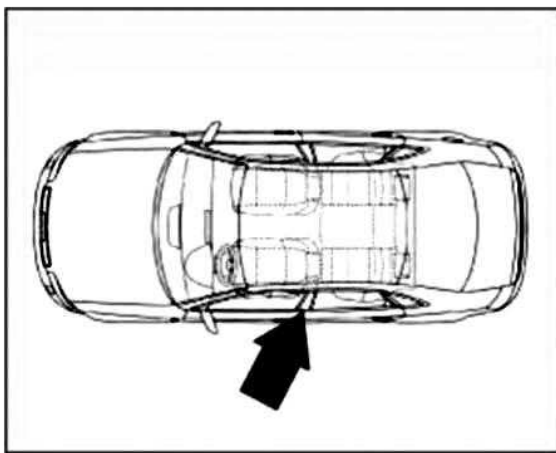


77

Ground Connection

G00418662

Fig. 67: Left "B" Pillar

 Courtesy of AUDI OF AMERICA, INC.

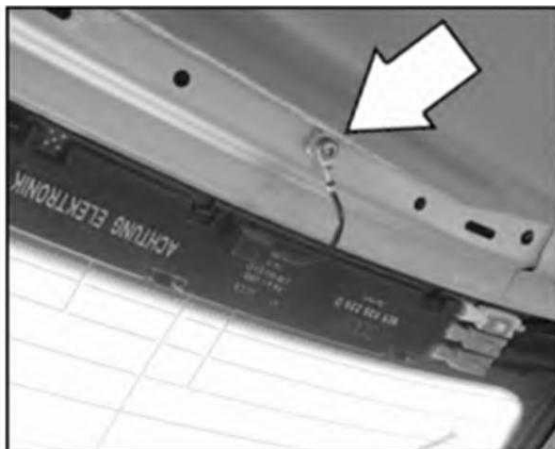



73

Ground Connection

G00418663

Fig. 68: Rear Of Roof

  
Courtesy of AUDI OF AMERICA, INC.

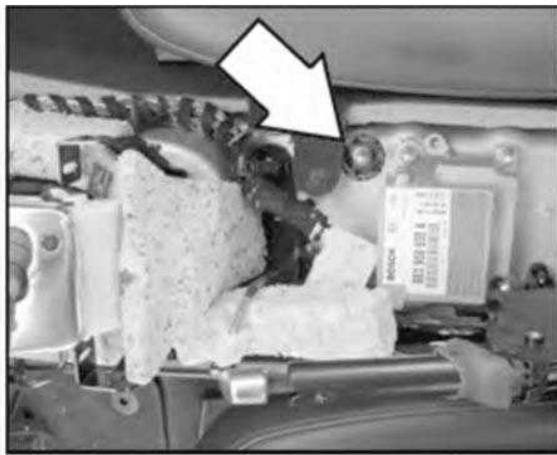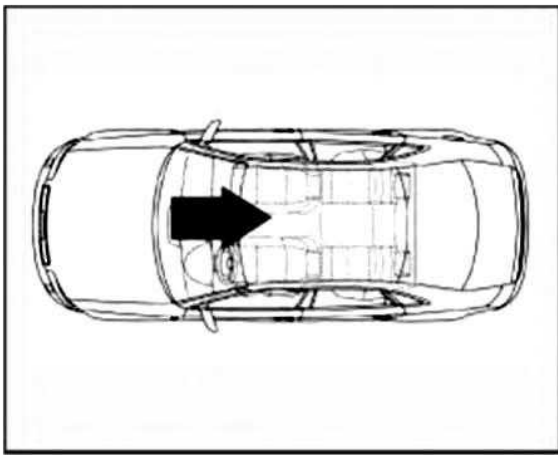

610 **Ground Connection**

G00418664


 
Fig. 69: Center Of Vehicle
Courtesy of AUDI OF AMERICA, INC.

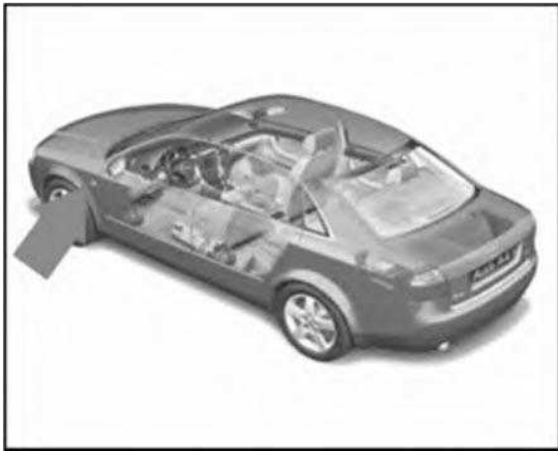

44 **Ground Connection**

G00418665

  Fig. 70: Left Kick Panel
Courtesy of AUDI OF AMERICA, INC.

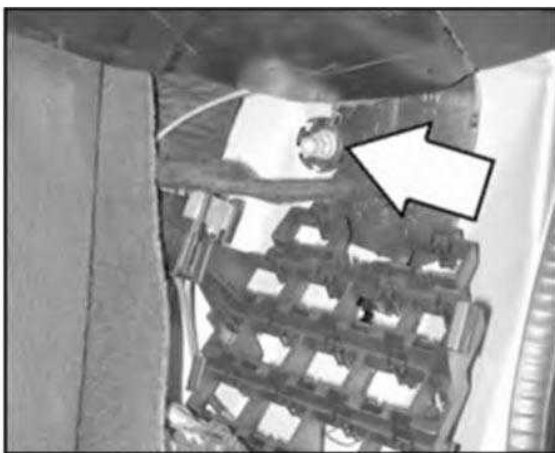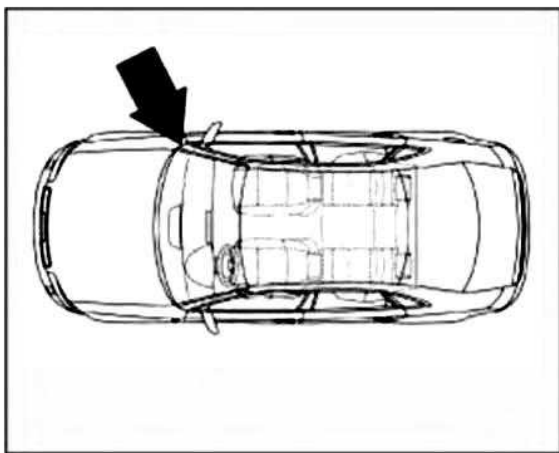



43

Ground Connection

G00418666

Fig. 71: Right Kick Panel

  Courtesy of AUDI OF AMERICA, INC.

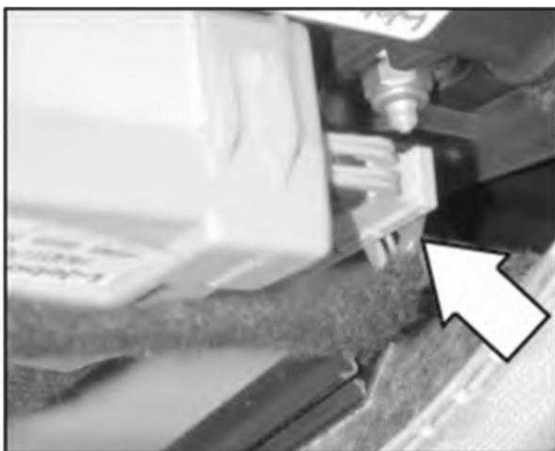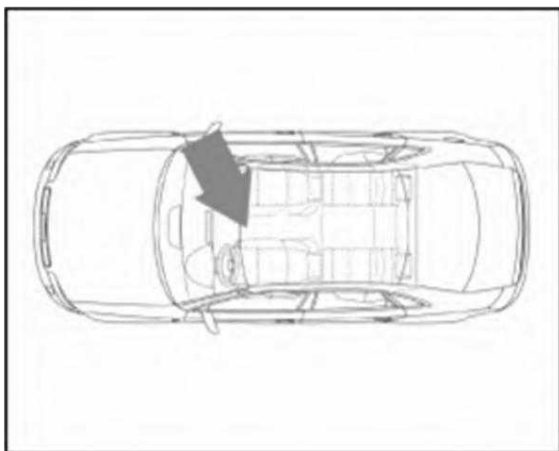


347

Ground Connection

G00418667

Fig. 72: Center Of Vehicle

 Courtesy of AUDI OF AMERICA, INC.

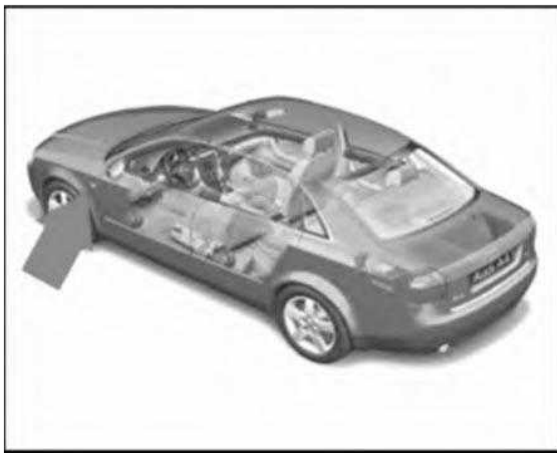

32


Ground Connection

G00418668



Fig. 73: Left Kick Panel

 Courtesy of AUDI OF AMERICA, INC.

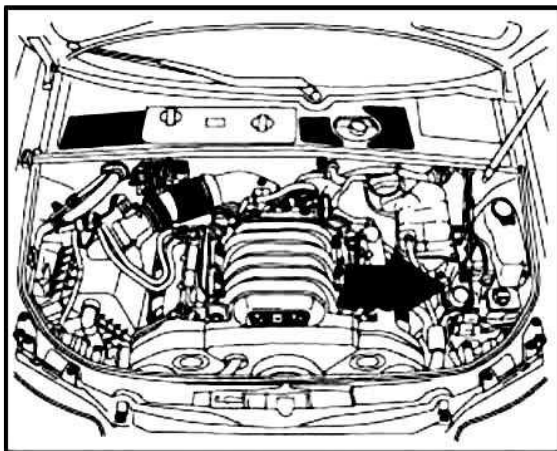

26

Ground Connection

G00418669


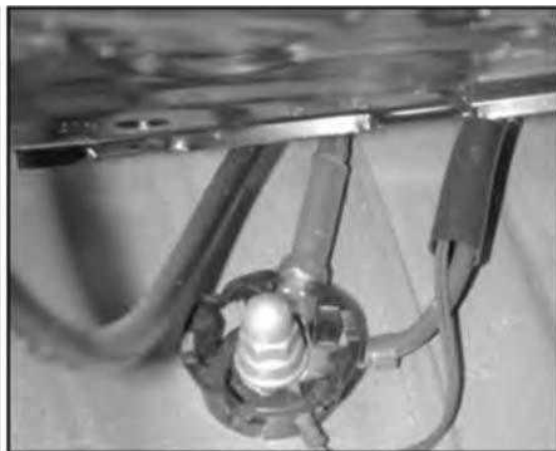 


Fig. 74: Left Side Of Engine Compartment

 
Courtesy of AUDI OF AMERICA, INC.

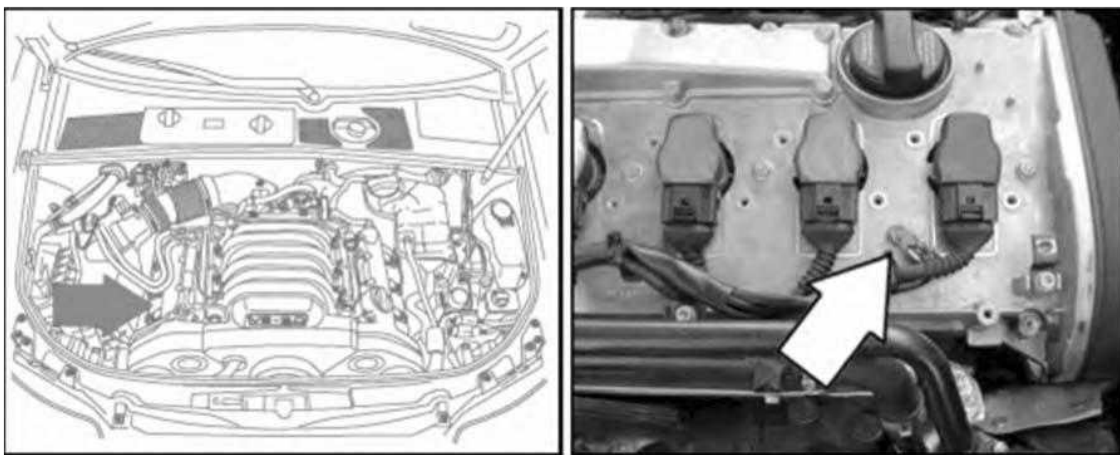

18 Ground Connection (1.8 ltr. engine)

G00418670

 
Fig. 75: Right Side Of Engine (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

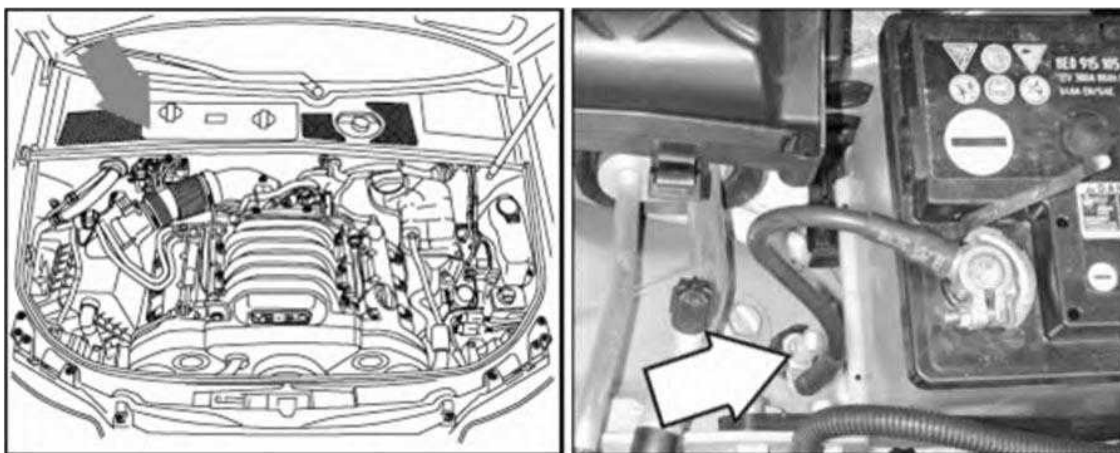

11 Ground connection (in battery box)

G00418671


 
Fig. 76: Right Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

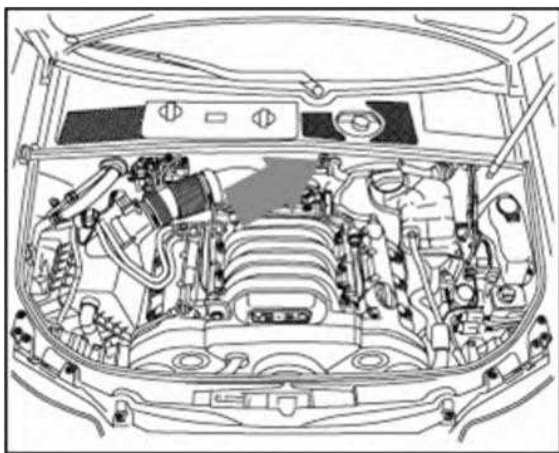

12 Ground connection (in engine compartment, left)

G00418672

 
 
Fig. 77: Left Rear Of Engine Compartment
 Courtesy of AUDI OF AMERICA, INC.

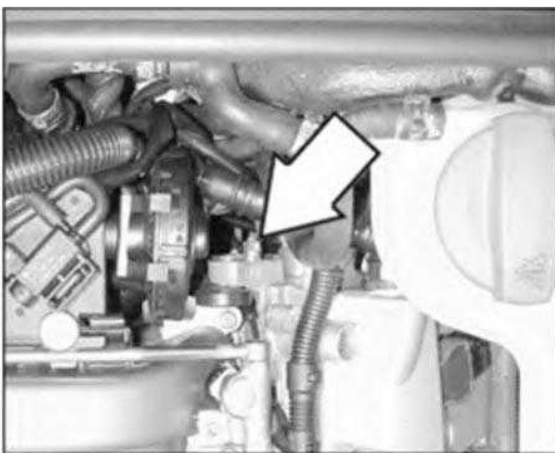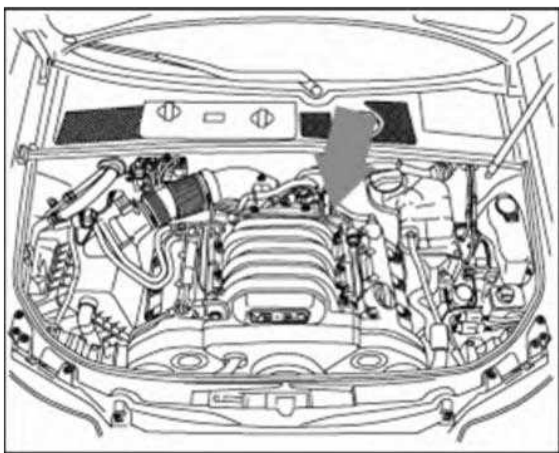

18 Ground connection (on engine block) (3.0 ltr. engine)

G00418673

  Fig. 78: Left Rear Of Engine (3.0L)
 Courtesy of AUDI OF AMERICA, INC.

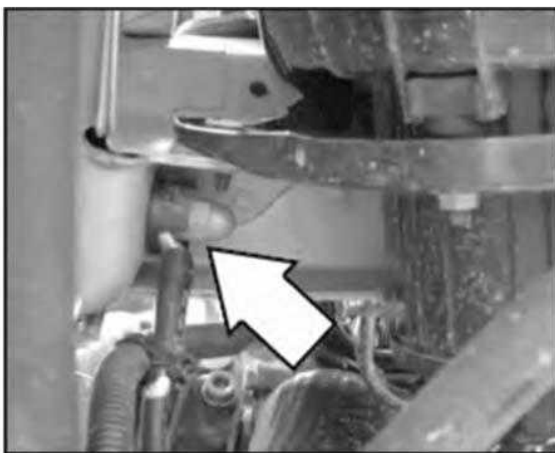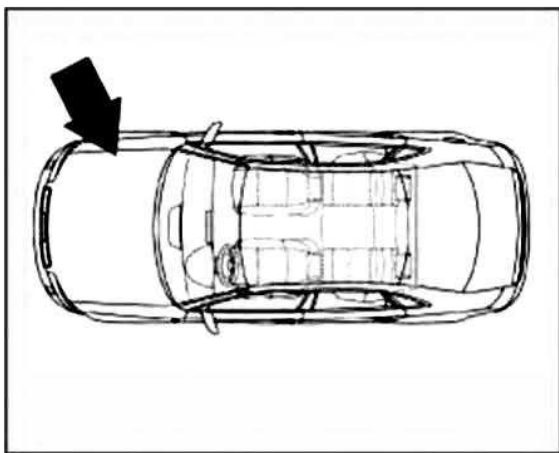


3

Ground Strap

G00418679

 Fig. 79: Right Side Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.


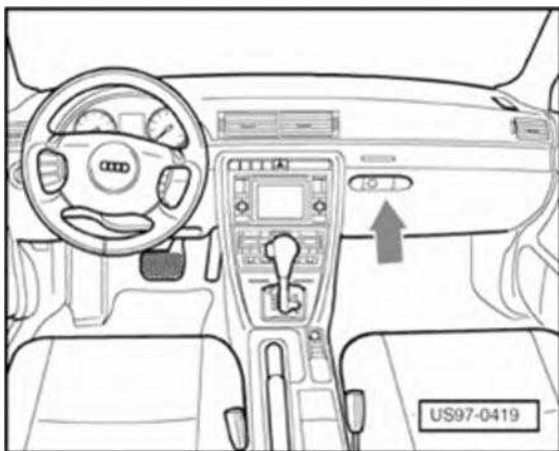


J431

Headlight Range Control Module

G00418680

 
 
Fig. 80: Behind Right Side Of Dash
Courtesy of AUDI OF AMERICA, INC.

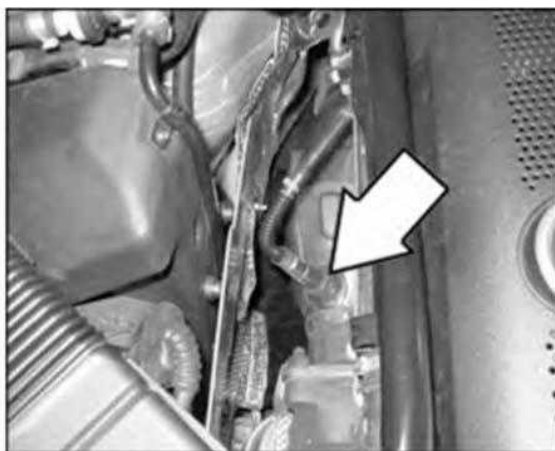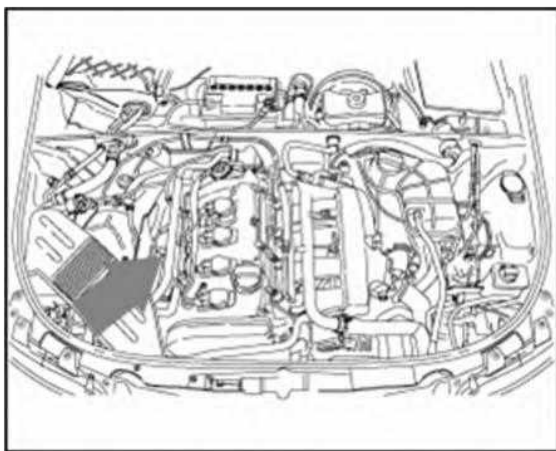

G39 Heated Oxygen Sensor (HO2S) (1.8 liter turbo engine)

G00418681

  
Fig. 81: Right Side Of Engine Compartment (1.8L Turbo)
 Courtesy of AUDI OF AMERICA, INC.

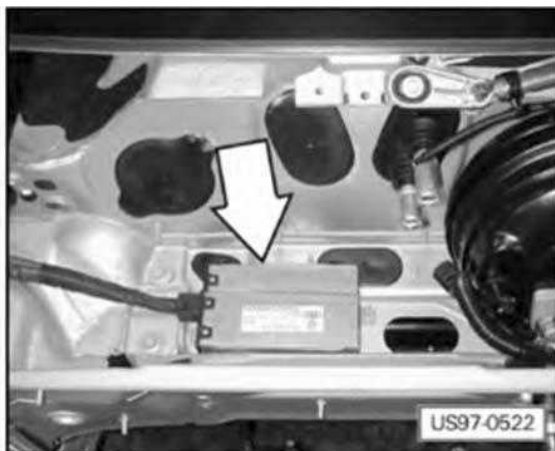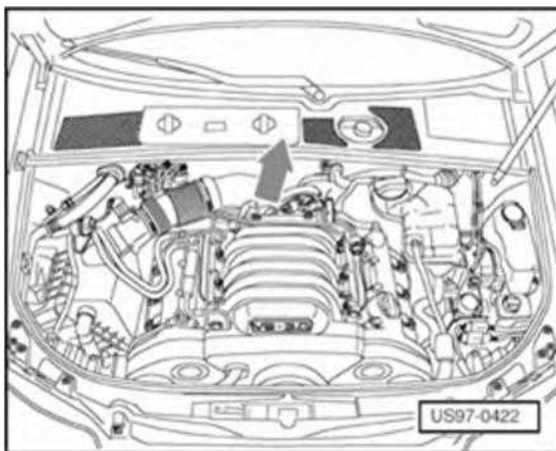

J505 Heated Windshield Control Module

G00418682

 
Fig. 82: Rear Center Of Engine Compartment
 Courtesy of AUDI OF AMERICA, INC.

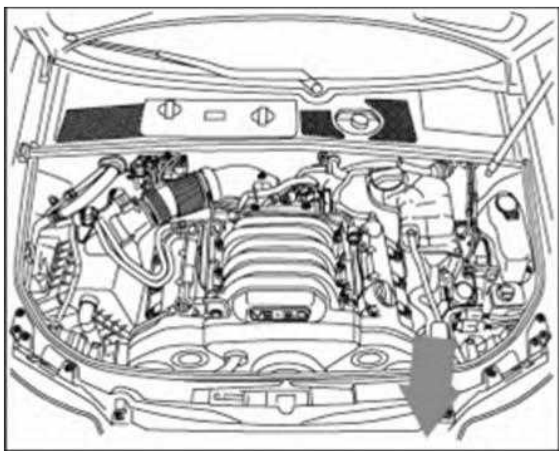

G65 High Pressure Sensor

G00418683


 
Fig. 83: Left Side Of A/C Condenser
Courtesy of AUDI OF AMERICA, INC.

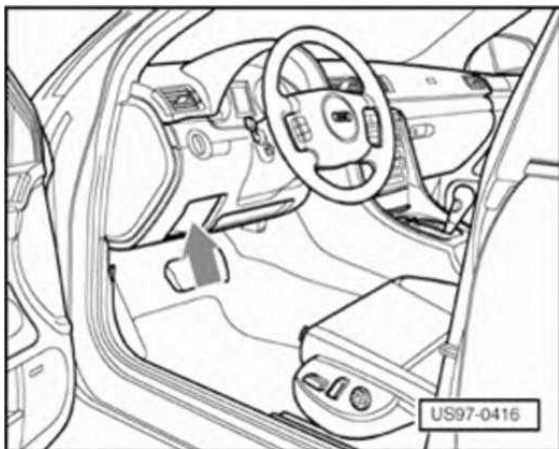

J4 Horn Relay

G00418684

 
 
Fig. 84: Left Side Of Dash
Courtesy of AUDI OF AMERICA, INC.

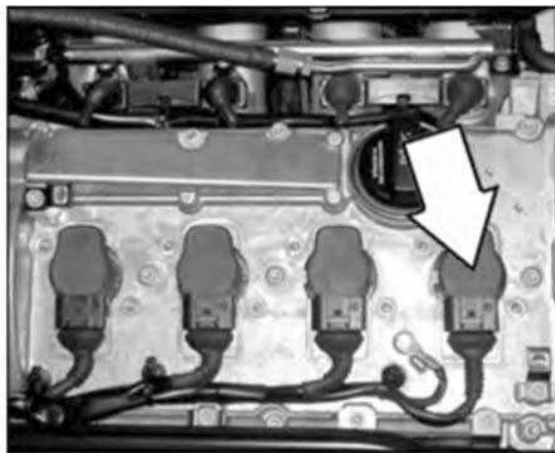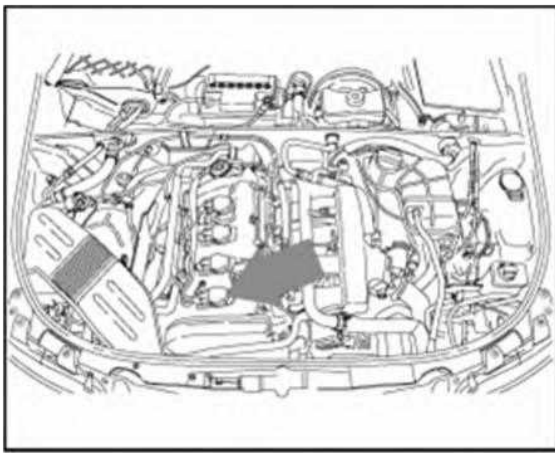

N70 Ignition Coil 1 with Power Output Stage (1.8 liter turbo engine)

G00418685

 
 
Fig. 85: Top Of Engine (1.8L Turbo)
 Courtesy of AUDI OF AMERICA, INC.

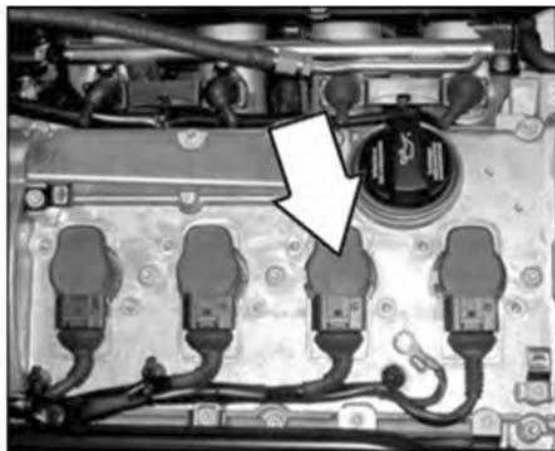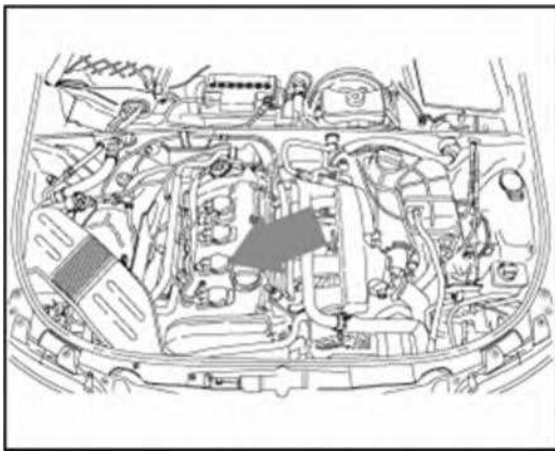

N127 Ignition Coil 2 with Power Output Stage (1.8 liter turbo engine)

G00418687

 
 
Fig. 86: Top Of Engine (1.8L Turbo)
 Courtesy of AUDI OF AMERICA, INC.

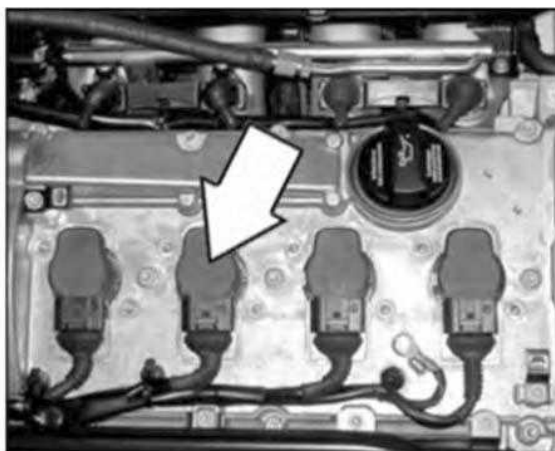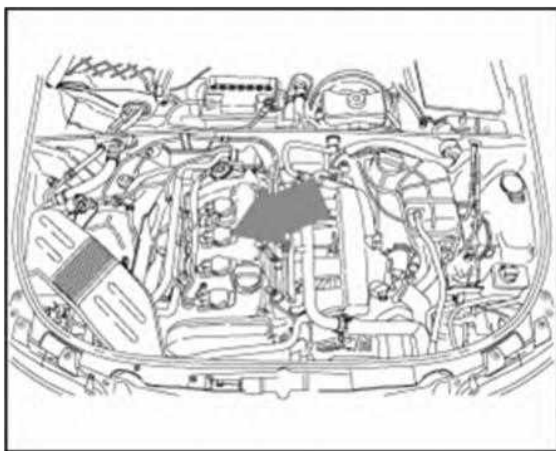

N291 Ignition Coil 3 with Power Output Stage (1.8 liter turbo engine)

G00418689

 
 
Fig. 87: Top Of Engine (1.8L Turbo)
 Courtesy of AUDI OF AMERICA, INC.

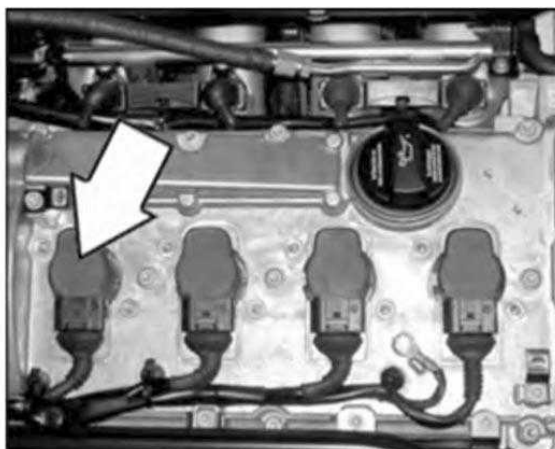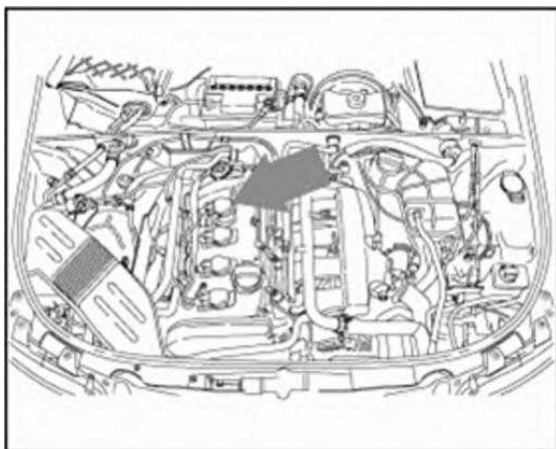

N292 Ignition Coil 4 with Power Output Stage (1.8 liter turbo engine)

G00418691

 
 
Fig. 88: Top Of Engine (1.8L Turbo)
 Courtesy of AUDI OF AMERICA, INC.

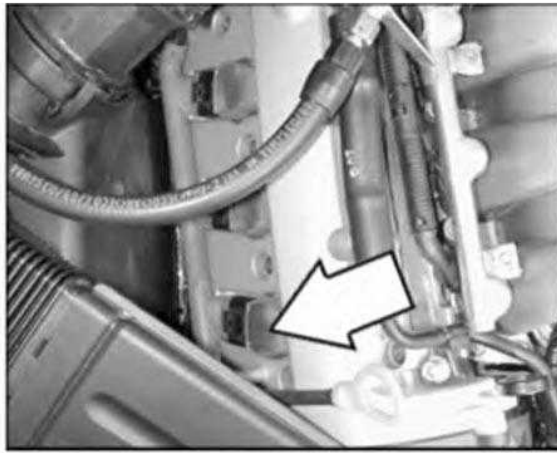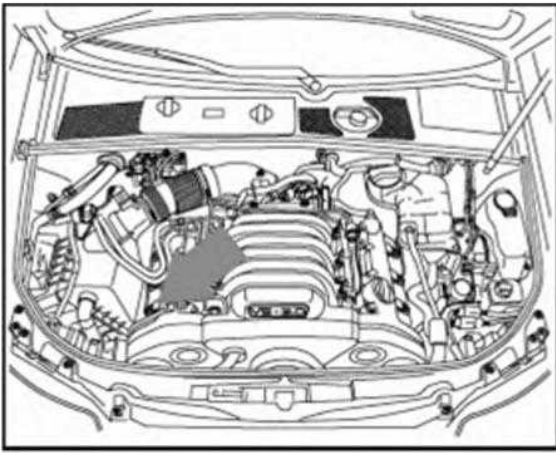

N70 Ignition Coil 1 with Power Output Stage (3.0 ltr. engine)

G00418686

 
 
Fig. 89: Right Side Of Engine (3.0L)
 Courtesy of AUDI OF AMERICA, INC.

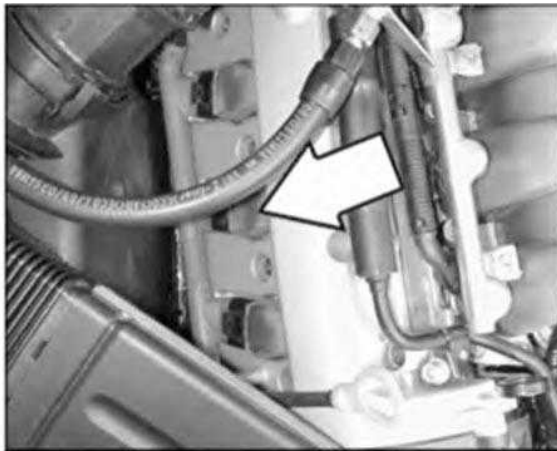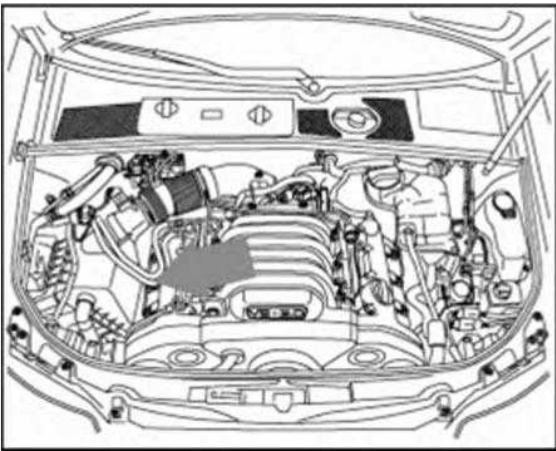

N127 Ignition Coil 2 with Power Output Stage (3.0 ltr. engine)

G00418688

  Fig. 90: Right Side Of Engine (3.0L)
 Courtesy of AUDI OF AMERICA, INC.

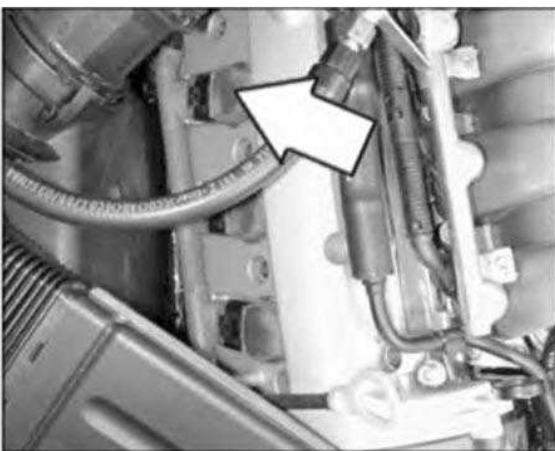
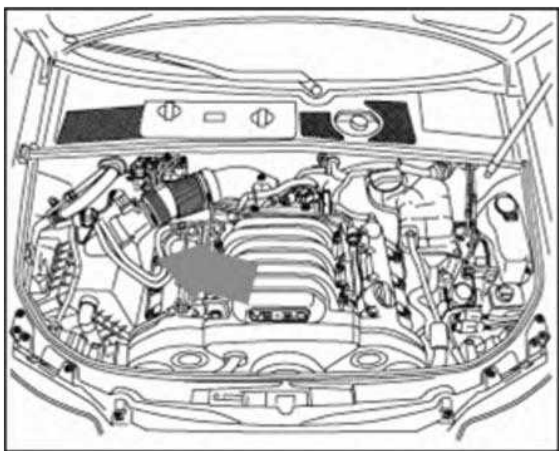


N291 Ignition Coil 3 with Power Output Stage (3.0 ltr. engine)

G00418690

Fig. 91: Right Side Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

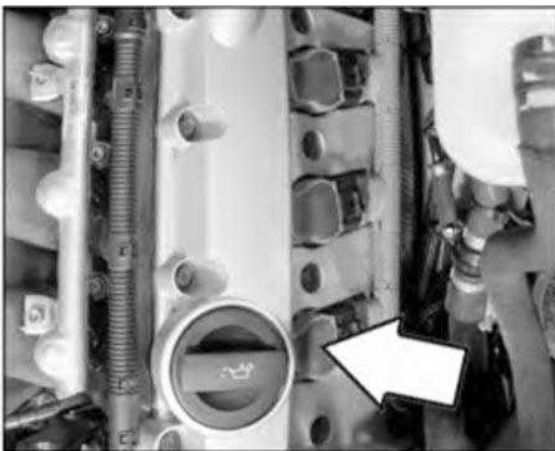
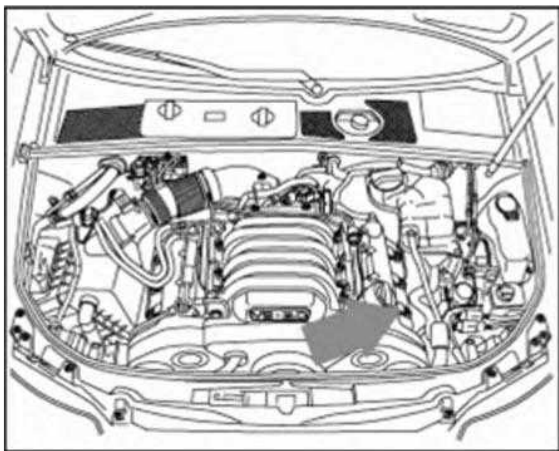


N292 Ignition Coil 4 with Power Output Stage (3.0 ltr. engine)

G00418692

Fig. 92: Left Side Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

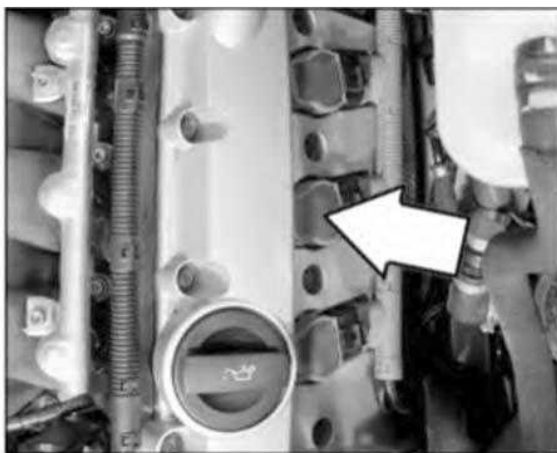
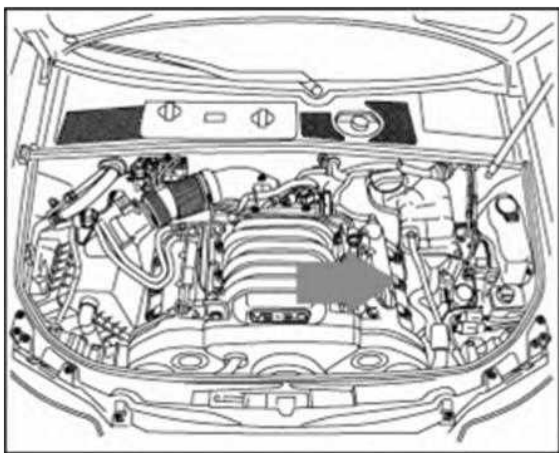


N323 Ignition Coil 5 with Power Output Stage (3.0 ltr. engine)

G00418693

Fig. 93: Left Side Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

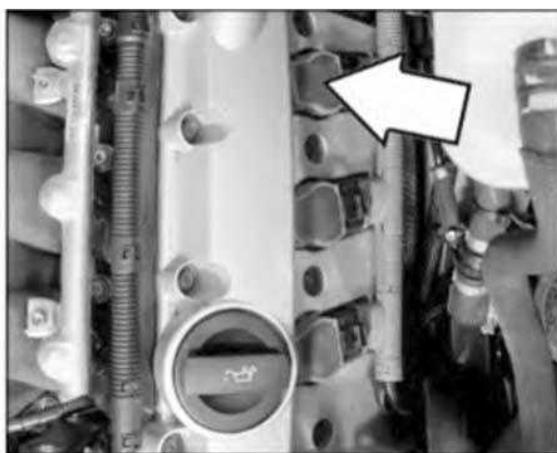
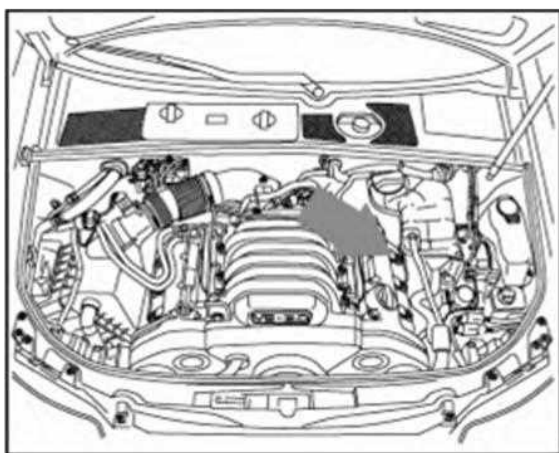


N324 Ignition Coil 6 with Power Output Stage (3.0 ltr. engine)

G00418694

Fig. 94: Left Side Of Engine (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

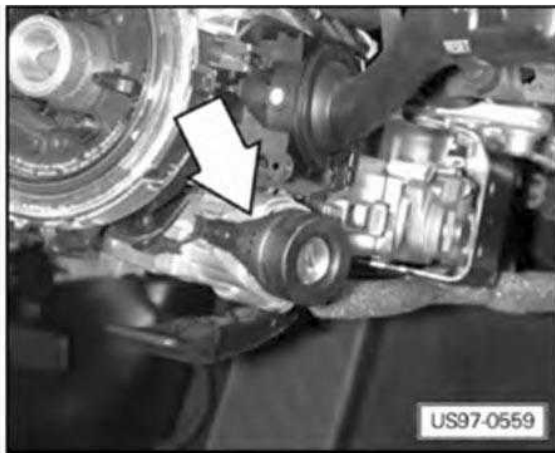
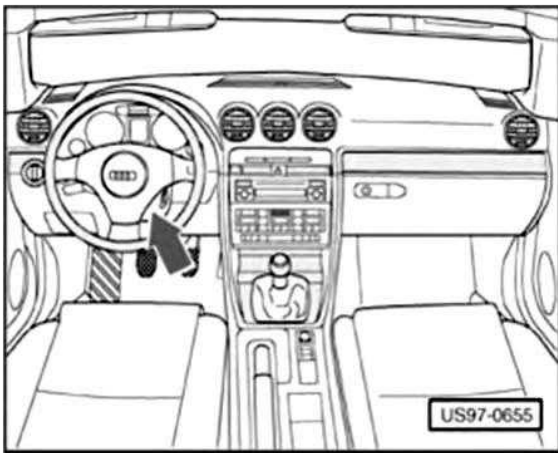


D2 Induction Coil of Anti-theft Immobilizer

G00418695

Fig. 95: Steering Column

  Courtesy of AUDI OF AMERICA, INC.

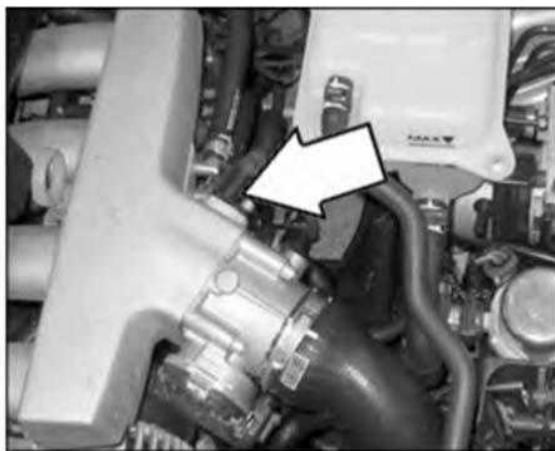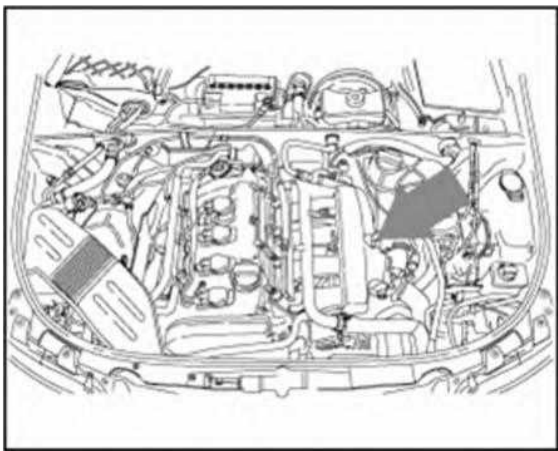


G42 Intake Air Temperature (IAT) Sensor (1.8 liter turbo engine)

G00418696

Fig. 96: Left Side Of Engine (1.8L Turbo)

 Courtesy of AUDI OF AMERICA, INC.

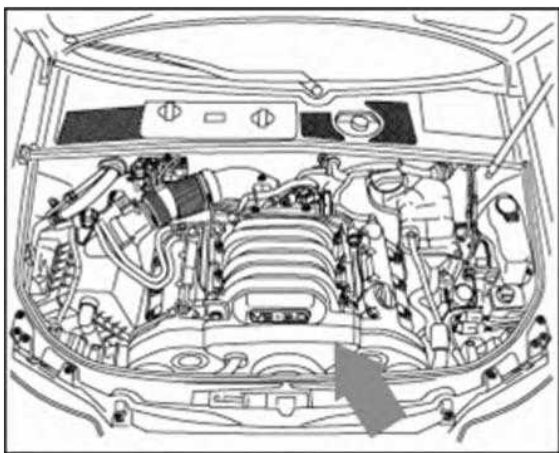


N156 Intake Manifold Change-over Valve (3.0 ltr. engine)

G00418697

Fig. 97: Front Of Engine (3.0L)

 Courtesy of AUDI OF AMERICA, INC.


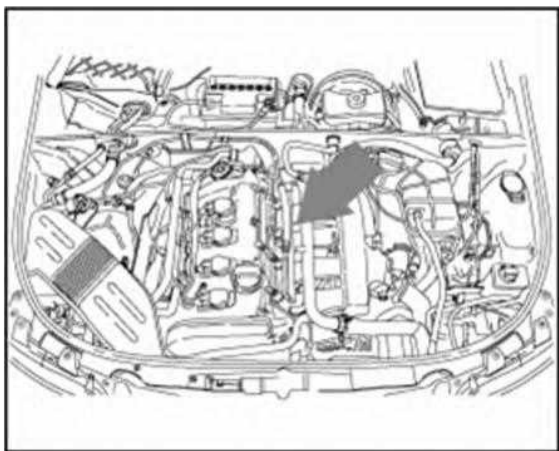


G61 Knock Sensor (KS) 1 (1.8 liter turbo engine)

G00418698

Fig. 98: Top Of Engine (1.8L Turbo)

  
Courtesy of AUDI OF AMERICA, INC.

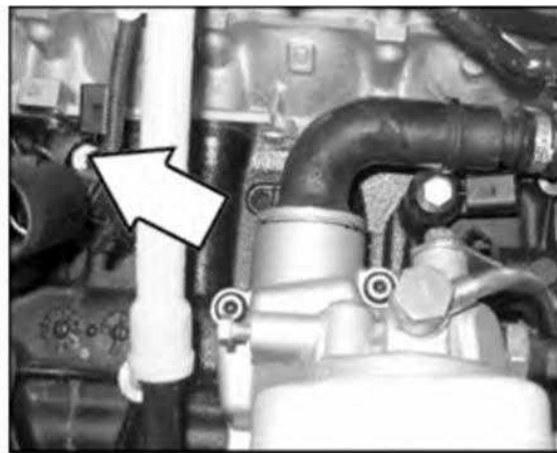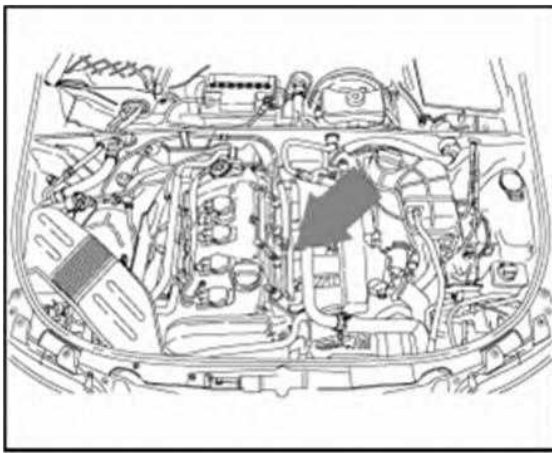

G66 Knock Sensor (KS) 2 (1.8 liter turbo engine)

G00418699

 
Fig. 99: Top Of Engine (1.8L Turbo)
 Courtesy of AUDI OF AMERICA, INC.

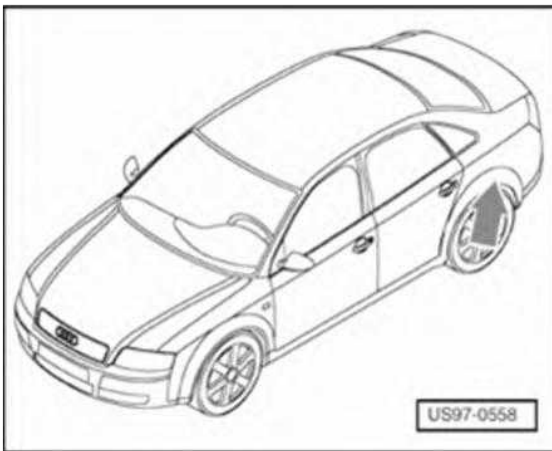

V144 Leak detection pump (LDP)

G00418700

 Fig. 100: Left Rear Wheel Well
 Courtesy of AUDI OF AMERICA, INC.

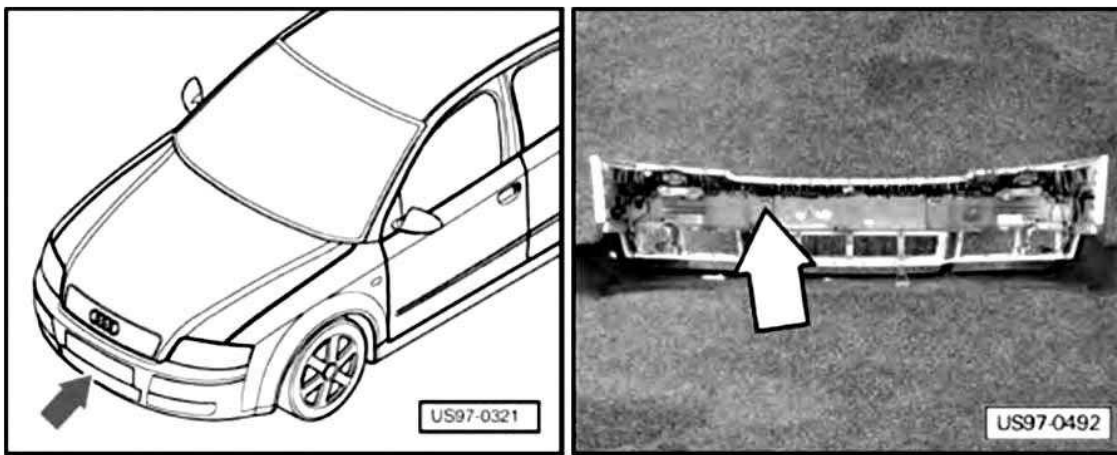


G254 Left Front Center Parking Aid Sensor

G00418701

Fig. 101: Front Bumper

 Courtesy of AUDI OF AMERICA, INC.

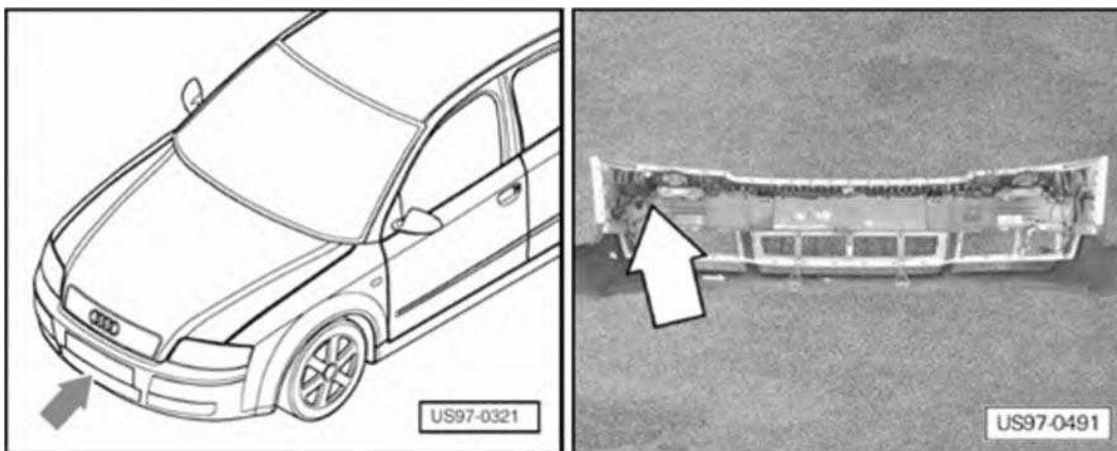


G255 Left Front Parking Aid Sensor

G00418702

Fig. 102: Front Bumper

 Courtesy of AUDI OF AMERICA, INC.

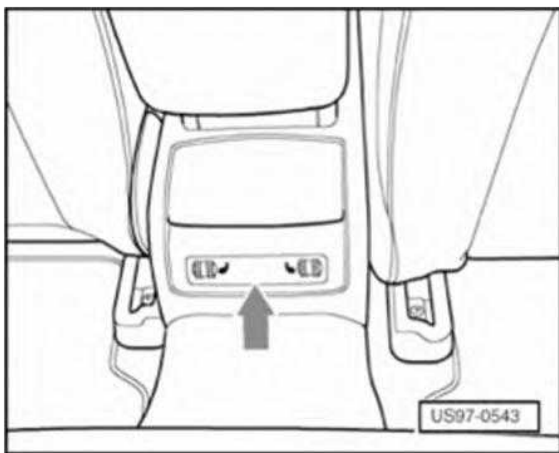


J215 Left Rear Heated Seat Control Module

G00418703

Fig. 103: Rear Of Center Console

 Courtesy of AUDI OF AMERICA, INC.


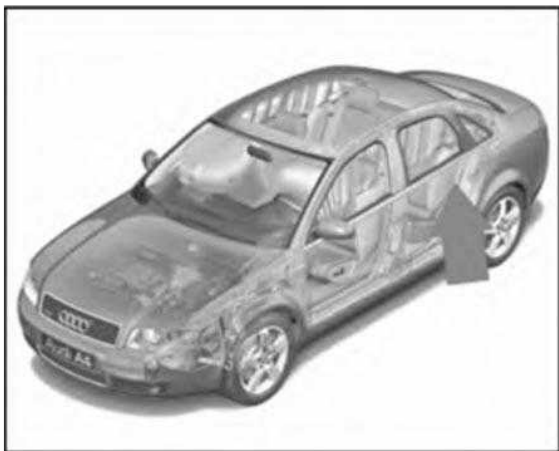


G256 Left rear side airbag crash sensor

G00418704

Fig. 104: Left "C" Pillar

  Courtesy of AUDI OF AMERICA, INC.

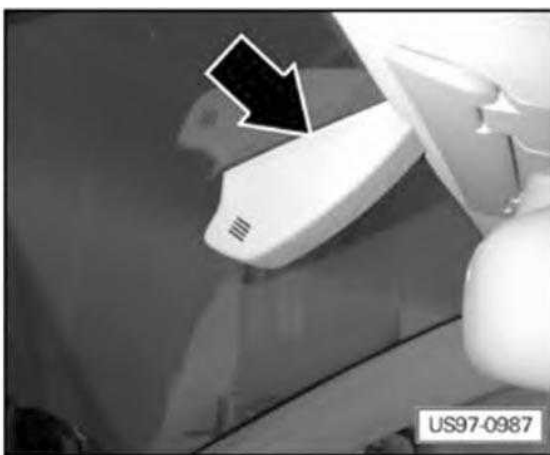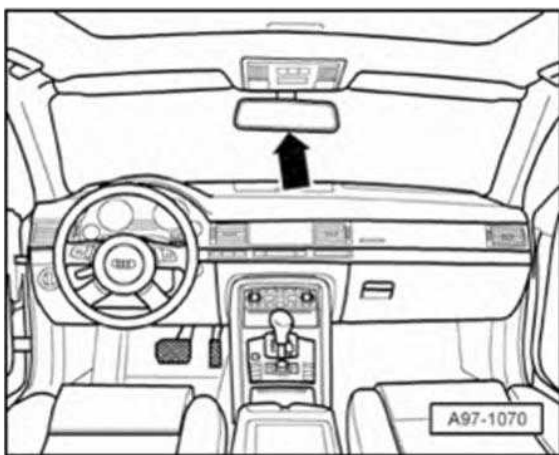


G399 **Light Recognition Sensor**

G00418705

Fig. 105: Inside Rearview Mirror

 Courtesy of AUDI OF AMERICA, INC.

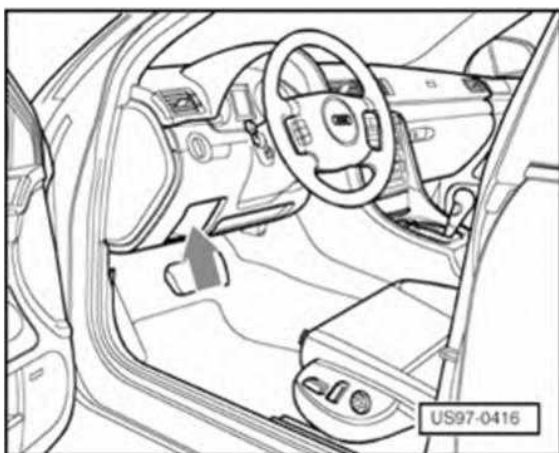


J59 **Load Reduction Relay**

G00418706

Fig. 106: Left Side Of Dash

 Courtesy of AUDI OF AMERICA, INC.

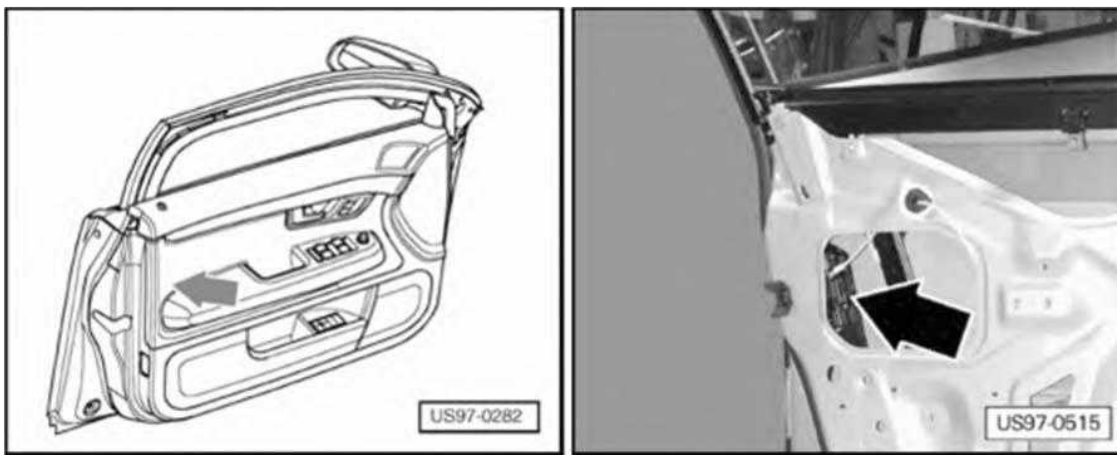


F220 Lock unit for central locking, driver side

G00418707

Fig. 107: Driver's Door

 Courtesy of AUDI OF AMERICA, INC.

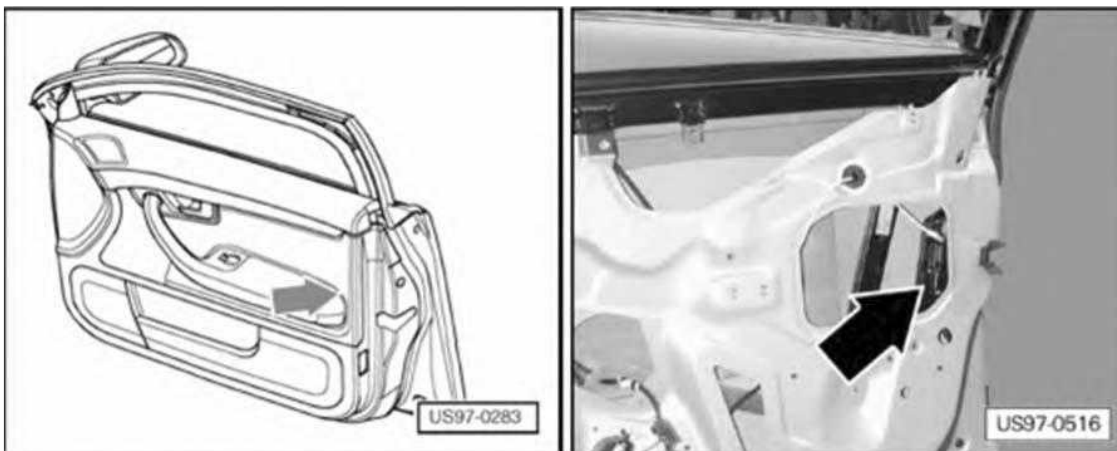


F221 Lock unit for central locking, passenger side

G00418708

Fig. 108: Passenger's Door

 Courtesy of AUDI OF AMERICA, INC.

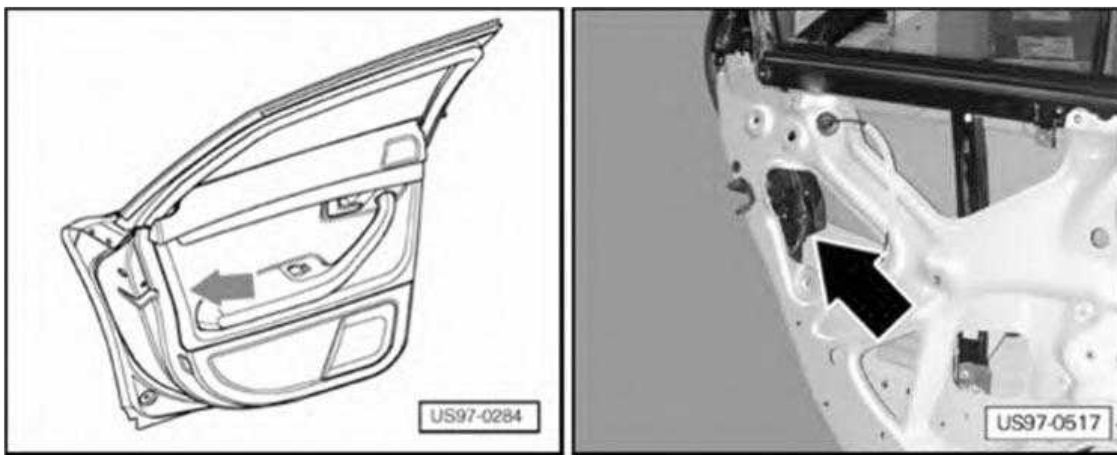


F222 Lock unit for central locking, rear, left

G00418709

Fig. 109: Left Rear Door

 Courtesy of AUDI OF AMERICA, INC.

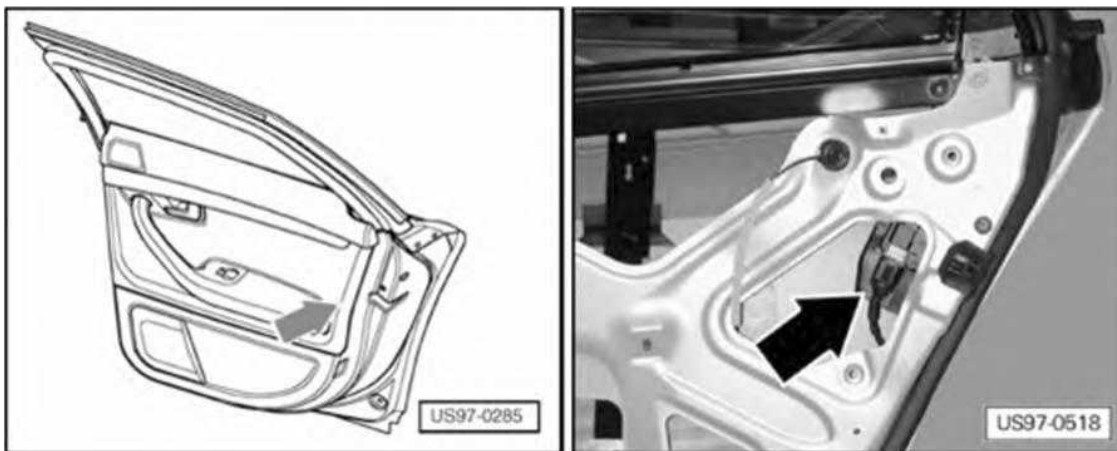


F223 Lock unit for central locking, rear, right

G00418710

Fig. 110: Right Rear Door

 Courtesy of AUDI OF AMERICA, INC.

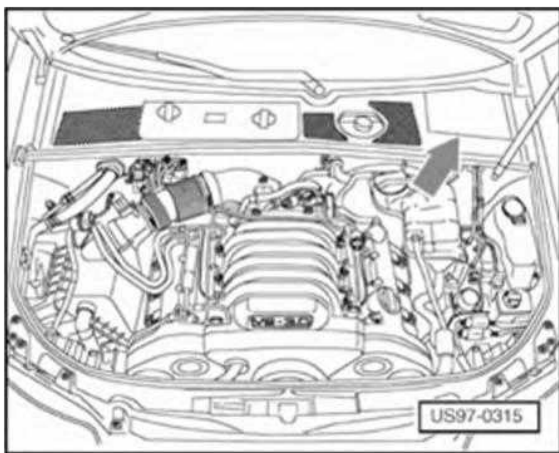


J434

Locking relay for starter (clutch pedal switch)

G00418711



 Fig. 111: Left Rear Of Engine Compartment
 Courtesy of AUDI OF AMERICA, INC.

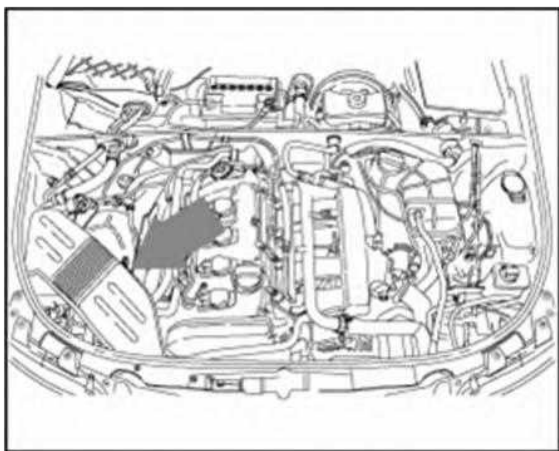


G70

Mass Air Flow (MAF) Sensor (1.8 liter turbo engine)

G00418712



 
Fig. 112: Right Front Of Engine Compartment (1.8L Turbo)
 Courtesy of AUDI OF AMERICA, INC.

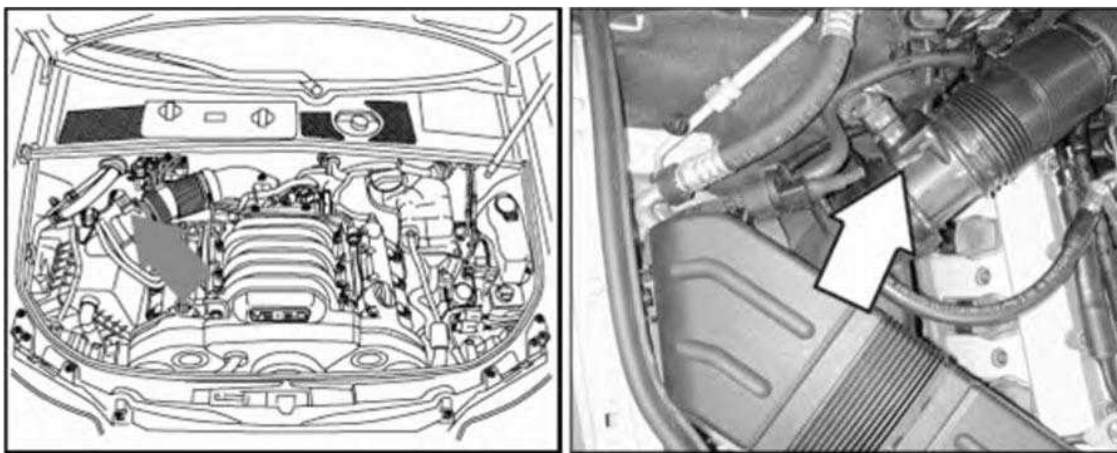

G70 Mass Air Flow (MAF) Sensor (3.0 ltr. engine)

G00418713


 
Fig. 113: Right Side Of Engine Compartment (3.0L)
Courtesy of AUDI OF AMERICA, INC.

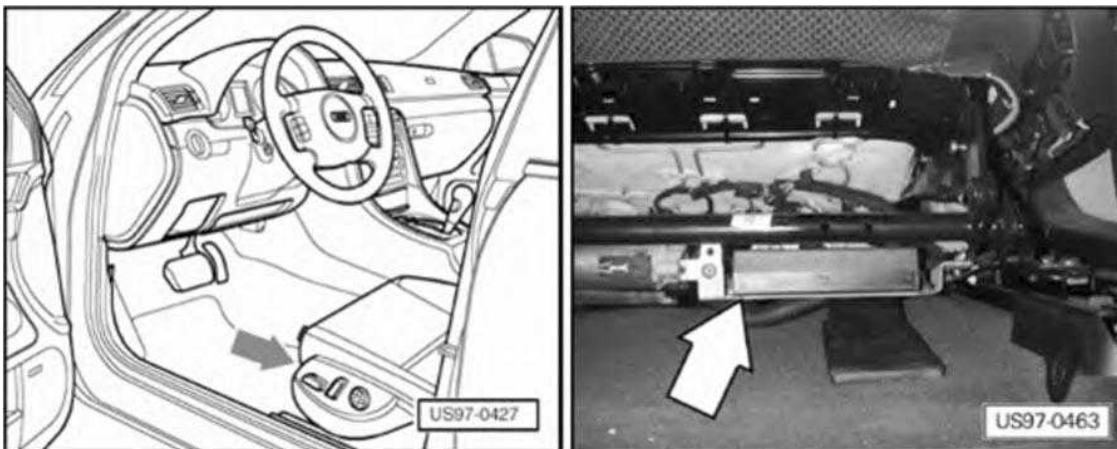

J136 Memory Seat Control Module

G00418714

  
Fig. 114: Driver's Seat
Courtesy of AUDI OF AMERICA, INC.

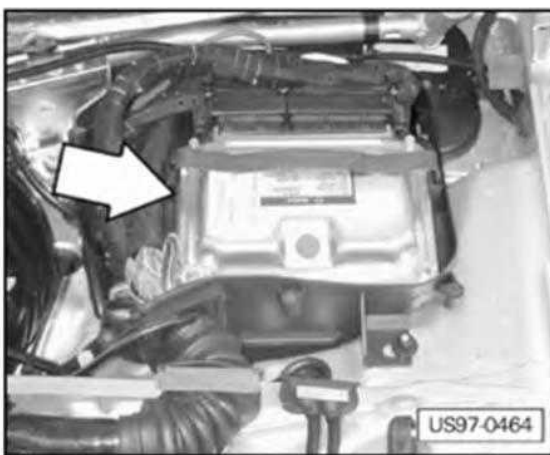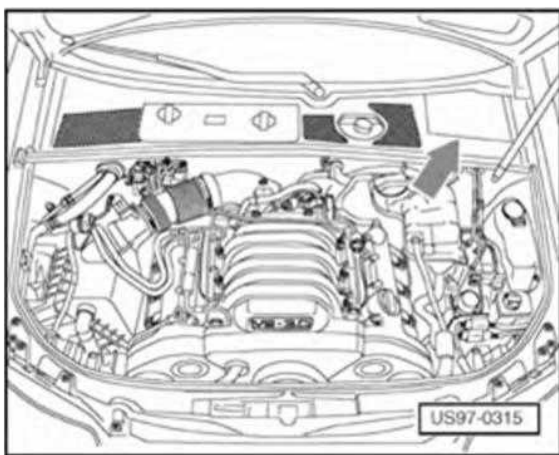

J220 Motronic Engine Control Module (ECM)

G00418715


 
Fig. 115: Left Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

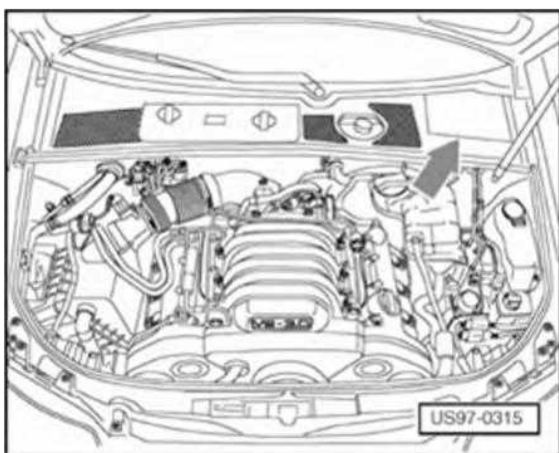

J271 Motronic Engine Control Module (ECM) Power Supply Relay

G00418716

 
 
Fig. 116: Left Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

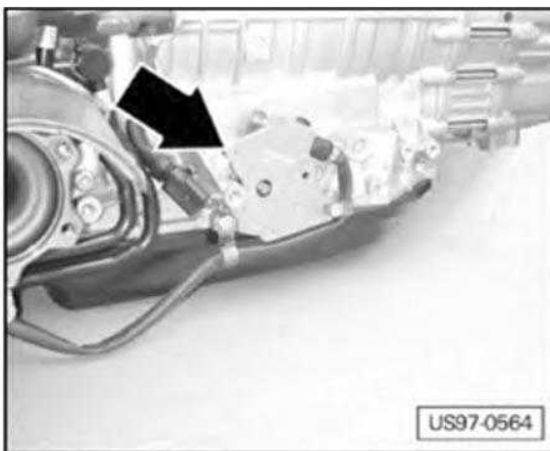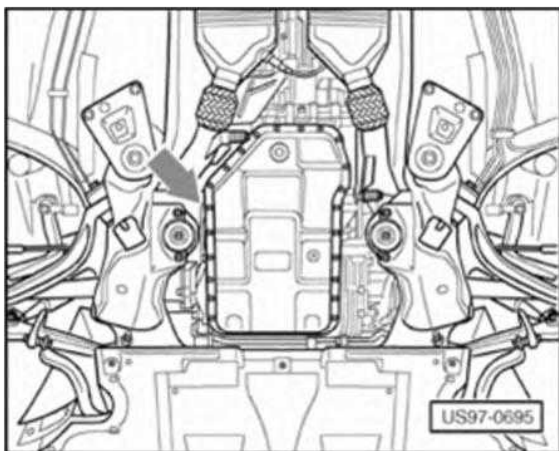

F125 Multi-Function Transmission Range (TR) Switch

G00418717

 
 
Fig. 117: Left Side Of Transmission
 Courtesy of AUDI OF AMERICA, INC.

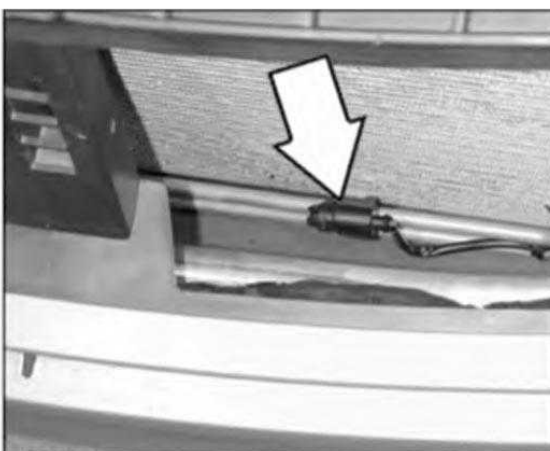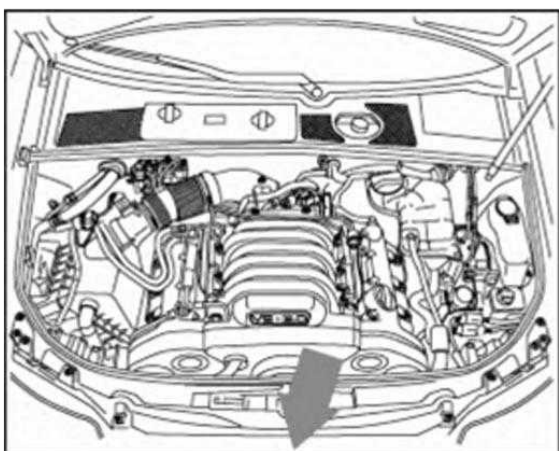

G17 Outside Air Temperature Sensor

G00418718

 
 
Fig. 118: Front Of Vehicle
 Courtesy of AUDI OF AMERICA, INC.

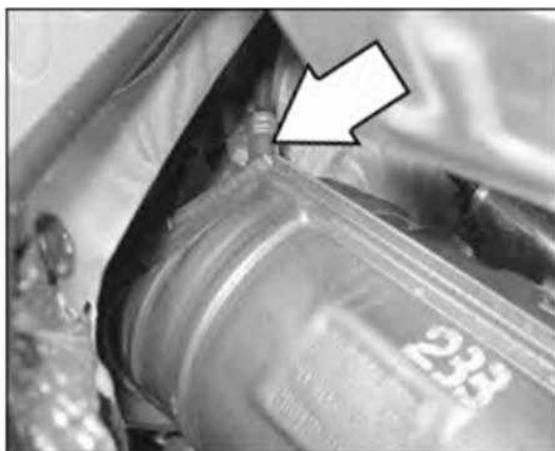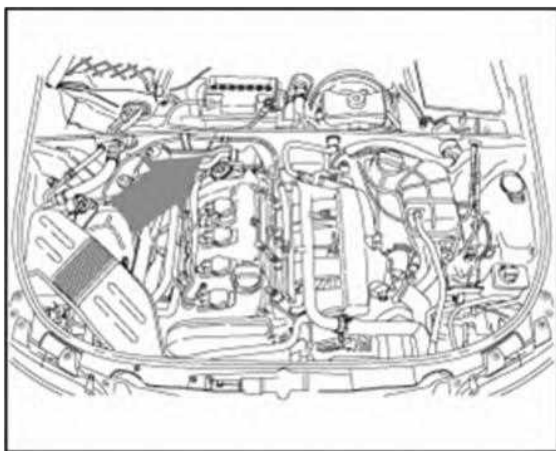

G130 Oxygen Sensor (O2S) Behind Three Way Catalytic Converter (TWC) (1.8 liter turbo engine)

G00418720

 
 
Fig. 119: Rear Of Engine Compartment (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

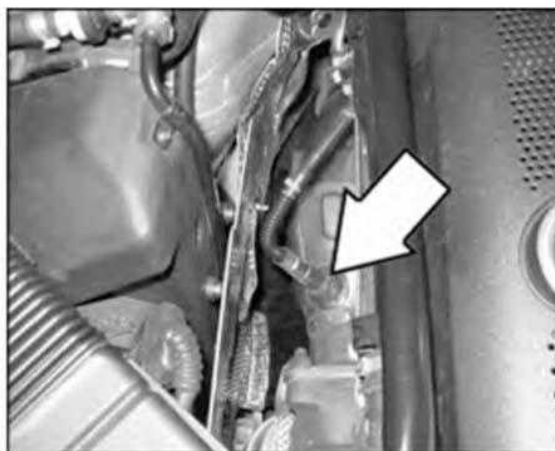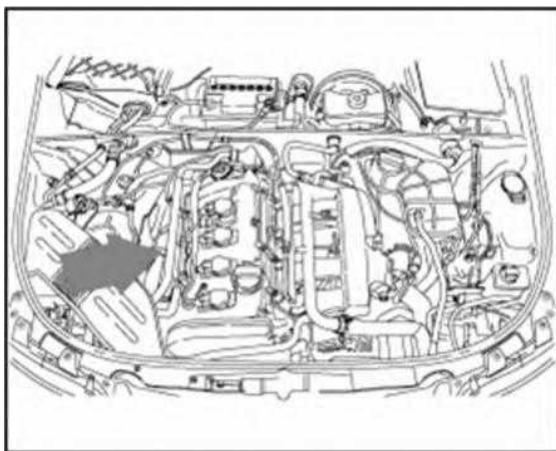

Z19 Oxygen Sensor (O2S) Heater (1.8 liter turbo engine)

G00418721

  Fig. 120: Right Side Of Engine Compartment (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

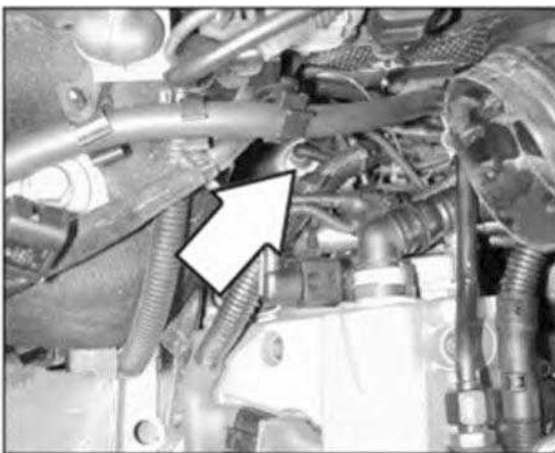
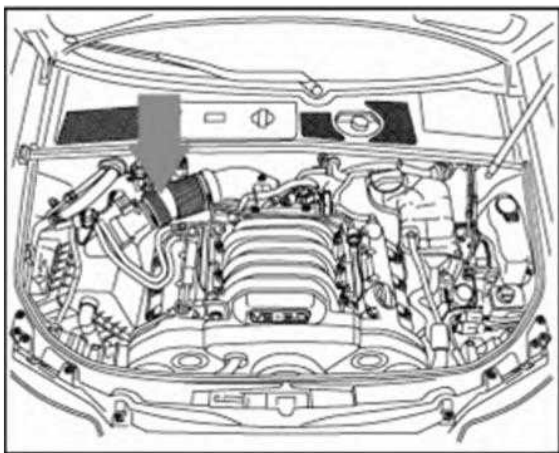


Z19 Oxygen Sensor (O2S) Heater (3.0 ltr. engine)

G00418722

Fig. 121: Right Rear Of Engine Compartment (3.0L)

  Courtesy of AUDI OF AMERICA, INC.

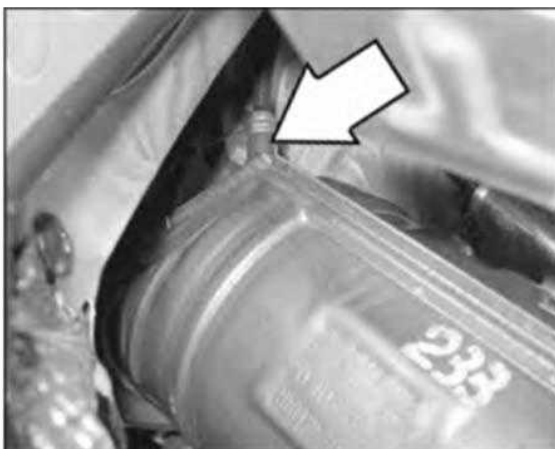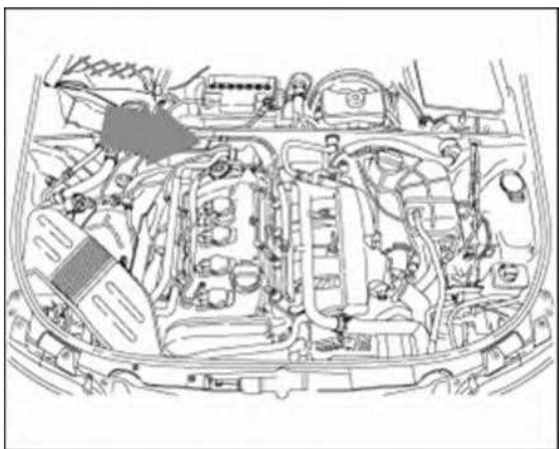


Z29 Oxygen Sensor (O2S) Heater 1 (behind Three Way Catalytic Converter (TWC)) (1.8 liter turbo engine)

G00418723

Fig. 122: Right Rear Of Engine (1.8L Turbo)

 
Courtesy of AUDI OF AMERICA, INC.

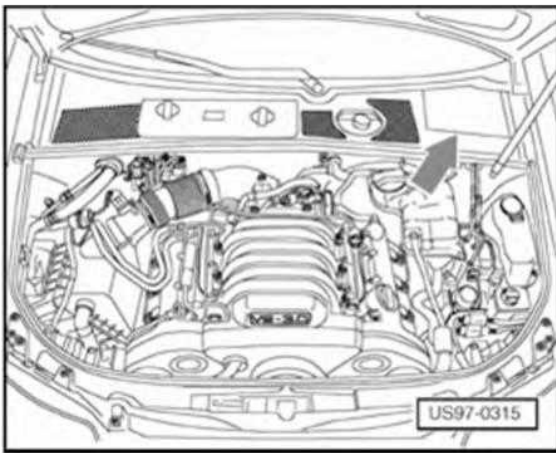

J226 Park/Neutral Position (PNP) Relay (Multitronic 01J)

G00418724

 
Fig. 123: Left Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

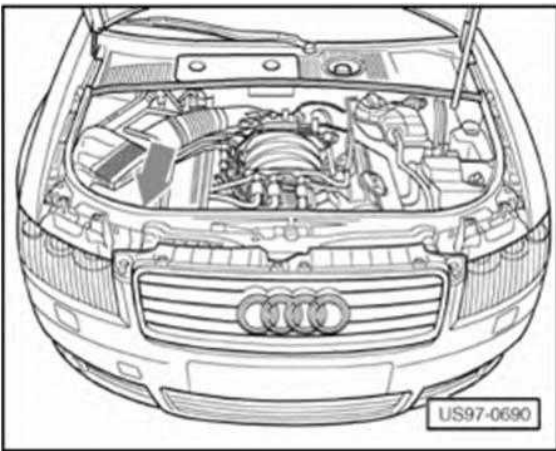

G284 Passengers Front Airbag Crash Sensor

G00418725

 Fig. 124: Right Front Of Vehicle
Courtesy of AUDI OF AMERICA, INC.

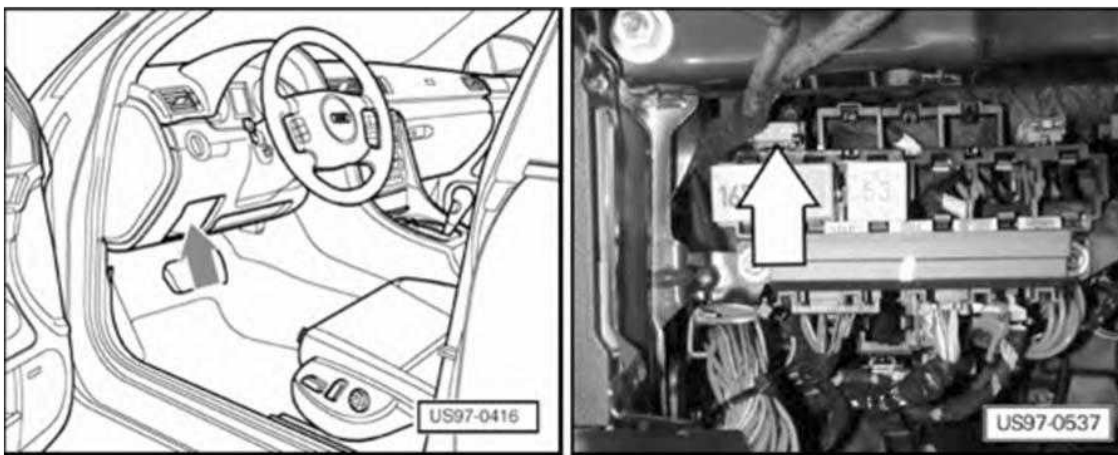


S100 Rear Shade Circuit Breaker

G00418726

Fig. 125: Left Side Of Dash

 Courtesy of AUDI OF AMERICA, INC.


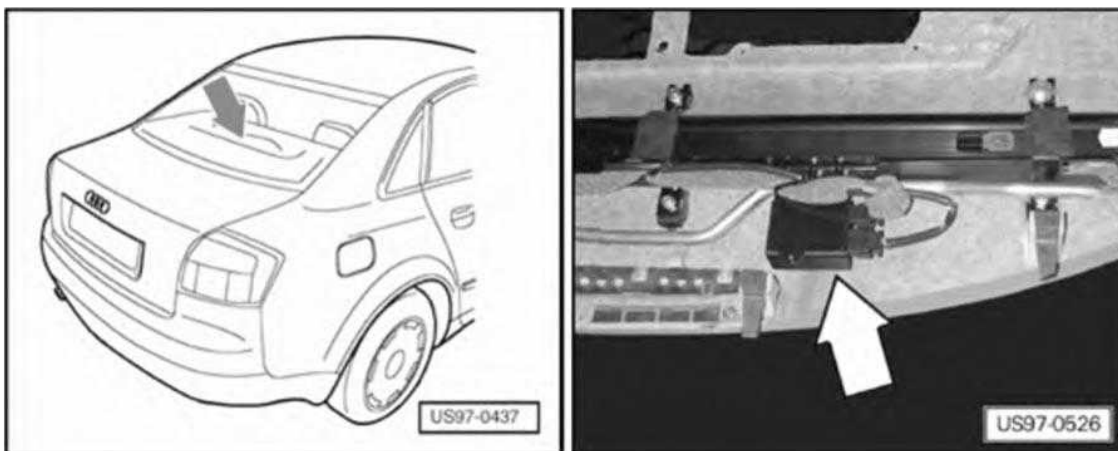


J262 Rear Window Shade Control Module (Sedan)

G00418727

Fig. 126: Rear Package Shelf (Sedan)

 
 
Courtesy of AUDI OF AMERICA, INC.

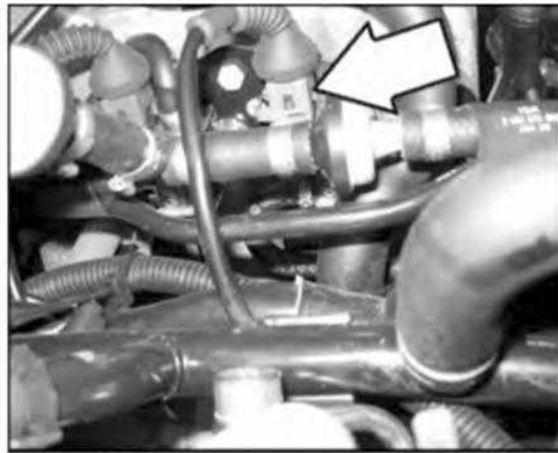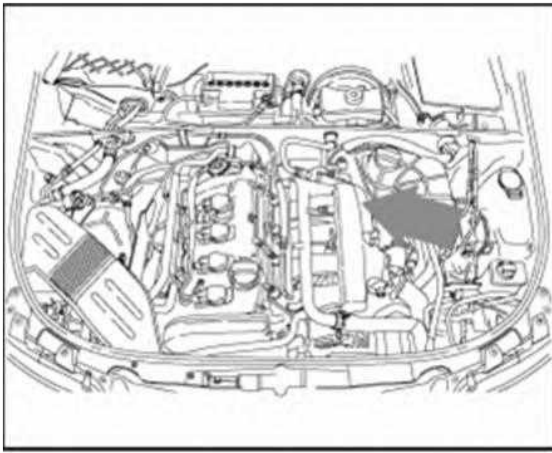

N249 **Recirculating valve for turbocharger (1.8 liter turbo engine)**

G00418728

  
Fig. 127: Left Side Of Engine (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

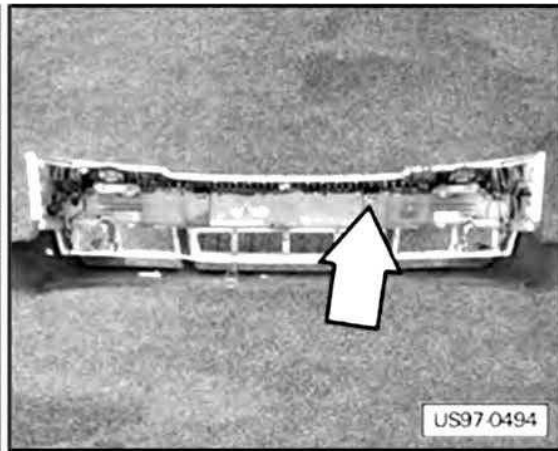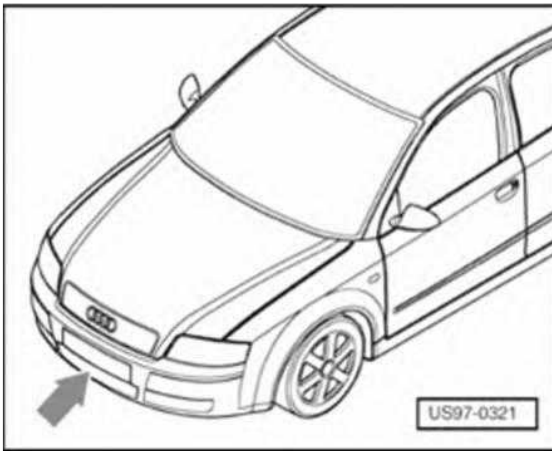

G253 **Right Front Center Parking Aid Sensor**

G00418729

 Fig. 128: Front Bumper
Courtesy of AUDI OF AMERICA, INC.

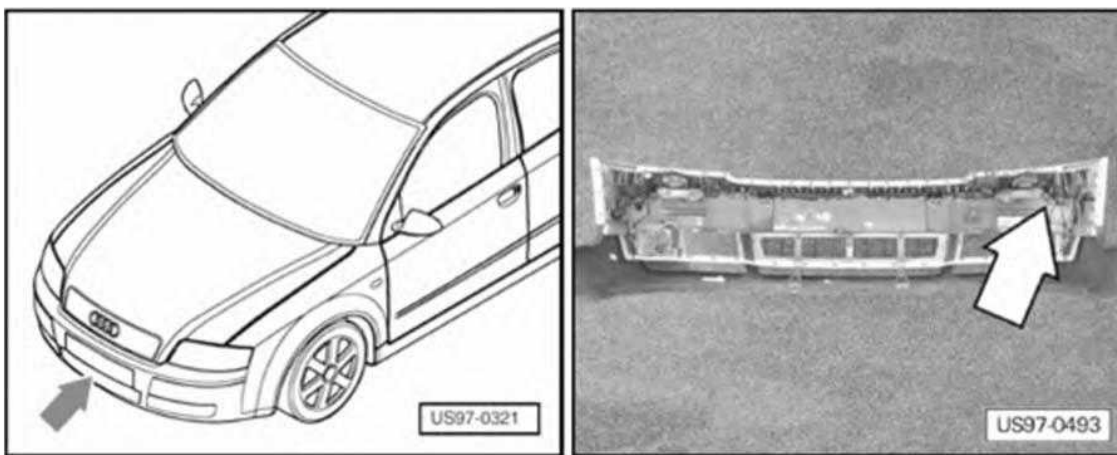


G252 Right Front Parking Aid Sensor

G00418730

Fig. 129: Front Bumper

 Courtesy of AUDI OF AMERICA, INC.

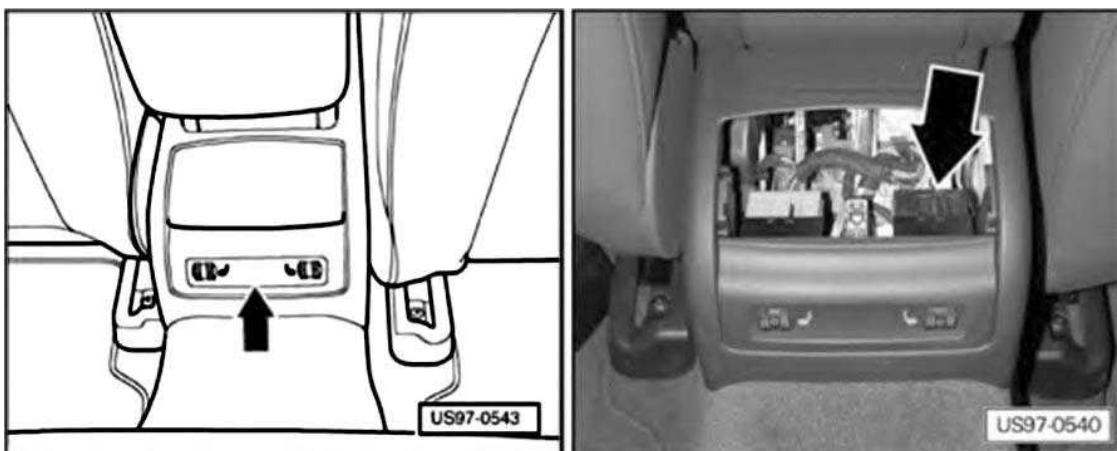


J216 Right Rear Heated Seat Control Module

G00418731

Fig. 130: Rear Of Center Console

 Courtesy of AUDI OF AMERICA, INC.

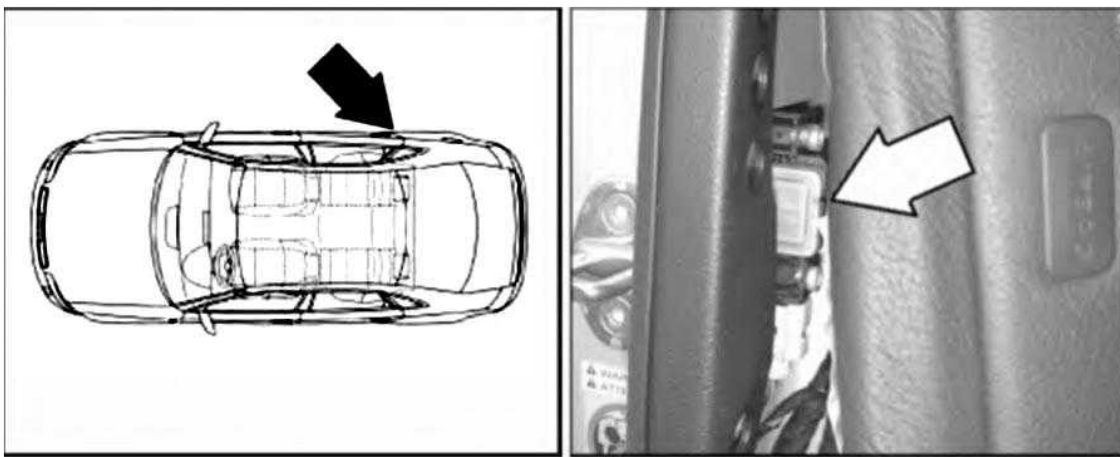


G257 Right rear side airbag crash sensor

G00418732

Fig. 131: Right "C" Pillar

 Courtesy of AUDI OF AMERICA, INC.


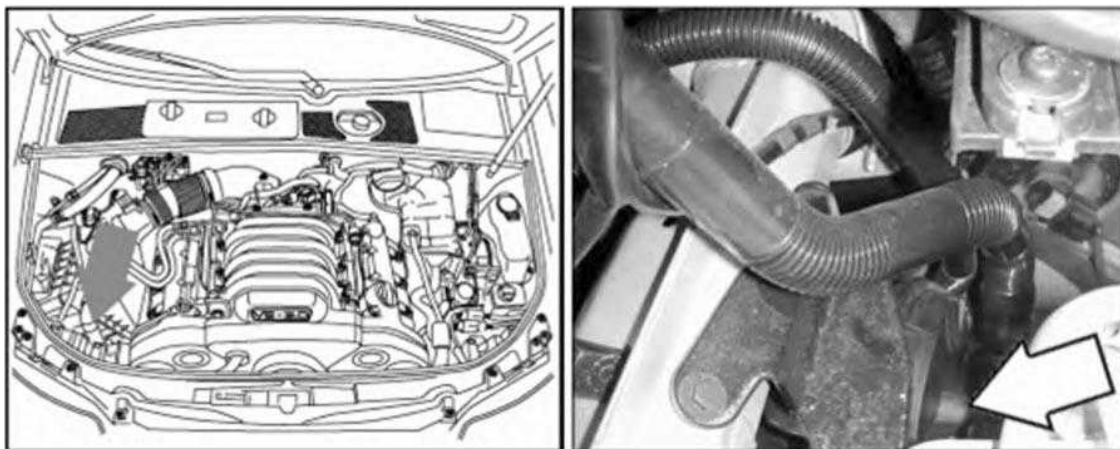


V101 Secondary Air Injection (AIR) Pump Motor (3.0 ltr. engine)

G00418733

Fig. 132: Right Front Of Engine Compartment (3.0L)

  
Courtesy of AUDI OF AMERICA, INC.

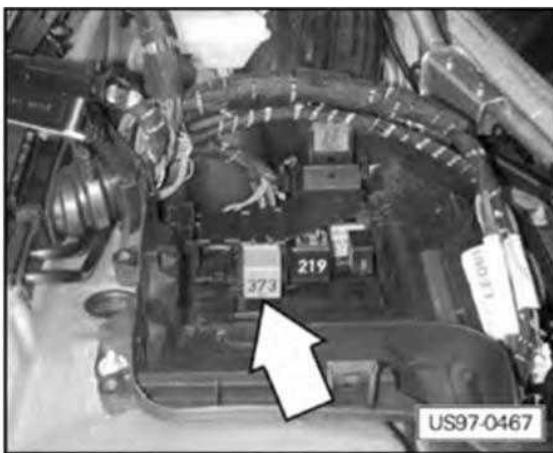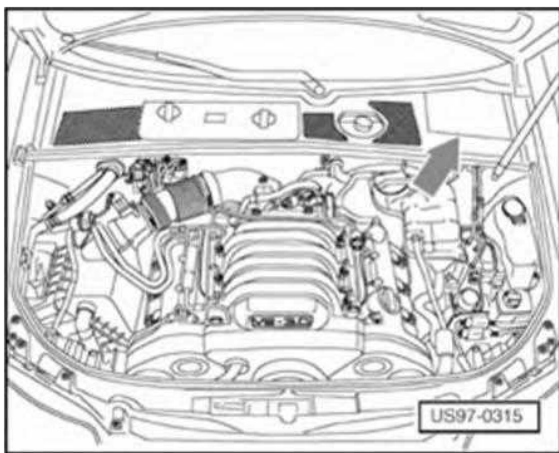

J299 Secondary Air Injection (AIR) Pump Relay

G00418734


 
Fig. 133: Left Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

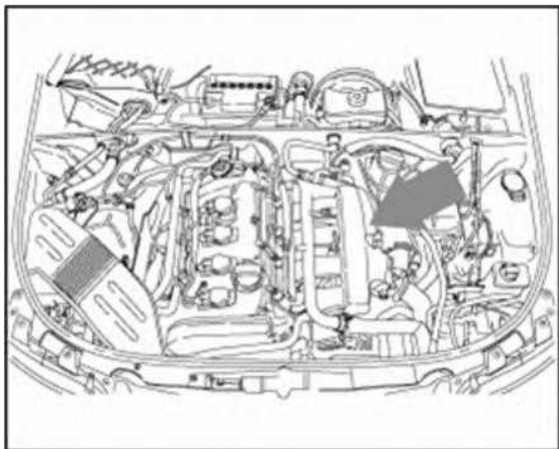

N112 Secondary Air Injection (AIR) Solenoid Valve (1.8 liter turbo engine)

G00418735

  Fig. 134: Left Side Of Engine Compartment (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.

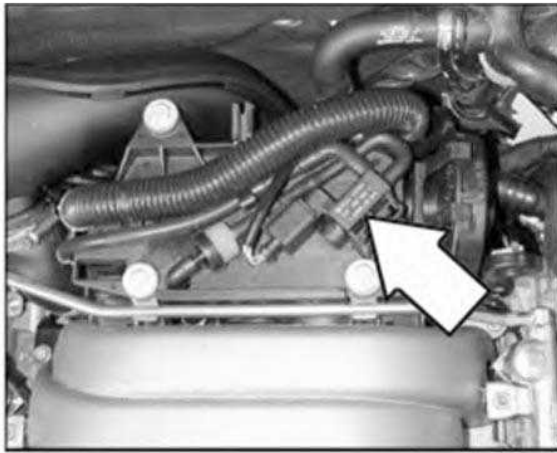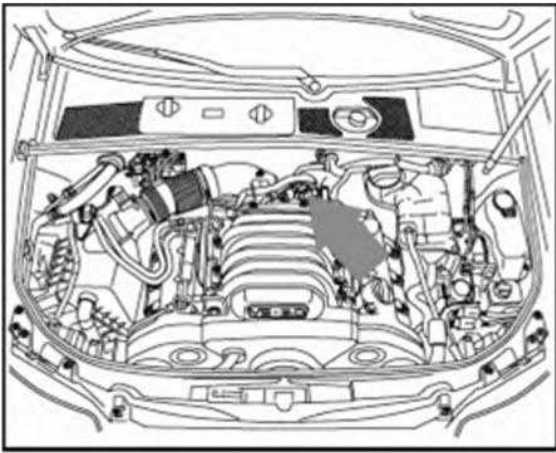


N112 **Secondary Air Injection (AIR) Solenoid Valve (3.0 ltr. engine)**

G00418736

Fig. 135: Rear Of Engine (3.0L)

 Courtesy of AUDI OF AMERICA, INC.

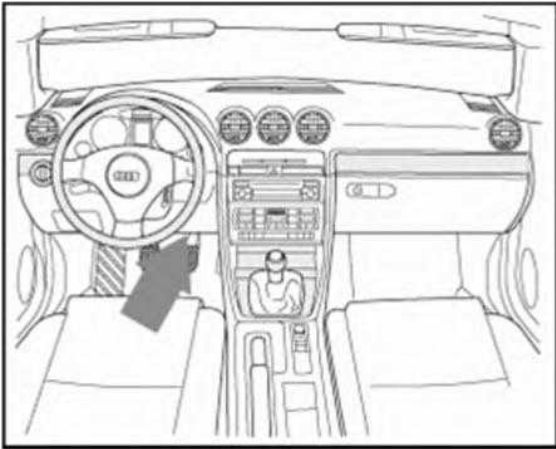


G185 **Sender 2 for accelerator pedal position**

G00418737

Fig. 136: Top Of Accelerator Pedal

 Courtesy of AUDI OF AMERICA, INC.


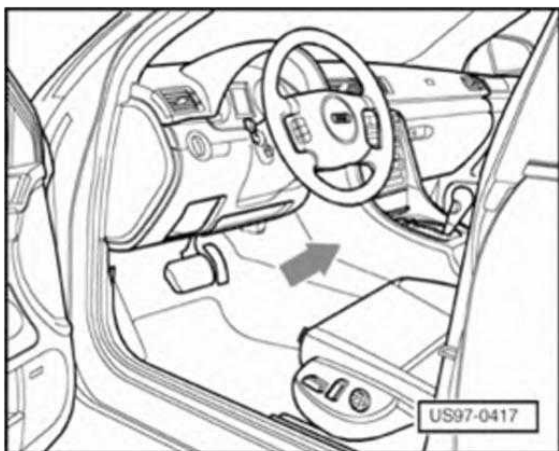


G202 Sender for Rotation Rate

G00418738

Fig. 137: Below Center Console

  Courtesy of AUDI OF AMERICA, INC.

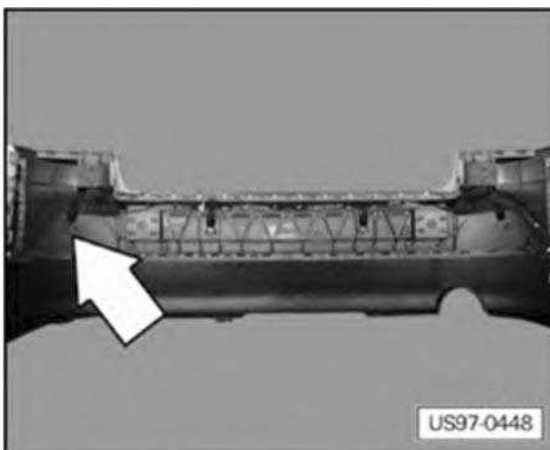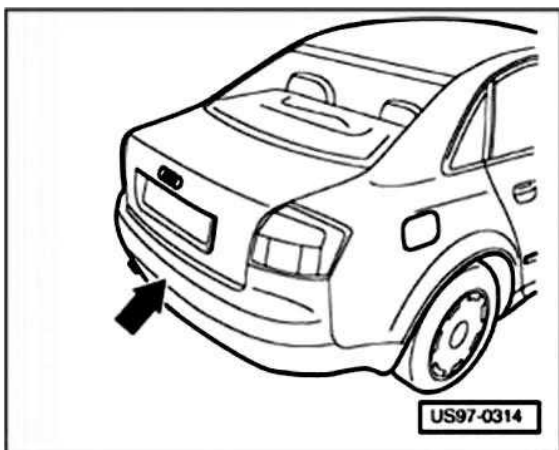


G203 Sensor for parking, rear, left

G00418739

Fig. 138: Rear Bumper

 Courtesy of AUDI OF AMERICA, INC.

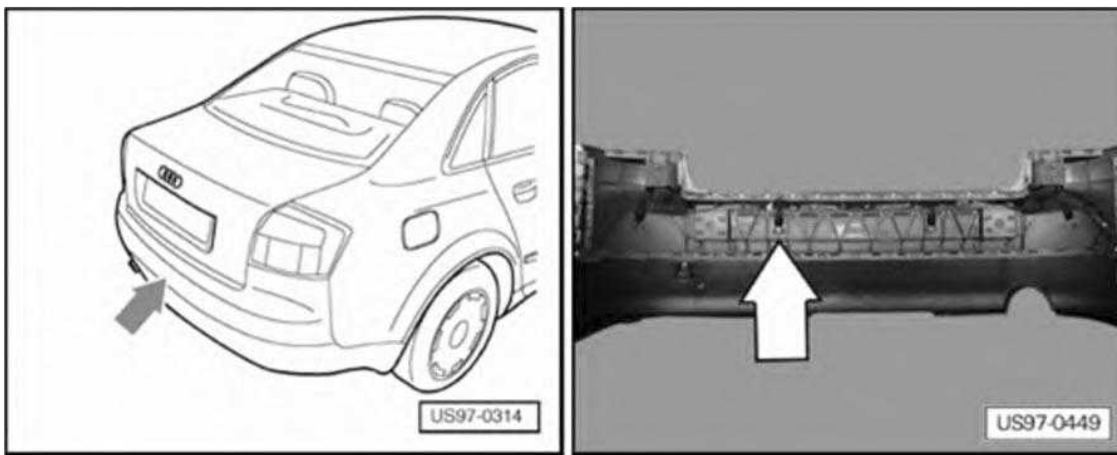


G204 Sensor for parking, rear, left, center

G00418740

Fig. 139: Rear Bumper

 Courtesy of AUDI OF AMERICA, INC.


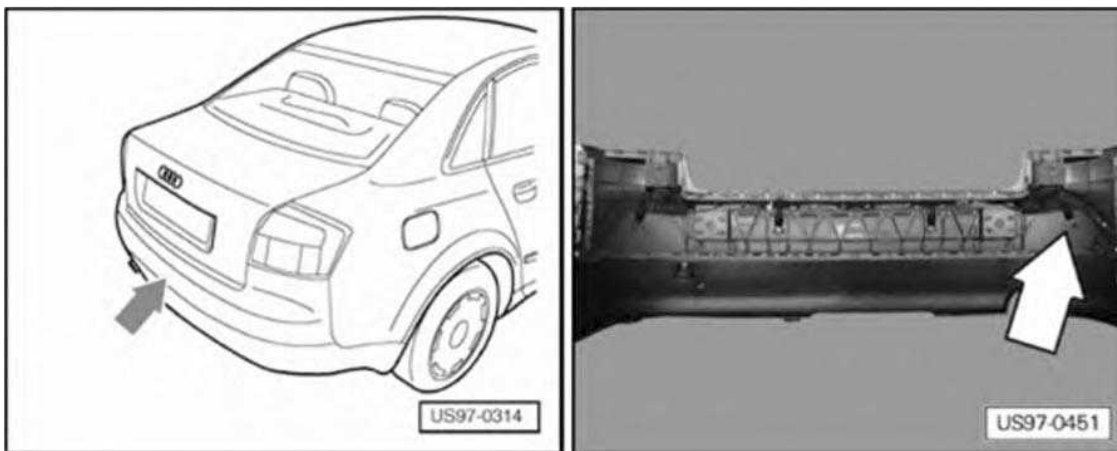


G206 Sensor for parking, rear, right

G00418741

Fig. 140: Rear Bumper

  Courtesy of AUDI OF AMERICA, INC.

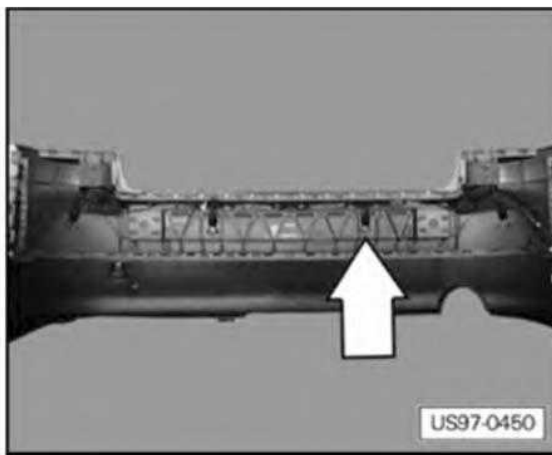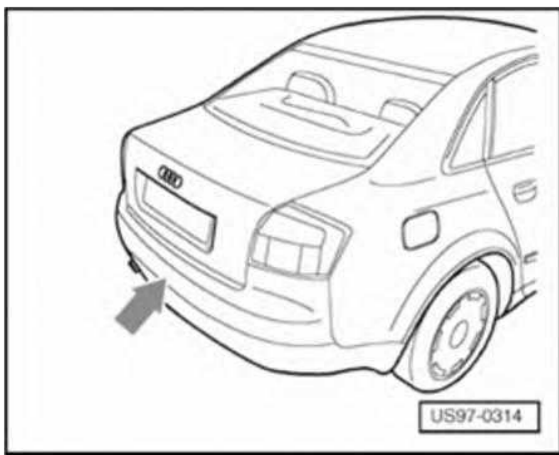


G205 **Sensor for parking, rear, right, center**

G00418742

Fig. 141: Rear Bumper

 Courtesy of AUDI OF AMERICA, INC.

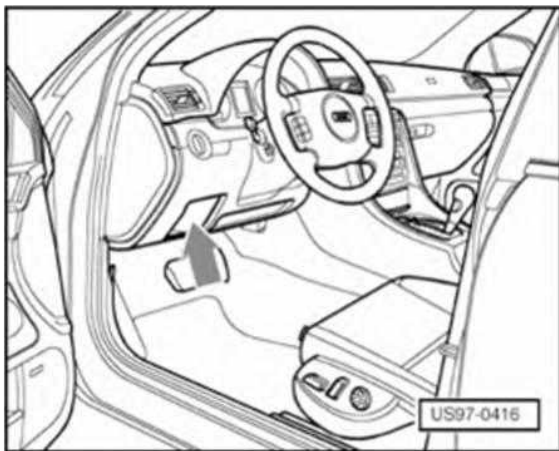


J236 **Servotronic Control Module**

G00418743

Fig. 142: Left Side Of Dash


 
Courtesy of AUDI OF AMERICA, INC.

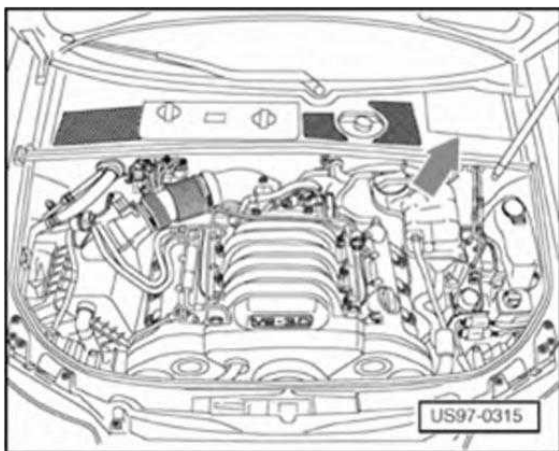

J60 Starter Interlock Alarm System Relay (Automatic transmission 01V)

G00418744

 
 
Fig. 143: Left Rear Of Engine Compartment
Courtesy of AUDI OF AMERICA, INC.

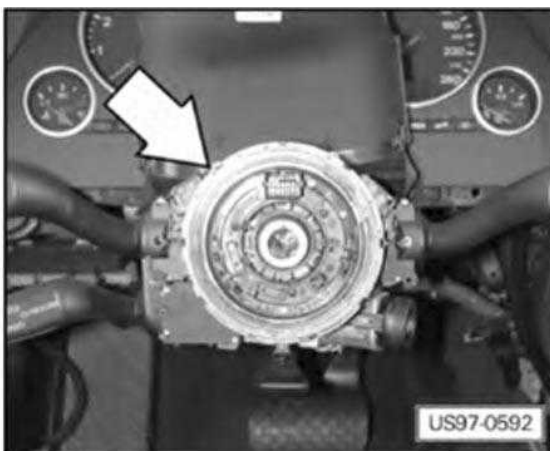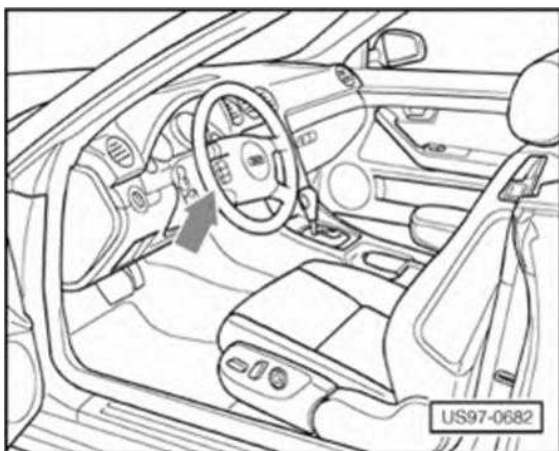

G85 Steering Angle Sensor

G00418745

  Fig. 144: Steering Column
Courtesy of AUDI OF AMERICA, INC.

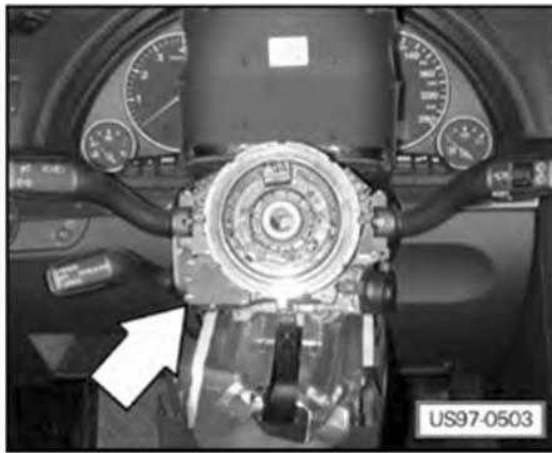
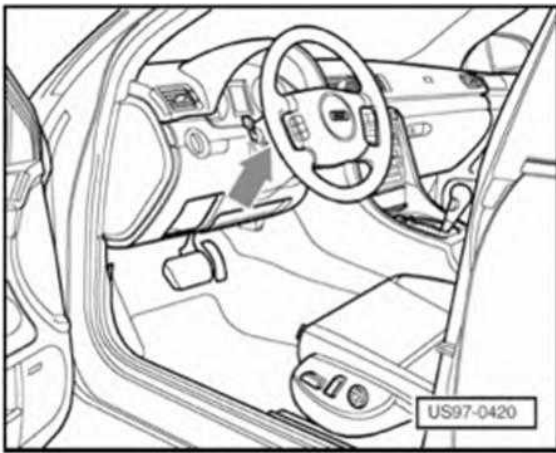


J527 Steering Column Electronic Systems Control Module

G00418746

Fig. 145: Steering Column

  Courtesy of AUDI OF AMERICA, INC.

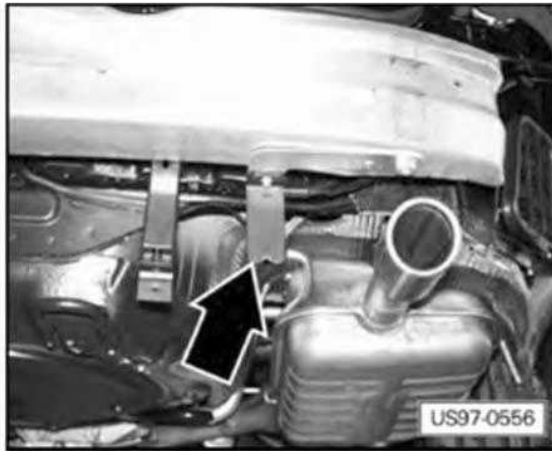
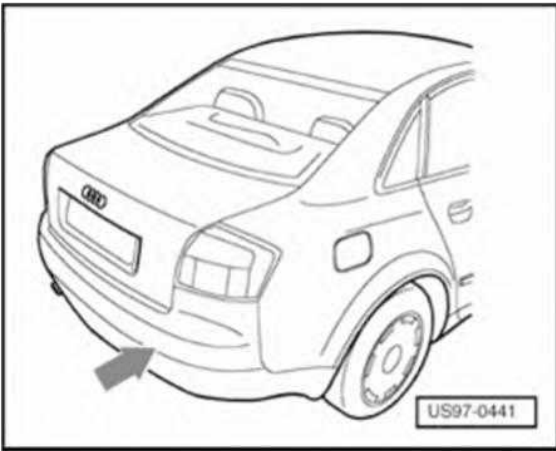


R127 Telephone Antenna 2

G00418747

Fig. 146: Right Rear Of Vehicle

  
Courtesy of AUDI OF AMERICA, INC.

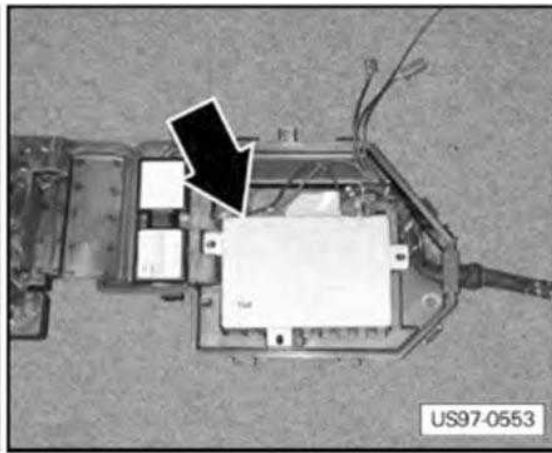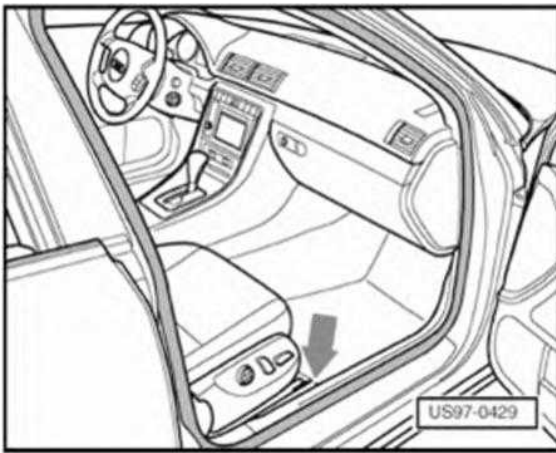

J526 Telephone/Telematic Control Module

G00418748


 
Fig. 147: Below Passenger's Seat
Courtesy of AUDI OF AMERICA, INC.

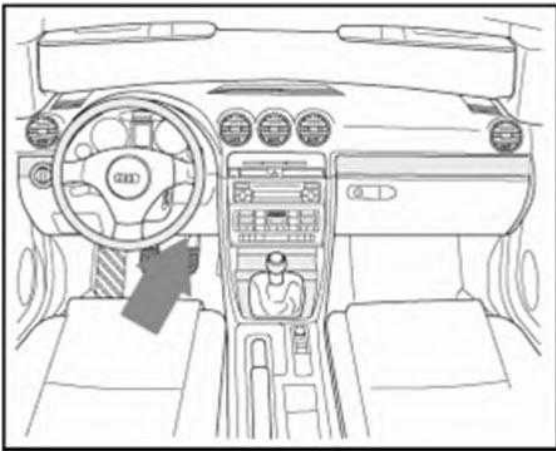

G79 Throttle Position (TP) Sensor (3.0 ltr. engine)

G00418749

 
 
Fig. 148: Under Left Side Of Dash
Courtesy of AUDI OF AMERICA, INC.

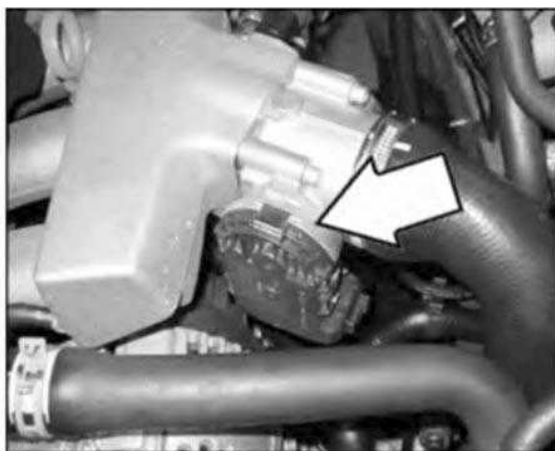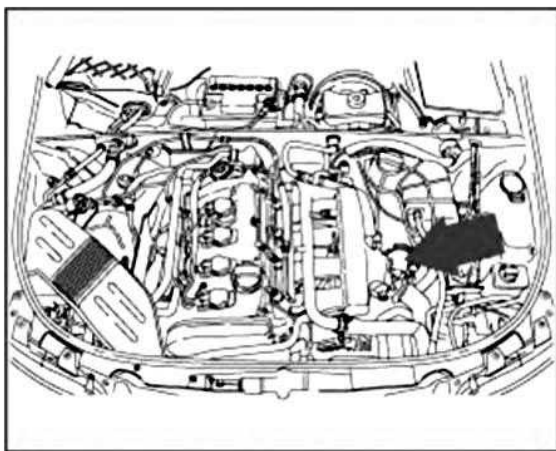

J338 Throttle Valve Control Module (1.8 liter turbo engine)

G00418750

 
 
Fig. 149: Left Side Of Engine (1.8L Turbo)
 Courtesy of AUDI OF AMERICA, INC.

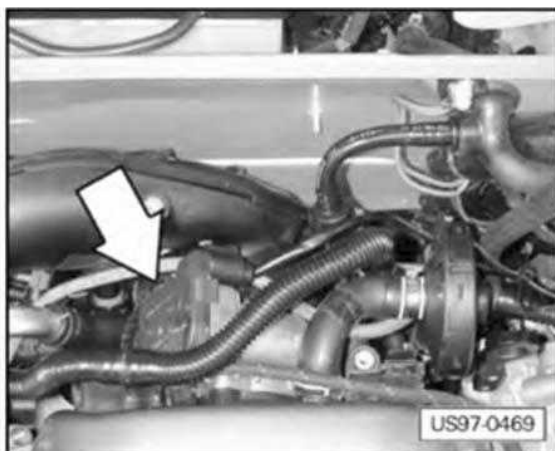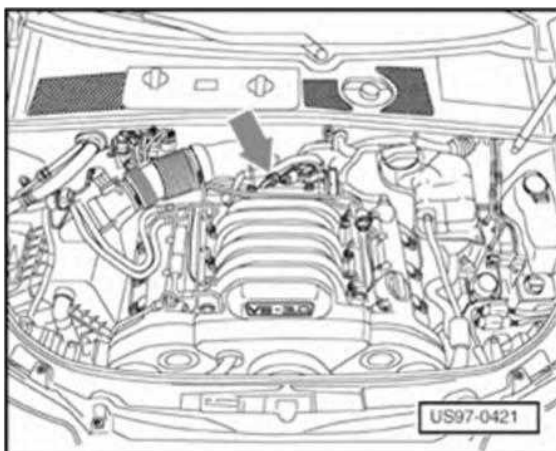

J338 Throttle Valve Control Module (6-cylinder engine)

G00418752

 
 
Fig. 150: Rear Of Engine (3.0L)
 Courtesy of AUDI OF AMERICA, INC.

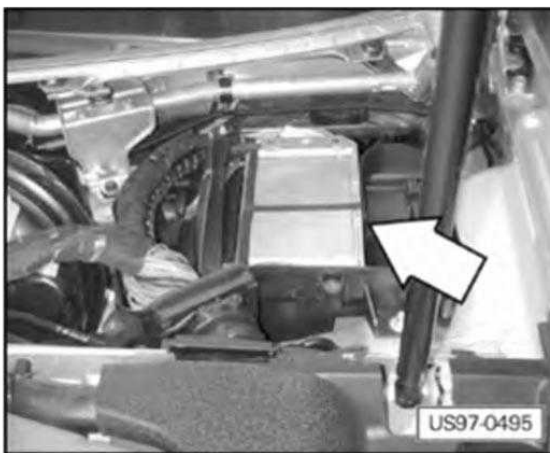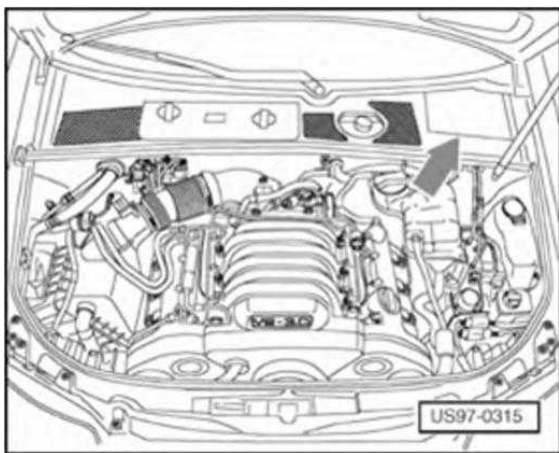

J217 Transmission Control Module (TCM) (5 Spd. Automatic Transmission 01V)

G00418753

 
 
Fig. 151: Left Rear Of Engine Compartment (3.0L)
Courtesy of AUDI OF AMERICA, INC.

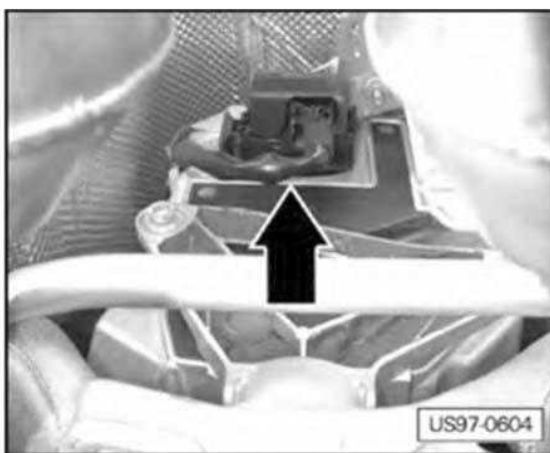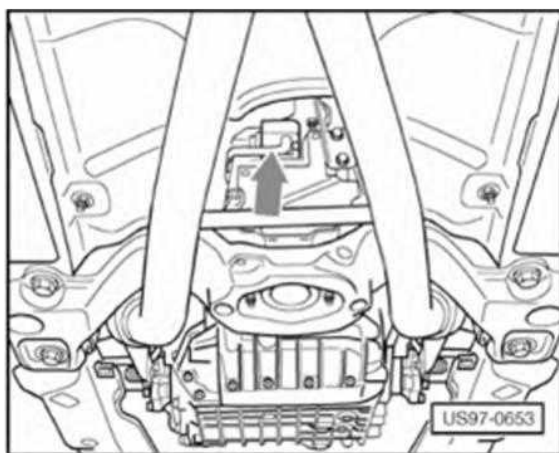

J217 Transmission Control Module (TCM) (Continuously Variable Transmission (CVT) 01J)

G00418754

  Fig. 152: Rear Of Transmission (CVT)
Courtesy of AUDI OF AMERICA, INC.

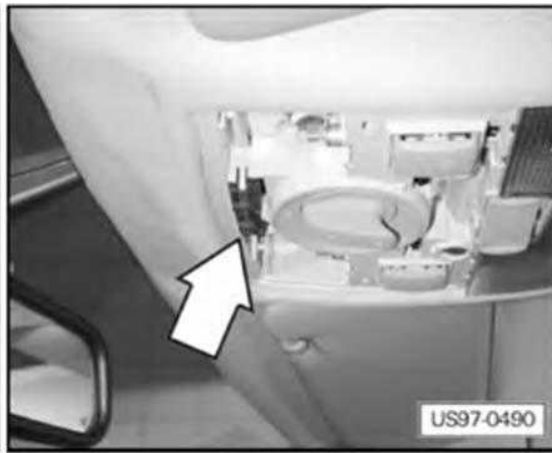
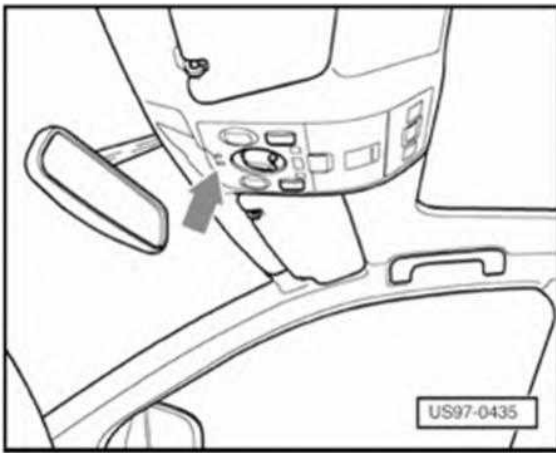


G209 Ultra-sound sensor for anti-theft warning

G00418755

Fig. 153: Front Center Of Roof

  Courtesy of AUDI OF AMERICA, INC.

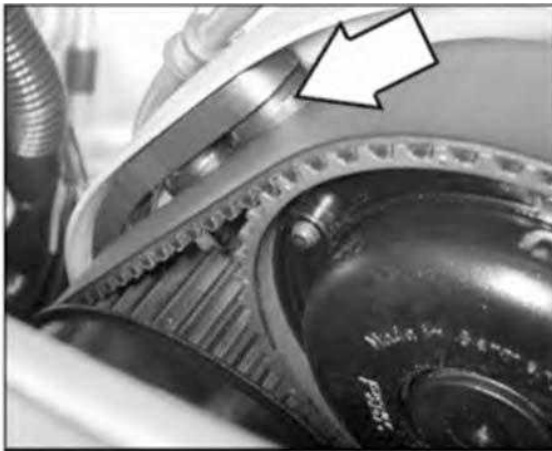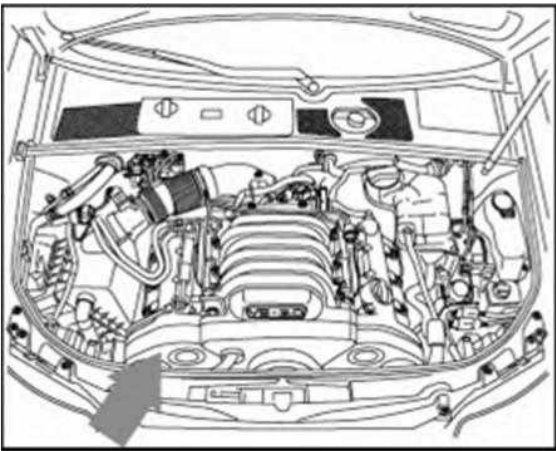


N205 Valve 1 for camshaft adjustment (3.0 ltr. engine)

G00418756

Fig. 154: Right Front Of Engine (3.0L)

 Courtesy of AUDI OF AMERICA, INC.

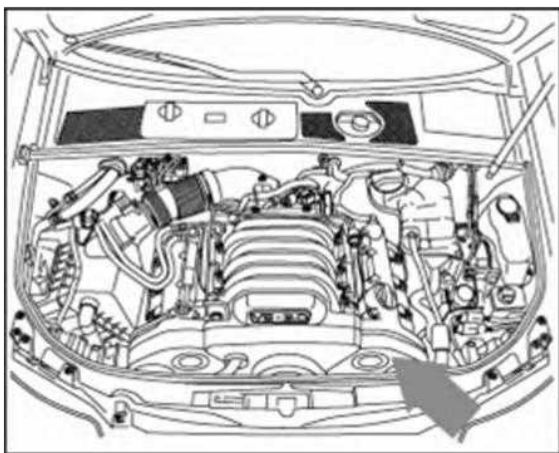


N208 Valve 2 for camshaft adjustment (3.0 ltr. engine)

G00418757

Fig. 155: Left Front Of Engine (3.0L)

 Courtesy of AUDI OF AMERICA, INC.


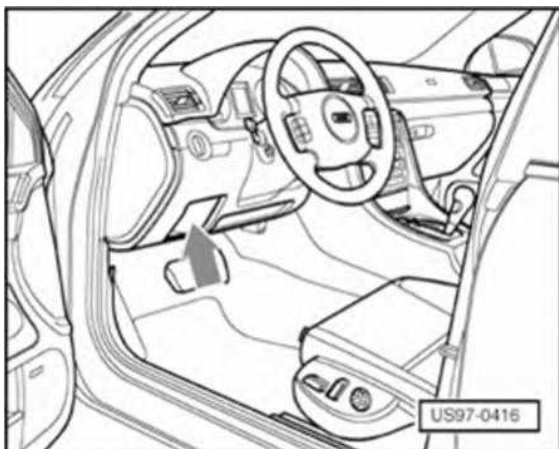


J519 Vehicle Electrical System Control Module

G00418758

Fig. 156: Under Left Side Of Dash

  Courtesy of AUDI OF AMERICA, INC.

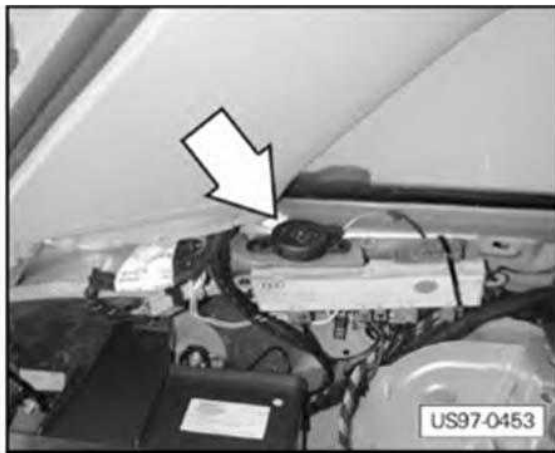
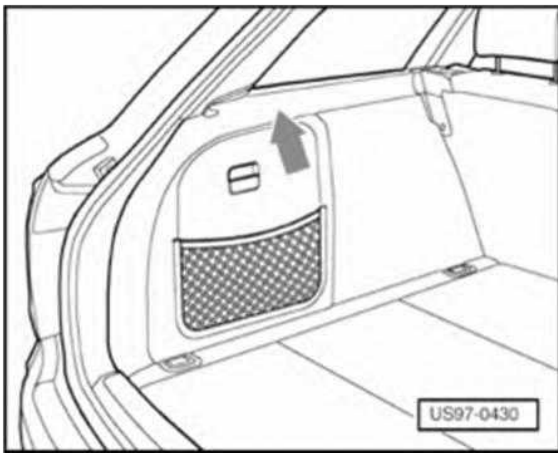


H15 **Warning buzzer for parking (Avant)**

G00418759

Fig. 157: Left Side Of Cargo Area

  Courtesy of AUDI OF AMERICA, INC.

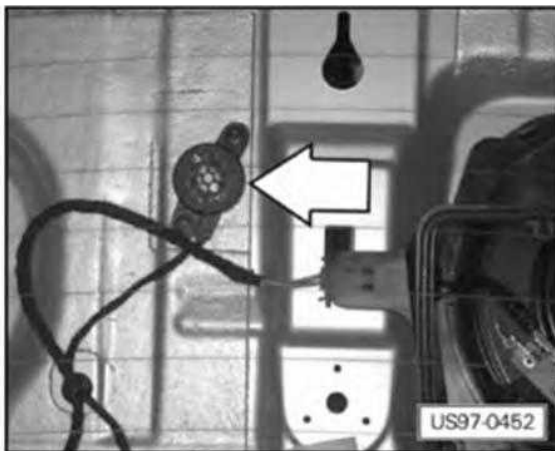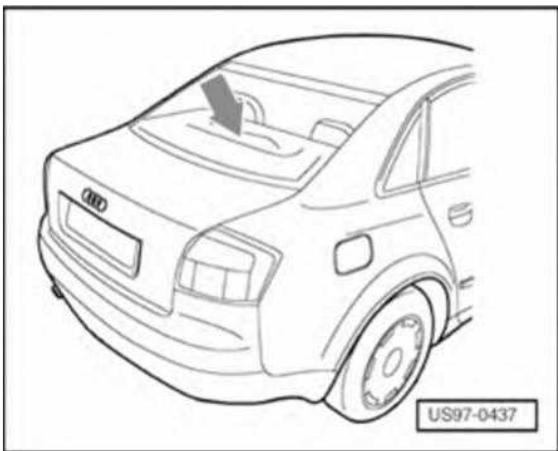


H15 **Warning buzzer for parking (Sedan)**

G00418760

Fig. 158: Rear Package Shelf (Sedan)

 Courtesy of AUDI OF AMERICA, INC.

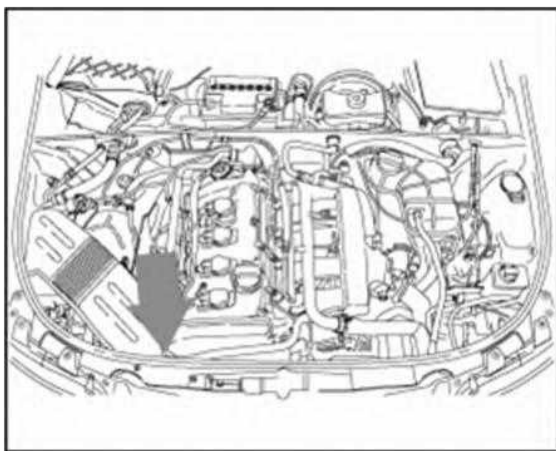

N75

Wastegate Bypass Regulator Valve (1.8 liter turbo engine)

G00418761

Fig. 159: Right Front Of Engine Compartment (1.8L Turbo)
Courtesy of AUDI OF AMERICA, INC.