

Maintenance manual of Chery Karry

(Circuit diagram)

Service Department of Chery Automobile Distribution CO., Ltd

- 1 -

Contents

I.	Diagram description.....	3
1.	SN of main circuit of relay box.....	3
2.	Description on connector of central electric box	3
3.	Description on function of central electric box.....	3
II.	Control diagram of circuit systems	5
1.	Startup & charge system	5
2.	A/C system.....	6
3.	Immobilizer, window lifter	7
4.	Instrument system	8
5.	Audio system	9
6.	ABS system.....	10
7.	Airbag	11
8.	Wiper system.....	12
9.	Power rear-view mirror	13
10.	Lamp and defrosting system	14
11.	Engine EFI system	15
12.	Ceiling lamp system, reverse gear signal, brake signal, horn and cigarette lighter.....	16

I. Diagram description

1. SN of main circuit of relay box

30: No fuse, come from battery directly.

15: Come from ignition switch directly

X: Come from ignition switch directly, and switch off while startup

31: Simulated ground wire

58b: Adjusting wire of internal illumination


2. Description on connector of central electric box


The red line shown in circuit diagram denotes circuit pin passing central electric box.

For example: B+ denotes connection seat of main power passing central electric box;

D/10 denoted 10th pin passing D socket of central electric box.


3. Description on function of central electric box

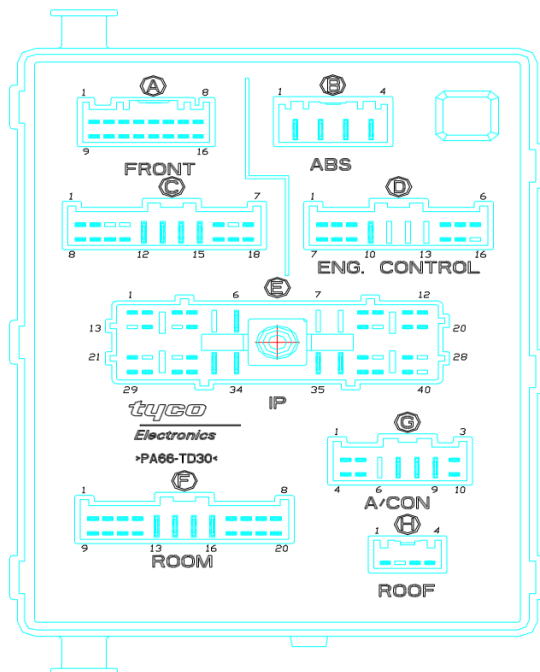

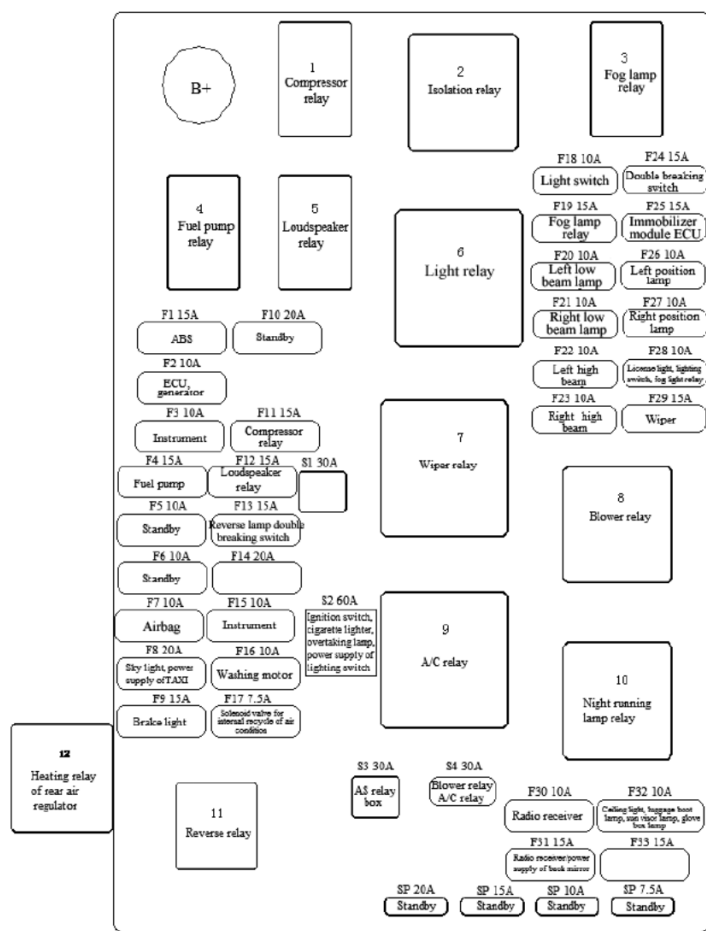


II. Control diagram of circuit systems


1. Startup & charge system

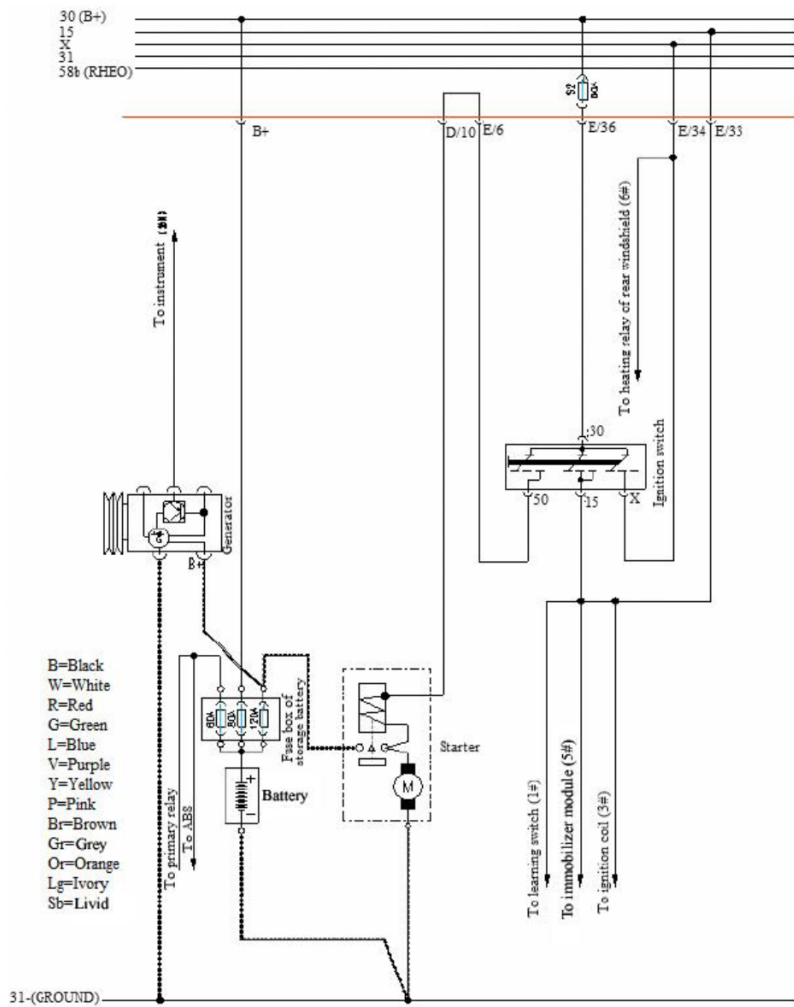


2. A/C system

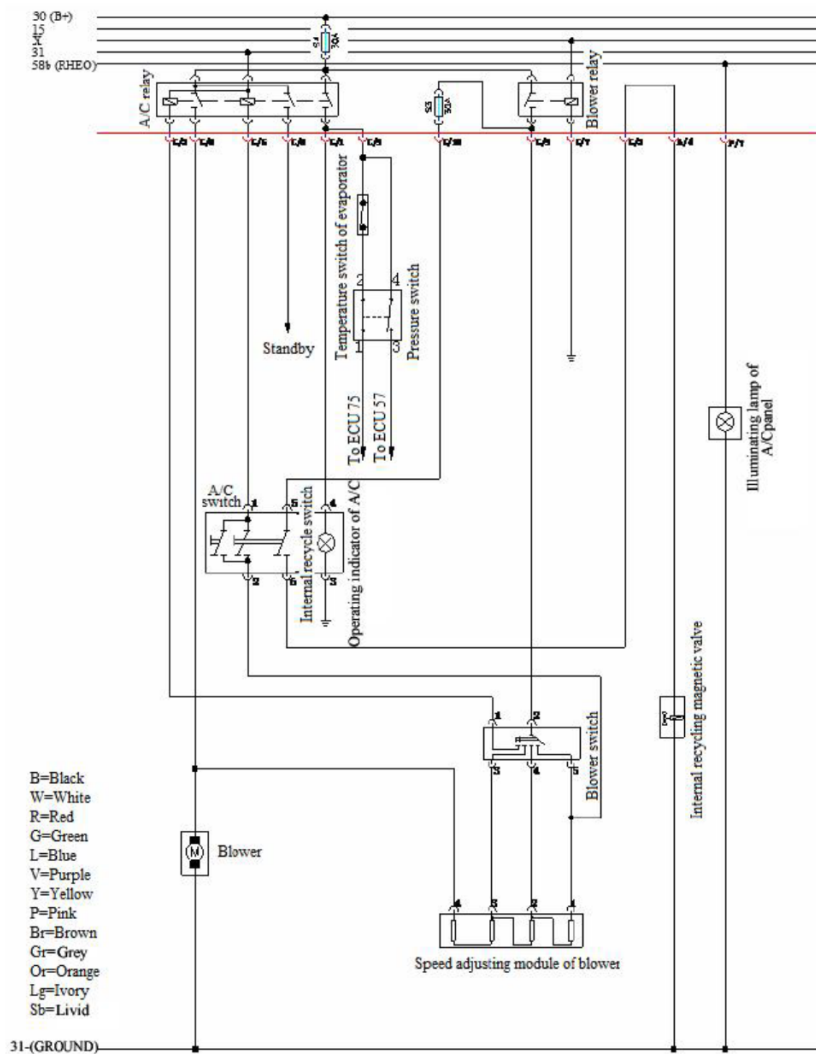


3. Immobilizer, window lifter

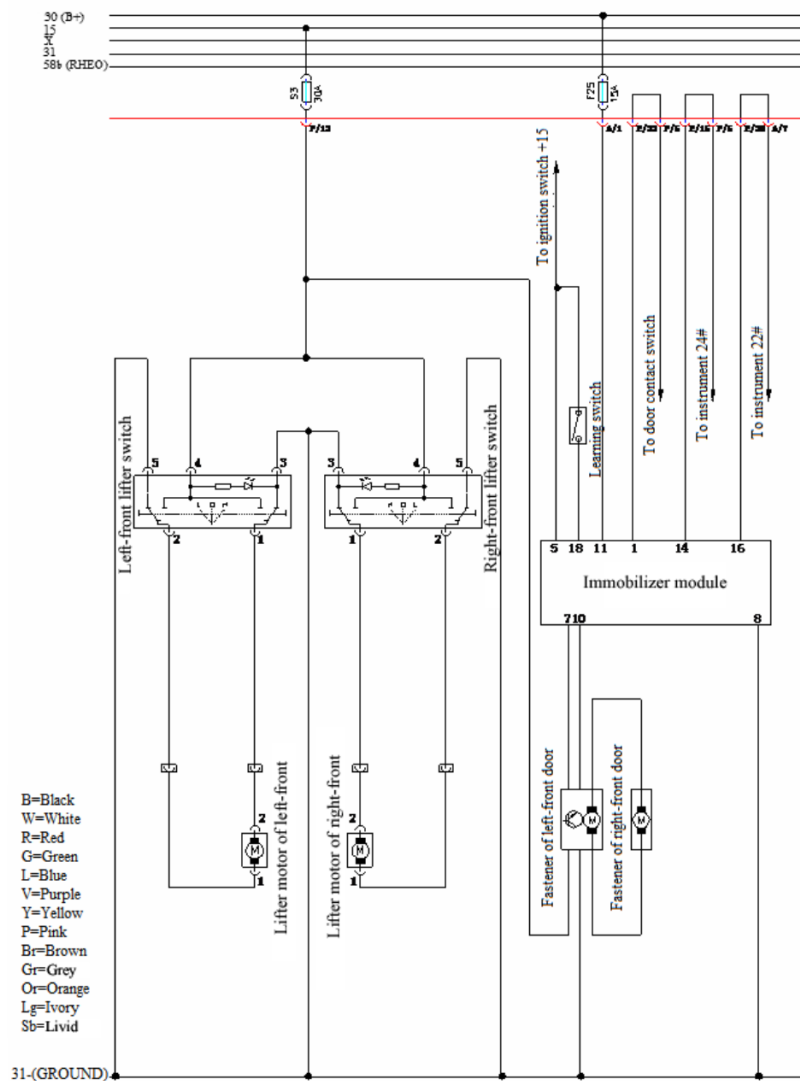


4. Instrument system

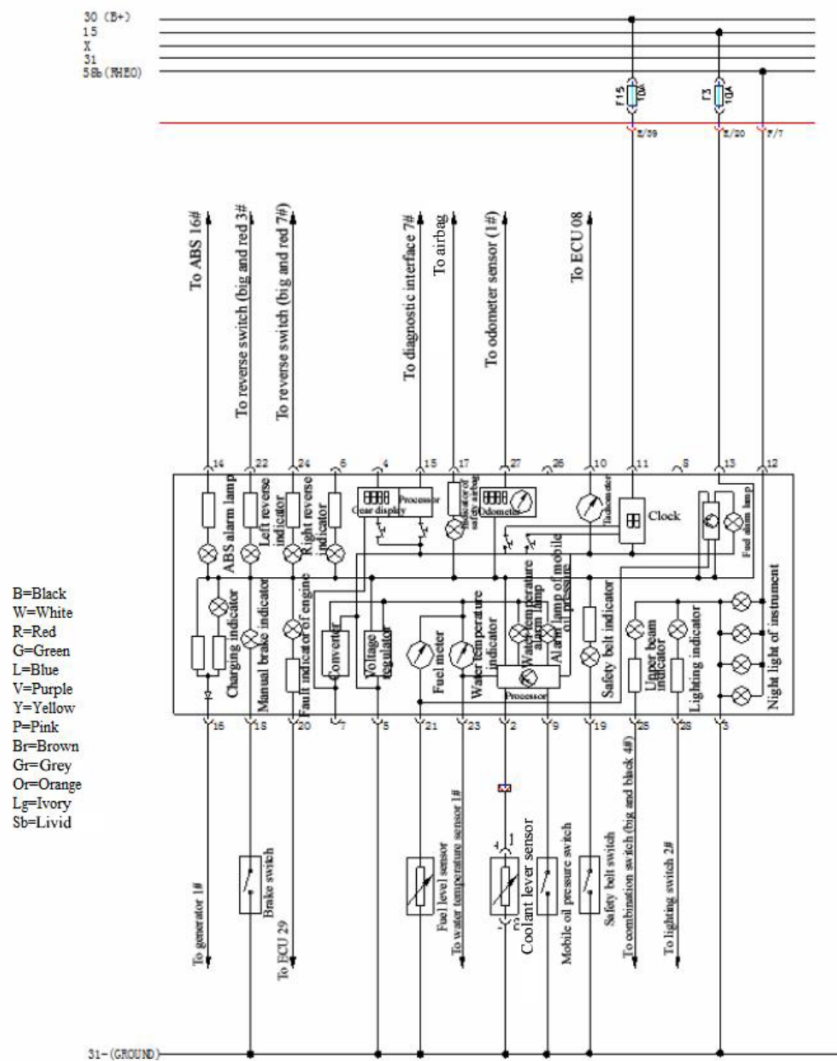


5. Audio system

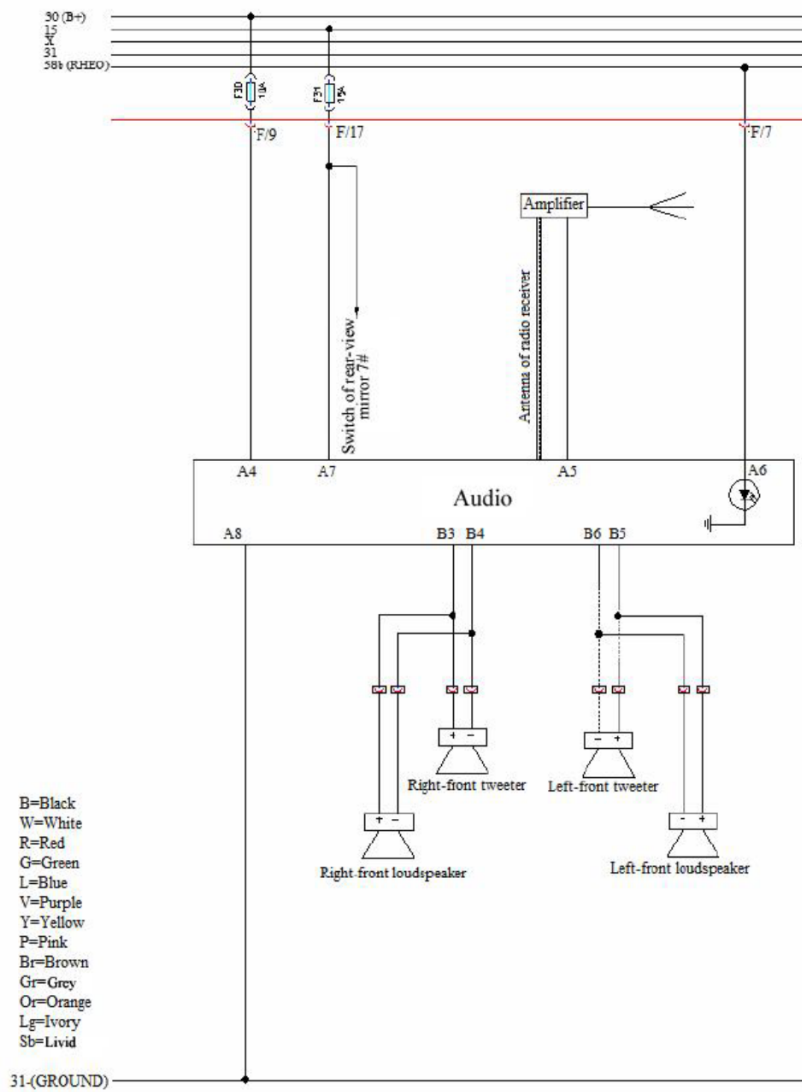


6. ABS system

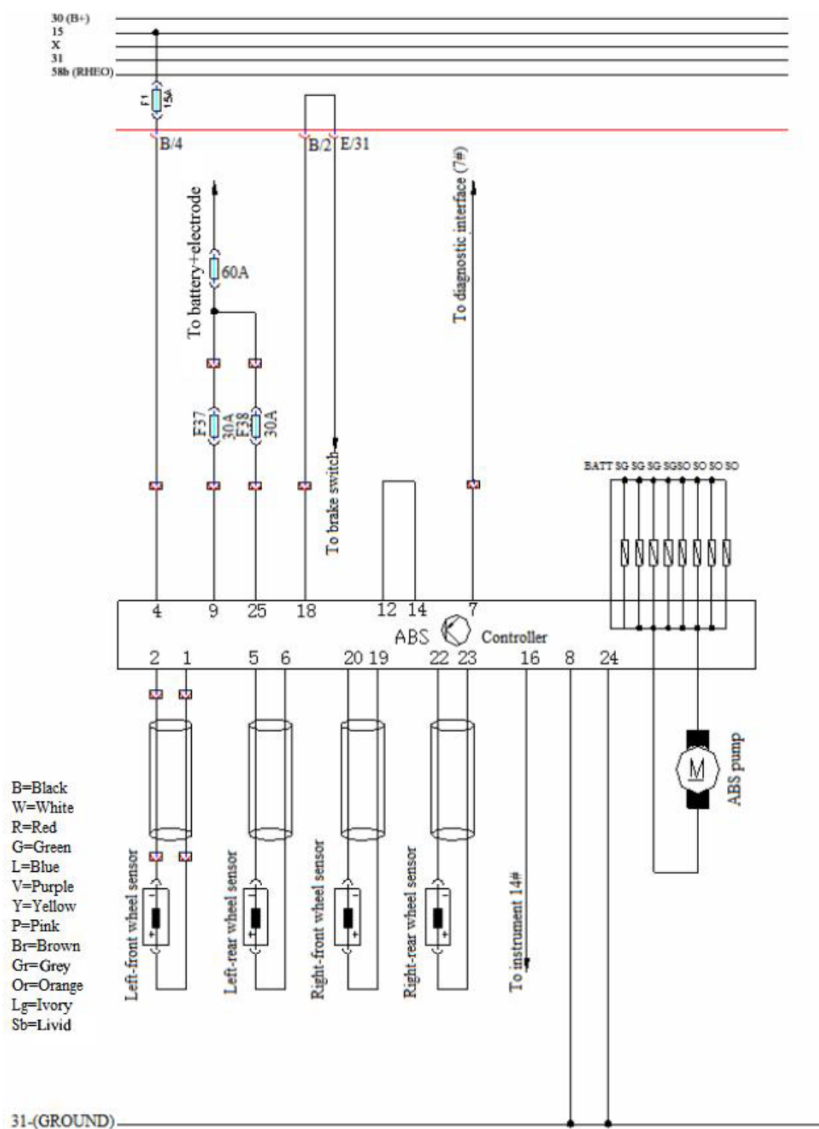


7. Airbag

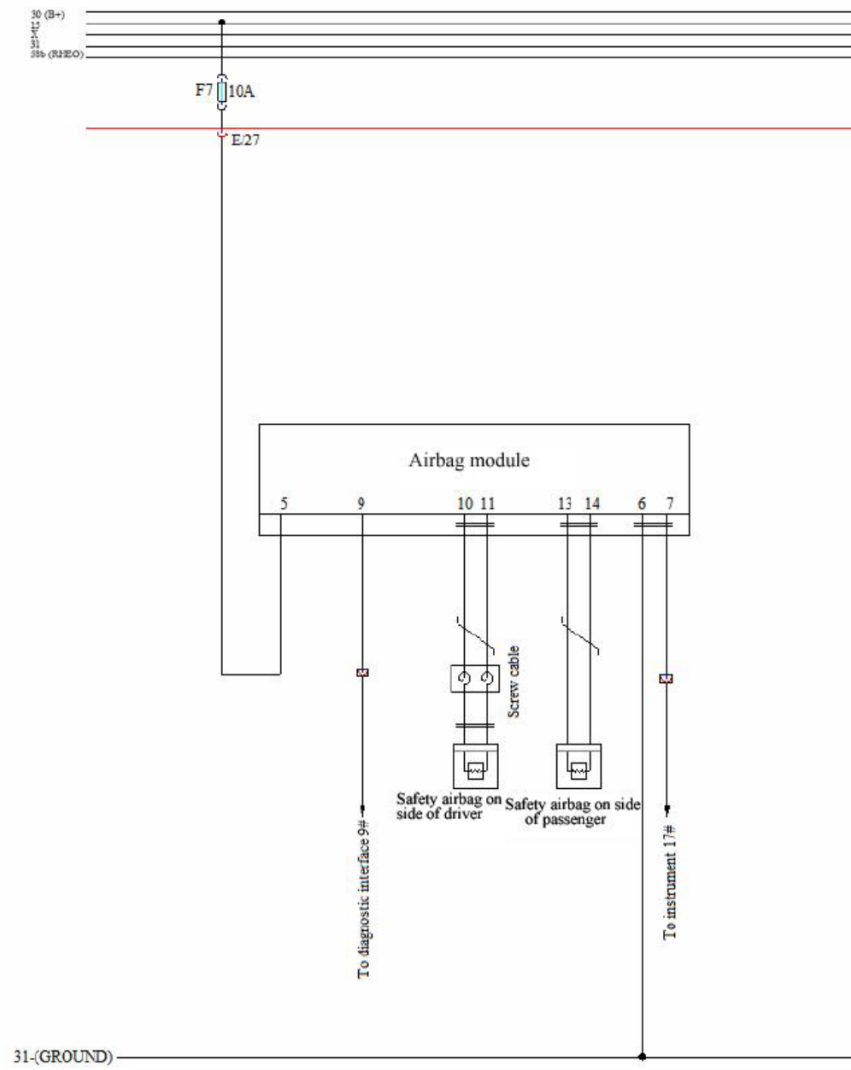


8. Wiper system

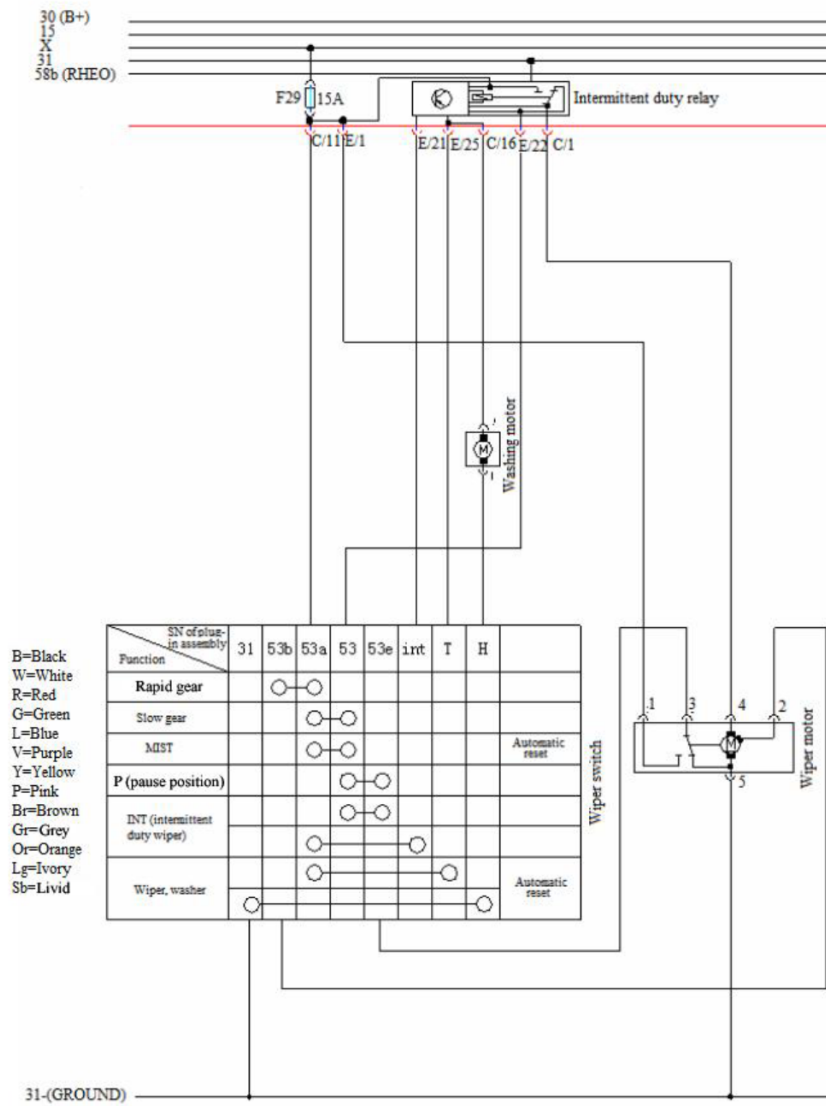


9. Power rear-view mirror

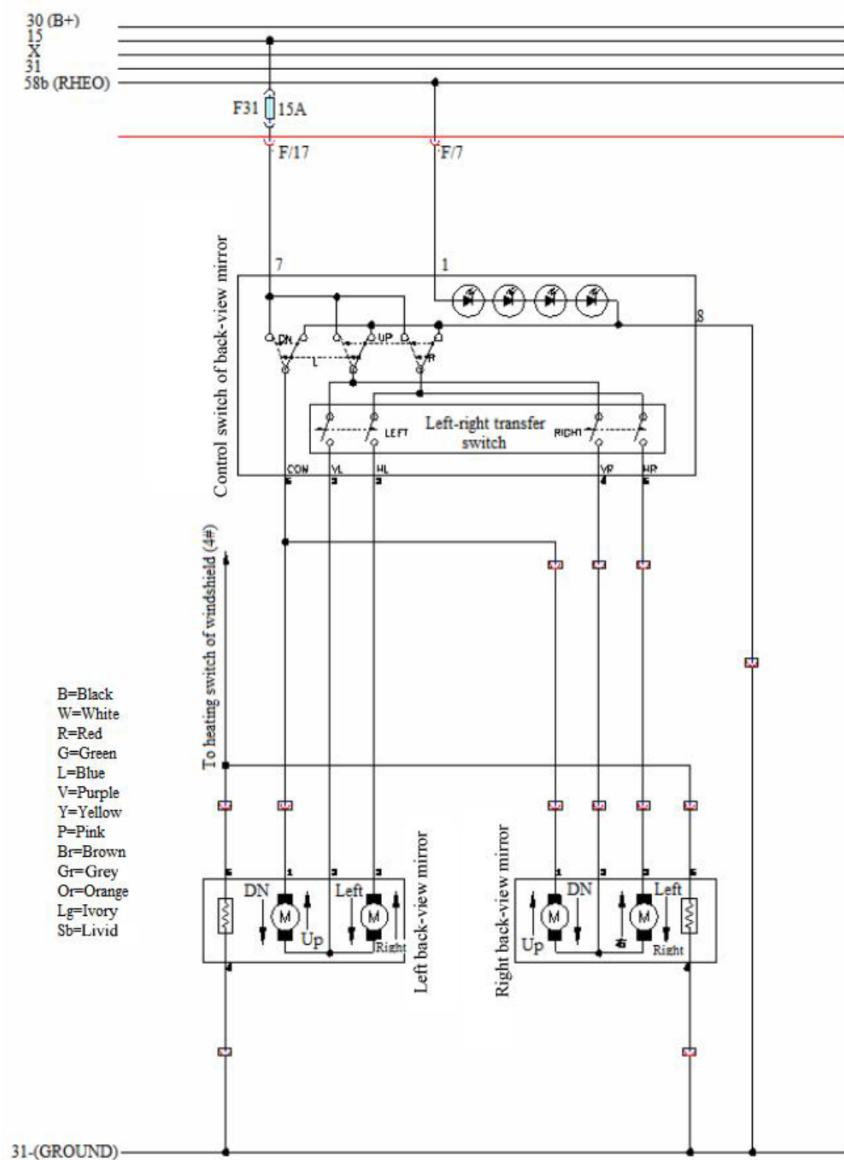

10. Lamp and defrosting system

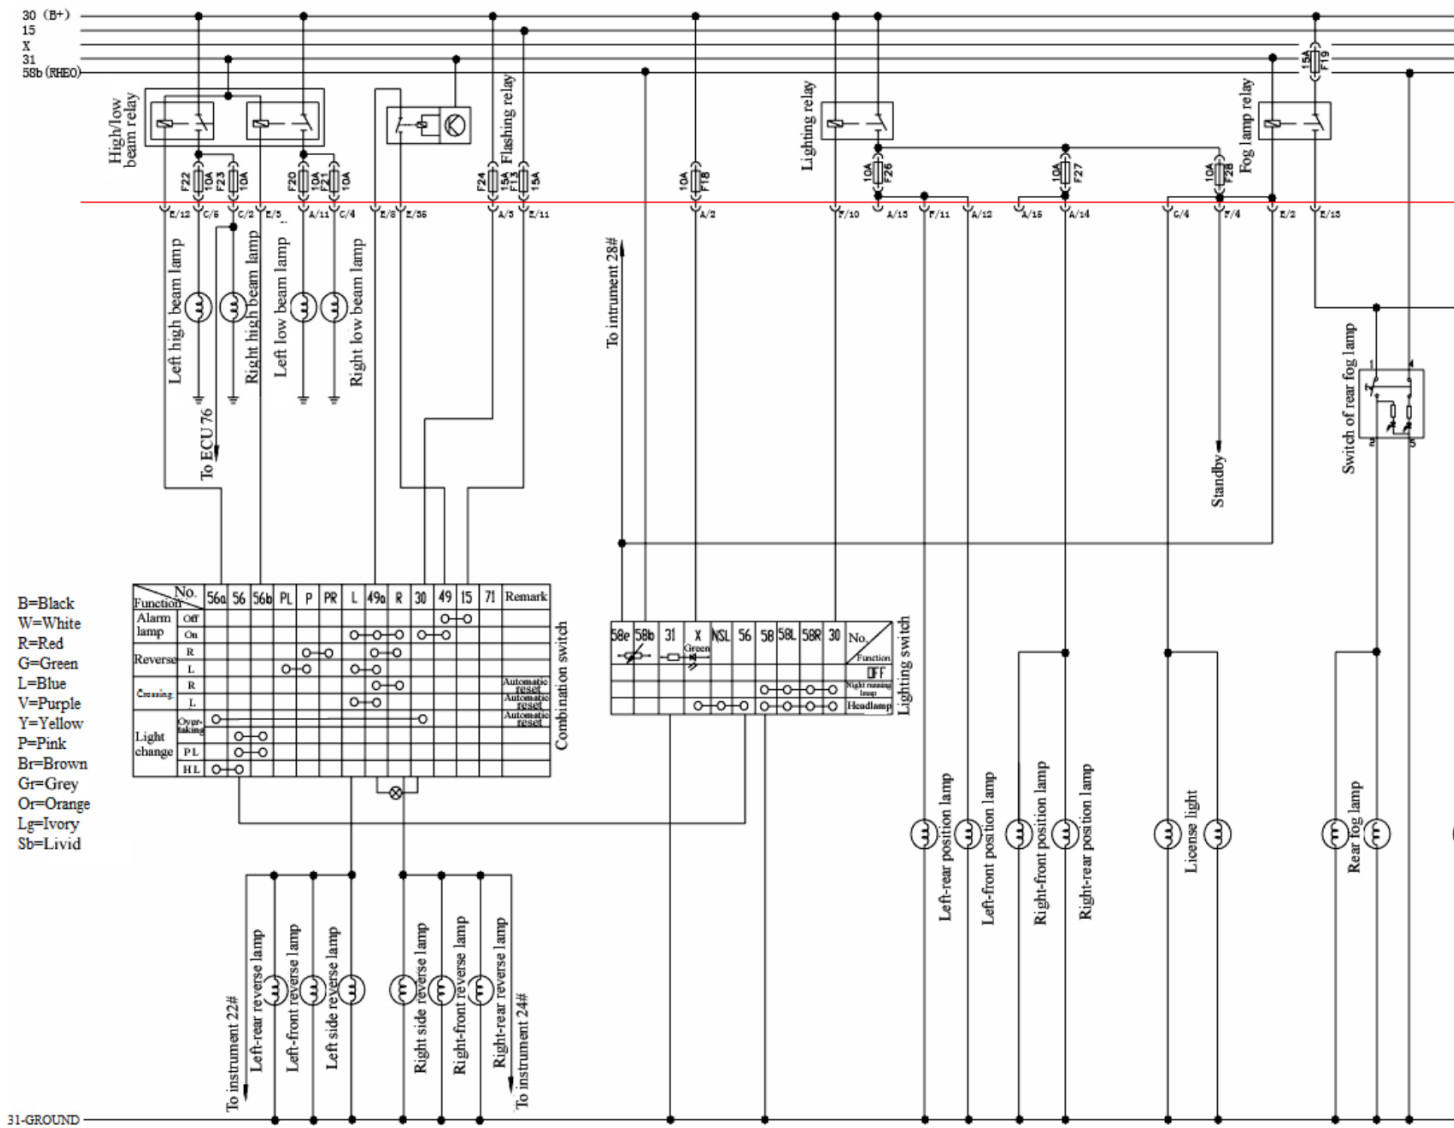

11. Engine EFI system

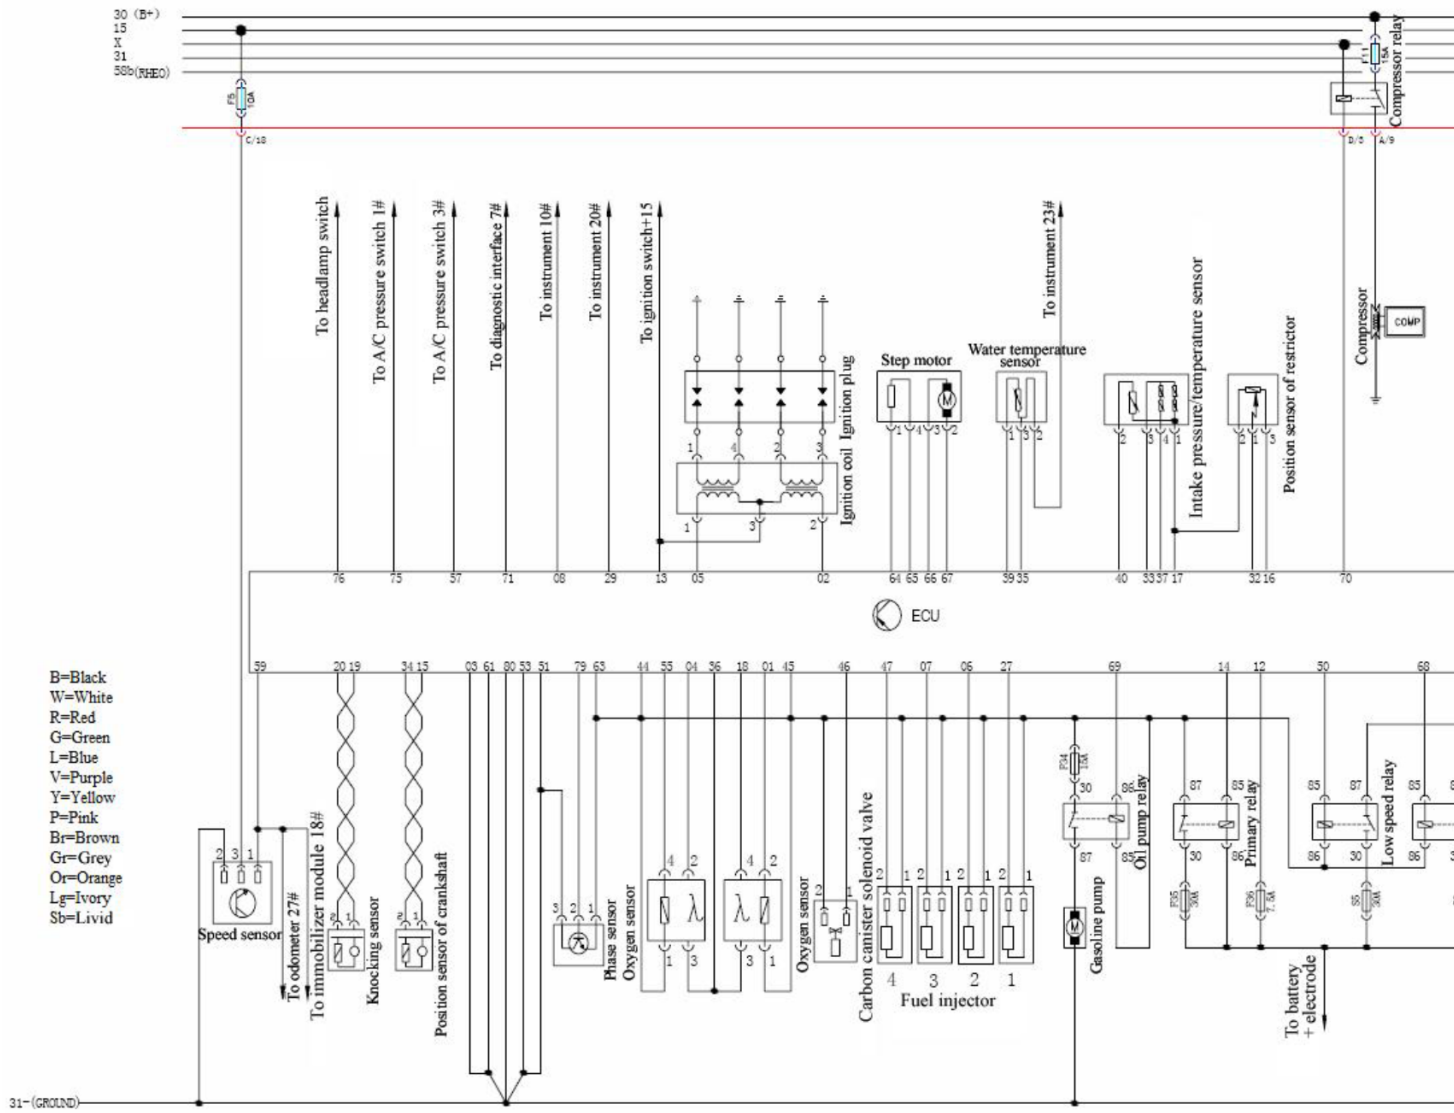

12. Ceiling lamp system, reverse gear signal, brake signal, horn and cigarette lighter

