


Rain and light sensor

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

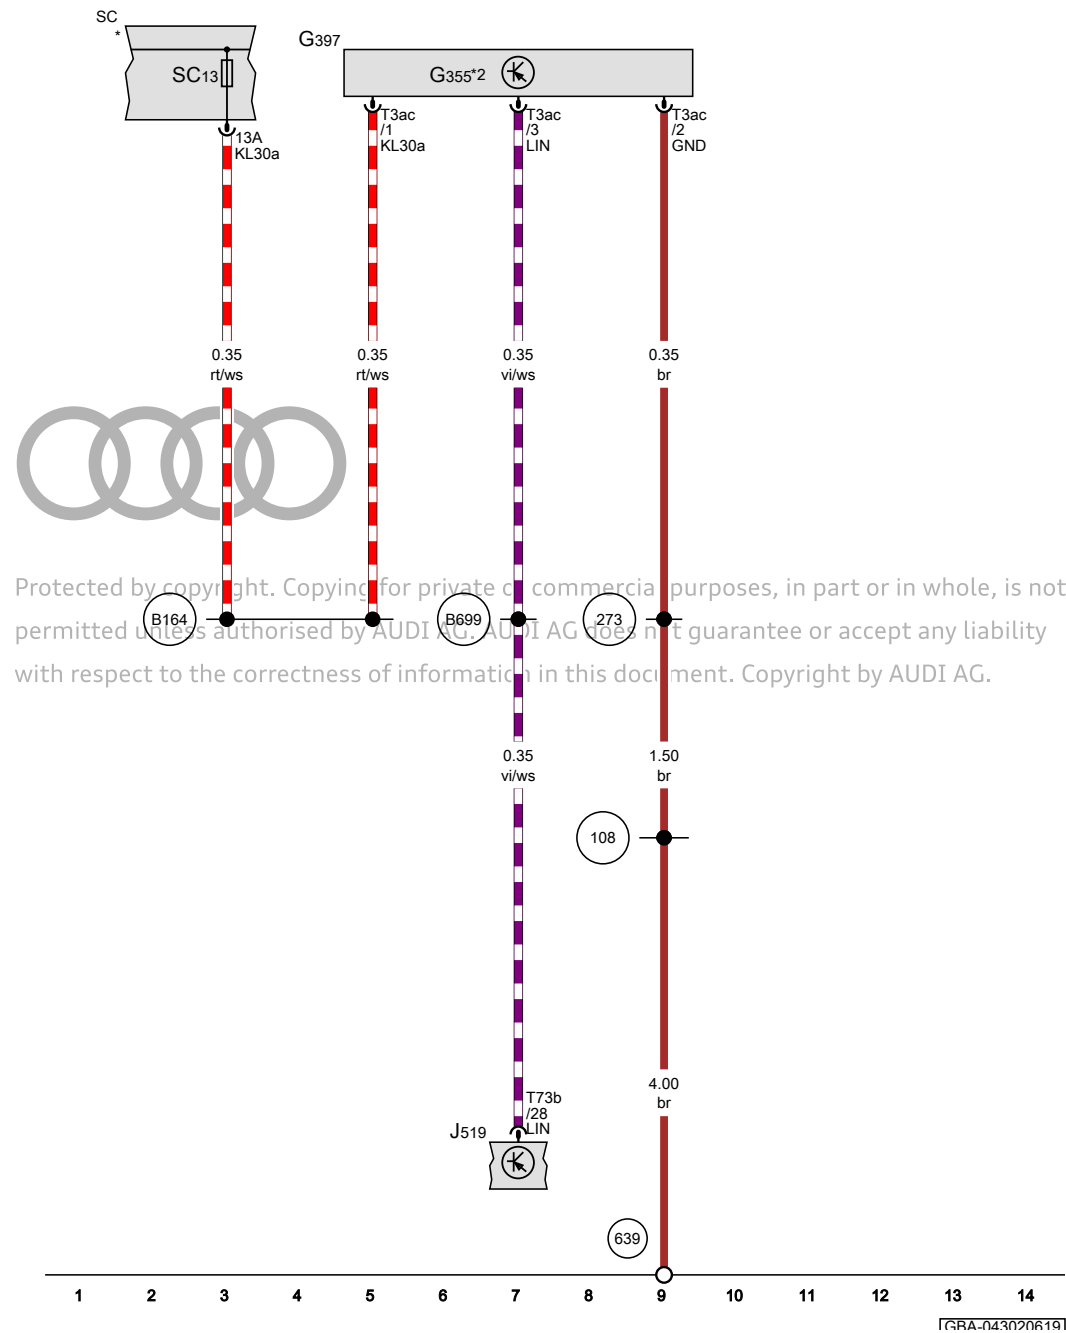

Rain and light sensor, Onboard supply control unit, Fuse holder C

- G355 Humidity sender
- G397 Rain and light sensor
- J519 Onboard supply control unit
- SC Fuse holder C
- SC13 Fuse 13 on fuse holder C
- T3ac 3-pin connector, black
- T73b 73-pin connector, black

- 108 Earth connection 2, in front left wiring harness
- 273 Earth connection 5, in front wiring harness
- 639 Earth point, left A-pillar
- B164 Connection (30, door warning light), in interior warning harness
- B699 Connection 4 (LIN bus) in main wiring harness
- * see applicable current flow diagram for fuses in interior
- *2 According to equipment

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink