


Front Side Door Trim Panel Replacement (Hatchback)


Special Tools

[J 21104-B](#) (KM 475-B) Weatherstrip Remover Universal

Removal Procedure

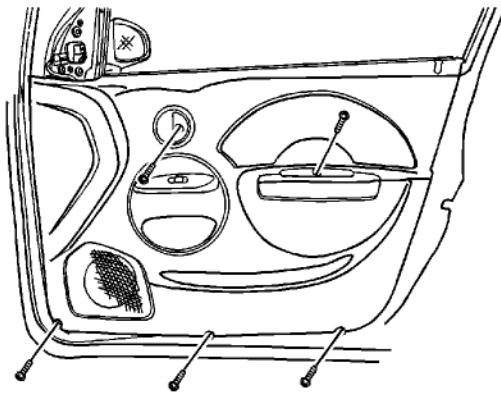


1. Lower the front window.
2. Remove the door pull screw.
3. Remove the inside door handle.
4. Remove the screws at the base of the trim panel.

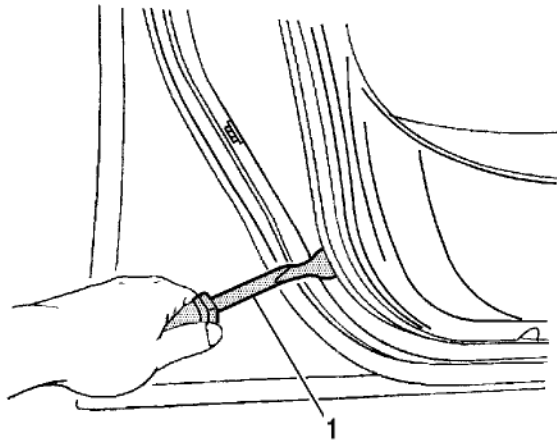

5. Pry off the trim panel using the trim remover [1 21104-B](#) (1).


Installation Procedure

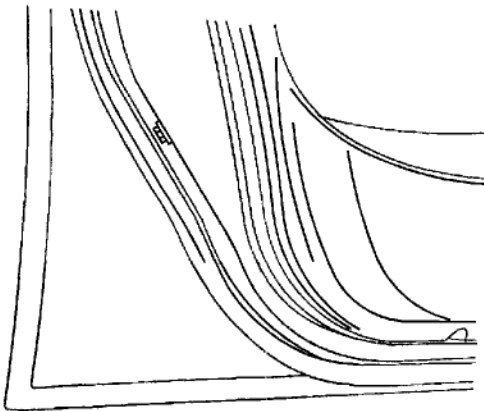

1. Install the trim panel.

Caution: Refer to [Fastener Caution](#) in the Preface section.


2. Install the screws at the base of the trim panel and tighten to **3.5 N·m (31 lb in)**.
3. Install the inside door handle.

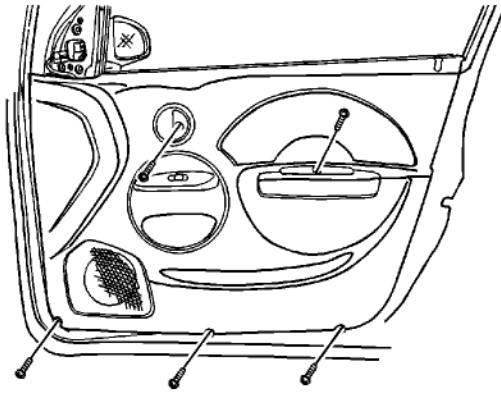


4. Install the door pull screw and tighten to **3.5 N·m (31 lb in)**.
5. Raise the window.

Front Side Door Trim Panel Replacement (Notchback)

Removal Procedure

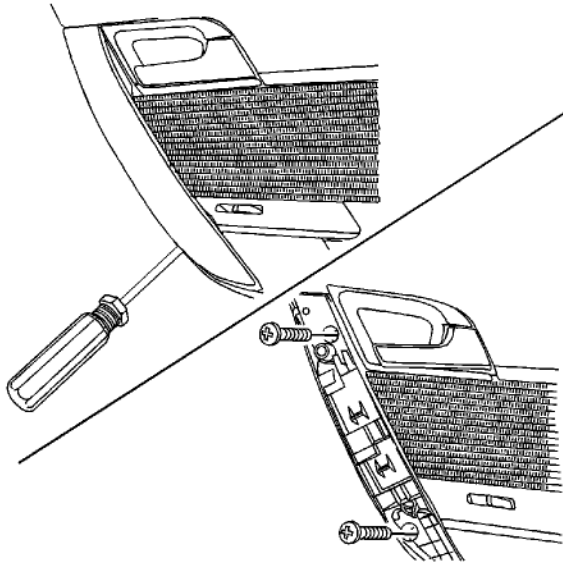

1. Lower the front window.
2. Remove the window regulator handle, if equipped.
3. Remove the door pull screws.
4. Using a flat-bladed tool, gently pry off the inside door pull handle cover.

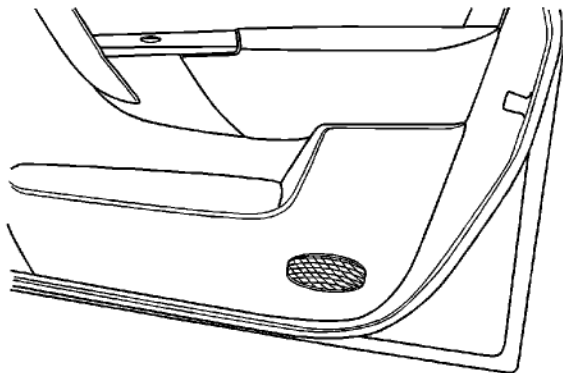


5. Pry off the trim panel.

© 2010 General Motors Corporation. All rights reserved.


6. Disconnect the necessary electrical connectors, if equipped.

Installation Procedure

1. Connect the necessary electrical connectors, if equipped.

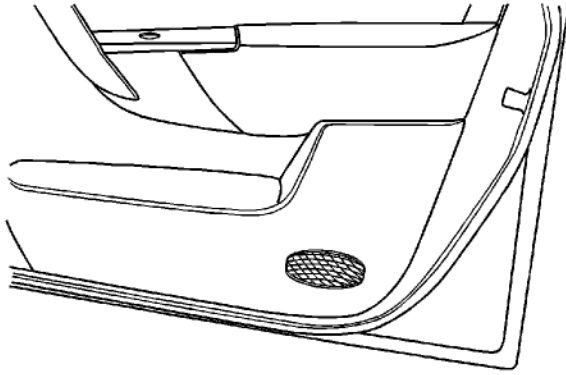


2. Install the trim panel.

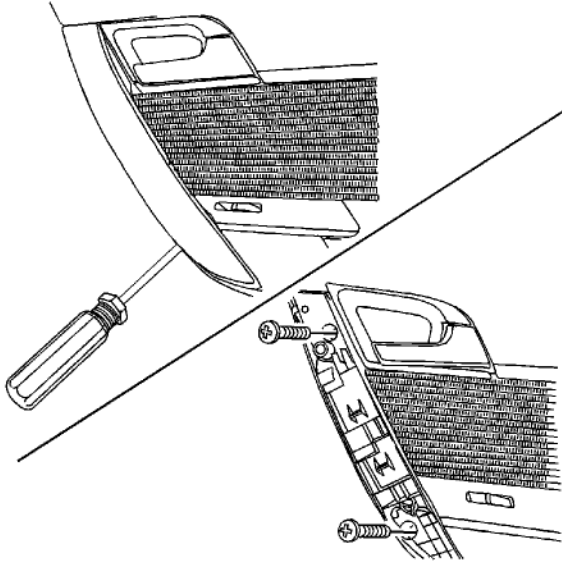

3. Install the door pull screw.
4. Install the door pull trim cover.
5. Install the window regulator handle, if equipped.
6. Raise the window.


Door Water Deflector Replacement

Removal Procedure

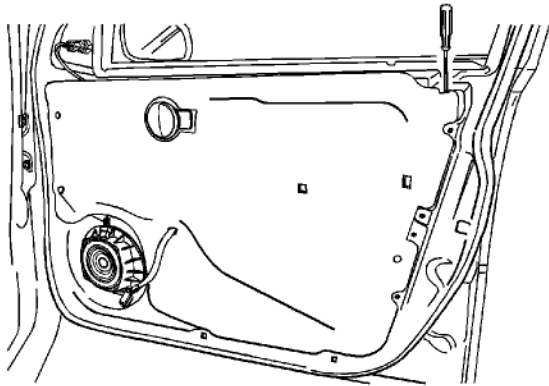

1. Remove the door trim panel. Refer to [Front Side Door Trim Panel Replacement](#).
2. Remove the screws and the door pull bracket.
3. Remove the door seal trim.

Installation Procedure

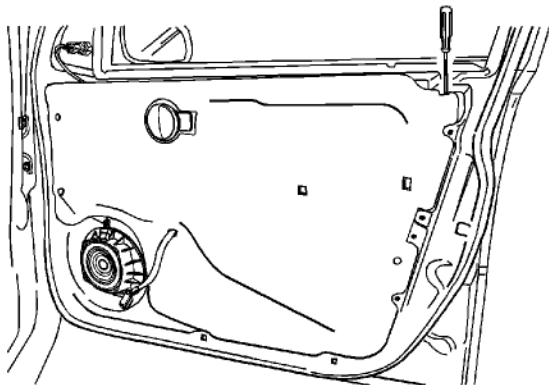




1. Install the door seal trim.

Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Install the door pull bracket with the screws and tighten to **3.5 N·m (31 lb in)**.
3. Install the door trim panel. Refer to [Front Side Door Trim Panel Replacement](#).

Cupholder Replacement


Removal Procedure

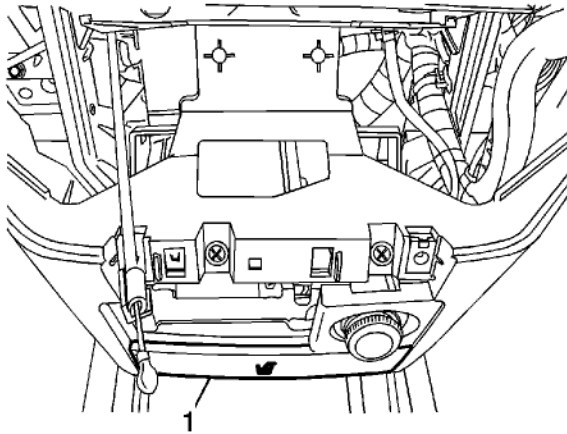

1. Remove the center console. Refer to [Front Floor Console Replacement](#).
2. Remove the heating and air conditioning controls. Refer to [Heater and Air Conditioning Control Replacement](#).
3. Remove the four screws and the cupholder assembly (1) from the instrument panel.

Installation Procedure


Caution: Refer to [Fastener Caution](#) in the Preface section.

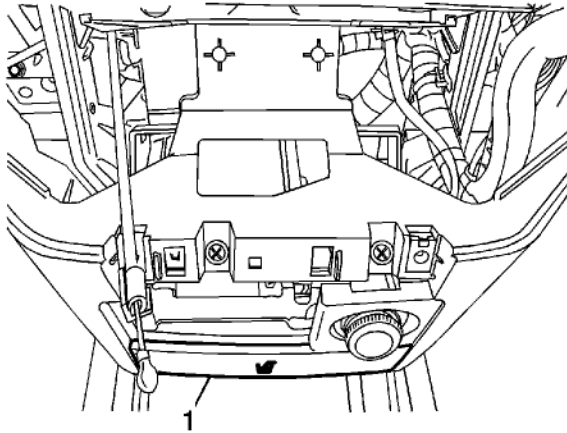

1. Install the cupholder assembly (1) with the four screws and tighten to **2.5 N·m (22 lb in)**.
2. Install the heating and air conditioning controls. Refer to [Heater and Air Conditioning Control Replacement](#).
3. Install the center console. Refer to [Front Floor Console Replacement](#).


Rear Compartment Trim Panel Replacement (Hatchback)

Removal Procedure

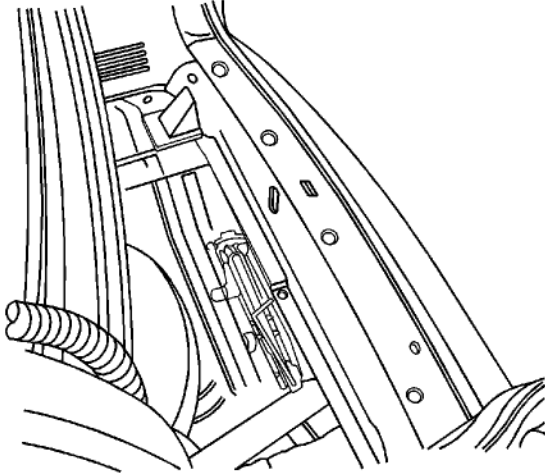

Remove the plastic retaining clips and the rear trim panel.


Installation Procedure

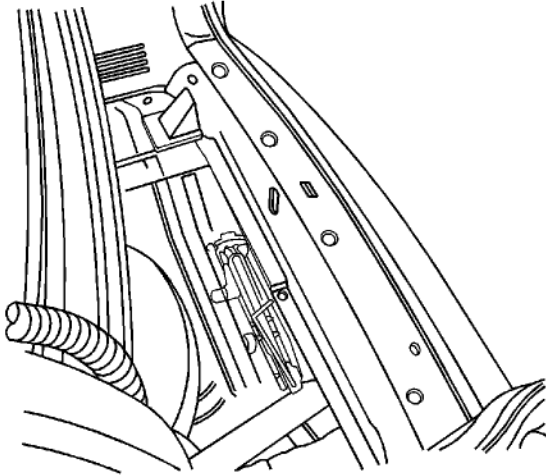

Install the rear trim panel with the plastic retaining clips.


Rear Compartment Trim Panel Replacement (Notchback)

Removal Procedure

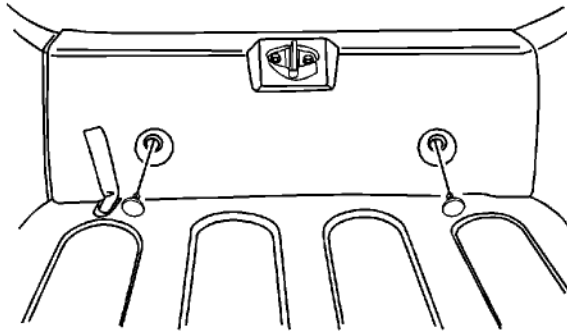

Remove the plastic retaining clips and the rear trim panel.


Installation Procedure

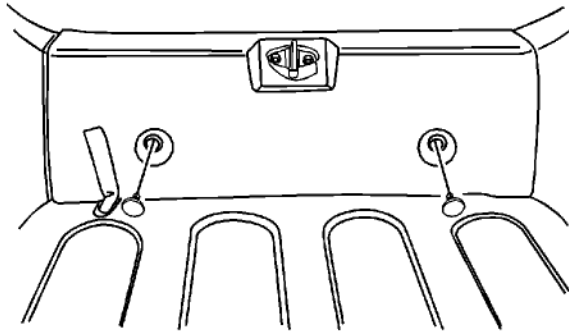

Install the rear trim panel with the plastic retaining clips.


Cargo Area Side Trim Panel Replacement (Hatchback)

Removal Procedure

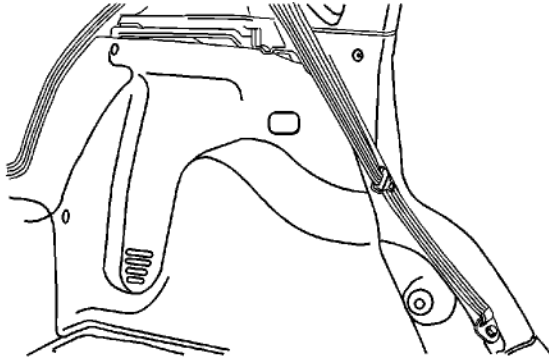

1. Remove the rear compartment trim panel. Refer to [Rear Compartment Trim Panel Replacement](#)
2. Remove the clips and the cargo area side trim panel.


Installation Procedure

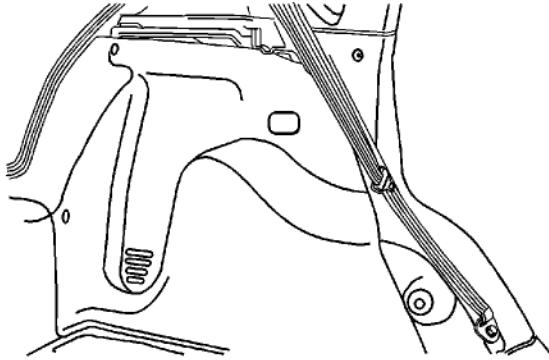

1. Install the cargo area side trim panel with the clips.
2. Install the rear compartment trim panel. Refer to [Rear Compartment Trim Panel Replacement](#) .


Liftgate Lower Garnish Molding Replacement

Removal Procedure

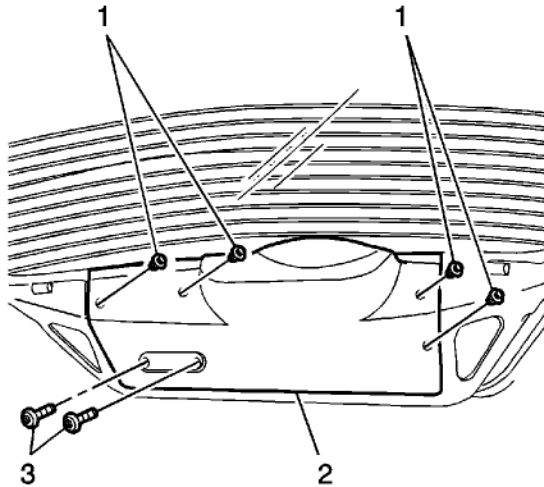

1. Open the liftgate.
2. Remove the lower garnish molding clips (1).
3. Remove the screws (3).
4. Remove the liftgate lower garnish molding (2).

Installation Procedure

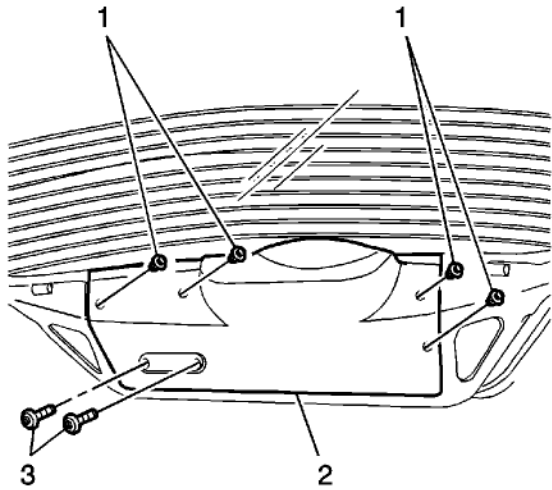


1. Install the liftgate lowerer garnish molding (2).
2. Install the screws (3).
3. Install the lower garnish molding clips (1).
4. Close the liftgate.

Rear Door Trim Panel Replacement (Hatchback)


Special Tools

[J 21104-B](#) (KM 475-B) Weatherstrip Remover Universal

Removal Procedure

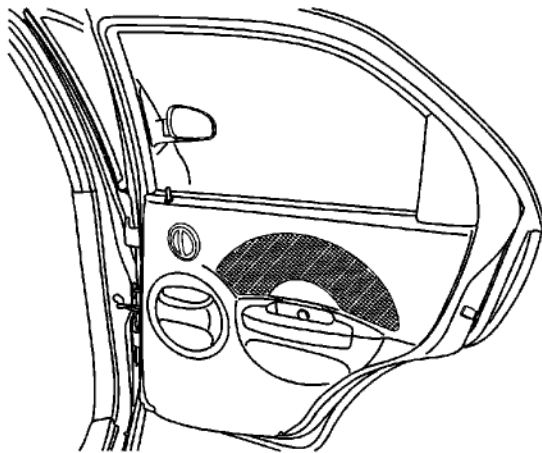


1. Lower the rear window.
2. Remove the rear window regulator handle. Refer to [Door Window Regulator Handle Replacement](#).
3. Remove the door pull screw.
4. Remove the inside door handle.

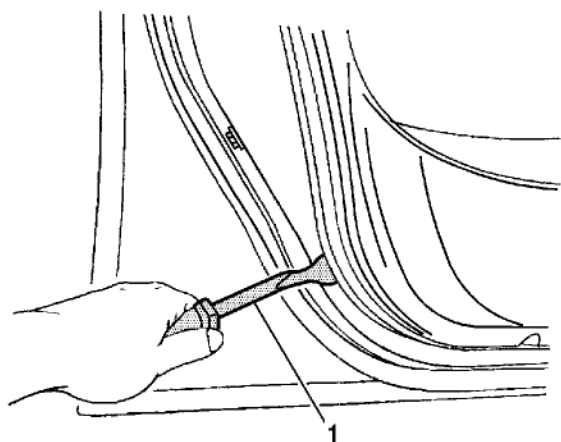

5. Remove the rear door interior garnish molding.
6. Remove the screws at the base of the trim panel.
7. Pry off the trim panel using the trim remover [J 21104-B](#) (1).


Installation Procedure

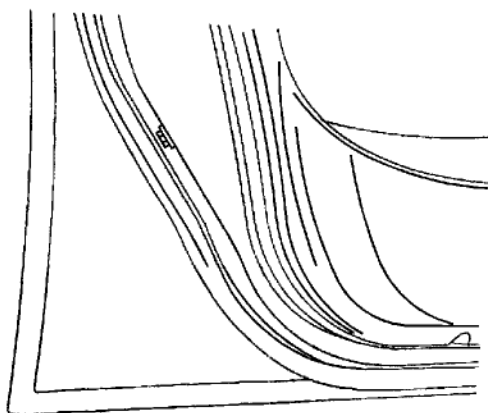

1. Install the trim panel.

Caution: Refer to [Fastener Caution](#) in the Preface section.


2. Install the screws at the base of the trim panel and tighten to **3.5 N·m (31 lb in)**.

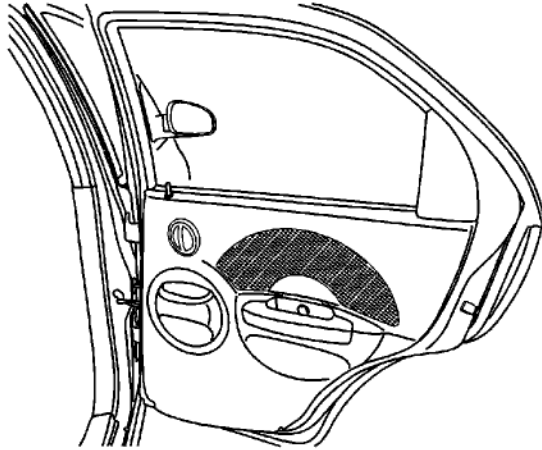


3. Install the rear door interior garnish molding.
4. Install the inside door handle.
5. Install the door pull screw and tighten to **3.5 N·m (31 lb in)**.
6. Install the rear window regulator handle. Refer to [Door Window Regulator Handle Replacement](#).
7. Raise the window.

Rear Door Trim Panel Replacement (Notchback)

Removal Procedure

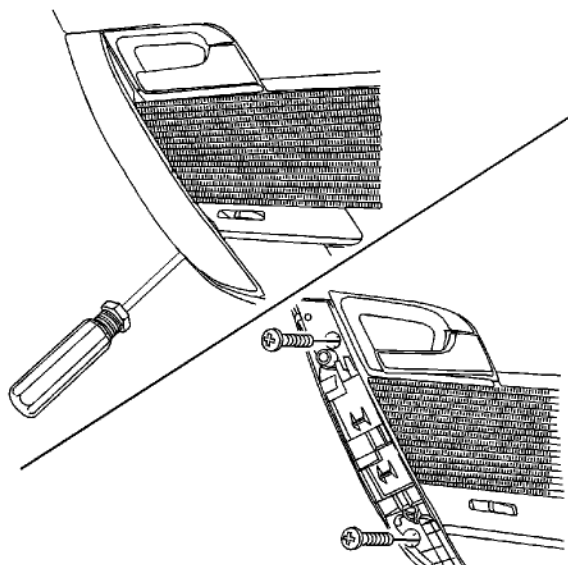


1. Lower the rear window.
2. Remove the rear window regulator handle. Refer to [Door Window Regulator Handle Replacement](#).
3. Remove the door pull screw.
4. Remove the inside door handle.

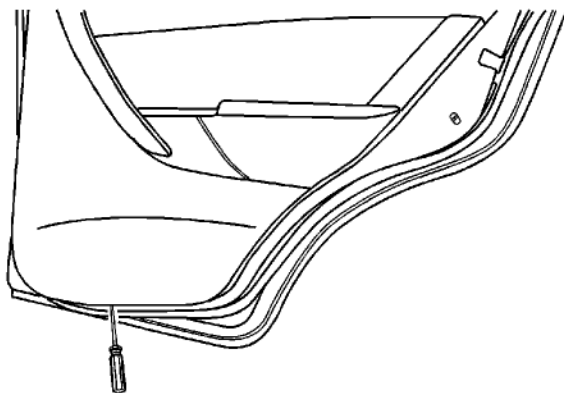

© 2010 General Motors Corporation. All rights reserved.

5. Remove the rear door interior garnish molding.
6. Remove the screws at the base of the trim panel.
7. Pry off the trim panel.


Installation Procedure

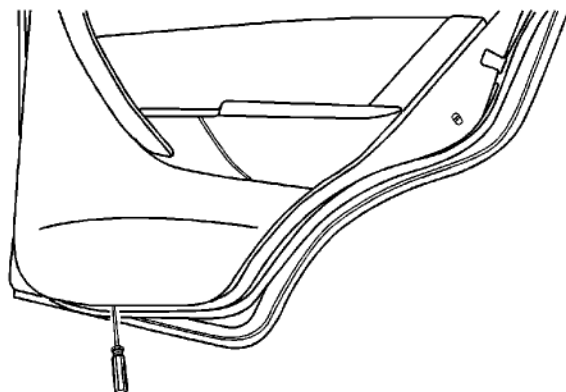

1. Install the trim panel.

Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Install the screws at the base of the trim panel and tighten to 3.5 N·m (31 lb in).

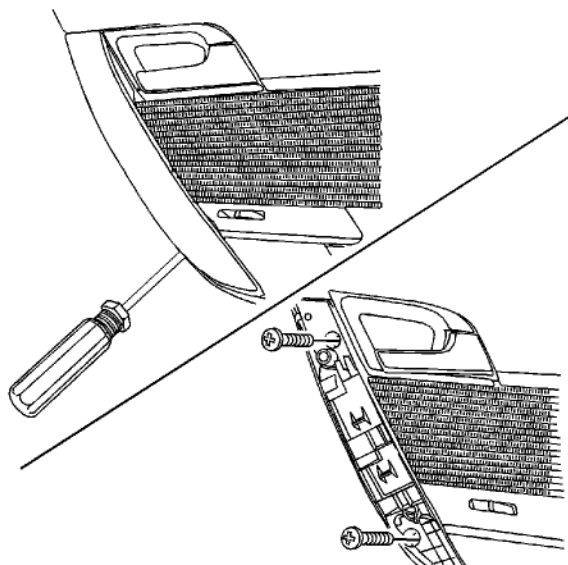


3. Install the rear door interior garnish molding.

4. Install the inside door handle.
5. Install the door pull screw and tighten to **3.5 N·m (31 lb in)**.
6. Install the rear window regulator handle. Refer to [Door Window Regulator Handle Replacement](#).
7. Raise the window.


Front Side Door Sill Trim Plate Replacement

Removal Procedure

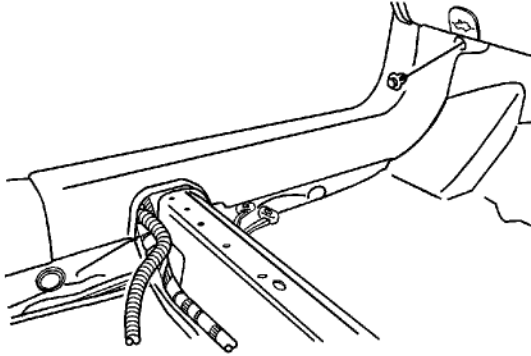

1. Remove the screw securing the front rocker trim panel.
2. Pry off the front rocker trim panel.

Installation Procedure

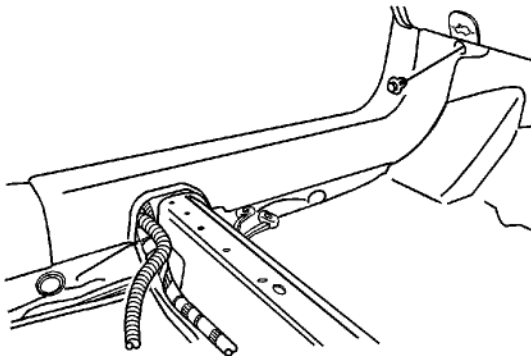




Install the front rocker trim panel with the screw.

Rear Side Door Sill Trim Plate Replacement (Hatchback)

Removal Procedure

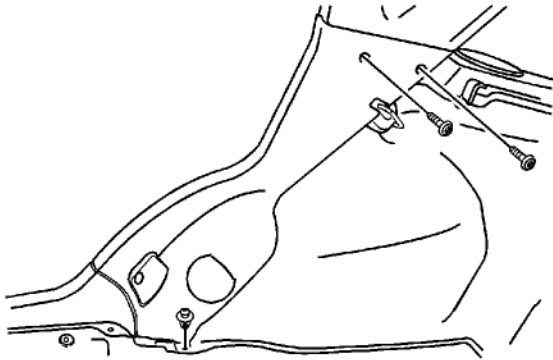


1. Remove the rear seat cushion and the rear seat back.

Refer to [Rear Seat Cushion Replacement](#).

2. Remove the screw securing the rear rocker trim panel.
3. Pry off the rear rocker trim panel.

Installation Procedure

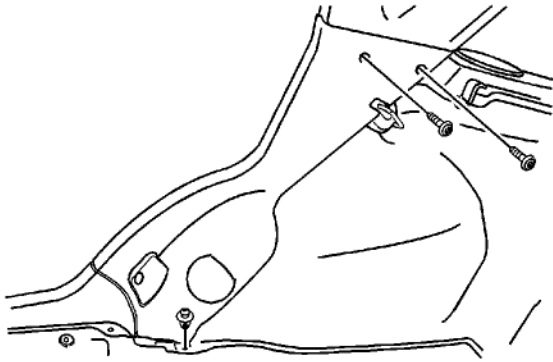

1. Install the rear rocker trim panel.
2. Install the rear rocker trim panel with the screw.


Caution: Refer to [Fastener Caution](#) in the Preface section.

3. Install the rear seat back with the bolt and tighten to **25 N·m (18 lb ft)**.
4. Install the rear seat cushion.

Refer to [Rear Seat Cushion Replacement](#).


Rear Side Door Sill Trim Plate Replacement (Notchback)

Removal Procedure

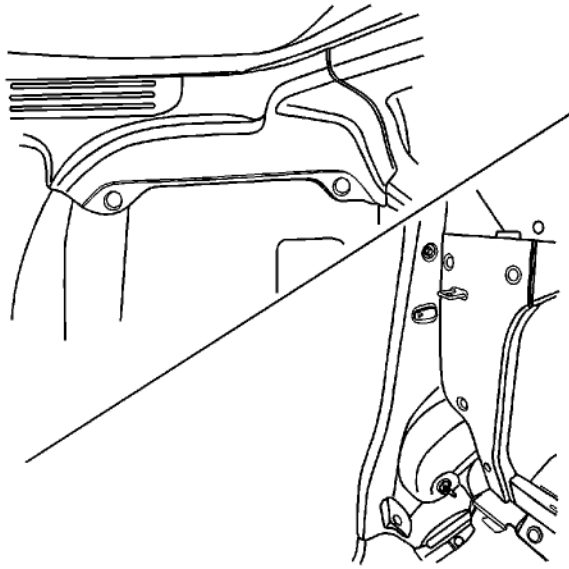

1. Remove the rear seat cushion and the rear seat back. Refer to [Rear Seat Cushion Replacement](#).
2. Remove the screw securing the rear rocker trim panel.
3. Pry off the rear rocker trim panel.

Installation Procedure

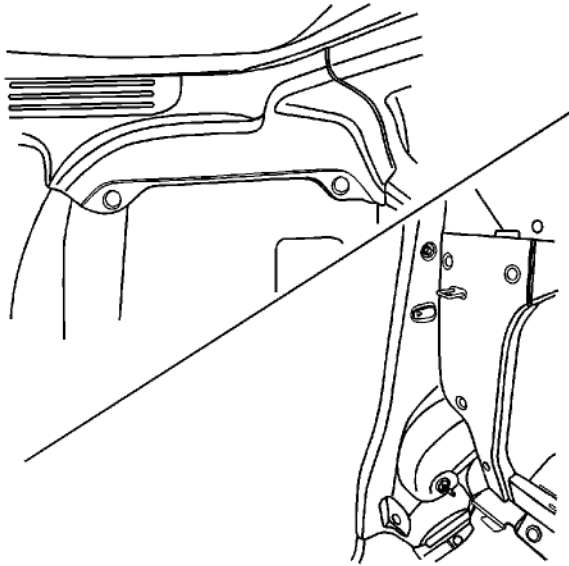


1. Install the rear rocker trim panel.
2. Install the rear rocker trim panel with the screw.

Caution: Refer to [Fastener Caution](#) in the Preface section.

3. Install the rear seat back with the bolt and tighten to **25 N·m (18 lb ft)**.
4. Install the rear seat cushion. Refer to [Rear Seat Cushion Replacement](#).


Assist Handle Replacement

Removal Procedure

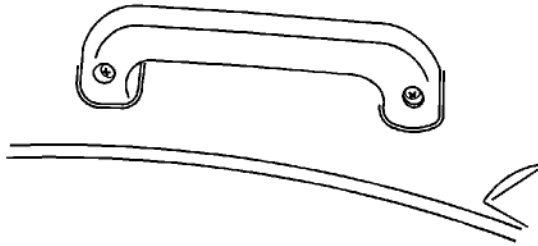

Remove the screws and the assist handle from the headliner.

Installation Procedure

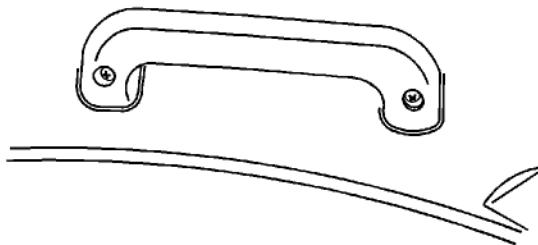




Caution: Refer to [Fastener Caution](#) in the Preface section.

Install the assist handle to the headliner with the screws and tighten to **3.5 N·m (31 lb in)**.


Coat Hook Replacement

Removal Procedure

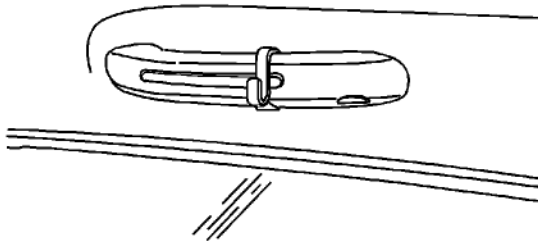

Remove the coat hook from the passenger assist handle.

Installation Procedure

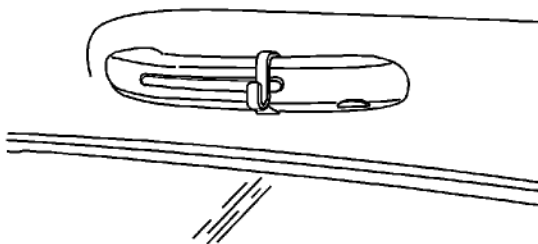




Install the coat hook to the passenger assist handle.

Sunshade Replacement

Removal Procedure

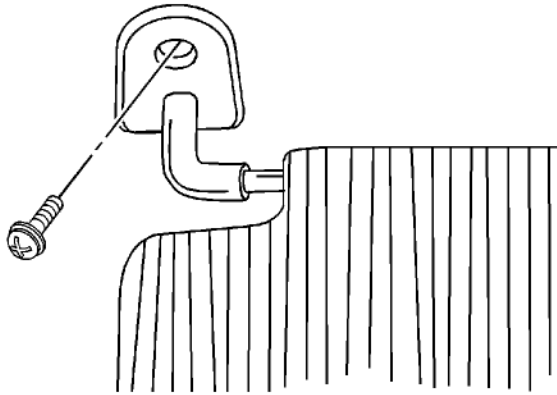

1. Remove the screws and the sun visor from the headliner.



2. Remove the screw and the sun visor support from the headliner.


Installation Procedure

© 2010 General Motors Corporation. All rights reserved.

Caution: Refer to [Fastener Caution](#) in the Preface section.



1. Install the sun visor support to the headliner with the screw and tighten to **1.5 N·m (13 lb in)**.

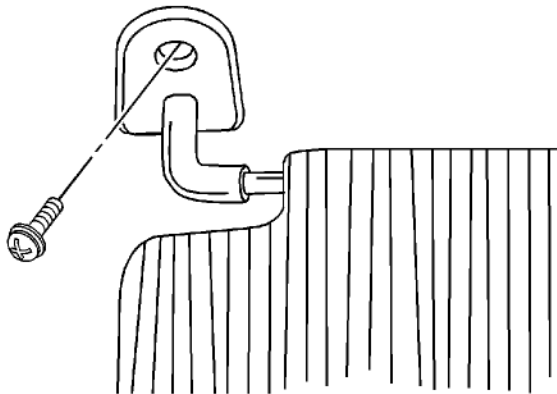


2. Install the sun visor to the headliner with the screws.

Tighten

Tighten the sun visor screws to **1.5 N·m (13 lb in)**.


Windshield Pillar Garnish Molding Replacement

Removal Procedure

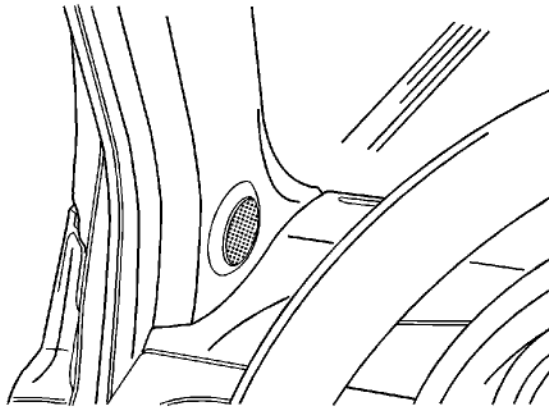

1. Carefully pry off the windshield pillar garnish molding.
2. Disconnect the electrical connector.
3. Remove the tweeter, if necessary.

Installation Procedure

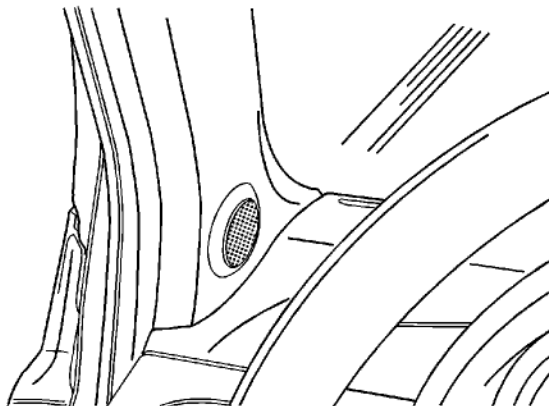




1. Install the tweeter to the windshield garnish molding, if removed.
2. Connect the electrical connector.
3. Install the windshield pillar garnish molding.


Side Door Upper Garnish Molding Replacement

Removal Procedure

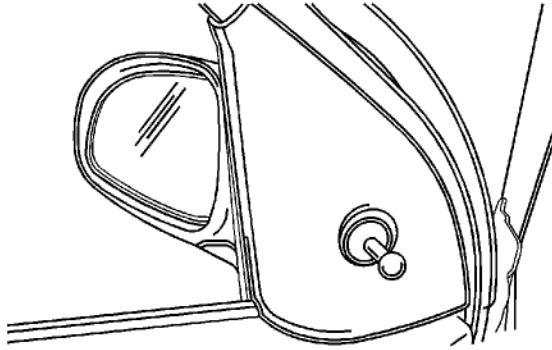

Pry off the escutcheon.

Installation Procedure

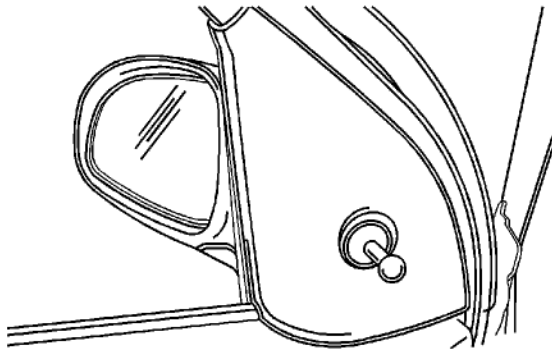




Install the escutcheon.


Center Pillar Upper Trim Panel Replacement (Notchback)

Removal Procedure

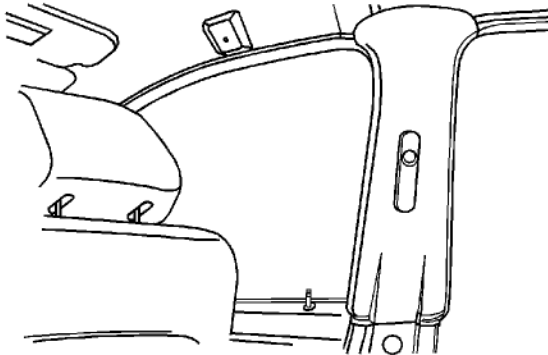

1. Remove the bolt and the upper front seat belt anchor.
2. Remove the lower center pillar trim panel. Refer to [Center Pillar Lower Trim Panel Replacement](#).
3. Pry off the upper center pillar trim panel.

Installation Procedure

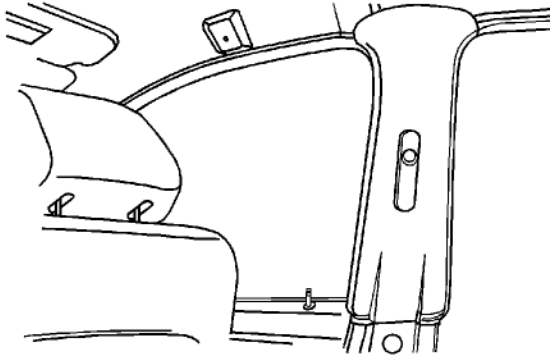


1. Install the upper center pillar trim panel.
2. Install the lower center pillar trim panel. Refer to [Center Pillar Lower Trim Panel Replacement](#).

Caution: Refer to [Fastener Caution](#) in the Preface section.


3. Install the upper front seat belt anchor with the bolt and tighten to **38 N·m (28 lb ft)**.

Center Pillar Upper Trim Panel Replacement (Hatchback)

Removal Procedure

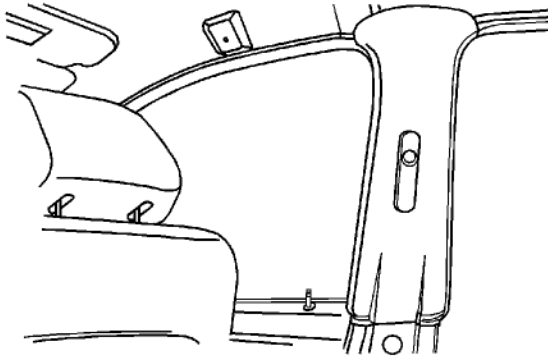


1. Remove the bolt and the upper front seat belt anchor.

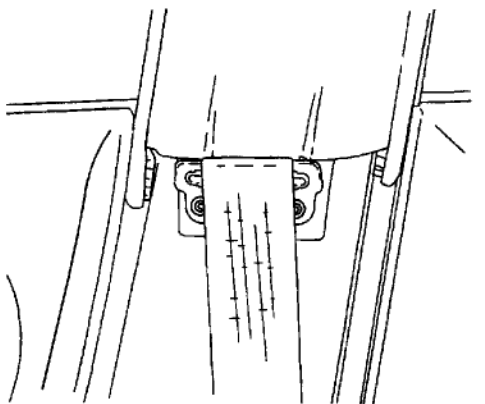

2. Remove the lower center pillar trim panel. Refer to [Center Pillar Lower Trim Panel Replacement](#).


© 2010 General Motors Corporation. All rights reserved.

3. Remove the screws and the seat belt bracket.

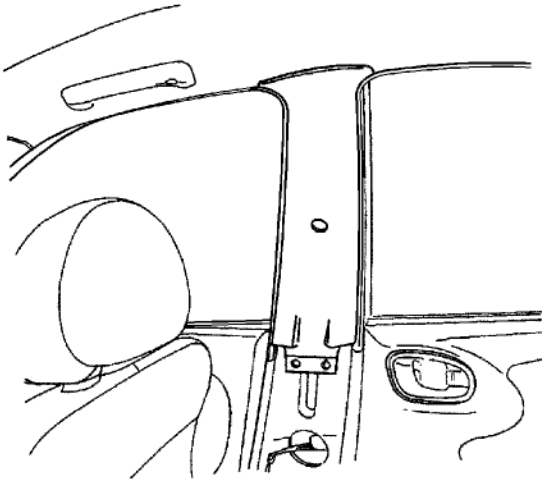


4. Pry off the upper center pillar trim panel.

Installation Procedure

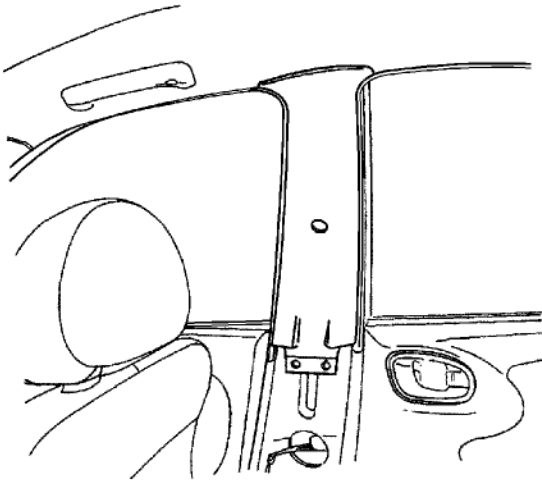


1. Install the upper center pillar trim panel.

Caution: Refer to [Fastener Caution](#) in the Preface section.

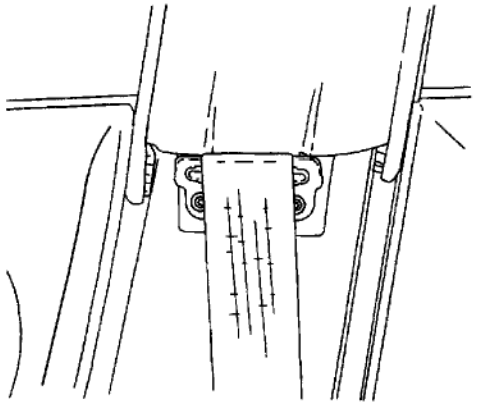

2. Install the seat belt bracket with the screws and tighten to **10 N·m (89 lb in)**.

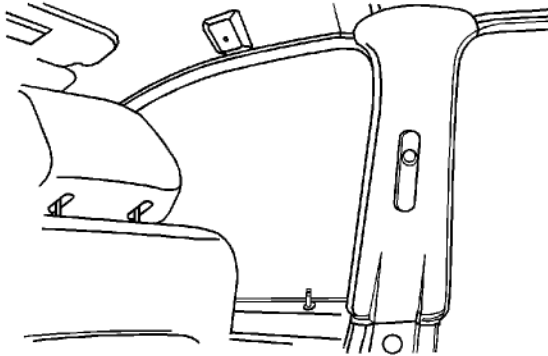

3. Install the lower center pillar trim panel. Refer to [Center Pillar Lower Trim Panel Replacement](#).
4. Install the upper front seat belt anchor with the bolt and tighten to **38 N·m (28 lb ft)**.


Center Pillar Lower Trim Panel Replacement (Hatchback)

Removal Procedure



1. Reposition the rear portion of the front rocker trim panel and the front portion of the rear rocker trim panel.
2. Pry off the lower center pillar trim panel.


Installation Procedure

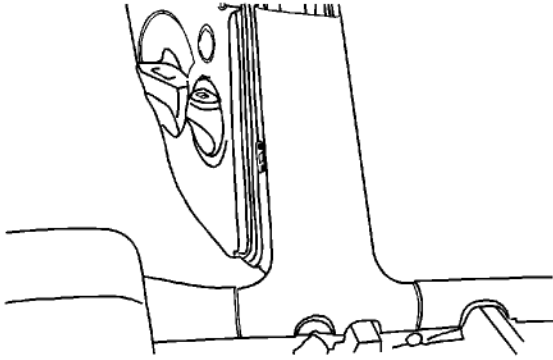

1. Install the lower center pillar trim panel.
2. Install the front rocker trim panel.
3. Install the rear rocker trim panel to its original position.


Center Pillar Lower Trim Panel Replacement (Notchback)

Removal Procedure

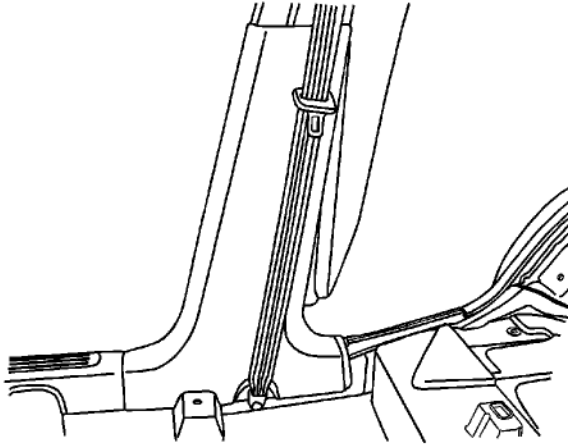

1. Reposition the rear portion of the front rocker trim panel and the front portion of the rear rocker trim panel.
2. Pry off the lower center pillar trim panel.

Installation Procedure

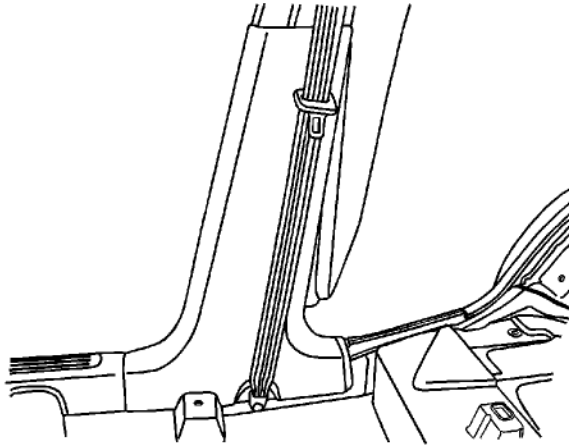


1. Install the lower center pillar trim panel.
2. Install the front rocker trim panel.
3. Install the rear rocker trim panel to its original position.

Rear Quarter Trim Panel Replacement (3 Door Hatchback)


Removal Procedure

1. Remove the rear seat cushion. Refer to [Rear Seat Cushion Replacement](#).
2. Remove the rear seat back. Refer to [Rear Seat Back Replacement](#).
3. Remove the door sill plate. Refer to [Front Side Door Sill Plate Replacement](#).

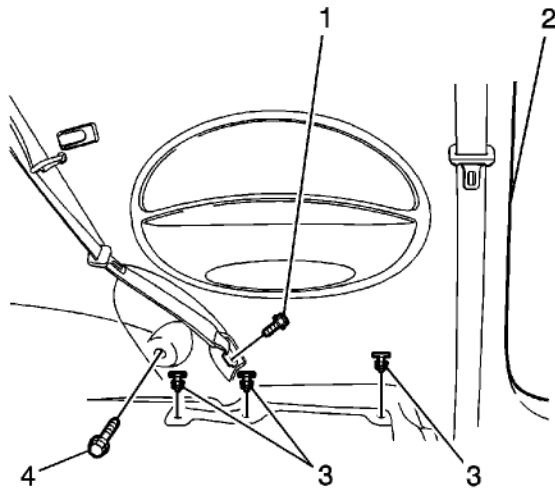

4. Remove the 3 quarter trim panel retaining clips (3).
5. Remove the seat belt lower anchor bolt (1).
6. Remove the rear seat locking pin (4).
7. Remove the quarter trim panel (2) from the vehicle.

Installation Procedure

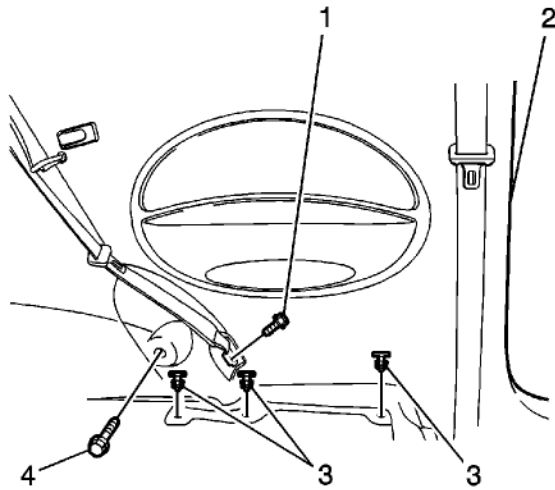


1. Install the quarter trim panel (2), to the vehicle.

Caution: Refer to [Fastener Caution](#) in the Preface section.

2. Install the rear seat locking pin (4) and tighten to **38 N·m (28 lb ft)**.
3. Install the rear seat belt lower anchor and bolt (1) and tighten to **38 N·m (28 lb ft)**.
4. Install the 3 quarter trim panel retaining clips (3).
5. Install the rear seat back. Refer to [Rear Seat Back Replacement](#).
6. Install the rear seat cushion. Refer to [Rear Seat Cushion Replacement](#).
7. Install the door sill plate. Refer to [Front Side Door Sill Plate Replacement](#).


Quarter Upper Trim Panel Replacement (3 Door Hatchback)

Removal Procedure

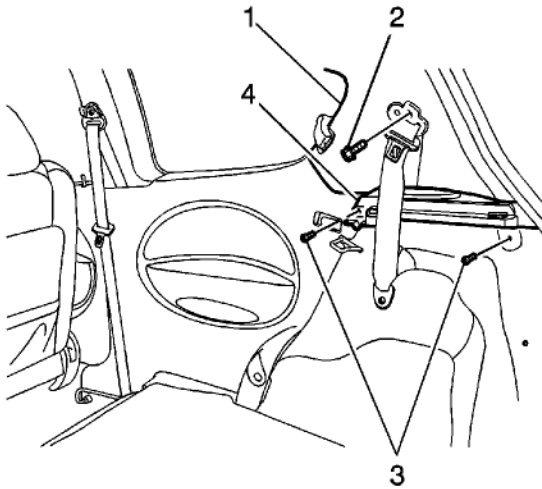

1. Remove the rear quarter trim panel. Refer to [Rear Quarter Trim Panel Replacement](#).
2. Remove the seat belt upper anchor bolt (3).
3. Remove the two screws (3) from the rear compartment side cover (4).
4. Remove the rear compartment side cover (4).
5. Remove the upper quarter trim panel (1) from the vehicle.

Installation Procedure

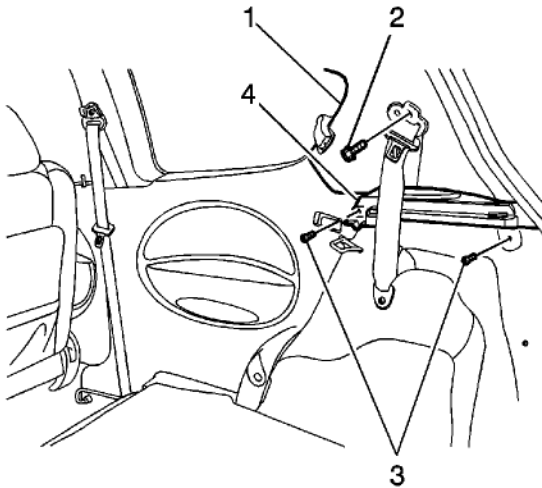

1. Install the upper quarter trim panel (1) to the vehicle.
2. Install the rear compartment side cover (4).
3. Install the two screws (3) to the rear compartment side cover (4).

Caution: Refer to [Fastener Caution](#) in the Preface section.

4. Install the seat belt upper anchor bolt (3).


Tighten

Tighten the seat belt upper anchor bolt (3) to 38 N·m (28 lb ft).

5. Remove the rear quarter trim panel. Refer to [Rear Quarter Trim Panel Replacement](#).

Quarter Upper Trim Panel Replacement (5 Door Hatchback)

Removal Procedure

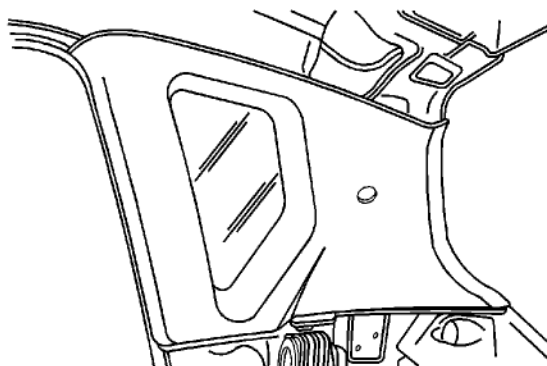


1. Remove the seat belt from the rear quarter upper trim panel.
2. Remove the rear rocker trim panel.

Refer to [Rear Side Door Sill Plate Replacement](#)

3. Remove the rear quarter upper trim panel.

Installation Procedure

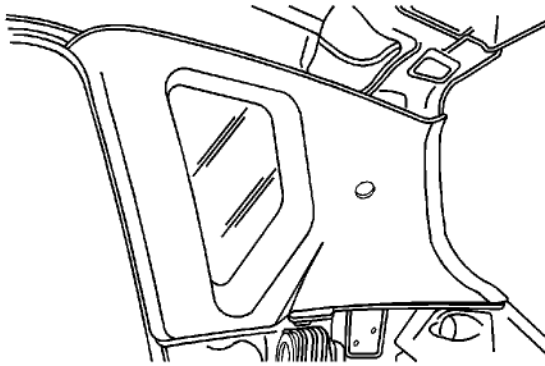


1. Install the rear quarter upper trim panel.
2. Install the rear rocker trim panel.

Refer to [Rear Side Door Sill Plate Replacement](#) .

3. Install the seat belt from the rear quarter upper trim panel.


Quarter Upper Trim Panel Replacement (Notchback)

Removal Procedure

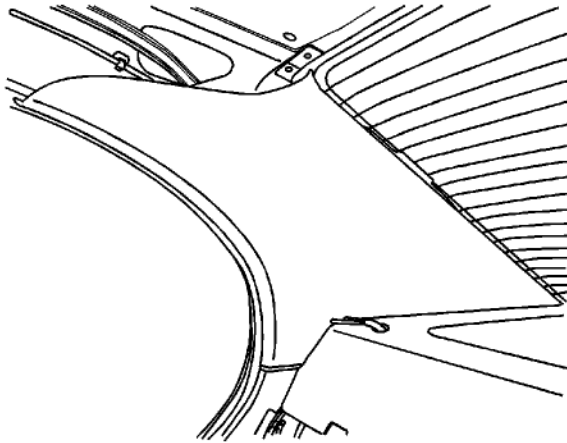

1. Remove the seat belt from the rear quarter upper trim panel.
2. Remove the rear quarter upper trim panel.

Installation Procedure

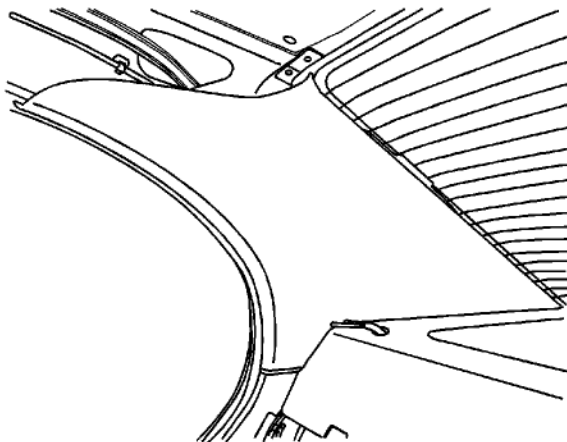




1. Install the rear quarter upper trim panel.
2. Install the seat belt from the rear quarter upper trim panel.


Rear Window Shelf Trim Panel Replacement

Removal Procedure

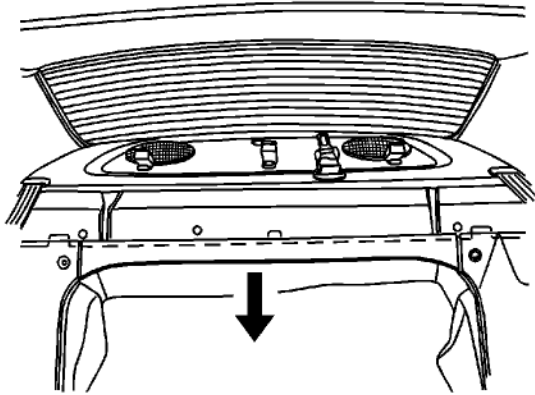

1. Fold down the rear seat back.
2. Remove the C-pillar trim.
3. Remove the rear seat belt lower anchor bolts. Refer to [Shoulder Belt Replacement - Rear](#).
4. Remove the center high mounted stop lamp. Refer to [High Mount Stop Lamp Inoperative](#).
5. Remove the child seat anchors. Refer to [Child Restraint Tether Anchor Replacement](#).
6. Remove the back panel upper cover.
7. Remove the plastic retaining clips.
8. Slide the deck lid sill plate cover forward to remove.

Installation Procedure

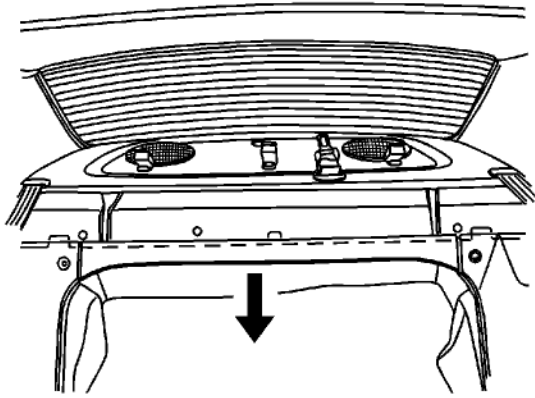

1. Install the rear deck lid sill plate cover with the plastic retaining clips.
2. Install the back panel upper cover.
3. Install the child seat anchors. Refer to [Child Restraint Tether Anchor Replacement](#).
4. Install the center high mounted stop lamp. Refer to [High Mount Stop Lamp Inoperative](#).
5. Install the rear seat belt lower anchor bolts. Refer to [Shoulder Belt Replacement - Rear](#).
6. Install the C-pillar trim panel.
7. Put back the rear seat back.