


CHAPTER SIX INSTRUMENT PANEL

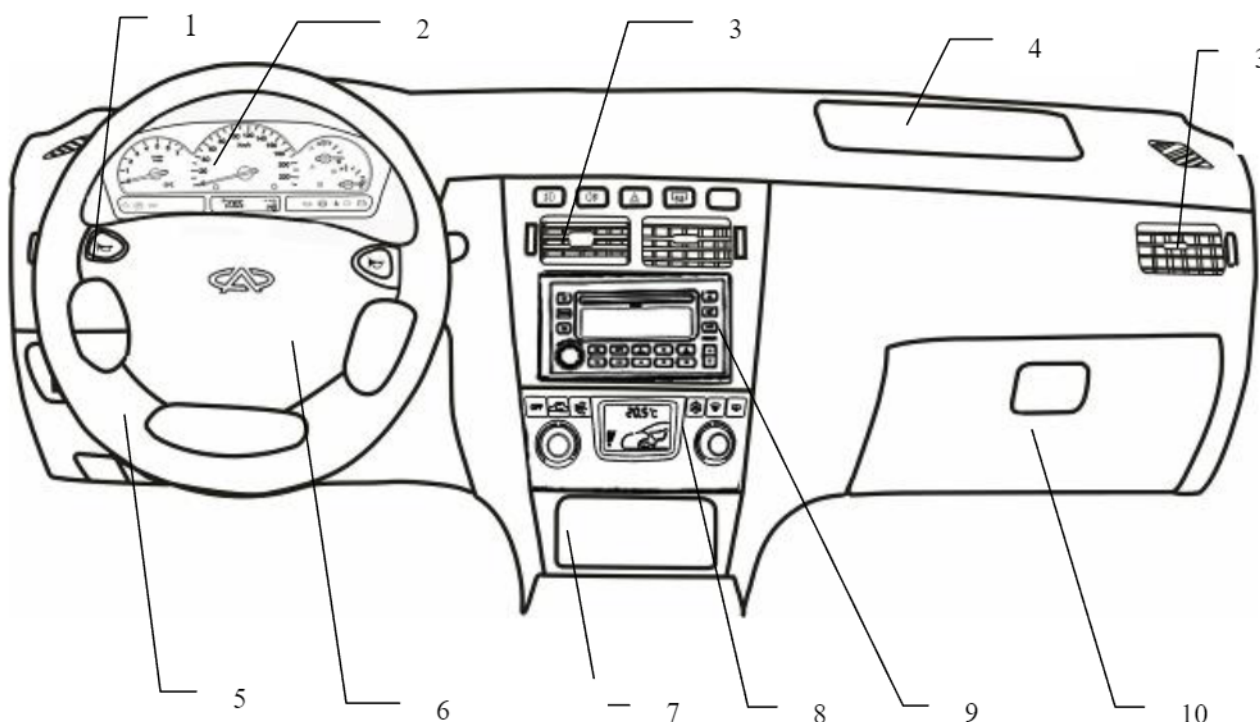

1. Horn Switch
2. Combination Instrument
3. Vent of Air Conditioning
4. Air Bag for Front Passenger Side
5. Steering Wheel Assembly
6. Air Bag Assembly
7. Ashtray
8. Air Conditioner Control Panel
9. CD Player Assembly
10. Glove Box Assembly

1. Remove the instrument mask;

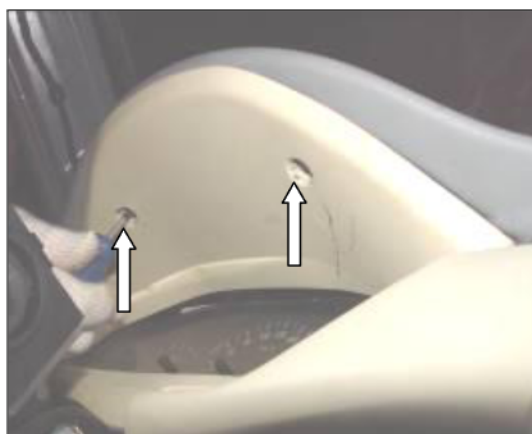


Figure 117

2. Remove the bolts as shown to remove the instrument;

Note: Clearing method for the instrument maintenance indicator lamp

- ① Turn off the ignition switch;
- ② Press down and hold the Mode switch, turn on the ignition switch, and release the Mode switch, touch the Mode switch and the Clock switch simultaneously in 30 seconds with a touch time less than 2 seconds to clear the mileages maintenance identification.



Figure 118

3. Unscrew the fastening screws (each at left and right) to remove the steering wheel cover;



Figure 119

4. Unscrew the fastening screw to remove the steering switch. Remove the wiper switch with the same method;

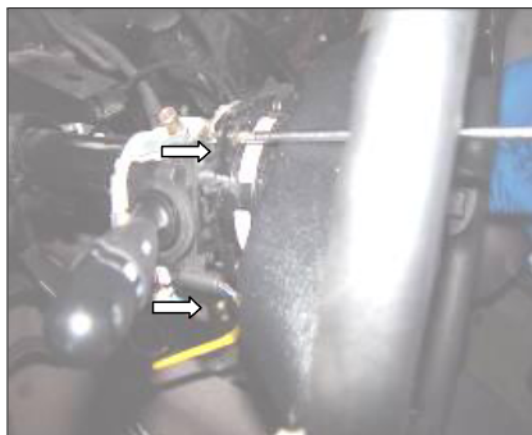


Figure 120

5. Unscrew the fastening bolts with internal spline to remove the air bag assembly;



Figure 121

6. Unplug the spiral cable connector; remove the steering wheel to take out the spiral cable;



Figure 122

7. Remove the right blanking cover assembly;



Figure 123

8. Remove the left lower trim panel assembly of the instrument panel;



Figure 124

9. Remove the glove box assembly;



Figure 125

10. Remove the trim strip;



Figure 126

11. Unscrew the fixing bolts;



Figure 127

12. Remove the bezel of the central control panel;

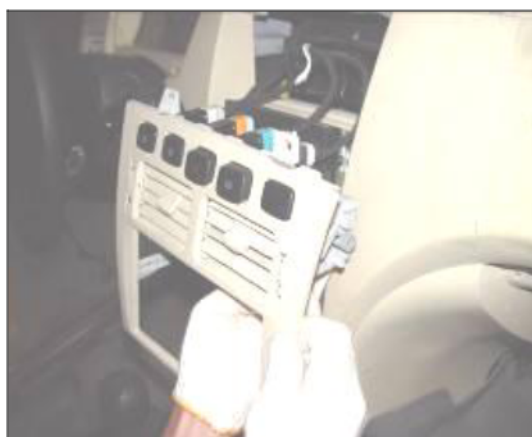


Figure 128

13. Remove the fastening bolts, take out the CD player, and then pull out the harness;



Figure 129

14. Remove the fastening screw, take out the air conditioner control panel, and then pull out the harness;



Figure 130

15. Unscrew the fastening screw to take out the ashtray assembly;



Figure 131

16. Remove the fastening screws and bolts as shown;



Figure 132



Figure 133

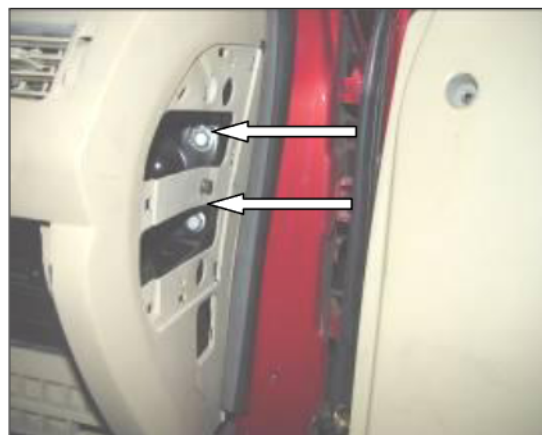


Figure 134

17. Remove the bolts as shown to remove the instrument panel;

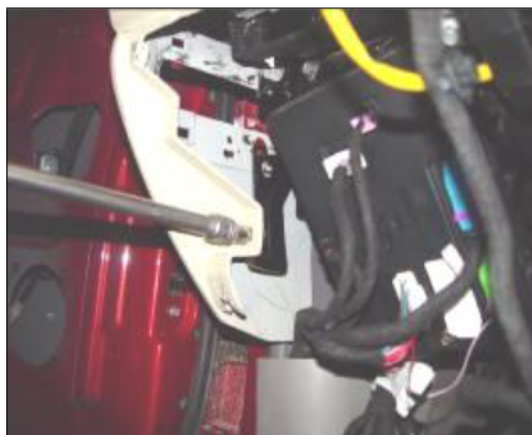


Figure 135

18. Unscrew the fastening bolts as shown;



Figure 136

19. Remove the fixing bolts at two sides to remove the beam;



Figure 137

20. Remove the front ISU module as shown;



Figure 138

21. Let out the refrigerant, remove the fastening bolts on the expansion valve with an internal hexagonal socket to remove the expansion valve. Remove the two clamps with pliers to remove the water pipe. (Note: receive the coolant);

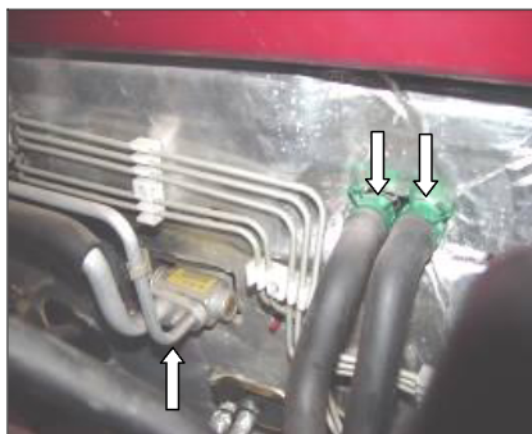


Figure 139

22. Remove the air outlet unit;



Figure 140

23. Detach the evaporator assembly after removes the fastening bolts and the ground wire;

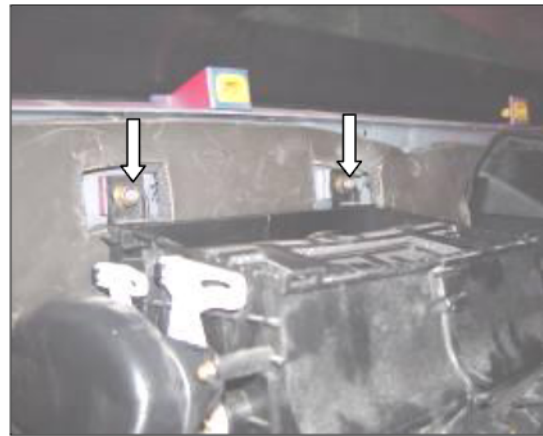


Figure 141



Figure 142



Figure 143



Figure 144

24. Detach the evaporator assembly after removes the fastening bolts and the ground wire;

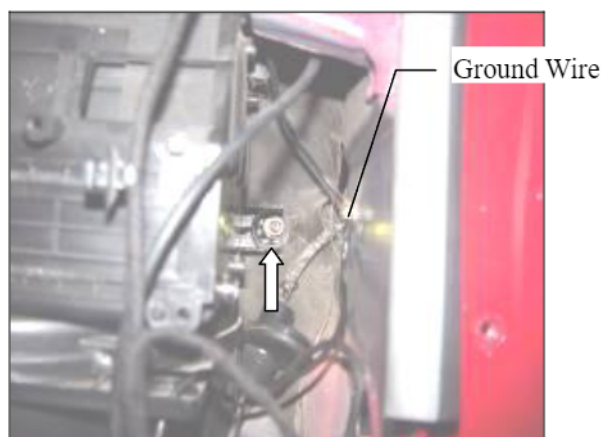


Figure 145

25. Remove the engine compartment shock pad.



Figure 146