


Light switch

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Light switch, Onboard supply control unit, Fuse holder C

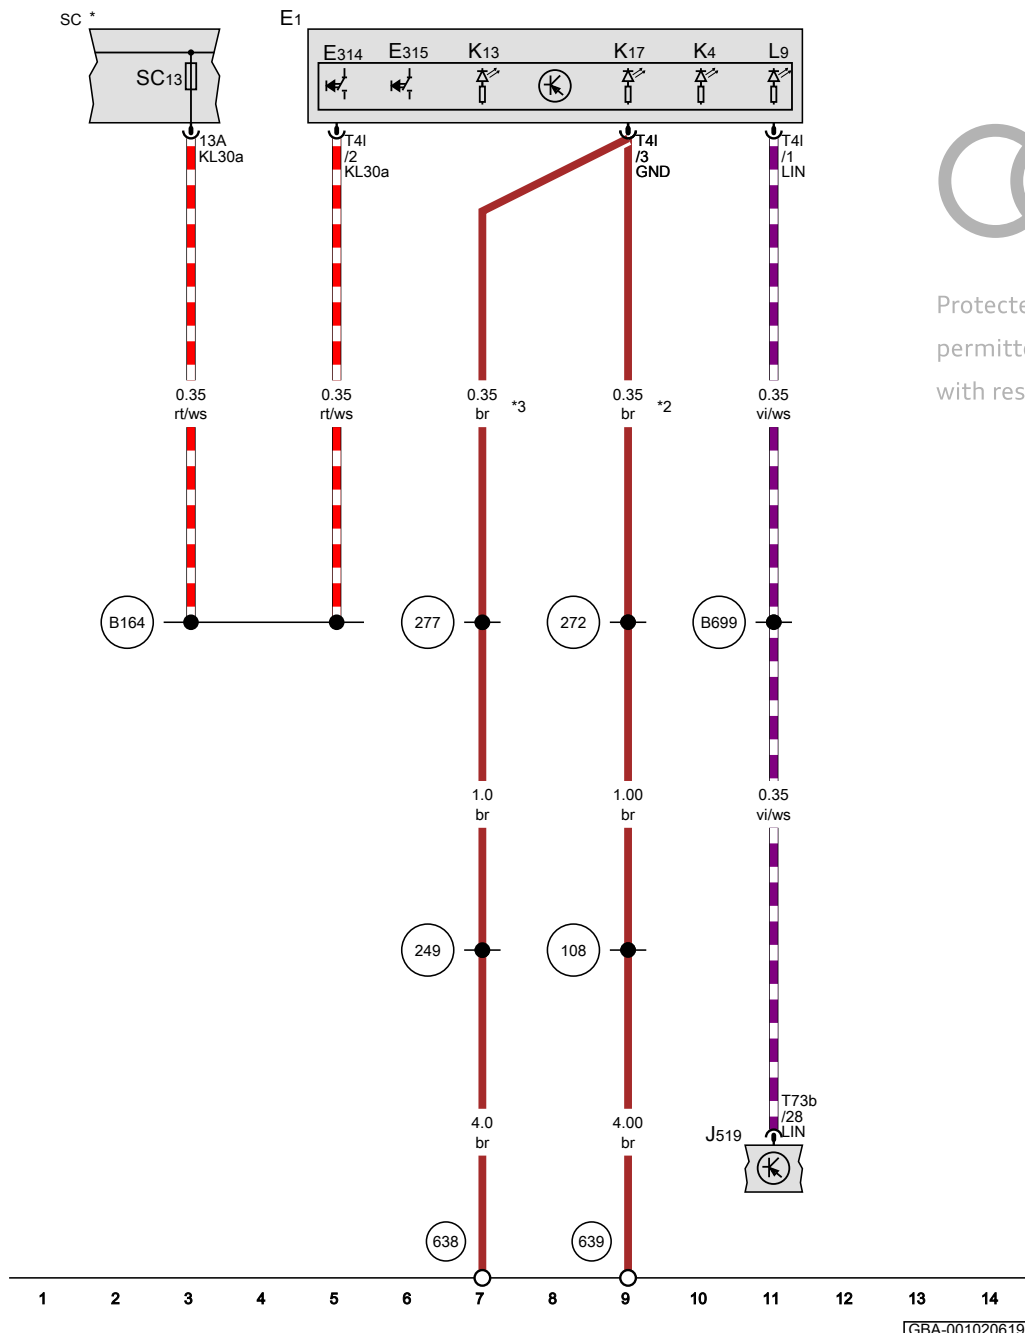

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- 108 Earth connection 2, in front left wiring harness
- 249 Earth connection 2, in interior wiring harness
- 272 Earth connection 4, in front wiring harness
- 277 Earth connection 3, in interior wiring harness
- 638 Earth point, on right A-pillar
- 639 Earth point, left A-pillar
- B164 Connection (30, door warning light), in interior warning harness
- B699 Connection 4 (LIN bus) in main wiring harness
- * see applicable current flow diagram for fuses in interior
- *2 For left-hand drive models
- *3 For right-hand drive models

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink