


Rear left door , (L0L)

From July 2018




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

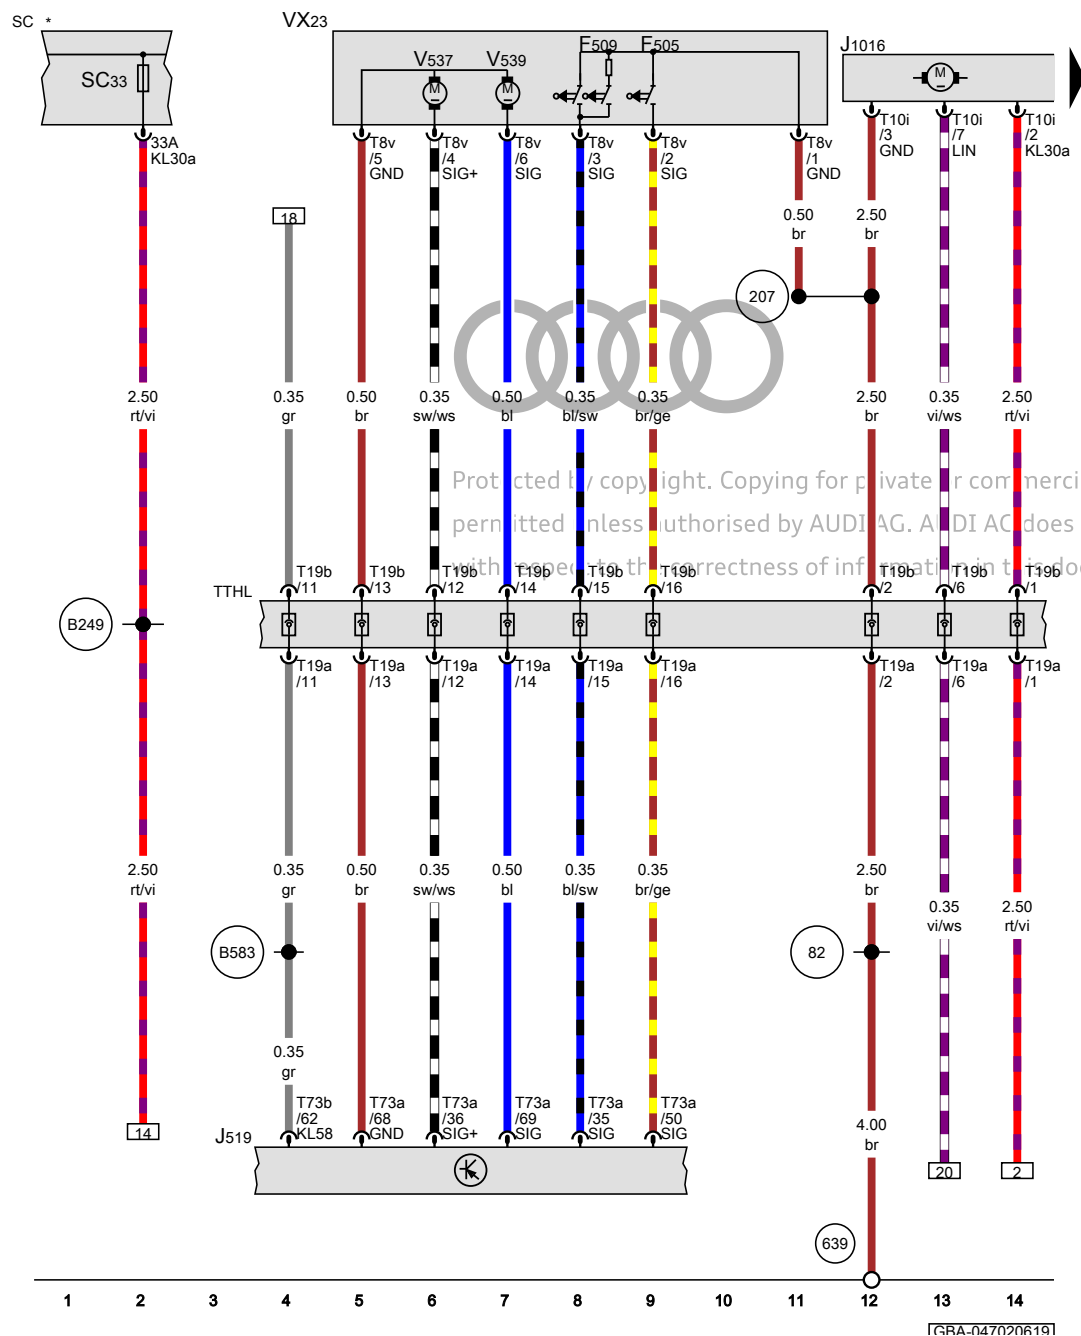

Onboard supply control unit, Control unit with rear driver side window regulator motor, Fuse holder C, Rear left door lock unit

- | | |
|-------|---|
| F505 | Rear door contact switch, driver side |
| F509 | Rear central locking actuator, driver side |
| J519 | Onboard supply control unit |
| J1016 | Control unit with rear driver side window regulator motor |
| SC | Fuse holder C |
| SC33 | Fuse 33 on fuse holder C |
| T8v | 8-pin connector, black |
| T10i | 10-pin connector, black |
| T19a | 19-pin connector, black |
| T19b | 19-pin connector, black |
| T73a | 73-pin connector, black |
| T73b | 73-pin connector, black |
| TTHL | Coupling point for rear left door |
| VX23 | Rear left door lock unit |
| V537 | Rear central locking SAFELOCK function motor, driver side |
| V539 | Rear central locking motor, driver side |
| 82 | Earth connection 1, in front left wiring harness |
| 207 | Earth connection, in rear left door wiring harness |
| 639 | Earth point, left A-pillar |
| B249 | Connection 2 (30, window regulator), in interior wiring harness |
| B583 | Positive connection (58), in interior wiring harness |
| * | see applicable current flow diagram for fuses in interior |

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

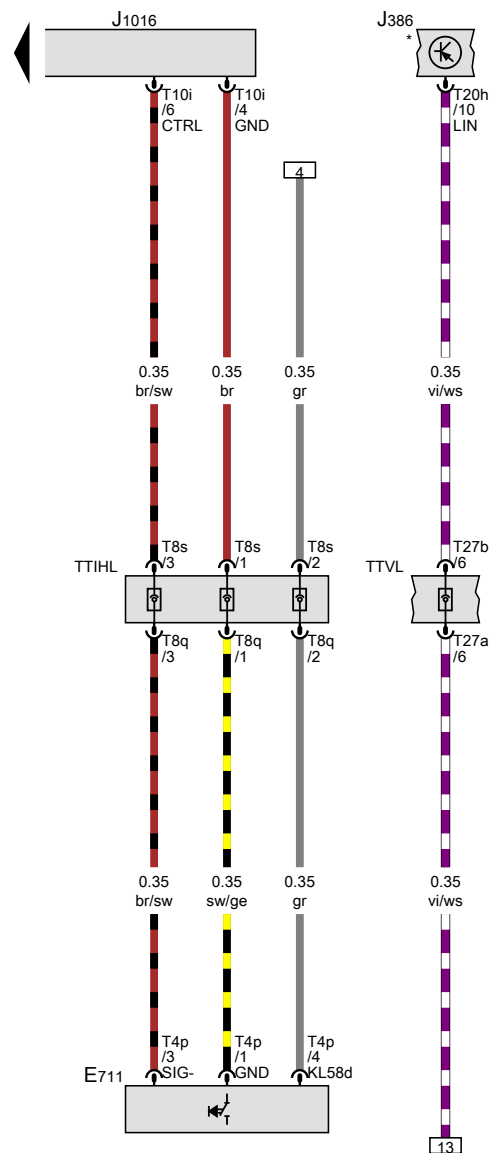

Protected by copyright. Copying for private or commercial purposes, in whole or in part, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the correctness and liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Rear driver side window regulator button, Driver door control unit, Control unit with rear driver side window regulator motor

- E711 Rear driver side window regulator button
- J386 Driver door control unit
- J1016 Control unit with rear driver side window regulator motor
- T4p 4-pin connector, black
- T8q 8-pin connector, black
- T8s 8-pin connector, black
- T10i 10-pin connector, black
- T20h 20-pin connector, white
- T27a 27-pin connector, black
- T27b 27-pin connector, black
- TTIHL Coupling point in rear left door
- TTVL Coupling point for front left door
- * see applicable current flow diagram

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink