

1 Earth points

- ◆ ⇒ ["1.1 Earth points in front part of vehicle", page 2](#)
- ◆ ⇒ ["1.2 Earth points in middle part of vehicle", page 10](#)
- ◆ ⇒ ["1.3 Earth points in rear part of vehicle", page 14](#)
- ◆ ⇒ ["1.4 Earth points in underbody", page 19](#)

Component	Chapter	Comment
11 Earth point, in battery box	⇒ "1.1.1 Front from left", page 2	
13 Earth point in engine compartment, right	⇒ "1.1.2 Front from right", page 4	
14 Earth point, on gearbox	⇒ "1.1.7 Manual gearbox, 02Q,0BB ", page 9	
	⇒ "1.1.8 Automatic gearbox, 09P", page 10	
	⇒ "1.4.1 Front of underbody", page 20	For models with dual clutch gearbox, 0D9, 0DL, 0GC, 0DW
15 Earth point on cylinder head	⇒ "1.1.5 Petrol engine, CZDA", page 7	
35 Earth point under front passenger seat	⇒ "1.2.4 Front passenger seat", page 14	
43 Earth point on lower part of right A-pillar	⇒ "1.2.2 Front right of interior", page 12	
44 Earth point on lower part of left A-pillar	⇒ "1.2.1 Front left of interior", page 11	
47 Earth point, in front right footwell	⇒ "1.2.2 Front right of interior", page 12	
50 Earth point on left in boot	⇒ "1.3.2 Left luggage compartment", page 16	
51 Earth point on right in boot	⇒ "1.3.3 Right of luggage compartment", page 17	
77 Earth point on left C-pillar	⇒ "1.2.1 Front left of interior", page 11	
78 Earth point on right C-pillar	⇒ "1.2.2 Front right of interior", page 12	
602 Earth point in front left footwell	⇒ "1.2.1 Front left of interior", page 11	
612 Earth point, centre on rear lid	⇒ "1.3.1 Rear lid", page 15	
671 Earth point 1, on front of left longitudinal member	⇒ "1.1.1 Front from left", page 2	
672 Earth point 2, on front of left longitudinal member	⇒ "1.1.1 Front from left", page 2	
673 Earth point 3, on front of left longitudinal member	⇒ "1.4.1 Front of underbody", page 20	
675 Earth point 2 on right in boot	⇒ "1.3.3 Right of luggage compartment", page 17	
685 Earth point 1 on front of right longitudinal member	⇒ "1.1.2 Front from right", page 4	
686 Earth point 2 on front of right longitudinal member	⇒ "1.1.3 Front from right, models with 48-volt system (0K4)", page 5	
687 Earth point 1 on centre tunnel	⇒ "1.2.3 Front middle of interior", page 13	

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

Component	Chapter	Comment
701 Earth point in boot	⇒ "1.3.5 Boot, view of centre, models with 2.5l petrol engine", page 19	
775 Earth point 3 on right in boot	⇒ "1.3.4 Right of boot, models with 48-volt system (0K4)", page 18	
787 Earth point 4 on right in boot	⇒ "1.3.4 Right of boot, models with 48-volt system (0K4)", page 18	
846 Earth point on ignition coil 1	⇒ "1.1.4 Petrol engine, DKTA, DKTC, DADA, DPCA, DFYA", page 6	
847 Earth point on ignition coil 2	⇒ "1.1.4 Petrol engine, DKTA, DKTC, DADA, DPCA, DFYA", page 6	
848 Earth point on ignition coil 3	⇒ "1.1.6 Petrol engine, DAZA, DNWA", page 8	
849 Earth point on ignition coil 4	⇒ "1.1.4 Petrol engine, DKTA, DKTC, DADA, DPCA, DFYA", page 6	
850 Earth point on ignition coil 5	⇒ "1.1.6 Petrol engine, DAZA, DNWA", page 8	

1.1 Earth points in front part of vehicle

- ◆ ⇒ ["1.1.1 Front from left", page 2](#)
- ◆ ⇒ ["1.1.2 Front from right", page 4](#)
- ◆ ⇒ ["1.1.3 Front from right, models with 48-volt system \(0K4\)", page 5](#)
- ◆ ⇒ ["1.1.4 Petrol engine, DKTA, DKTC, DADA, DPCA, DFYA", page 6](#)
- ◆ ⇒ ["1.1.5 Petrol engine, CZDA", page 7](#)
- ◆ ⇒ ["1.1.6 Petrol engine, DAZA, DNWA", page 8](#)
- ◆ ⇒ ["1.1.7 Manual gearbox, 02Q,0BB ", page 9](#)
- ◆ ⇒ ["1.1.8 Automatic gearbox, 09P", page 10](#)

1.1.1 Front from left

11 - Earth point, in battery box

- ❑ Torque 9 Nm

671 - Earth point 1, on front of left longitudinal member


- ❑ Torque 9 Nm

672 - Earth point 2, on front of left longitudinal member

- ❑ Torque 9 Nm



Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information.

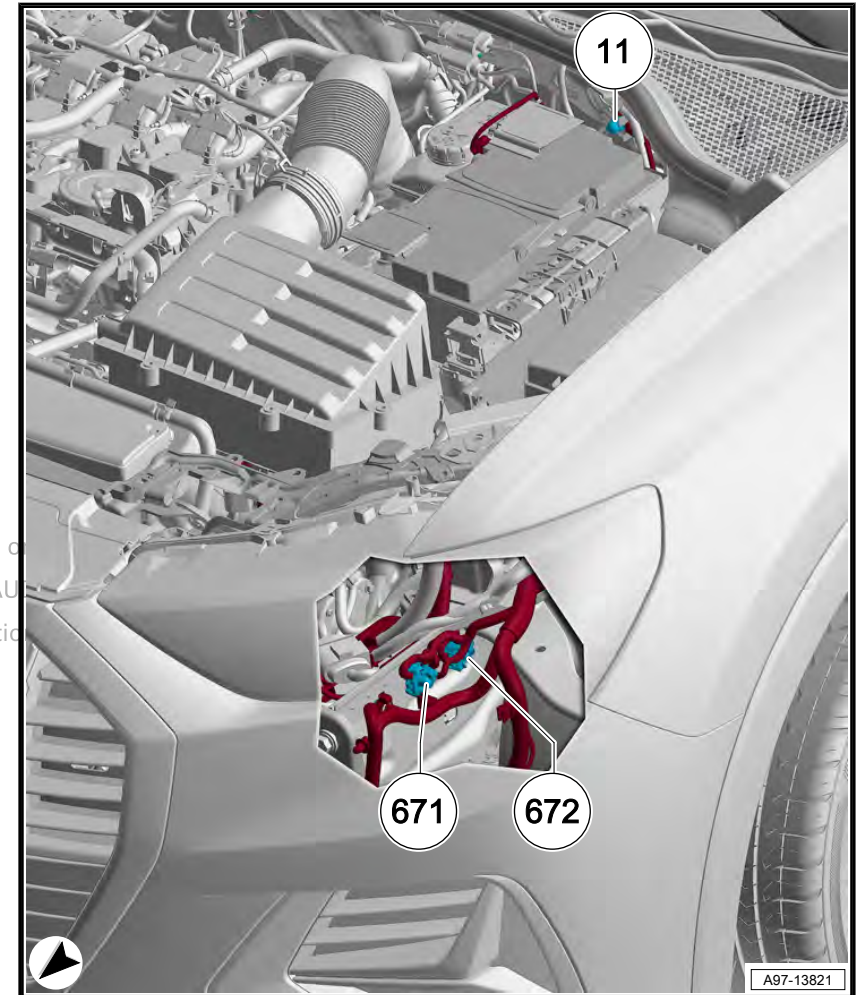

1.1.2 Front from right

13 - Earth point, on right in engine compartment


□ Torque 9 Nm

685 - Earth point 1, on front of right longitudinal member

□ Torque 9 Nm



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

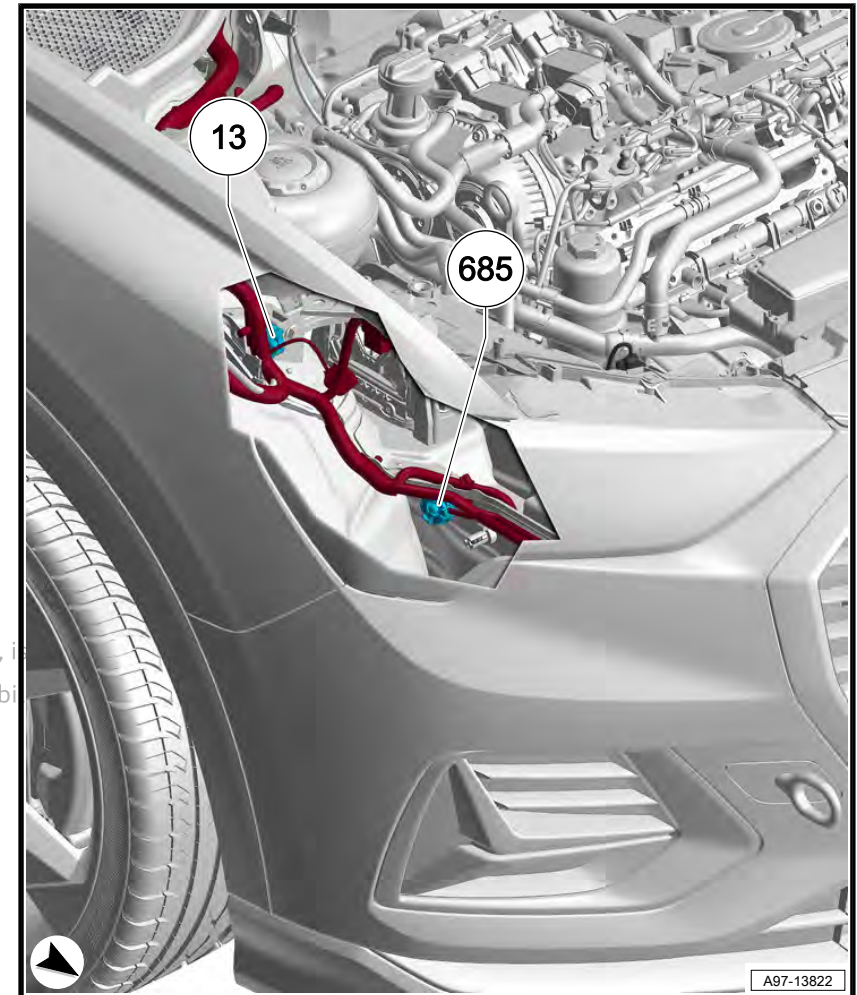


1.1.3 Front from right, models with 48-volt system (0K4)

686 - Earth point 2, on front of right longitudinal member

□ Torque 20 Nm



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information in this document.

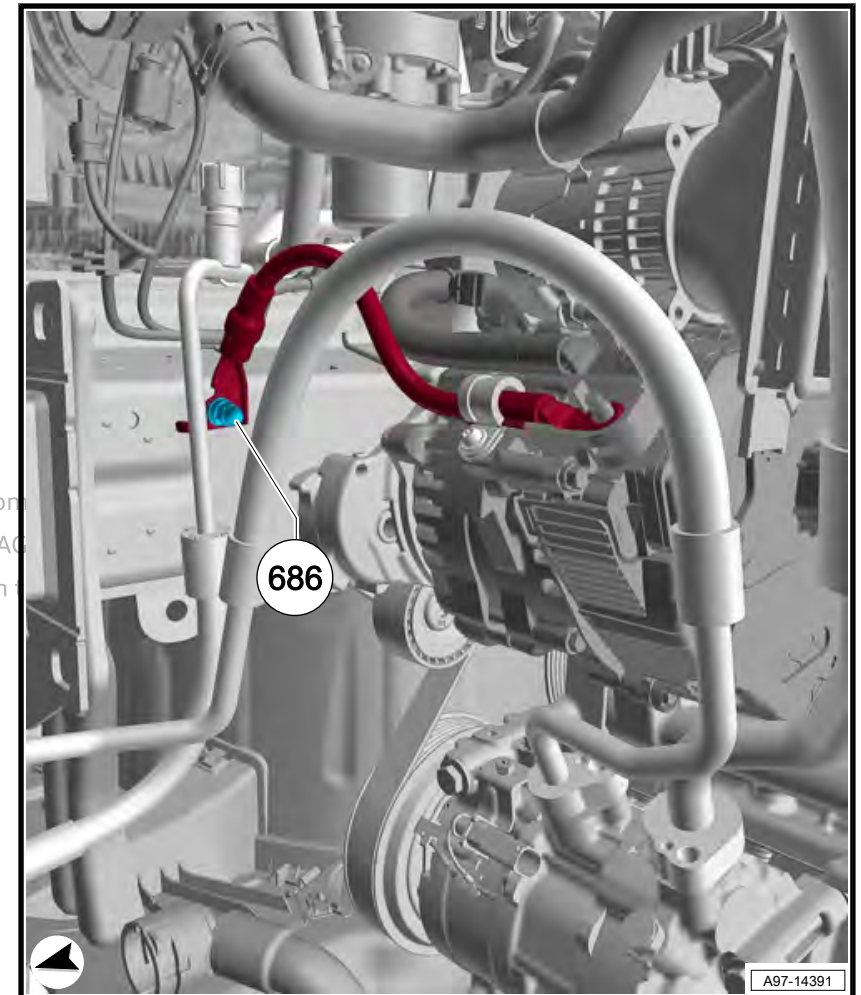

1.1.4 Petrol engine, DKTA, DKTC, DADA, DPCA, DFYA

846 - Earth point on ignition coil 1

- ☐ Torque 9 Nm
- ☐ for vehicles with DKTA, DKTC engines

847 - Earth point on ignition coil 2

- ☐ Torque 9 Nm

848 - Earth point on ignition coil 3


- ☐ Torque 9 Nm

849 - Earth point on ignition coil 4

- ☐ Torque 9 Nm
- ☐ for vehicles with DKTA, DKTC engines




Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. The company assumes no responsibility with respect to the correctness of information.

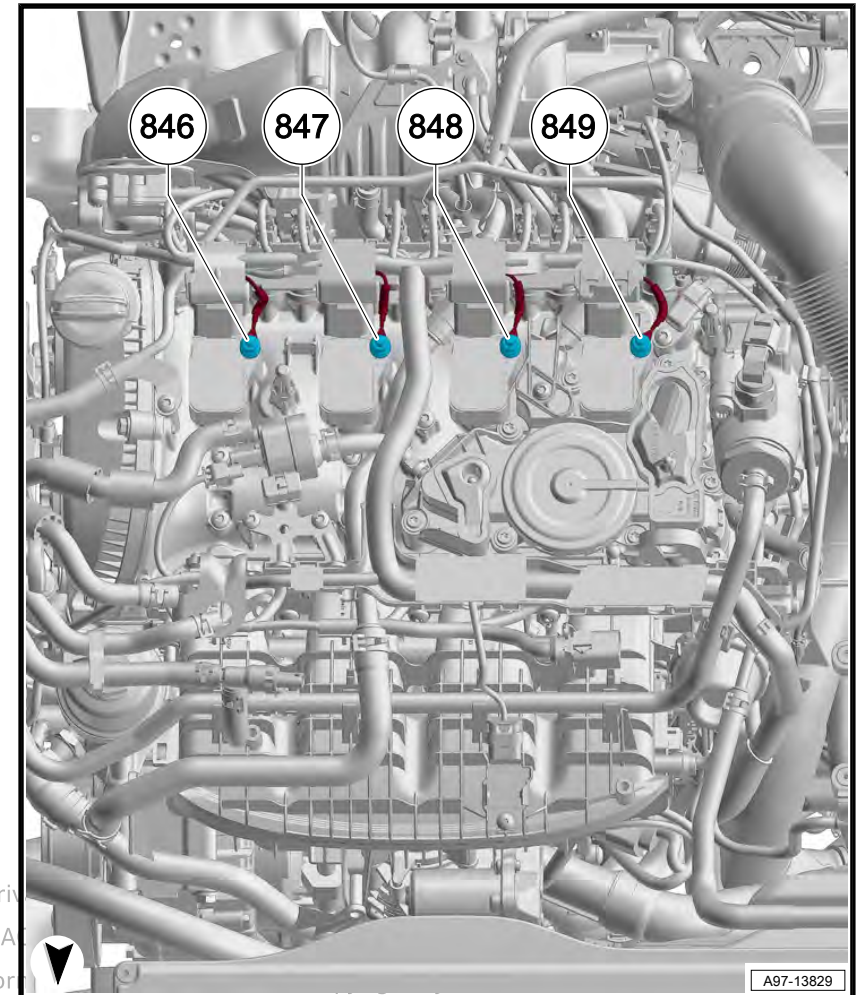

1.1.5 Petrol engine, CZDA**15 - Earth point, on cylinder head**☐ Torque 9 Nm

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

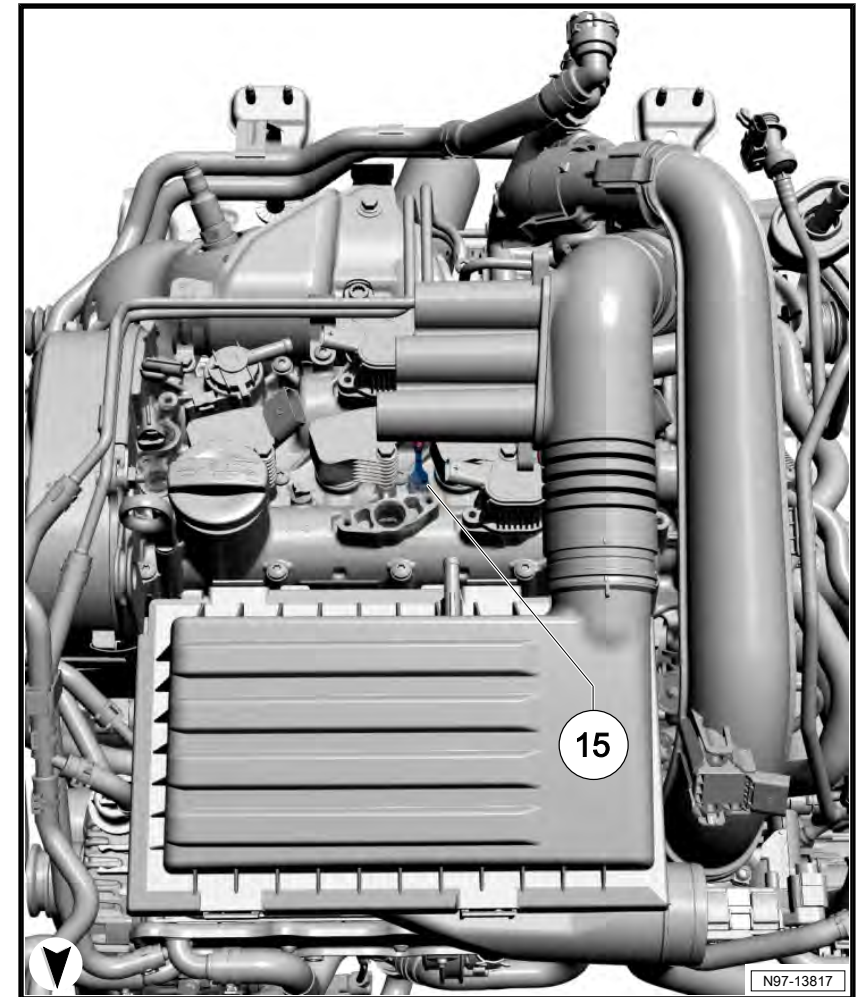


1.1.6 Petrol engine, DAZA, DNWA

847 - Earth point on ignition coil 2

□ Torque 9 Nm

850 - Earth point on ignition coil 5

□ Torque 9 Nm

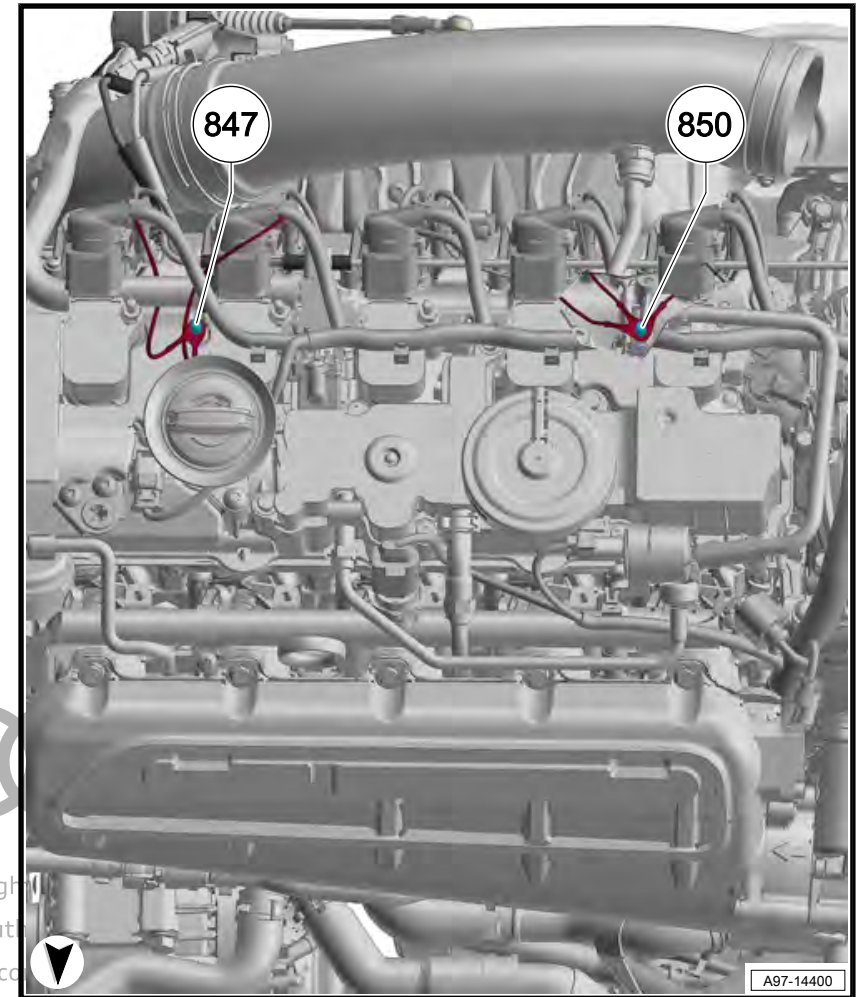

Protected by copyright
permitted unless aut
with respect to the co


1.1.7 Manual gearbox, 02Q, 0BB

14 - Earth point, on gearbox

- ☐ Torque 20 Nm
- ☐ Fitting location for models with dual clutch gearbox 0D9,0DL,0GC,0DWL
⇒ ["1.4.1 Front of underbody", page 20](#)
- ☐ Fitting location for models with automatic gearbox 09P
⇒ ["1.1.8 Automatic gearbox, 09P", page 10](#)




Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG

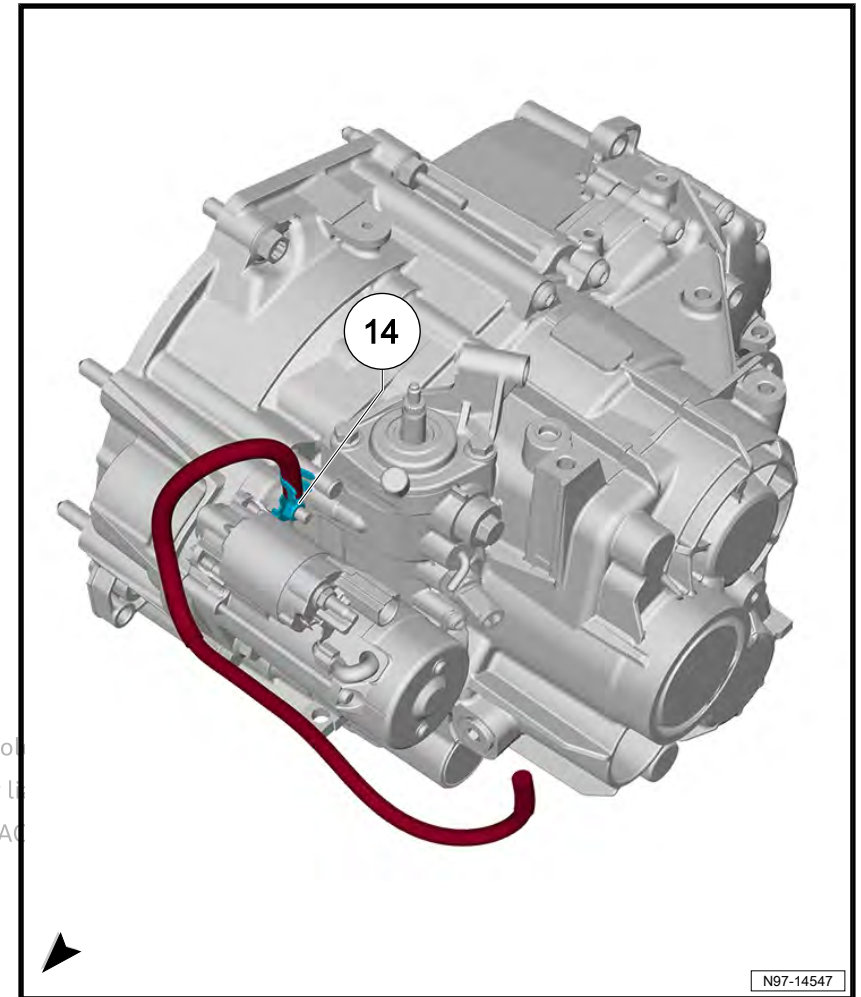

1.1.8 Automatic gearbox, 09P

14 - Earth point, on gearbox

- ❑ Torque 20 Nm
- ❑ Fitting location for models with dual clutch gearbox 0D9,0DL,0GC,0DWL
⇒ ["1.4.1 Front of underbody", page 20](#)
- ❑ Fitting location for models with manual gearbox
⇒ ["1.1.7 Manual gearbox, 02Q,0BB", page 9](#)

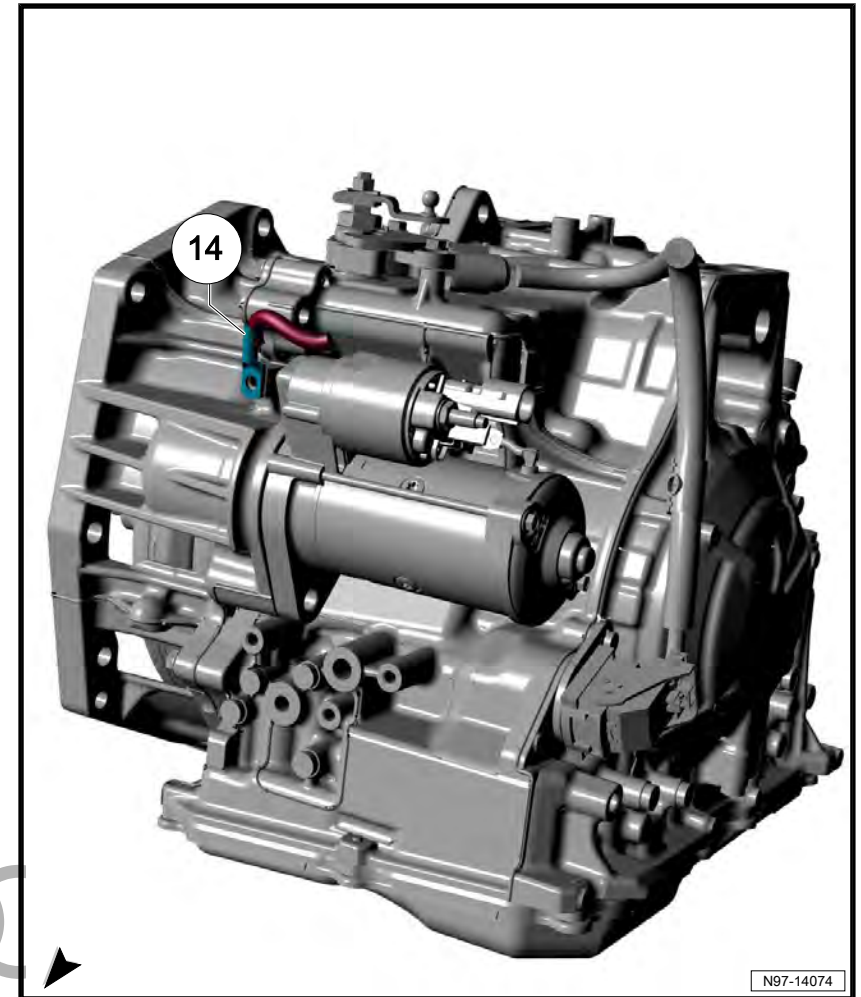

1.2 Earth points in middle part of vehicle

- ◆ ⇒ ["1.2.1 Front left of interior", page 11](#)
- ◆ ⇒ ["1.2.2 Front right of interior", page 12](#)

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ♦ ⇒ "1.2.3 Front middle of interior", page 13
- ♦ ⇒ "1.2.4 Front passenger seat", page 14

1.2.1 Front left of interior

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not

44 - Earth point, lower part of left A-pillar


- Torque 9 Nm

77 - Earth point, lower part of left B-pillar

- Torque 9 Nm

602 - Earth point, in front left footwell

- Torque 9 Nm

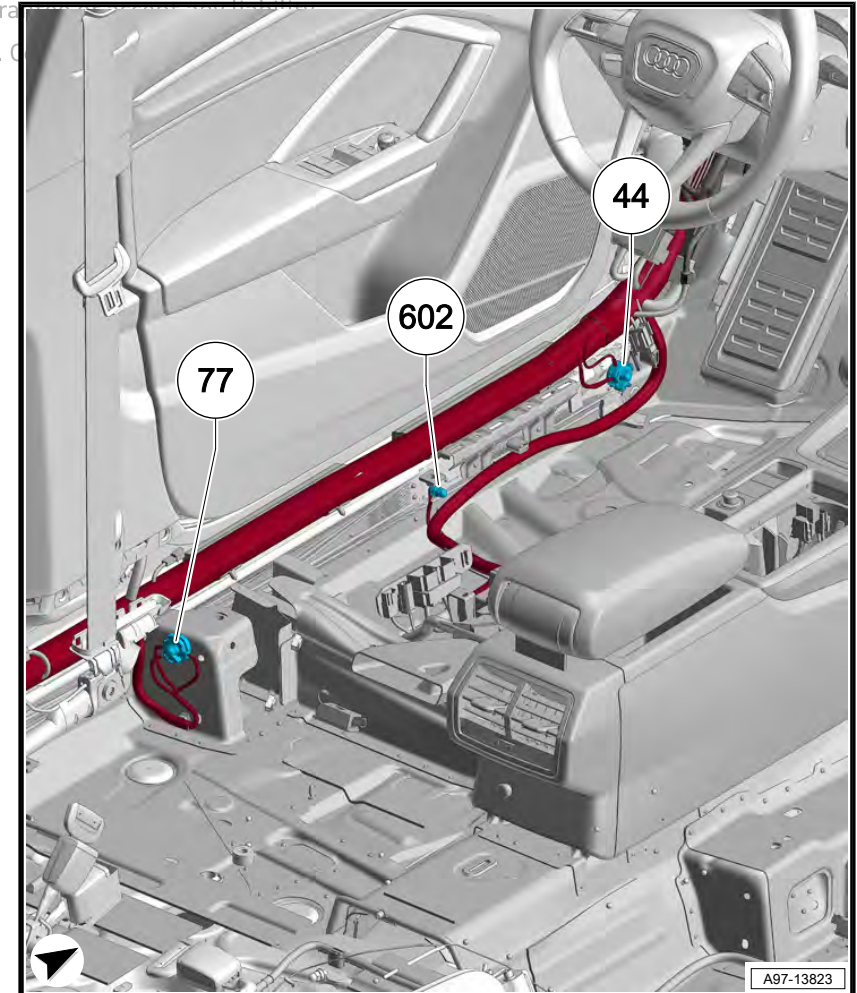

1.2.2 Front right of interior

43 - Earth point, lower part of right A-pillar

□ Torque 9 Nm

47 - Earth point, in front right footwell


□ Torque 9 Nm

78 - Earth point, lower part of right B-pillar

□ Torque 9 Nm



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

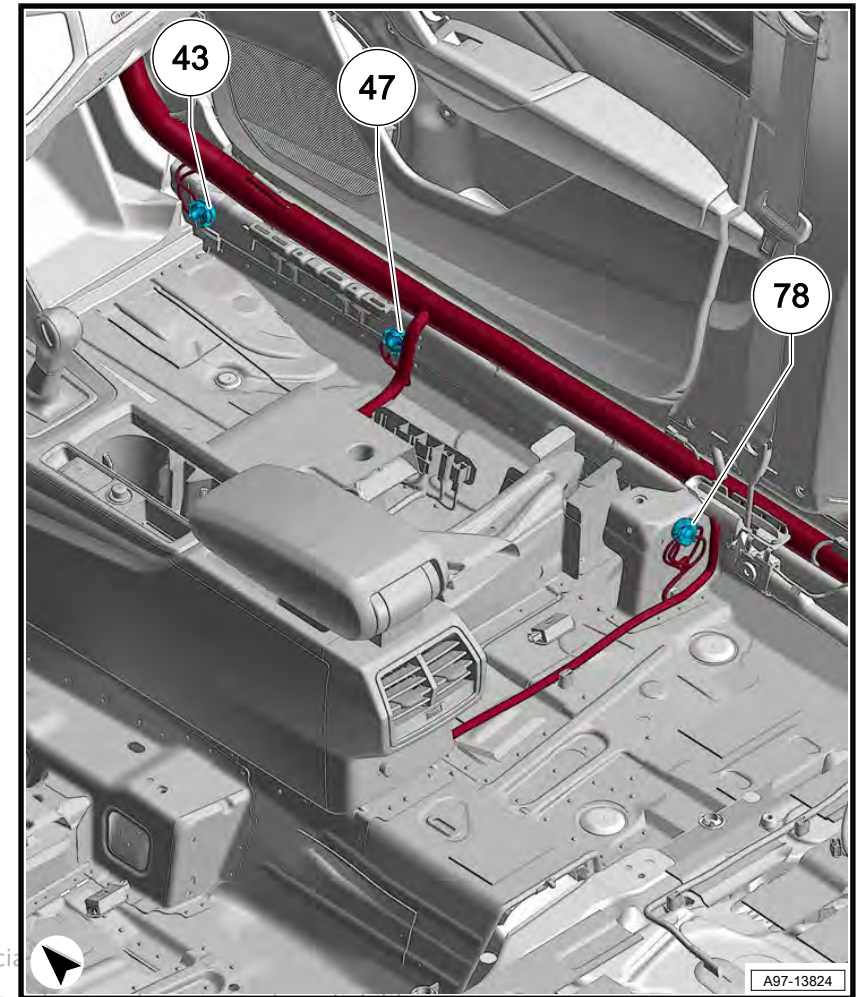


1.2.3 Front middle of interior

687 - Earth point 1, on centre tunnel

□ Torque 9 Nm



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

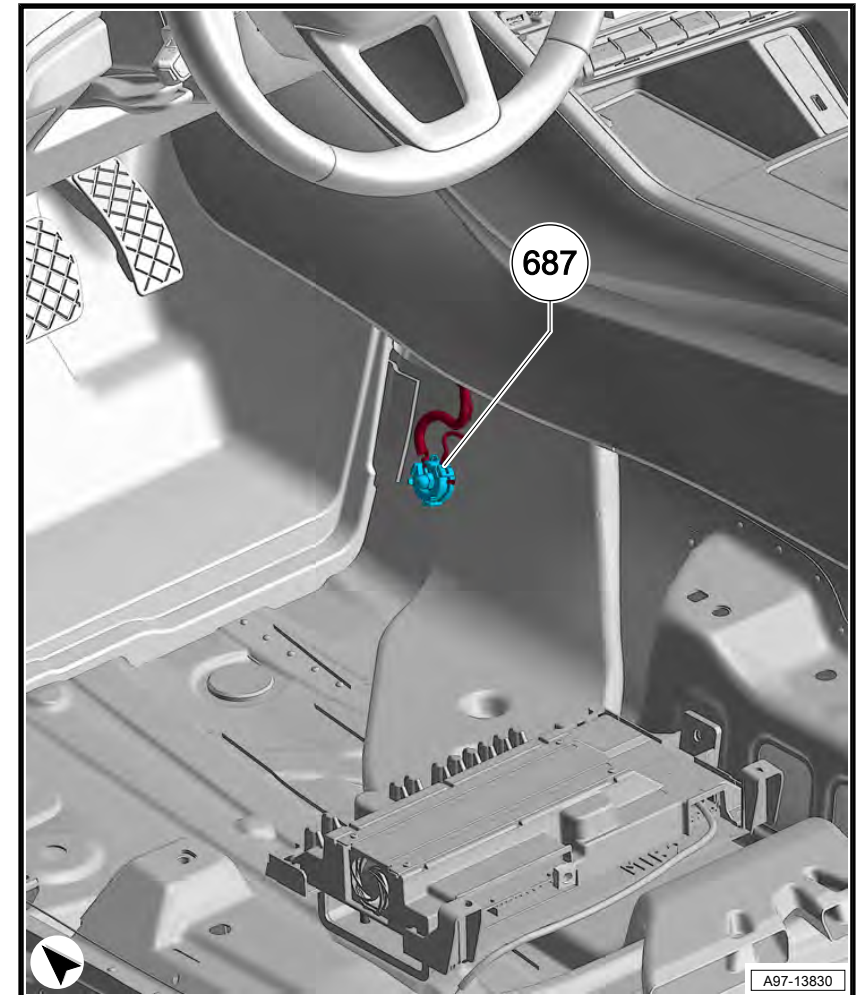


1.2.4 Front passenger seat

35 - Earth point, under front passenger seat

- ☐ Torque 5 Nm
- ☐ For American markets



Protected by copyright. Copying for private or commercial use is not permitted unless authorised by AUDI AG. AUDI AG is not responsible with respect to the correctness of information in this document.

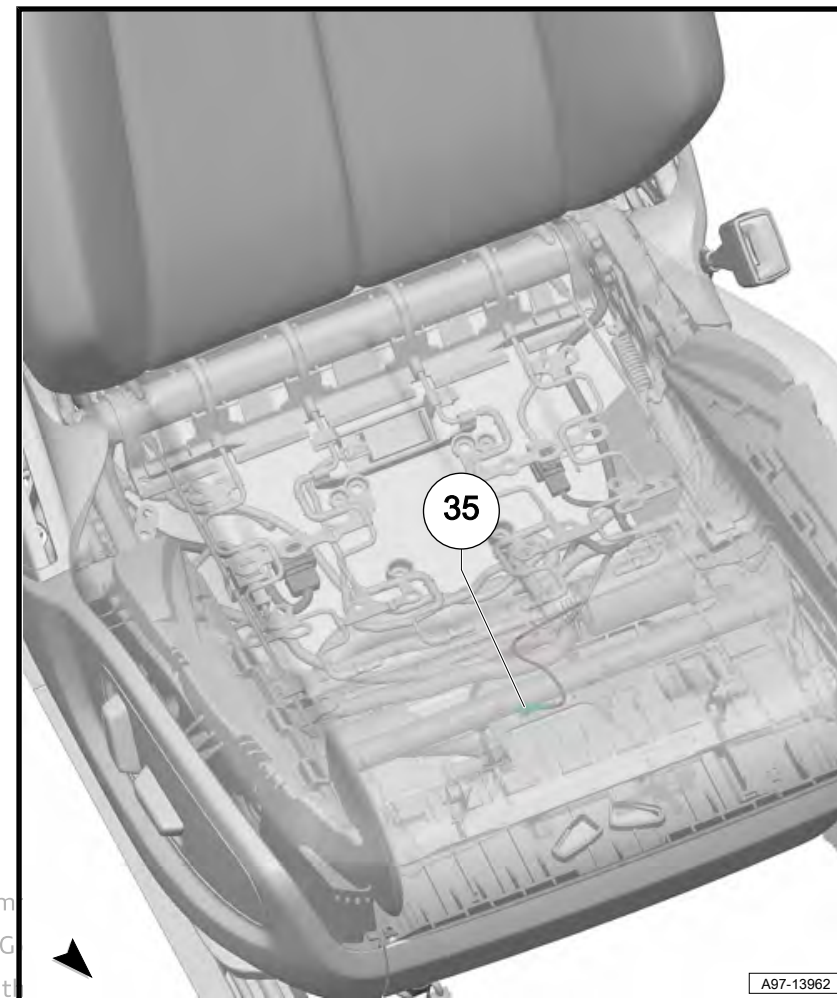

1.3 Earth points in rear part of vehicle

- ◆ ⇒ ["1.3.1 Rear lid", page 15](#)
- ◆ ⇒ ["1.3.2 Left luggage compartment", page 16](#)

- ◆ ⇒ ["1.3.3 Right of luggage compartment", page 17](#)
- ◆ ⇒ ["1.3.4 Right of boot, models with 48-volt system \(0K4\)", page 18](#)
- ◆ ⇒ ["1.3.5 Boot, view of centre, models with 2.5l petrol engine", page 19](#)

1.3.1 Rear lid

612 - Earth point, centre on rear lid

□ Torque 1.5 Nm



Protected by copyright. Copying for private use is permitted unless authorised by AUDI AG. Audi AG is not responsible with respect to the correctness of information.




1.3.2 Left luggage compartment

50 - Earth point, on left in boot

□ Torque 9 Nm



Protected by copyright. Copying or reproduction is not permitted unless authorised by Audi AG. All rights reserved with respect to the correct use of the information.

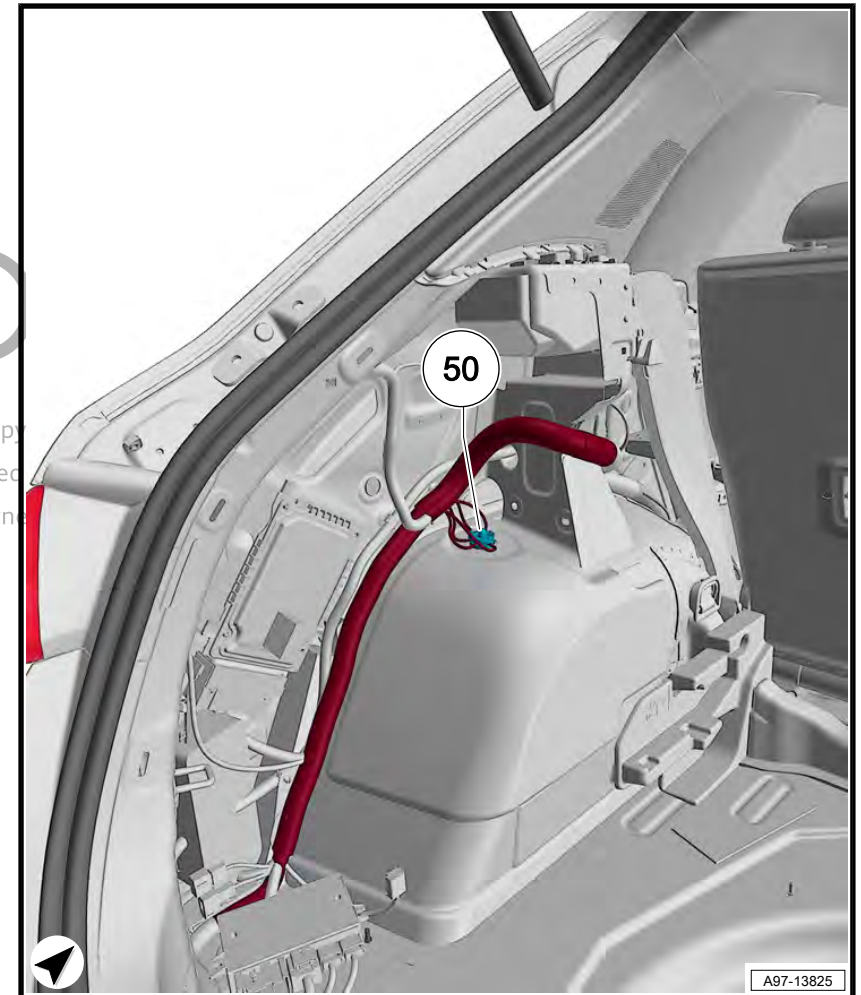

1.3.3 Right of luggage compartment

51 - Earth point, on right in boot


□ Torque 9 Nm

675 - Earth point 2, on right in boot

□ Torque 9 Nm



Protected by copyright. Copying
permitted unless authorised by Audi AG
with respect to the correctness of the

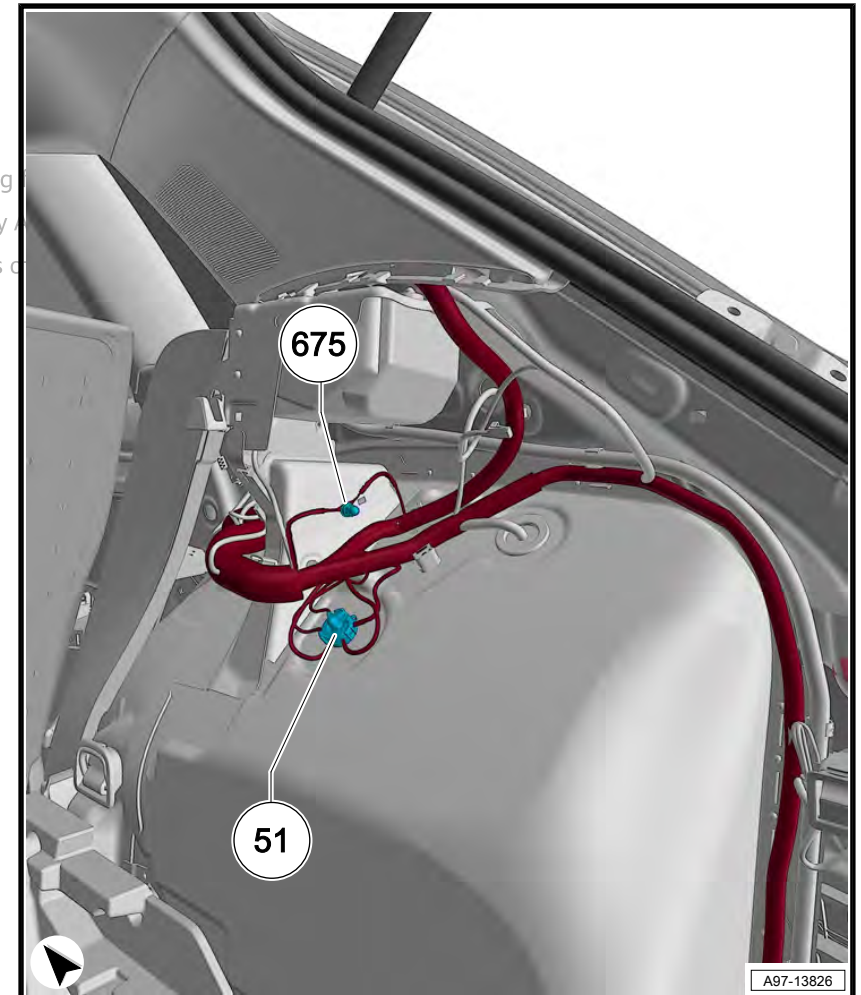


1.3.4 Right of boot, models with 48-volt system (0K4)

787 - Earth point 4, on right in boot

□ Torque 9 Nm

775 - Earth point 3, on right in boot


□ Torque 9 Nm

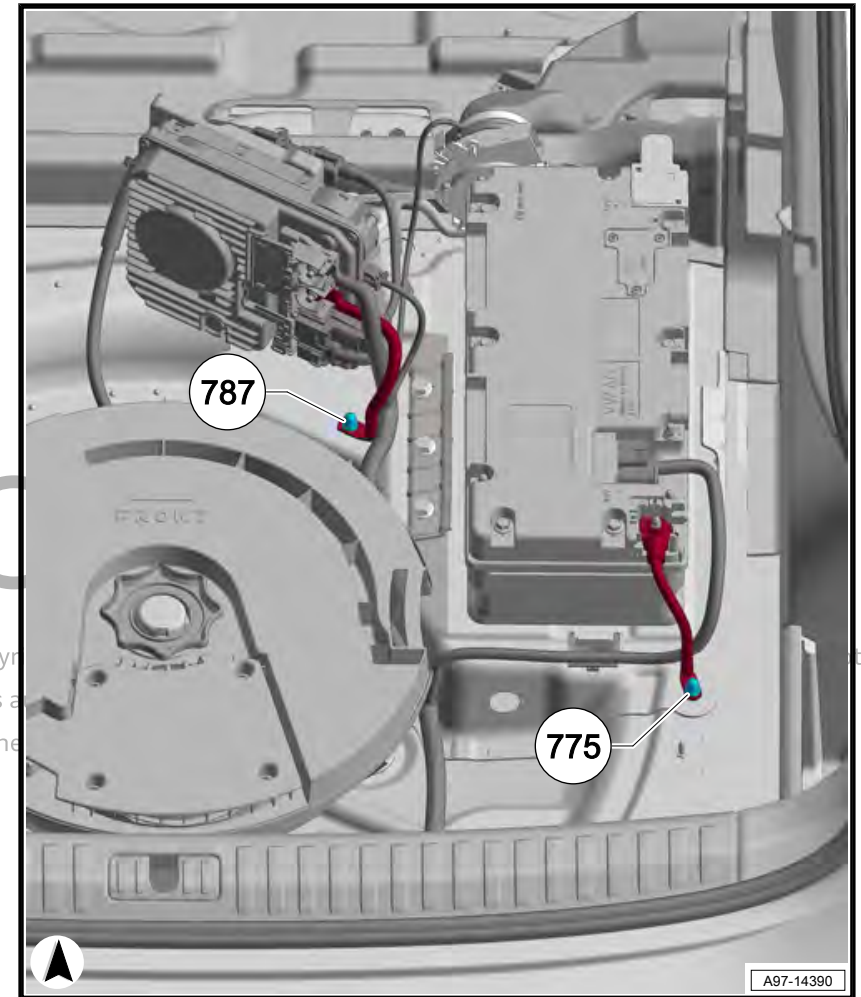

1.3.5 Boot, view of centre, models with 2.5l petrol engine

701 - Earth point in boot

□ Torque 20 Nm

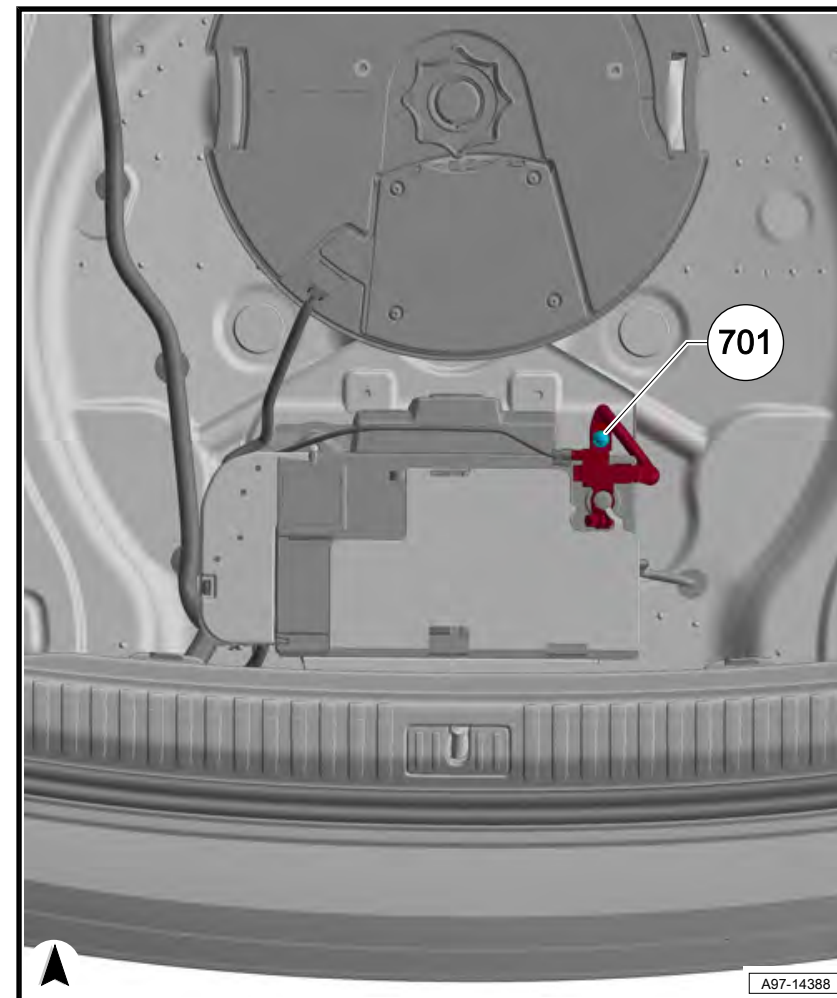

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

1.4 Earth points in underbody

◆ ⇒ ["1.4.1 Front of underbody", page 20](#)

1.4.1 "Front of underbody

14 - Earth point, on gearbox

- ☐ Torque 20 Nm
- ☐ For models with dual clutch gearbox, 0D9, 0DL, 0GC, 0DW
- ☐ Fitting location for models with manual gearbox
⇒ ["1.1.7 Manual gearbox, 02Q,0BB", page 9](#)
- ☐ Fitting location for models with automatic gearbox 09P
⇒ ["1.1.8 Automatic gearbox, 09P", page 10](#)

673 - Earth point 3, on front of left longitudinal member

- ☐ Torque 20 Nm



Protected by copyright. Copying for private or commercial purposes, in part or in full, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee the accuracy of the information with respect to the correctness of information in this document. Copyright

