


Onboard supply control unit

From July 2018



Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

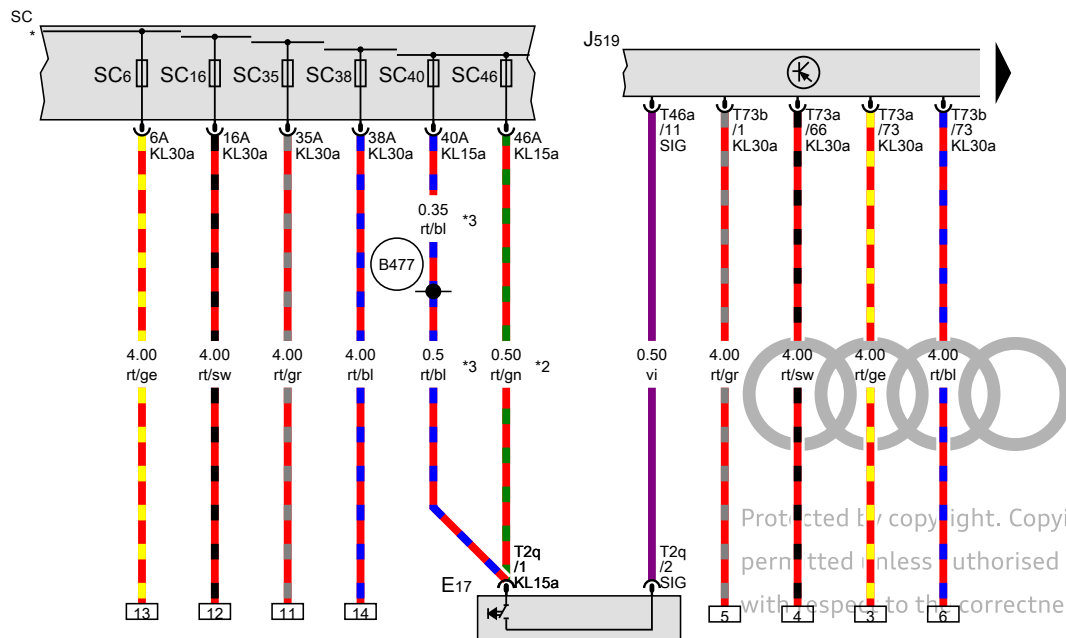

Starter inhibitor and reversing lights switch, Onboard supply control unit, Fuse holder C


- E17 Starter inhibitor and reversing lights switch
- J519 Onboard supply control unit
- SC Fuse holder C
- SC6 Fuse 6 on fuse holder C
- SC16 Fuse 16 on fuse holder C
- SC35 Fuse 35 on fuse holder C
- SC38 Fuse 38 on fuse holder C
- SC40 Fuse 40 on fuse holder C
- SC46 Fuse 46 on fuse holder C
- T2q 2-pin connector, black
- T46a 46-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black

B477 Connection 13, in main wiring harness

- * see applicable current flow diagram for fuses in interior
- *2 Up to July 2019
- *3 From July 2019

Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

- ws = white
- sw = black
- ro = red
- rt = red
- br = brown
- gn = green
- bl = blue
- gr = grey
- li = purple
- vi = purple
- ge = yellow
- or = orange
- rs = pink

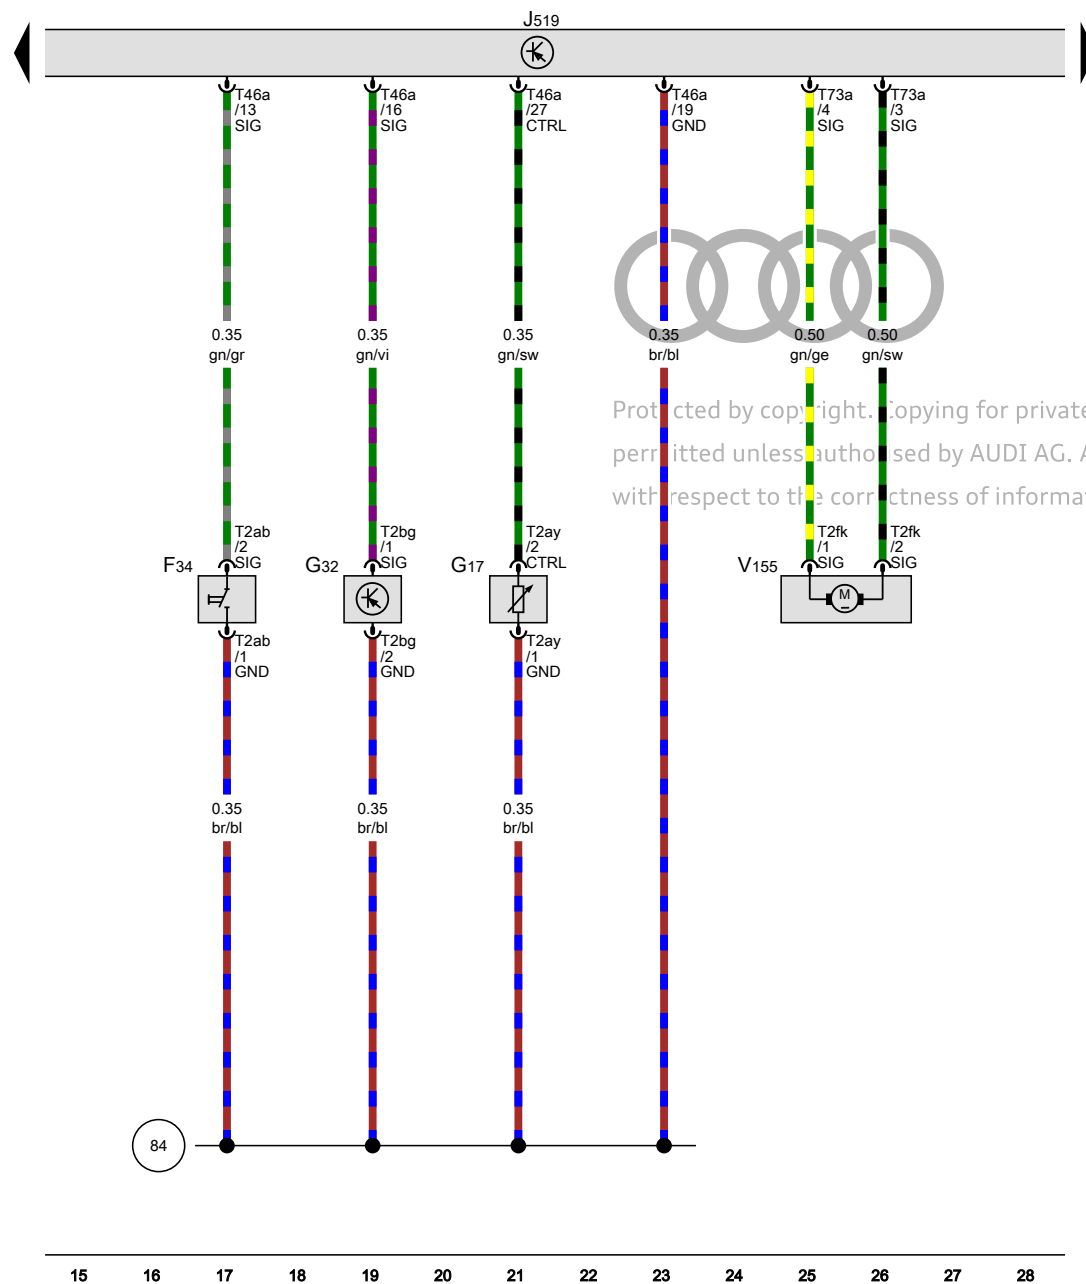


Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Tank filler flap locking motor

- F34 Brake fluid level warning contact
- G17 Ambient temperature sensor
- G32 Coolant shortage indicator sender
- J519 Onboard supply control unit
- T2ab 2-pin connector, black
- T2ay 2-pin connector, black
- T2bg 2-pin connector, black
- T2fk 2-pin connector, black
- T46a 46-pin connector, black
- T73a 73-pin connector, black
- V155 Tank filler flap locking motor

84 Earth connection, engine block, in front right wiring harness


Protected by copyright. Copying for private or commercial purposes, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

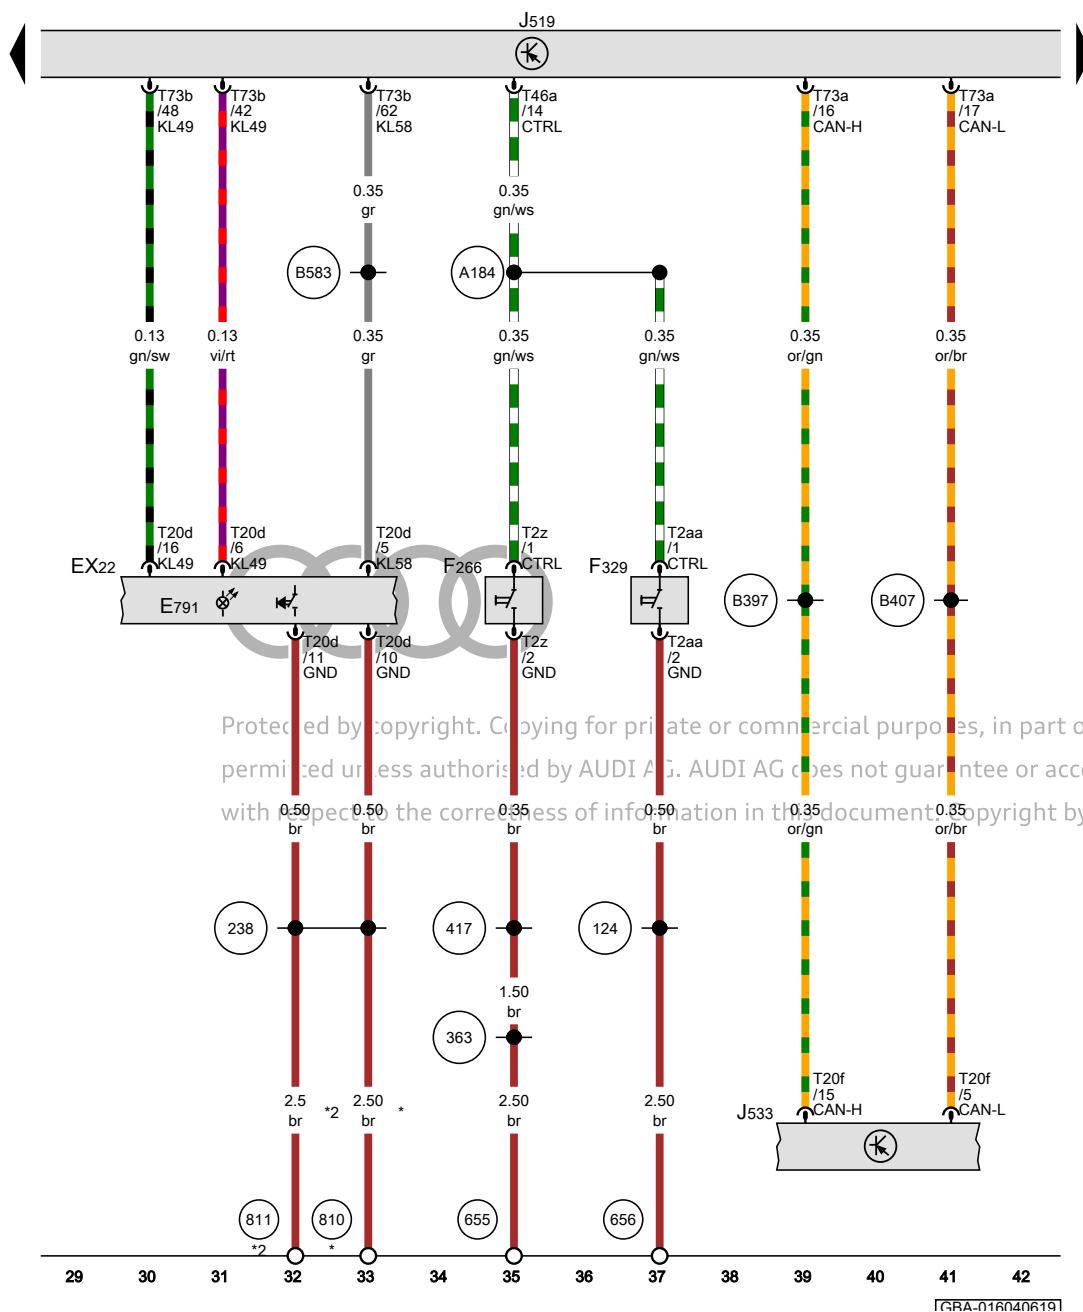

Centre switch module in dash panel, Operating unit 1 for driver and convenience functions, Onboard supply control unit, Data bus diagnostic interface

- EX22 Centre switch module in dash panel
- E791 Operating unit 1 for driver and convenience functions
- F266 Bonnet contact switch
- F329 Bonnet contact switch 2
- J519 Onboard supply control unit
- J533 Data bus diagnostic interface
- T2aa 2-pin connector, black
- T2z 2-pin connector, black
- T20d 20-pin connector, black
- T20f 20-pin connector, red
- T46a 46-pin connector, black
- T73a 73-pin connector, black
- T73b 73-pin connector, black
- 124 Earth connection, in right side engine compartment wiring harness
- 238 Earth connection 1, in interior wiring harness
- 363 Earth connection 8, in engine compartment wiring harness
- 417 Earth connection 9, in engine compartment wiring harness
- 655 Earth point, on left headlight
- 656 Earth point, on right headlight
- 810 Earth point on central tube for dash panel, centre left
- 811 Earth point on central tube for dash panel, centre right
- A184 Connection (bonnet contact switch), in dash panel wiring harness
- B397 Connection 1 (convenience CAN bus, high), in main wiring harness
- B407 Connection 2 (convenience CAN bus, low), in main wiring harness
- B583 Positive connection (58), in interior wiring harness
- * For left-hand drive models
- *2 For right-hand drive models

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink

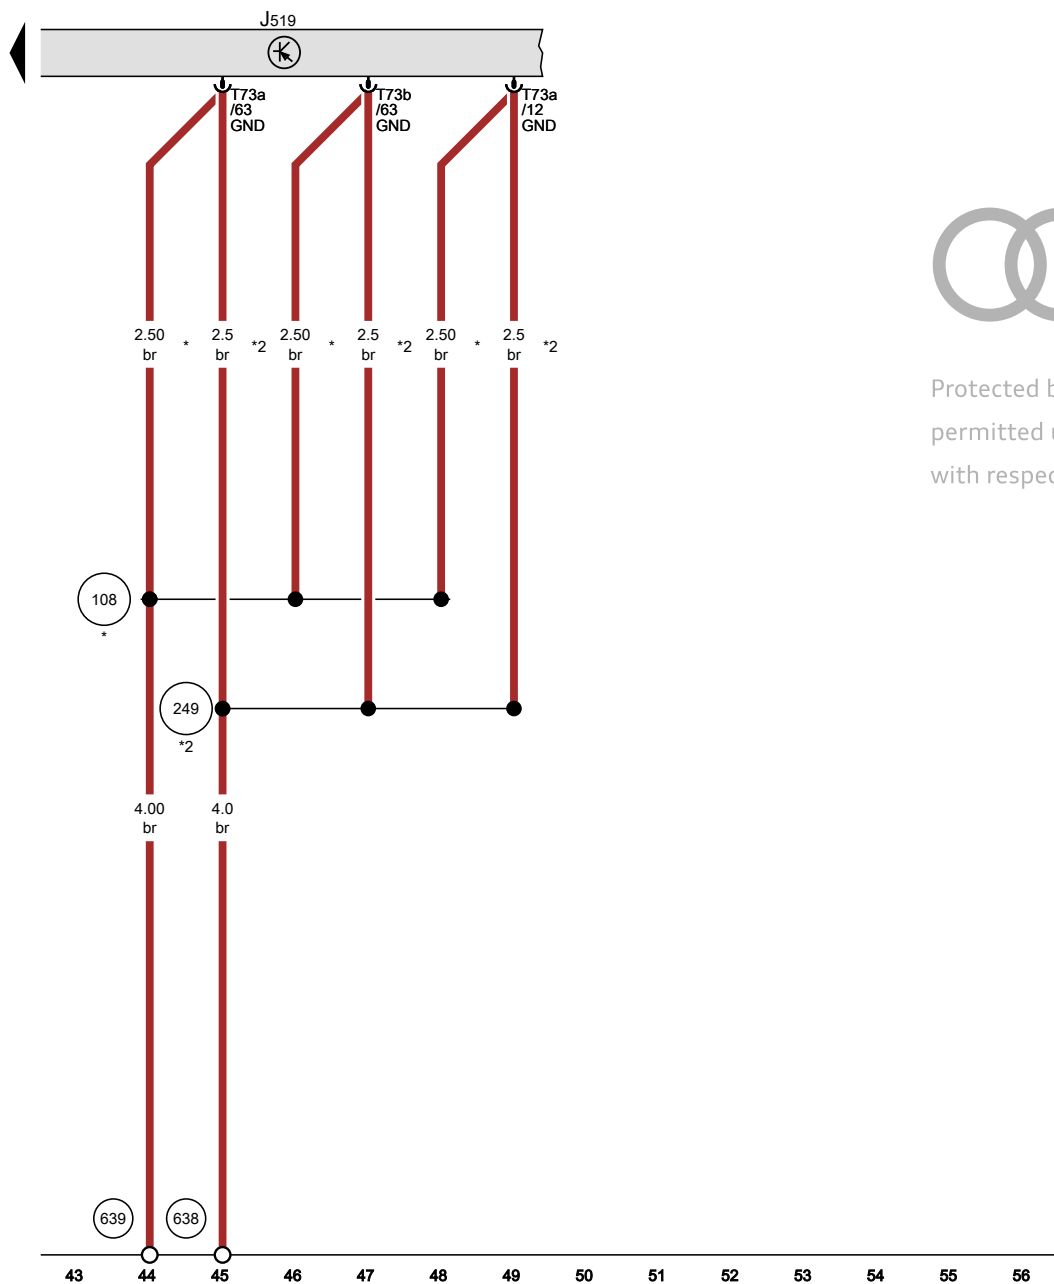

Onboard supply control unit

J519 Onboard supply control unit

T73a 73-pin connector, black

T73b 73-pin connector, black

108 Earth connection 2, in front left wiring harness

249 Earth connection 2, in interior wiring harness

638 Earth point, on right A-pillar

639 Earth point, left A-pillar

* For left-hand drive models

*2 For right-hand drive models

Protected by copyright. Copying for private use, in part or in whole, is not permitted unless authorised by AUDI AG. AUDI AG does not guarantee or accept any liability with respect to the correctness of information in this document. Copyright by AUDI AG.

ws = white
sw = black
ro = red
rt = red
br = brown
gn = green
bl = blue
gr = grey
li = purple
vi = purple
ge = yellow
or = orange
rs = pink

[6BA-016050619]