

GROUP 32

POWER PLANT MOUNT

GENERAL


OUTLINE OF CHANGE

The following service procedures have been added due to the change of the engine mount and transmission mount.

ENGINE MOUNTING

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation
Crossmember Removal and Installation

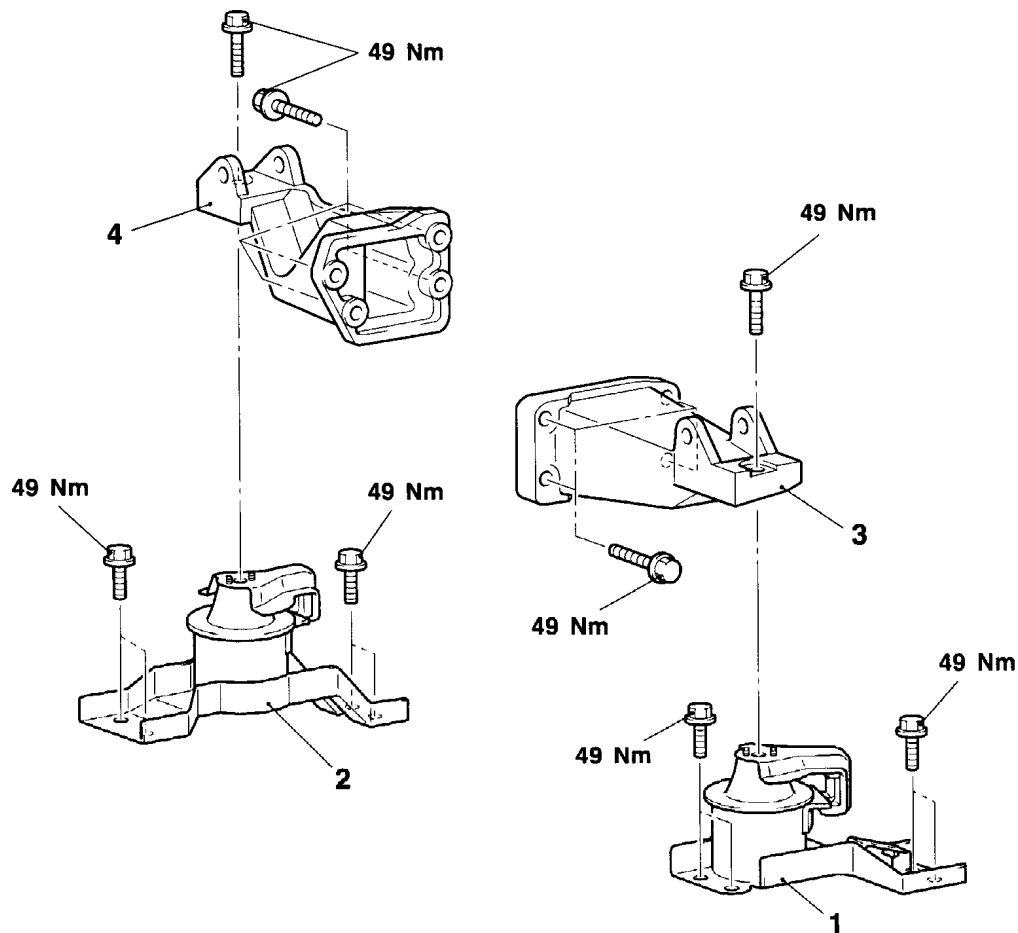

BY0067AL

Removal steps

1. Engine mount insulator Assembly (L.H.)
2. Engine mount insulator Assembly (R.H.)


3. Engine mount bracket (L.H.)
4. Engine mount bracket (R.H.)

TRANSMISSION MOUNTING

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

Jack up the Engine and Transmission Assembly until there is no weight on the Engine Mount Bracket Insulator.

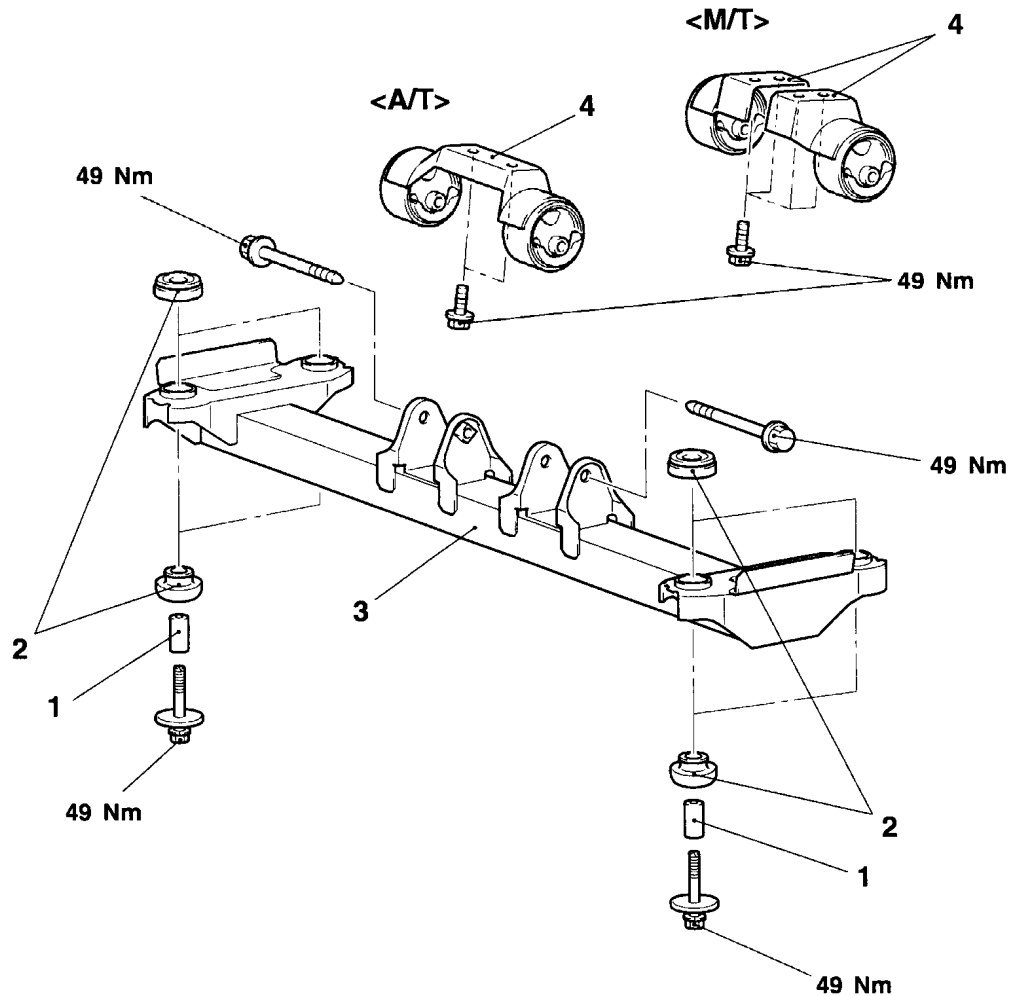

AY0068AL

Removal steps

1. Collar
2. Transmission mount bushing
3. Transmission mount crossmember Assembly

4. Transmission mount insulator Assembly