

GROUP 52A INTERIOR


GENERAL

OUTLINE OF CHANGE

- Due to the introduction of 5-door models, the service procedures for the trims, the headlining, the seat and the seat belts have been added. The other items are the same as before.

TRIMS <5-DOOR MODELS>

REMOVAL AND INSTALLATION

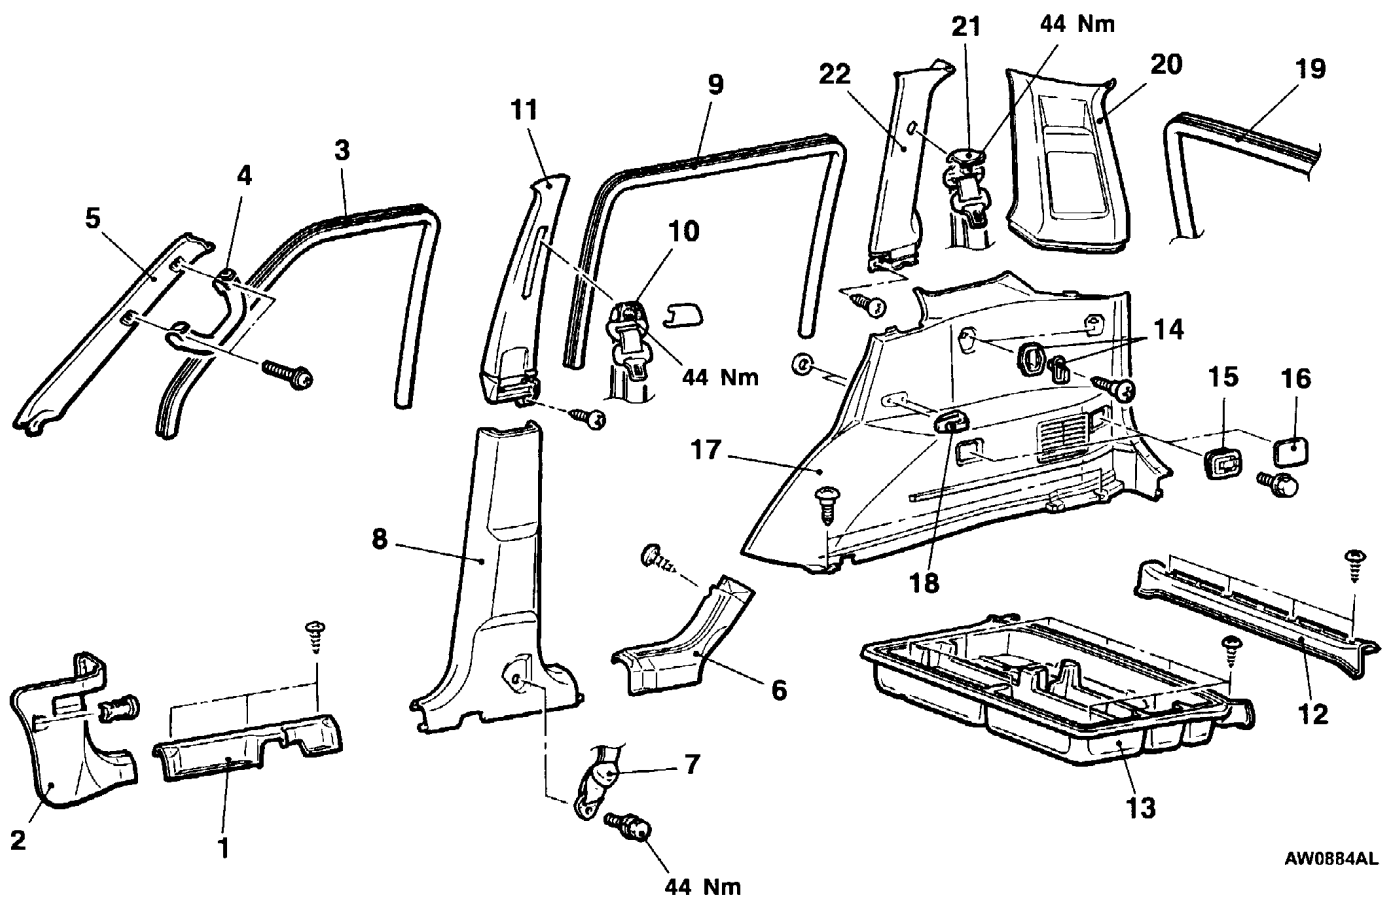


AW08B4AL

1. Front scuff plate
2. Cowl side trim
3. Front door opening trim
4. Assist grip (front)
5. Front pillar trim
6. Rear scuff plate
7. Front seat belt connection
8. Center pillar lower trim
9. Rear door opening trim
10. Front seat belt connection
11. Center pillar upper trim
12. Rear step plate

- Rear seat (Refer to '00 PAJERO PININ Workshop Manual <pub.No. CKRE00E1> Group 52A)
- 13. Luggage floor box <Option>
- 14. Luggage room hook
- 15. Net hook <Option>
- 16. Cover
- 17. Quarter lower trim
- 18. Hook
- 19. Back door opening trim
- 20. Rear pillar trim
- 21. Rear seat belt connection
- 22. Quarter pillar upper trim

CLIP AND CLAW POSITIONS

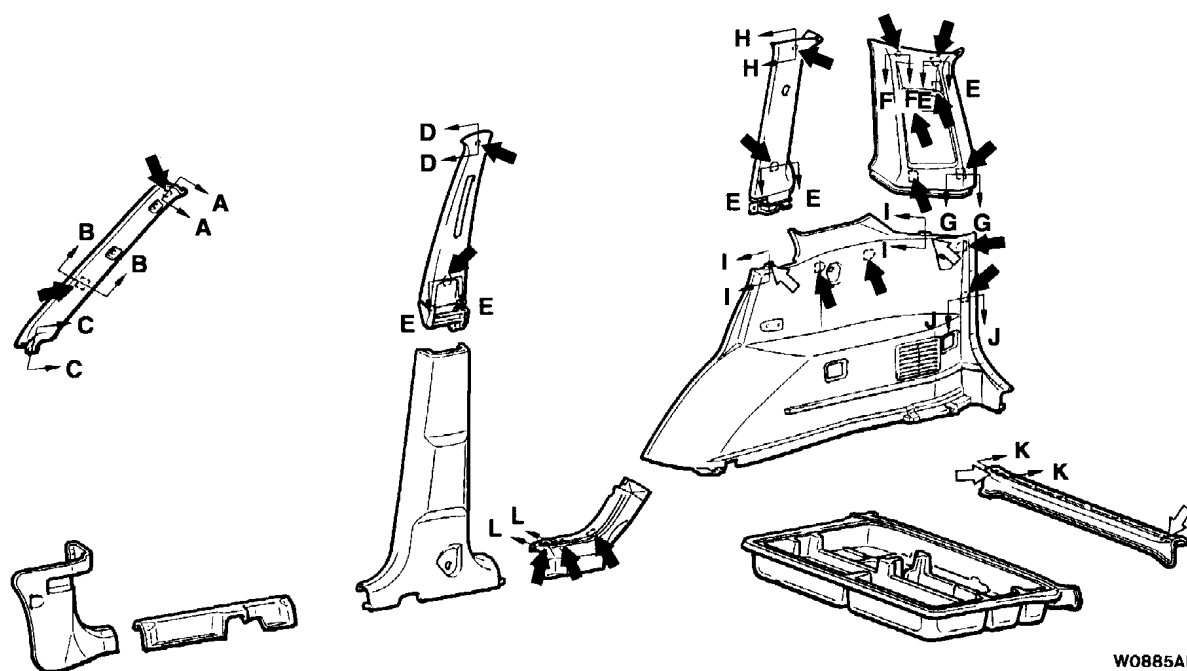

W0885AL

00009437


NOTE

➡ : Clip positions


⇨ : Claw positions

For door trim, refer to GROUP 42.


Section A – A

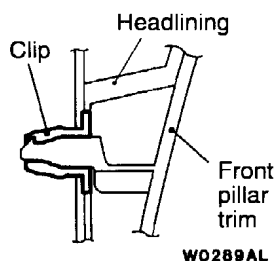


Section B – B

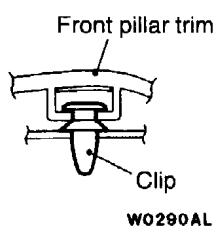


Section C – C

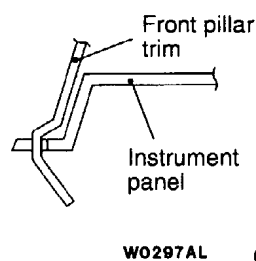


Section D – D

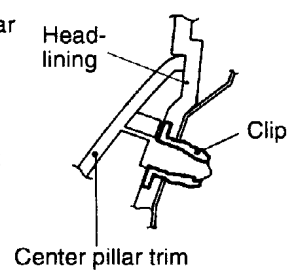


Section E – E

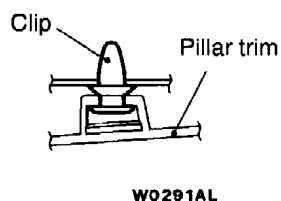


Section F – F

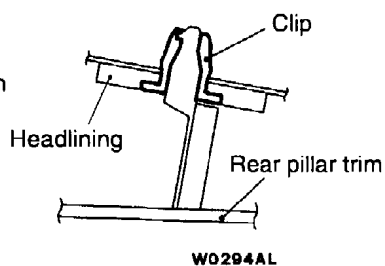


Section G – G

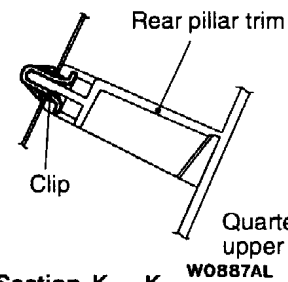


Section H – H

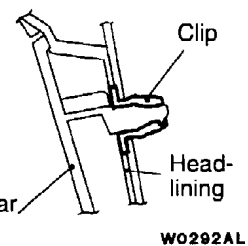


Section I – I

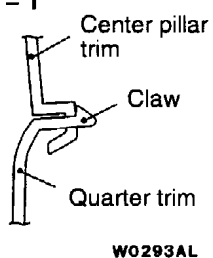


Section J – J

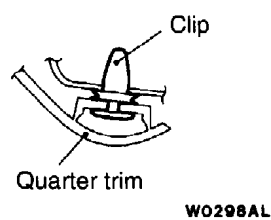

Section K – K

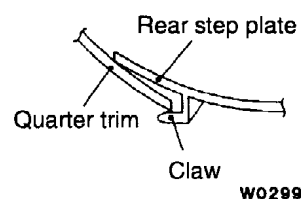


Section L – L

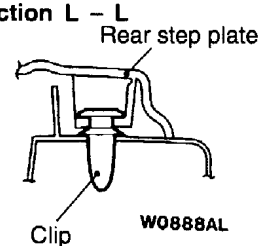

HEADLINING <5-DOOR MODELS>



REMOVAL AND INSTALLATION

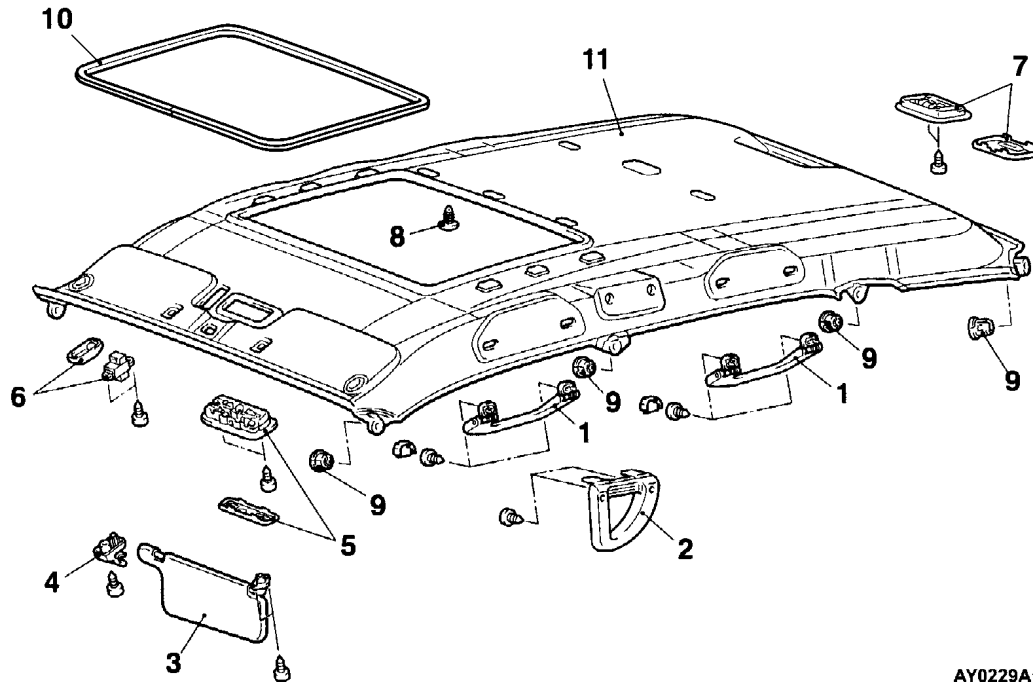

AY0229AL


Removal steps

1. Assist grip
2. Grip (rear)
3. Sun visor assembly
4. Sun visor holder
5. Front room lamp assembly
6. Sunroof switch
<Vehicles with sunroof>
7. Rear room lamp assembly
- Front pillar trim (Refer to P.52A-1.)
- Center pillar trim (Refer to P.52A-1.)
- Quarter pillar upper trim (Refer to P.52A-1.)
- Rear pillar trim (Refer to P.52A-1.)
8. Trim clip <Vehicles without sunroof>
9. Clip
10. Sunroof drip moulding
<Vehicles with sunroof>
11. Headlining

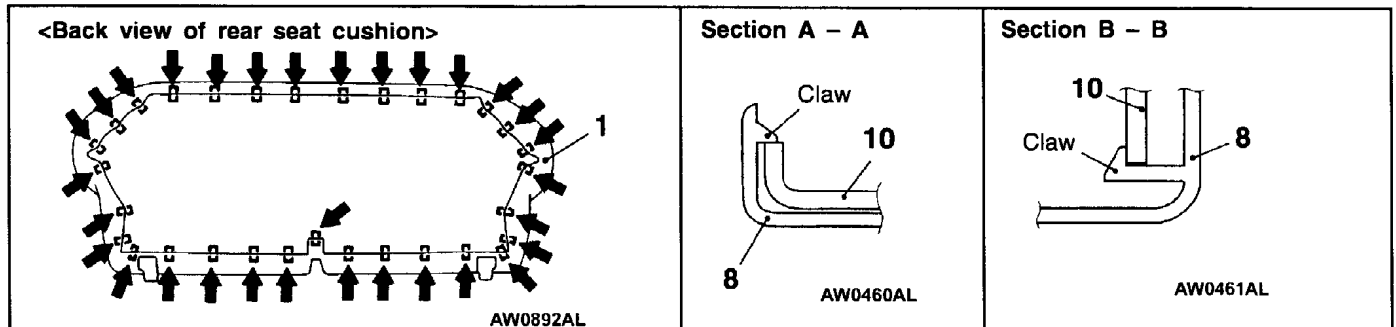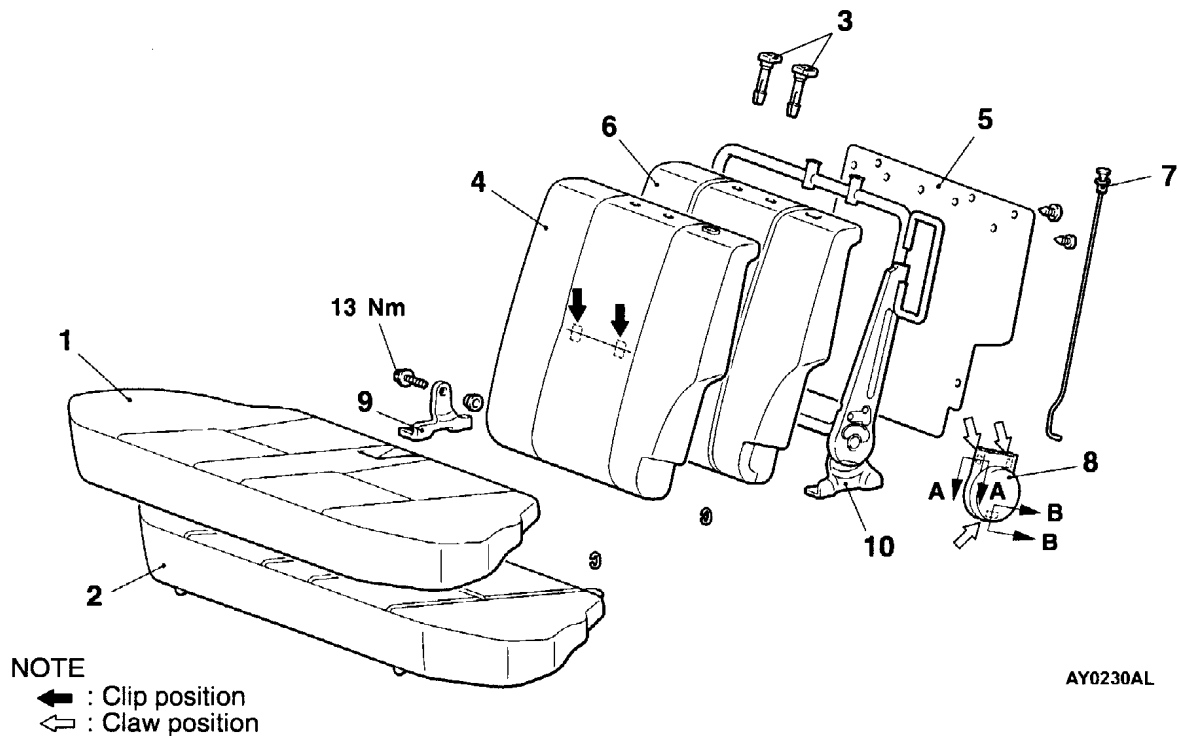SEAT <5-DOOR MODELS>**REAR SEAT****DISASSEMBLY AND REASSEMBLY****Disassembly steps**


1. Rear seat cushion cover
2. Rear seat cushion pad
3. Headrest guide
4. Rear seat back cover
5. Rear seat back panel

6. Rear seat back pad
7. Folding knob assembly
8. Reclining adjuster cover
9. Rear seat center hinge
10. Rear seat back frame assembly

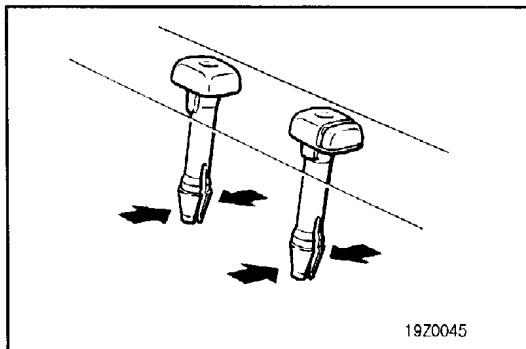**REMOVAL SERVICE POINT****◀A▶ HEADRESTRAINT GUIDE REMOVAL**

SEAT BELT <5-DOOR MODELS>**FRONT SEAT BELT****REMOVAL AND INSTALLATION****Caution: SRS**

Before removal of the seat belt pre-tensioner, refer to GROUP 52B – SRS Service Precautions and Seat Belt with Pre-tensioner.

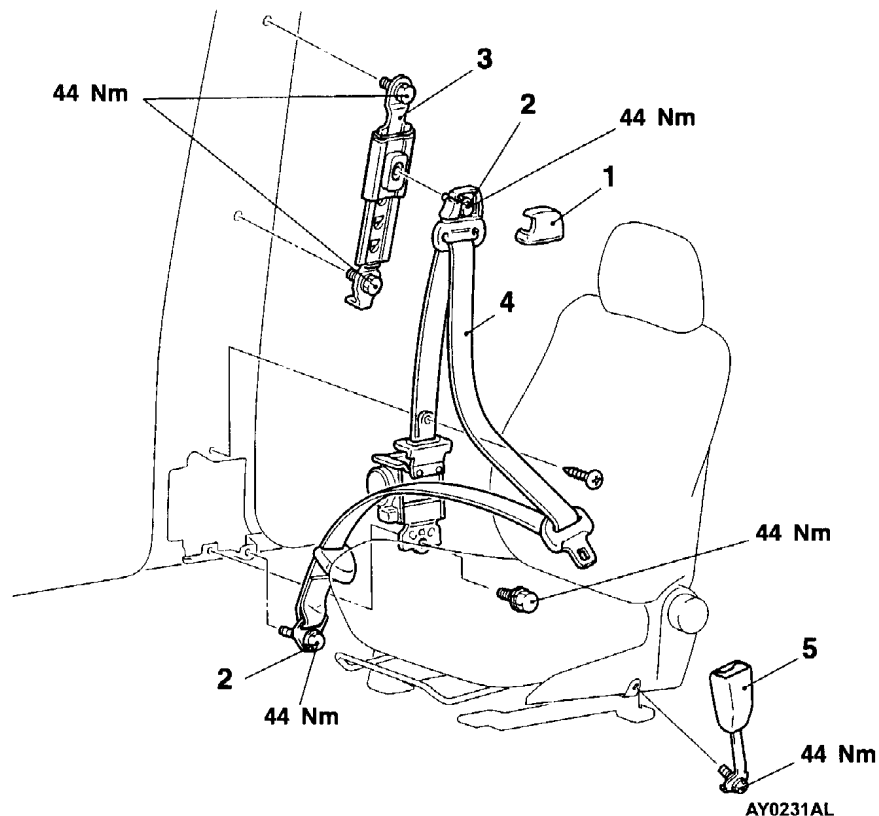
**Outer seat belt removal steps**

1. Sash guide cover
2. Outer seat belt connection
 - Center pillar lower trim (Refer to P.52A-1.)
 - Center pillar upper trim (Refer to P.52A-1.)
3. Adjustable seat belt anchor
4. Outer seat belt

Inner seat belt removal

5. Inner seat belt

REAR SEAT BELT REMOVAL AND INSTALLATION

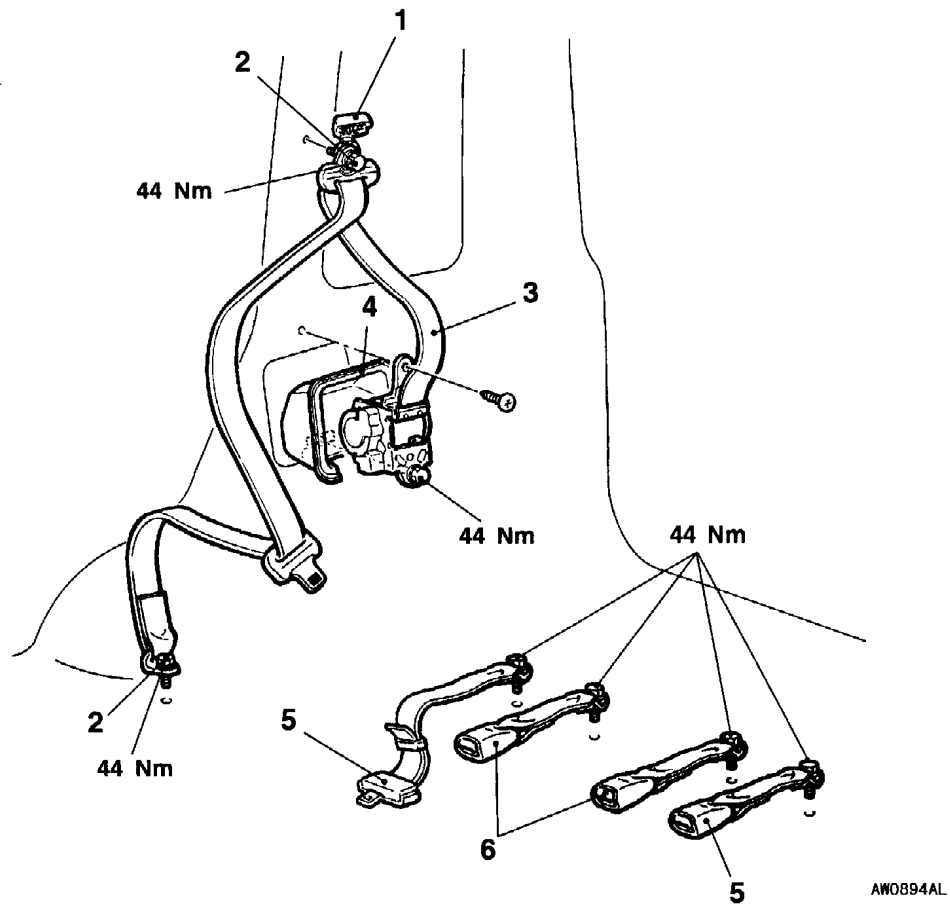

Removal steps

- Rear seat cushion assembly
(Refer to P.52A-1.)
- 1. Sash guide cover
- 2. Outer seat belt connection
- Luggage floor box <Option>
(Refer to P.52A-1.)

- Quarter lower trim
(Refer to P.52A-1.)
- Quarter pillar upper trim
(Refer to P.52A-1.)
- 3. Outer seat belt
- 4. Rear noise protector
- 5. Rear center seat belt
- 6. Inner seat belt

SUPPLEMENTAL RESTRAINT SYSTEM (SRS)

CONTENTS

GENERAL	2	SEAT BELT WITH PRE-TENSIONER	2
Outline of Change	2	SIDE IMPACT SENSOR	3

CAUTION

- Carefully read and observe the information in the SERVICE PRECAUTIONS (Refer to '00 PAJERO PININ Workshop Manual <Pub.No.CKRE00E1> P.52B-4.) prior to any service.
 - For information concerning troubleshooting or maintenance, always observe the procedures in the Troubleshooting (Refer to '00 PAJERO PININ Workshop Manual <Pub.No.CKRE00E1> P.52B-8.) section.
 - If any SRS components are removed or replaced in connection with any service procedures, be sure to follow the procedures in the INDIVIDUAL COMPONENT SERVICE section (Refer to '00 PAJERO PININ Workshop Manual <Pub.No.CKRE00E1> P.52B-30.) for the components involved.
 - If you have any questions about the SRS, please contact your local distributor.
-

GENERAL

OUTLINE OF CHANGE

- Due to the introduction of 5-door models, the removal and installation procedures for seat belt with pre-tensioner and side impact sensor have been added. The other items are the same as before.

SEAT BELT WITH PRE-TENSIONER


Caution

1. Never attempt to disassemble or repair the seat belt with pre-tensioner. If faulty, replace it.
2. Be extremely careful when handling the seat belt with pre-tensioner. Do not subject it to shocks, drop it, bring it close to strong magnets or allow contact with water, grease or oil. Always replace it with a new part if any dents, cracks or deformation is found.
3. Do not place anything on top of the seat belt pre-tensioner.
4. Do not expose the seat belt with pre-tensioner to temperatures over 90°C.
5. After operating the seat belt pre-tensioner, replace the seat belt pre-tensioner with a new part.
6. Gloves and protective goggles should be worn when handling a pre-tensioner once it has been used.
7. If disposing of a seat belt with pre-tensioner which has not yet been used, its pre-tensioner should be operated first before disposal. (Refer to '00 PAJERO PININ Workshop Manual <Pub. No. CKRE00E1> P.52B-48.)

REMOVAL AND INSTALLATION

Pre-removal and Post-installation Operation

- Turn Ignition Key to LOCK (OFF) Position
- Disconnect the Negative (–) Battery Terminal.

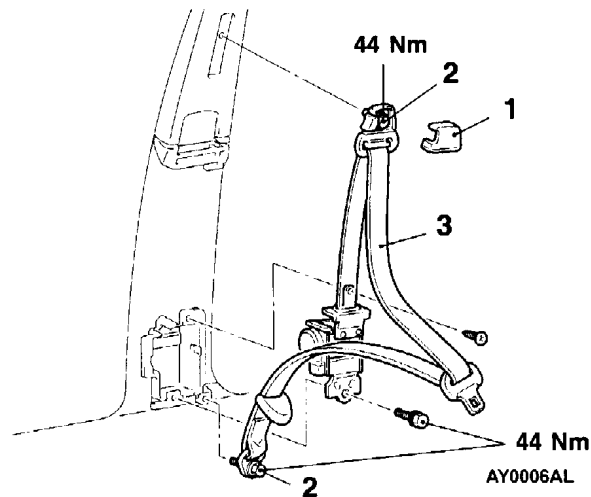

Removal steps

1. Sash guide cover
2. Outer seat belt connection
 - Center pillar lower trim (Refer to P.52A-1.)
3. Seat belt with pre-tensioner

Installation steps

- A◄
- Post-installation inspection
 - 3. Seat belt with pre-tensioner
 - Center pillar lower trim (Refer to P.52A-1.)
 - 2. Outer seat belt connection
 - 1. Sash guide cover
 - Negative (–) battery cable connection
- B◄
- Pre-installation inspection

NOTE

The figure shows the seat belt with pre-tensioner (R.H.).

For service points, refer to Basic Manual.

SIDE IMPACT SENSOR


Caution

1. Disconnect the negative (–) battery terminal and wait for 60 seconds or more before starting work. Also, the disconnected battery terminal should be insulated with tape. (Refer to '00 PAJERO PININ Workshop Manual <Pub. No. CKRE00E1> P.52B-4.)
2. Never attempt to disassemble or repair the side impact sensors. If faulty, just replace with new ones.
3. Do not drop or subject the side impact sensors to impact or vibration. If denting, cracking, deformation, or rust are found in the side impact sensors, replace it with new ones. Discard the old ones.
4. After deployment of the air bags, replace the side impact sensors with new ones.
5. Never use an ohmmeter on or near the side impact sensors, and use only the special test equipment described on '00 PAJERO PININ Workshop Manual <Pub. No. CKRE00E1> P.52B-7.

REMOVAL AND INSTALLATION

Pre-removal Operation

- Turn Ignition Switch to LOCK (OFF) Position.
- Disconnect the Negative (–) Battery Terminal.

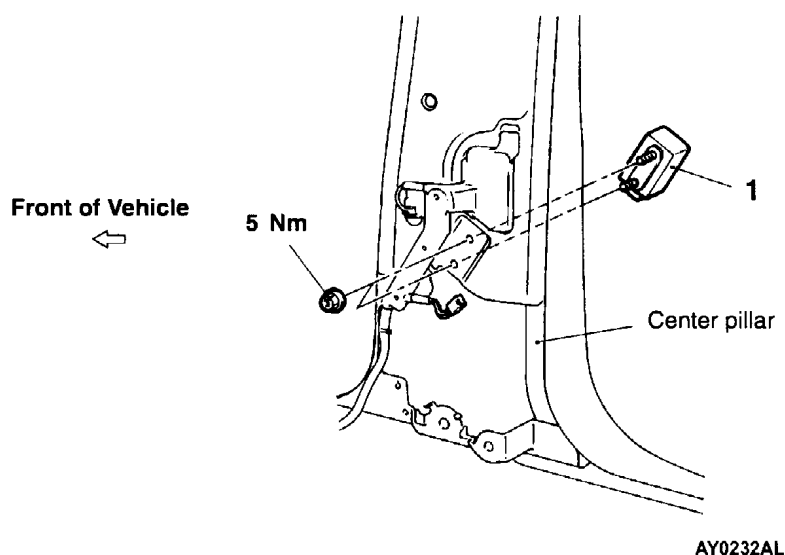

Removal steps

- Front seat belt (Refer to GROUP 52A.)
1. Side impact sensor

Installation steps

- Pre-installation inspection
- 1. Side impact sensor
- Front seat belt (Refer to GROUP 52A.)
- Negative (–) battery cable connection
- Post-installation inspection

NOTE

The figure shows the side impact sensor (R.H.).
For service points, refer to Basic Manual.