

2008 ACCESSORIES & EQUIPMENT**Interior Trim and Paneling - LaCrosse****SPECIFICATIONS****FASTENER TIGHTENING SPECIFICATIONS**

Application	Specification	
	Metric	English
Assist Strap Screws	2 N.m	18 lb in
Garnish Molding Screw	3 N.m	27 lb in
Guide Loop Attachment Bolt	42 N.m	31 lb ft
Overhead Console Backplate Screws	2 N.m	18 lb in
Overhead Console Screws	2 N.m	18 lb in
Quarter Upper Panel Screw	3 N.m	27 lb in
Sail Panel Screw	2 N.m	18 lb in
Sunshade Retainer Screw	2 N.m	18 lb in
Sunshade Screws	3 N.m	27 lb in

REPAIR INSTRUCTIONS**FRONT DOOR SWITCH BEZEL REPLACEMENT****Removal Procedure**

1. Remove the front door trim pad. Refer to **Front Side Door Trim Panel Replacement**.

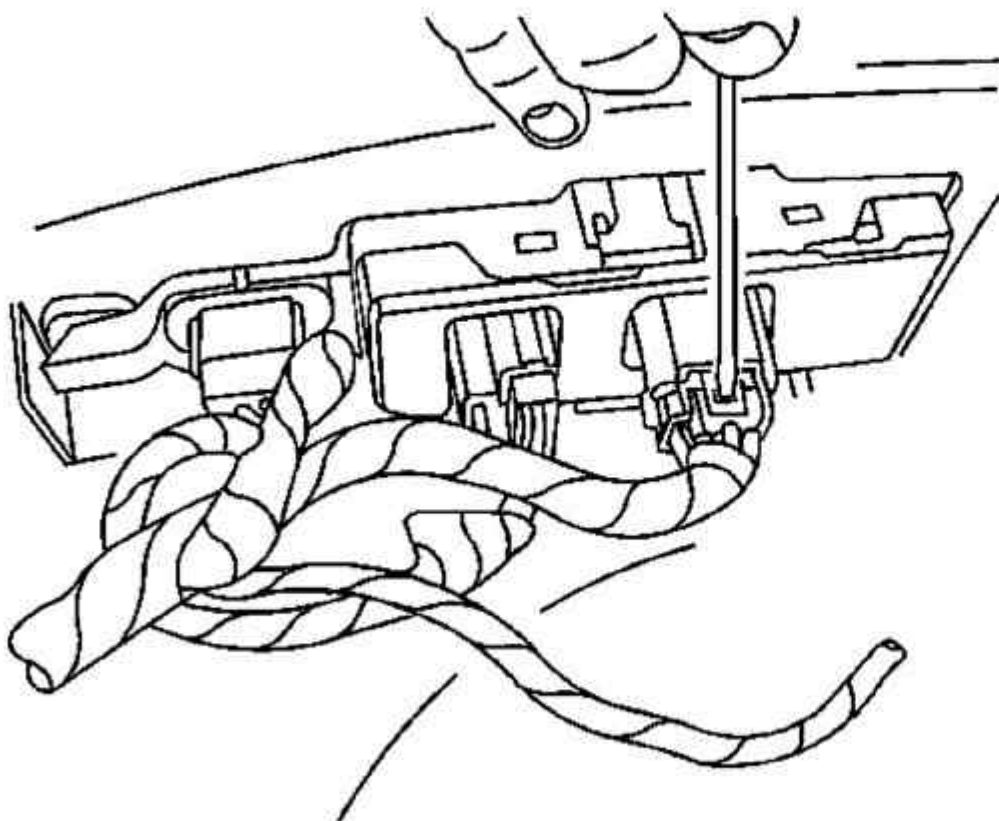


Fig. 1: Identifying Window & Rearview Mirror Switches
Courtesy of GENERAL MOTORS CORP.

2. Remove the window and rearview mirror switches.

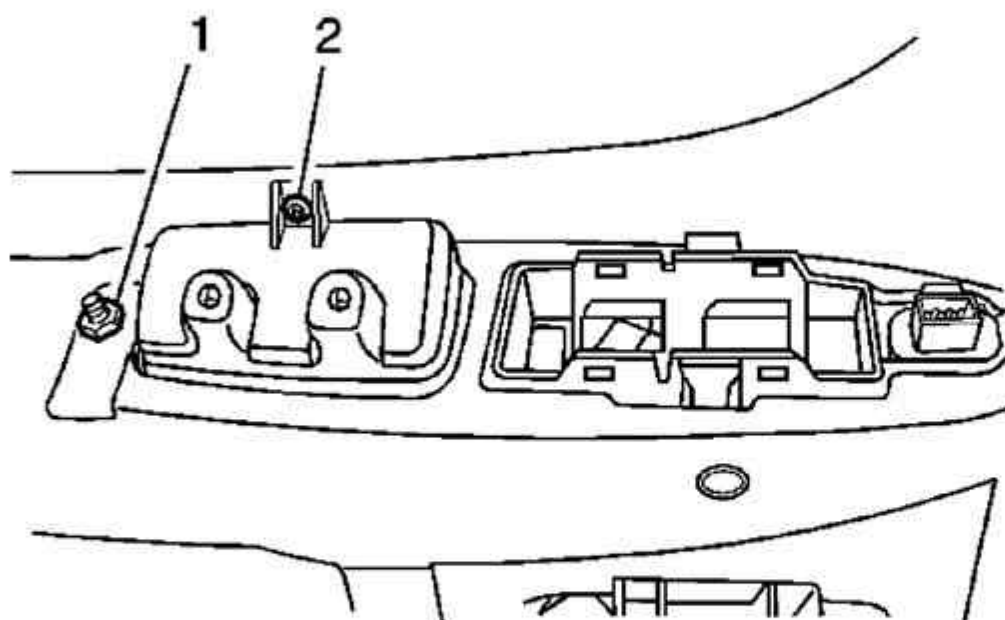


Fig. 2: Identifying Bezel Clip & Bezel Screw
Courtesy of GENERAL MOTORS CORP.

3. Remove the bezel clip (1).
4. Remove the bezel screw (2).

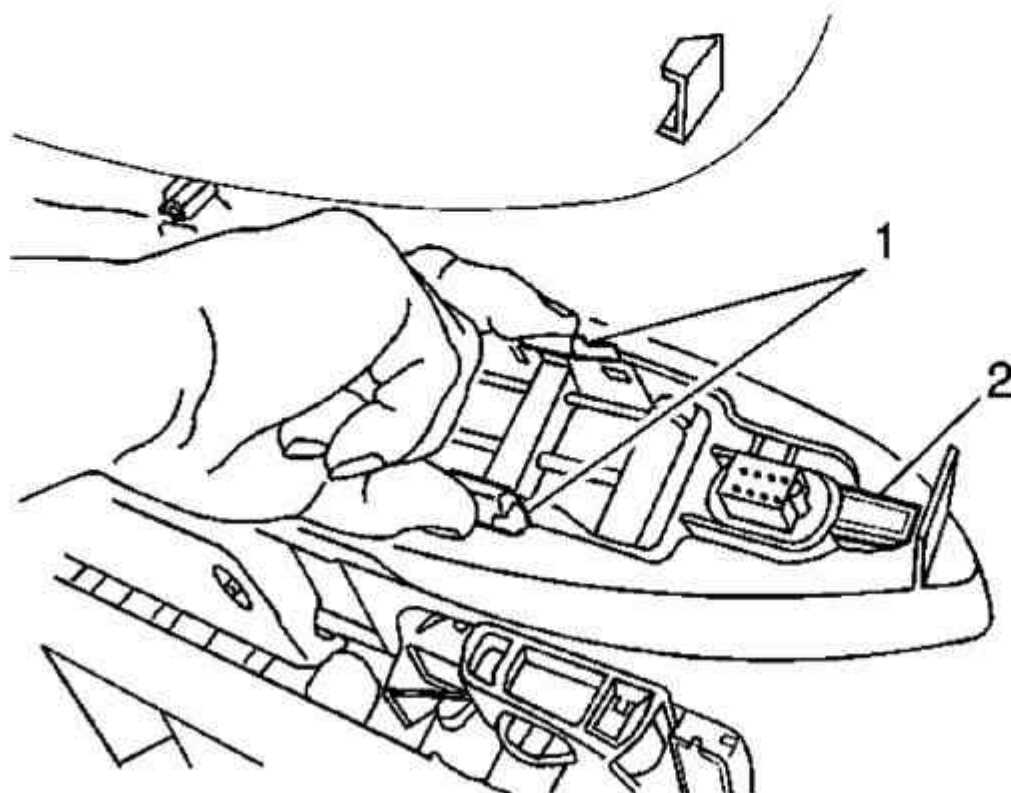


Fig. 3: View Of Retaining Clips & Front Tab
Courtesy of GENERAL MOTORS CORP.

5. Press the 2 retaining clips (1) together and push the rear of the bezel out through the door trim.
6. Pull the bezel rearward to remove the front tab (2).
7. Remove the bezel from the vehicle.

Installation Procedure

1. Position the retainer tab into the trim panel and press down on the bezel to seat the retainer clips.

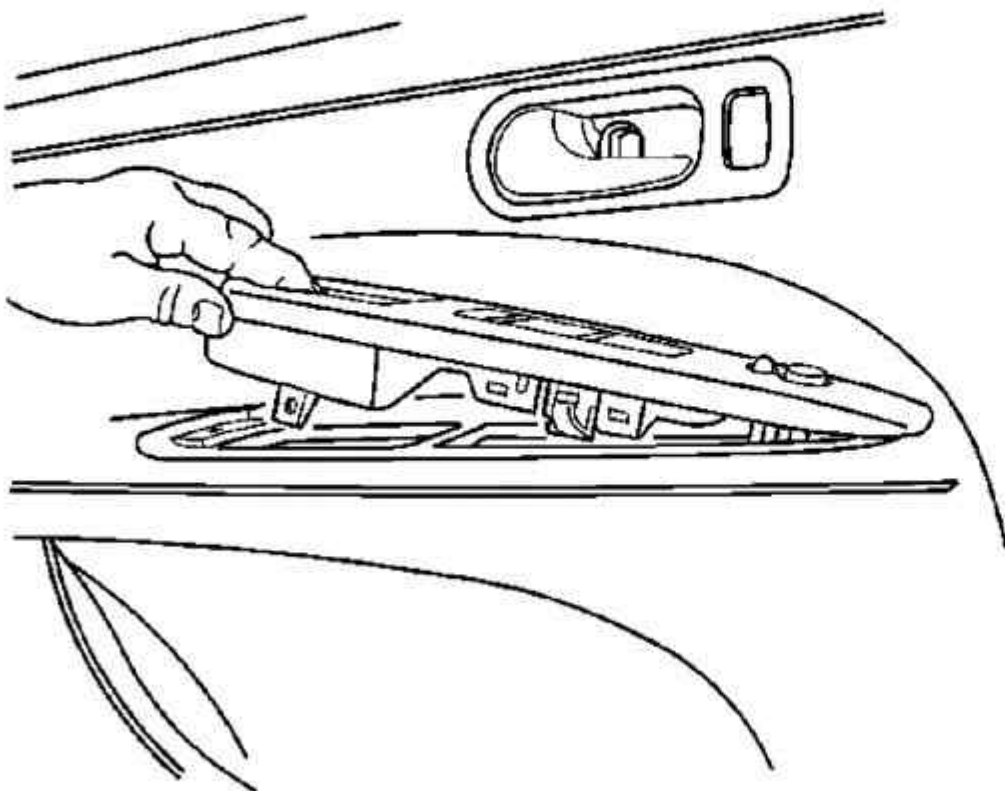


Fig. 4: View Of Pull Handle Housing
Courtesy of GENERAL MOTORS CORP.

NOTE: Refer to Fastener Notice .

2. Install the pull handle housing screw.

Tighten: Tighten the screws to 3 N.m (27 lb in).

3. Install the pull handle housing clip.

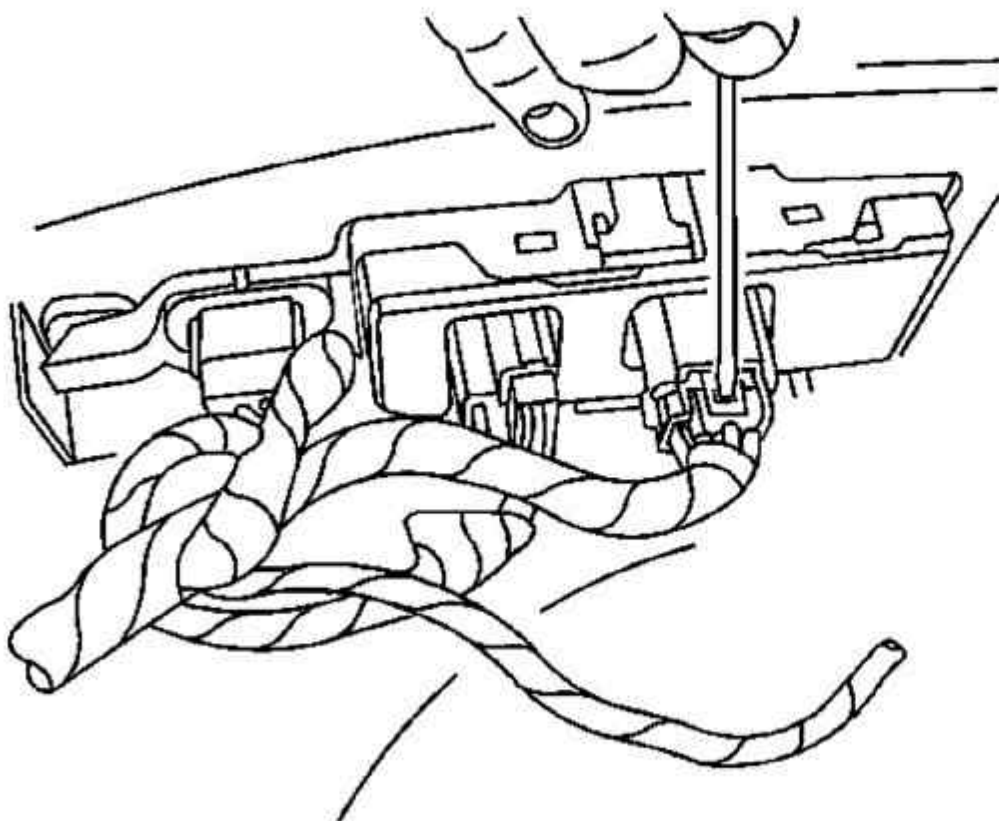


Fig. 5: Identifying Window & Rearview Mirror Switches
Courtesy of GENERAL MOTORS CORP.

4. Install the window and rearview mirror switches.
5. Install the front door trim pad. Refer to **Front Side Door Trim Panel Replacement**.

FRONT SIDE DOOR TRIM PANEL REPLACEMENT

Tools Required

J 38778 Door Trim Pad Clip Remover

Removal Procedure

1. Remove the cover in the armrest pull cup.
2. Remove the armrest pull cup screws.
3. Remove the screw cover from the inside door handle. Remove the screw.
4. Slide the **J 38778** behind the door trim extension panel. Press out to free the retainer.

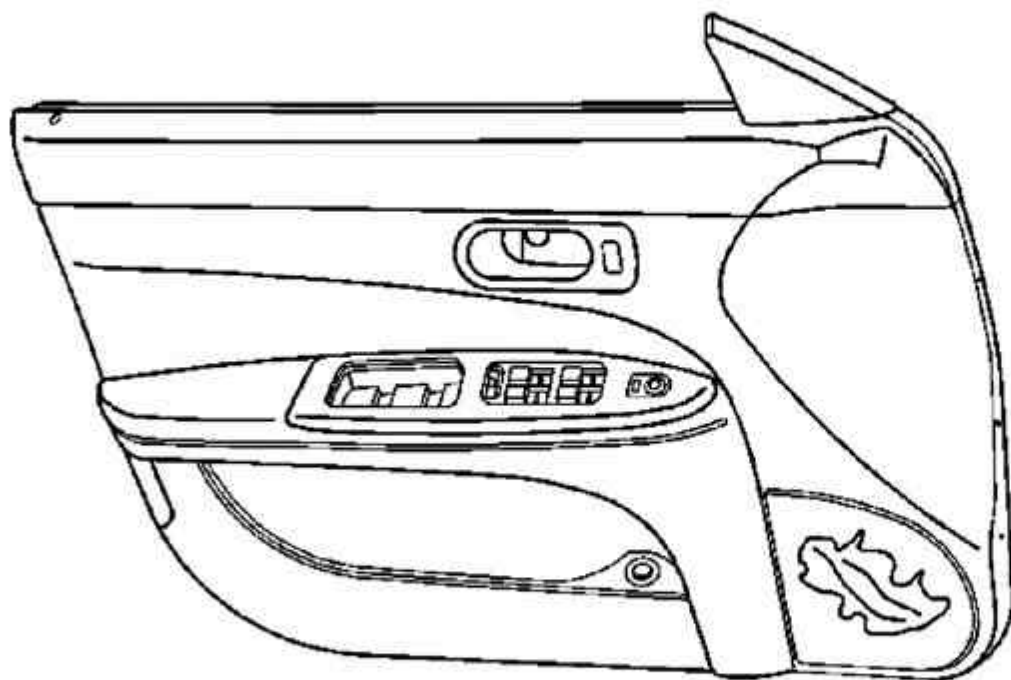


Fig. 6: View Of Side Front Door Trim Panel
Courtesy of GENERAL MOTORS CORP.

5. Starting at the door bottom, use the **J 38778** to disengage the retainers from the door trim panel.
6. Lift the trim panel up to release the top edge and move it away from the door to expose the inside door handle lock rod.
7. Using needle nose pliers, compress the plastic connector on the cable end to release the cable from the door panel.
8. Disconnect the door handle cable end from the door handle.

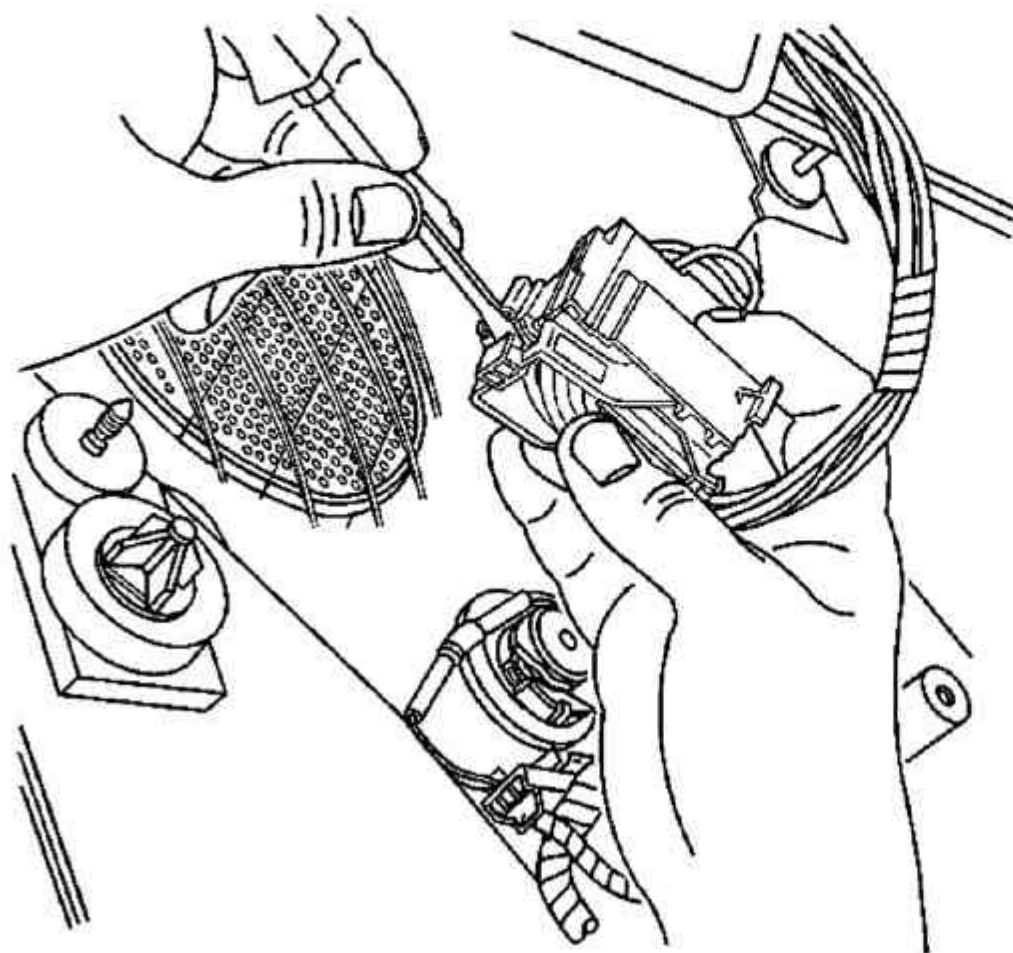


Fig. 7: Disconnecting Electrical Connector From Door Electric Harness (Front Door)
Courtesy of GENERAL MOTORS CORP.

9. Disconnect the electrical connector to the door electric harness. Pinch the release tabs and lift the cam lock and separate the connector.
10. Remove the front door trim panel from the vehicle.

Installation Procedure

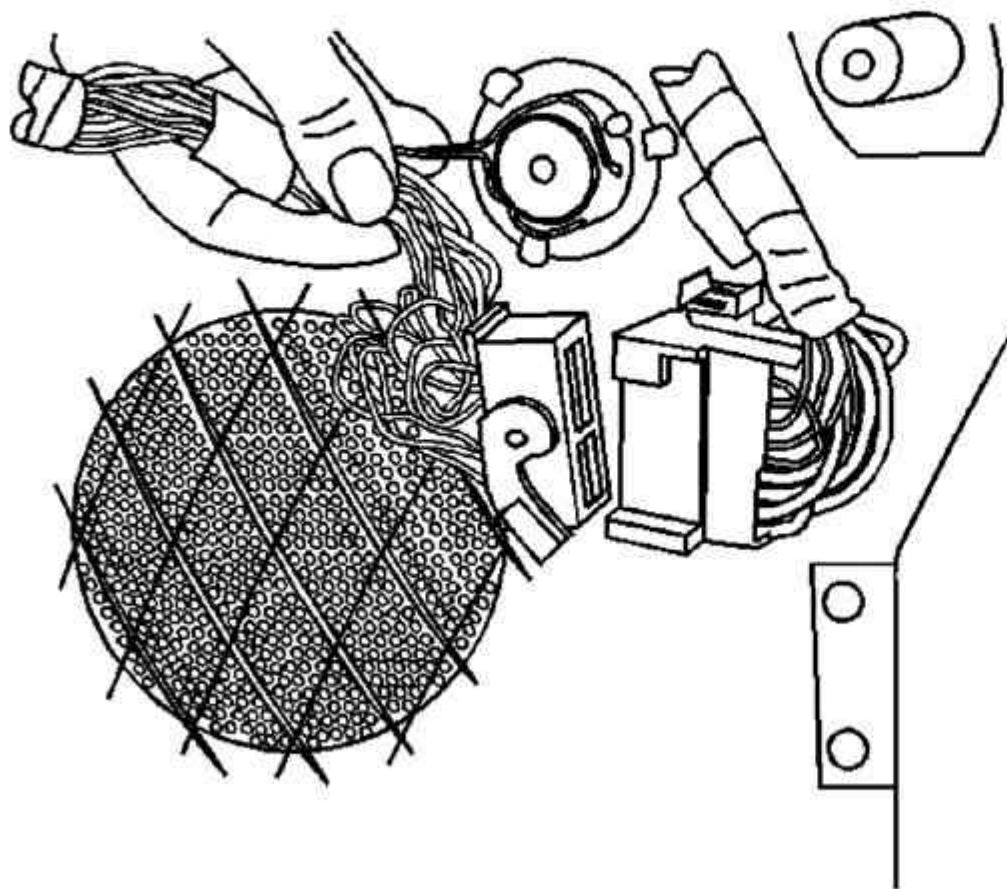


Fig. 8: View Of Electrical Connector & Door Electric Harness (Front Door)
Courtesy of GENERAL MOTORS CORP.

1. Connect the electrical connector to the door electric harness. Press the cam lock in to secure the connector.
2. Connect the door handle cable to the door handle.

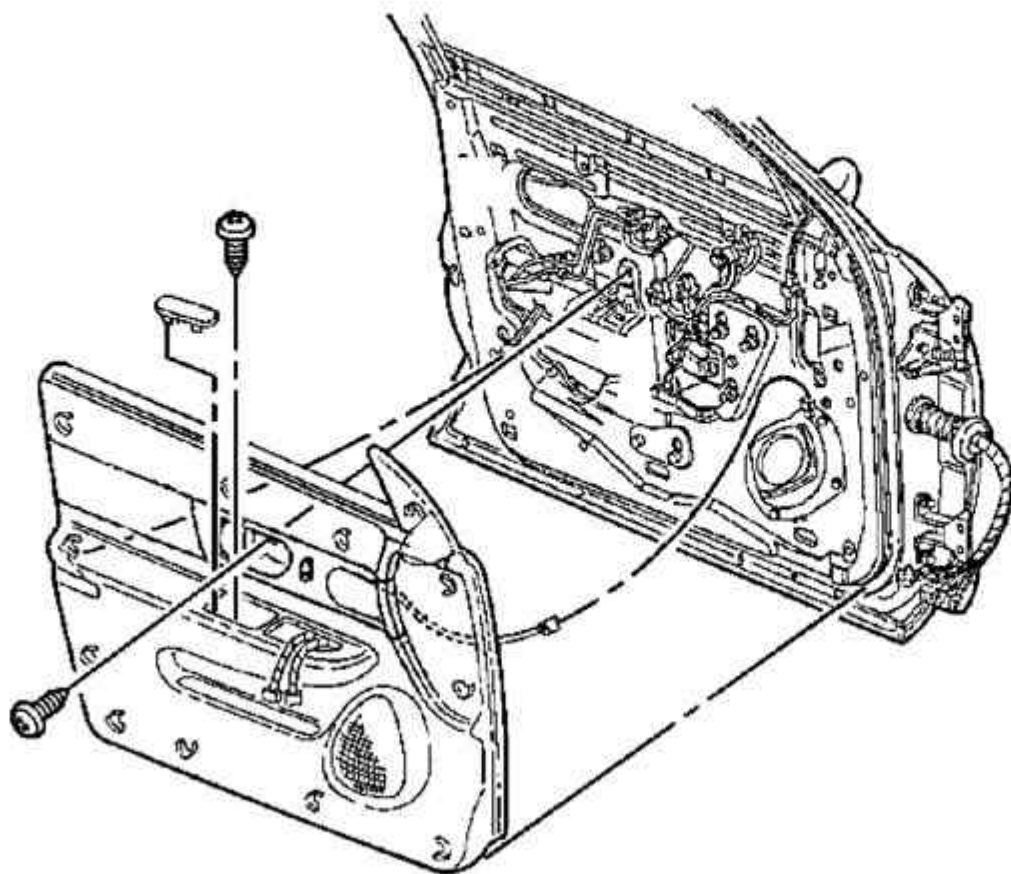


Fig. 9: View Of Side Front Door Trim Panel
Courtesy of GENERAL MOTORS CORP.

3. Position the top of the trim panel at the window opening and press down.
4. Align the fasteners into the holes in the door metal.
5. Firmly press the door panel to seat the fasteners.

NOTE: Refer to Fastener Notice .

6. Install the armrest pull cup screws.

Tighten: Tighten the screws to 3 N.m (27 lb in).

7. Install the inside door handle screw.

Tighten: Tighten the screw to 3 N.m (27 lb in).

8. Install the screw cover.

REAR SIDE DOOR TRIM PANEL REPLACEMENT

Tools Required

J 38778 Door Trim Pad Clip Remover

Removal Procedure

1. Open the screw cover on the inside door handle and remove the screw.

2. Remove the arm rest pull cup cover (1).

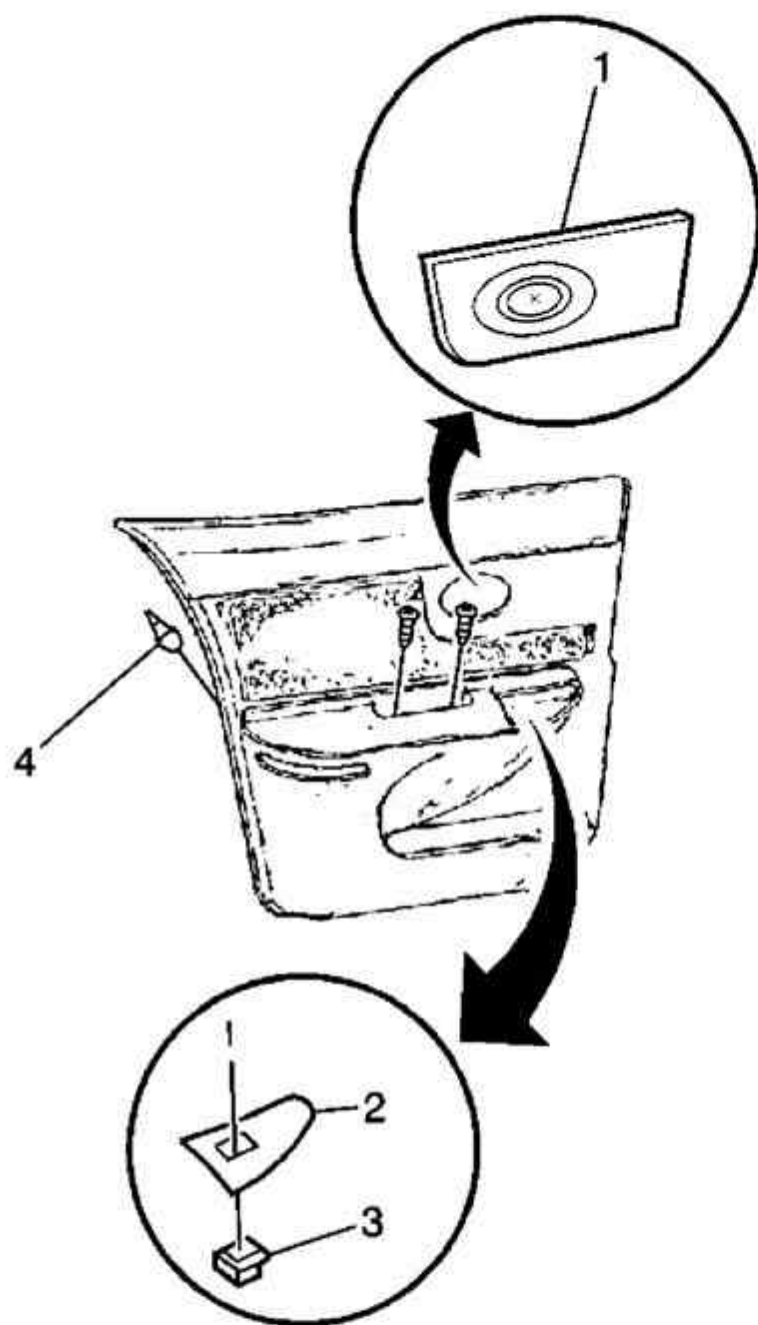


Fig. 10: Identifying Side Rear Door Trim Panel Components
Courtesy of GENERAL MOTORS CORP.

3. Remove the armrest pull cup screws.
4. Starting at the door bottom, use the **J 38778** to release the door trim panel retainers.
5. Lift the trim panel up to release the top edge and move it away from the door.
6. Using needle nose pliers, compress the plastic connector on the door handle cable end from the door panel.

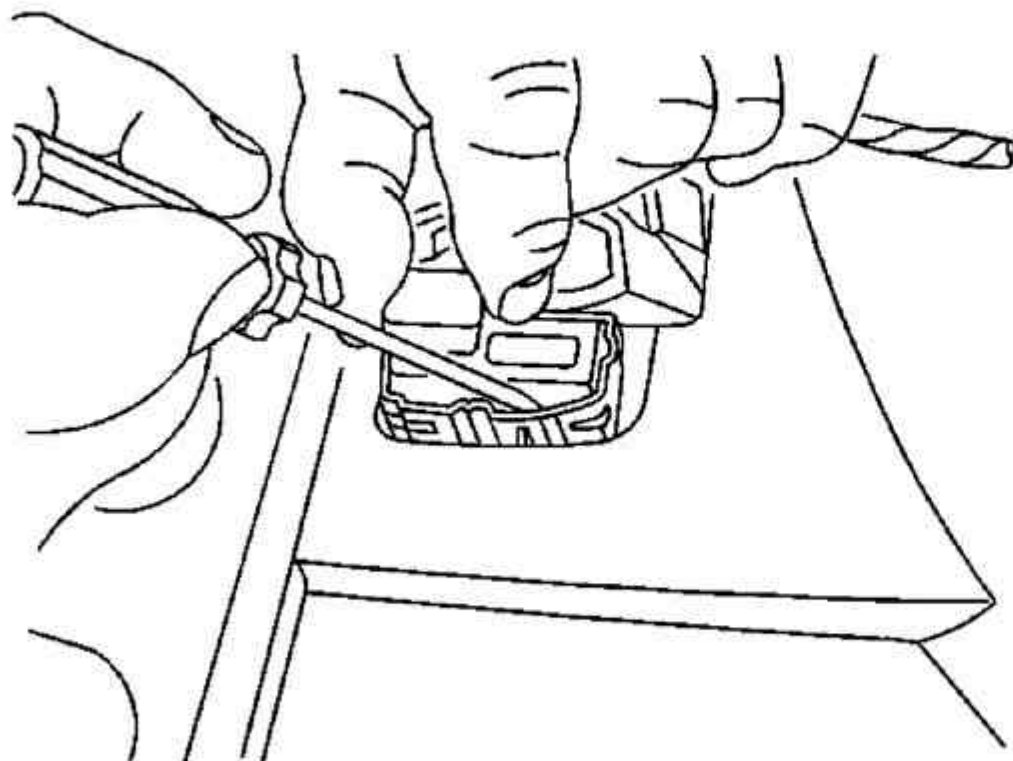


Fig. 11: Identifying Power Window/Door Lock Switch
Courtesy of GENERAL MOTORS CORP.

7. Use a flat-bladed tool to spread the power window switch retainers and remove the switch from the door panel.
8. Remove the rear door trim panel from the vehicle.

Installation Procedure

1. Position the trim panel by the door. Press the power window switch into its installed position.
2. Connect the door handle cable to the door handle.
3. Position the top of the trim panel at the window opening and press down.
4. Align the fasteners into the holes in the door metal.
5. Firmly press the door panel to seat the fasteners.

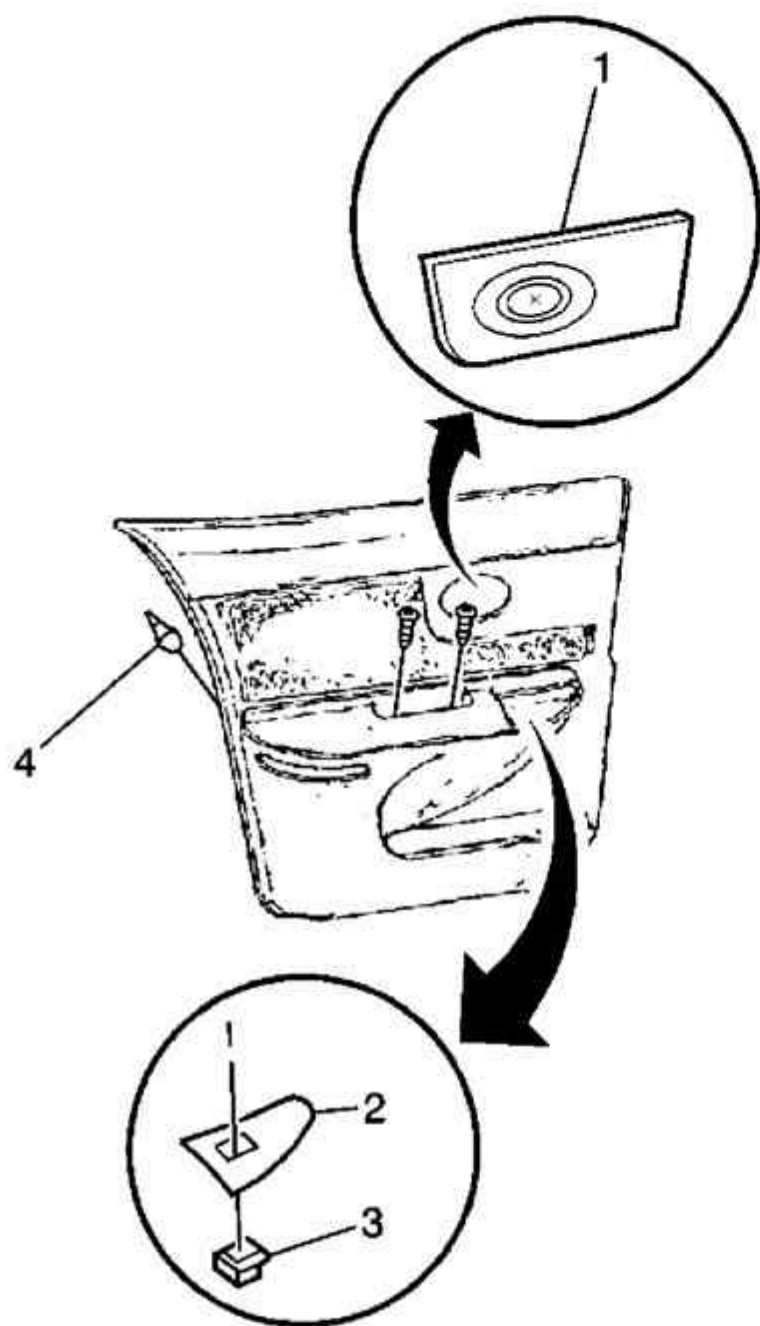


Fig. 12: Identifying Side Rear Door Trim Panel Components
Courtesy of GENERAL MOTORS CORP.

NOTE: Refer to Fastener Notice .

6. Install the armrest pull cup screws.

Tighten: Tighten the screws to 3 N.m (27 lb in).

7. Install the armrest pull cup cover (1).
8. Install the door handle screw.

Tighten: Tighten the screw to 3 N.m (27 lb in).

9. Press the screw cover back into its installed position.

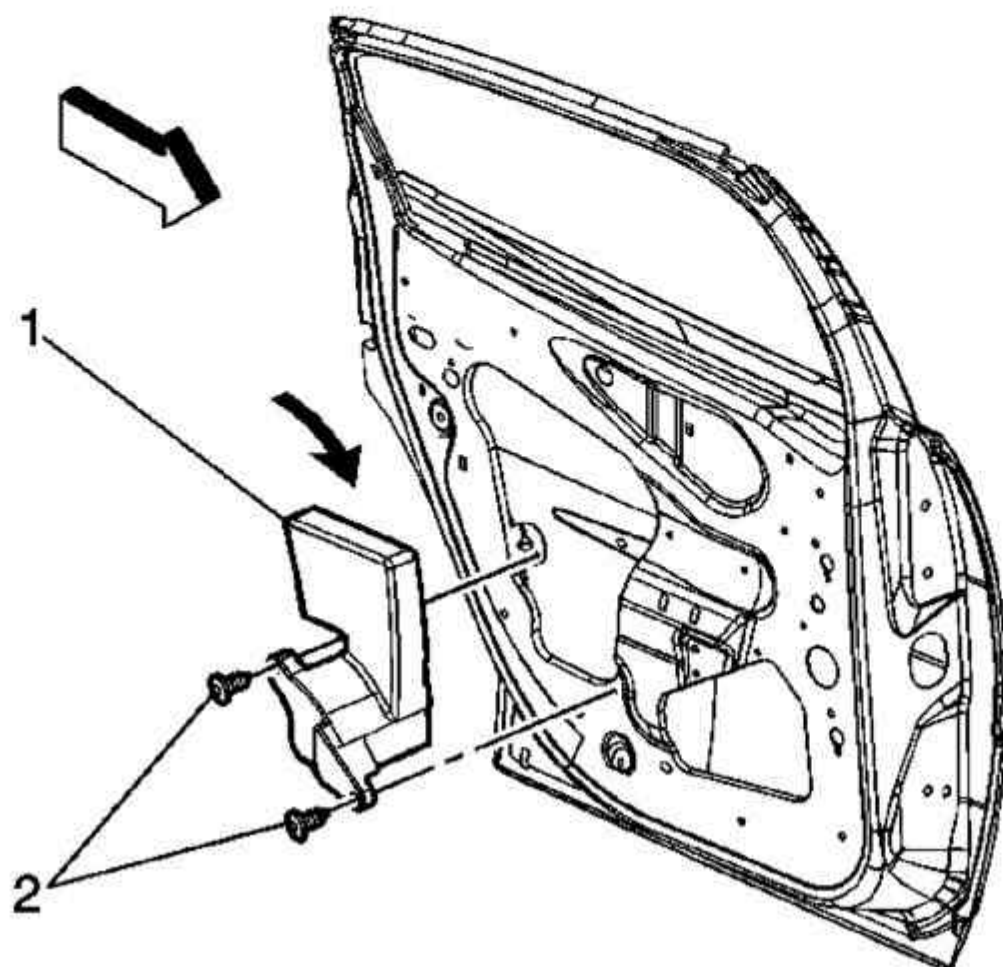
Removal Procedure

Fig. 13: View Of Inner Rear Energy Absorber Pad
Courtesy of GENERAL MOTORS CORP.

1. Open the door.
2. Remove the rear door trim pad. Refer to **Rear Side Door Trim Panel Replacement**.
3. Remove the rear door water deflector. Refer to **Rear Side Door Water Deflector Replacement**.
4. Remove both push pins from the energy absorber pad (2).
5. Grasp the energy absorber pad (1) with both hands and pull rearward to release it from the door. If necessary, warm the inner door panel to soften the adhesive.
6. Remove the inner energy absorber pad from the door.

Installation Procedure

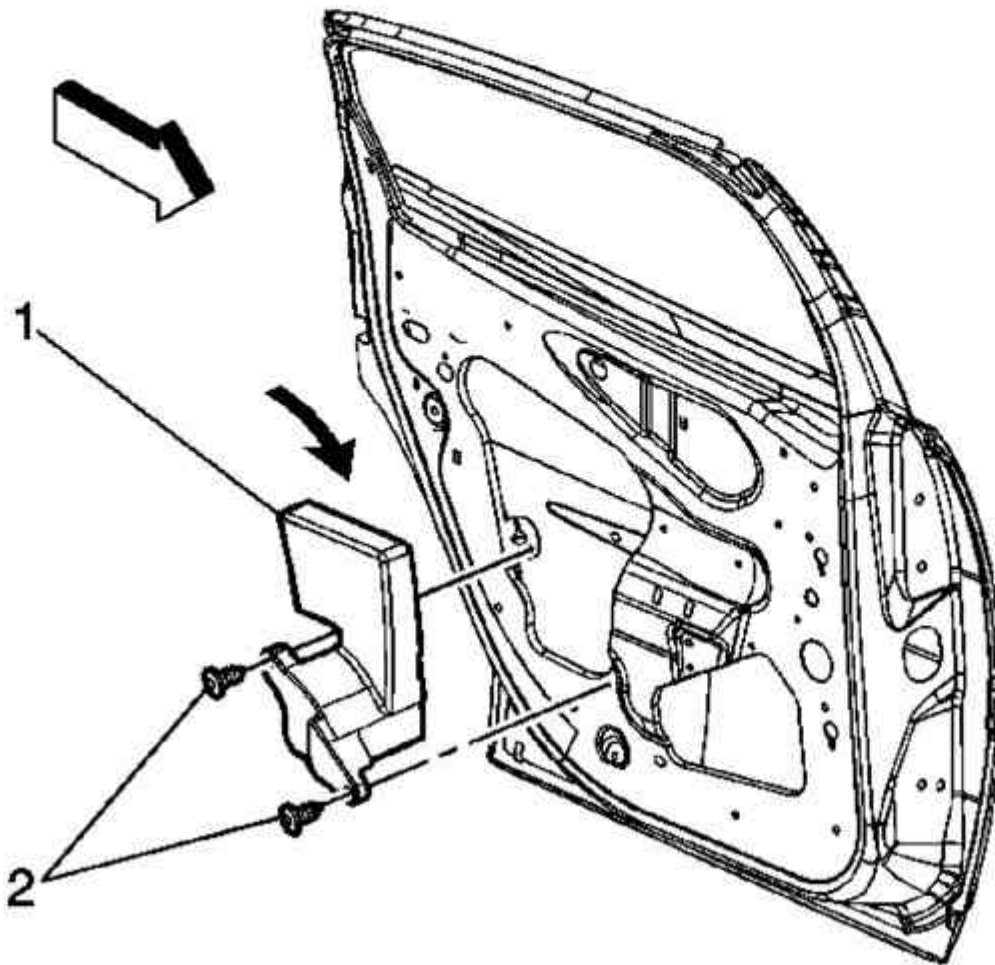


Fig. 14: View Of Inner Rear Energy Absorber Pad
Courtesy of GENERAL MOTORS CORP.

1. Clean the rear inner door panel using a 50/50 mixture of isopropyl alcohol and water by volume on a dampened lint free cloth before reinstalling the energy absorber pad.
2. Remove the double backed protective tape backing from the door inner energy absorber pad.
3. Install the energy absorber pad (1) to the door.
4. Install both push pins to the energy absorber pad (2).
5. Install the rear door water deflector. Refer to **Rear Side Door Water Deflector Replacement**.
6. Install the rear door trim pad. Refer to **Rear Side Door Trim Panel Replacement**.
7. Close the door.

FRONT SIDE DOOR WATER DEFLECTOR REPLACEMENT

Removal Procedure

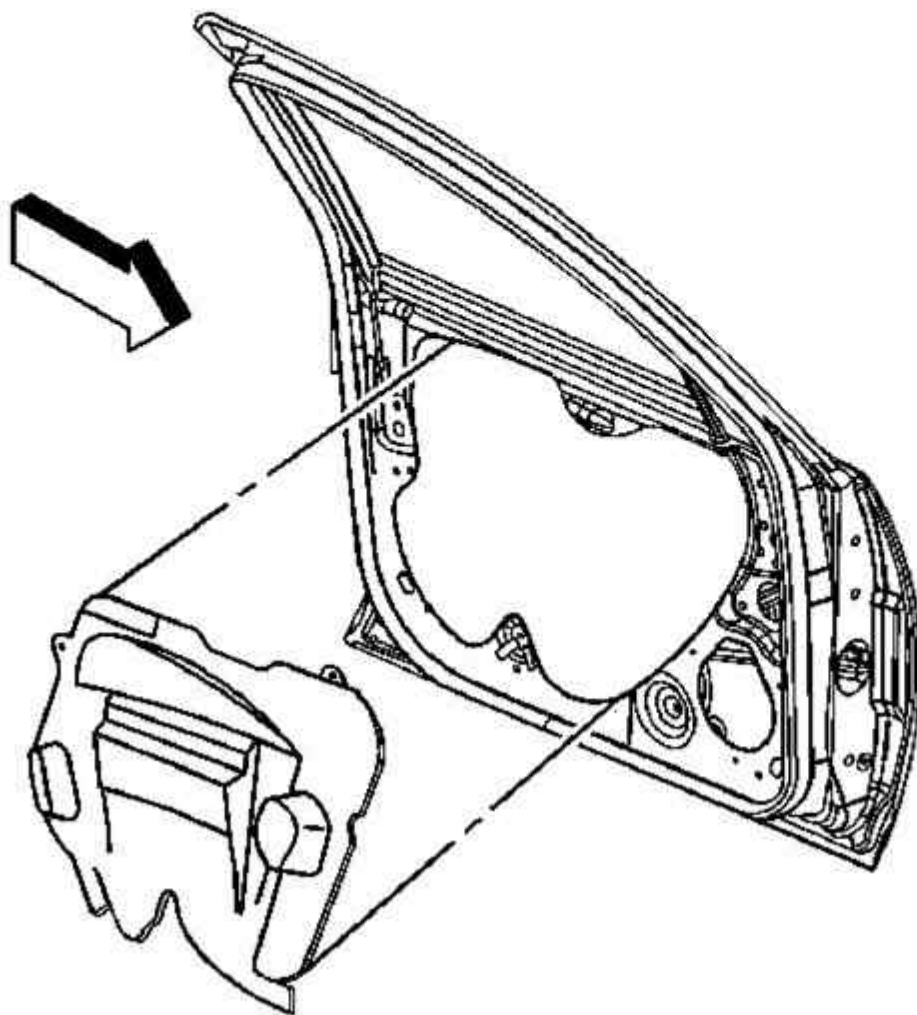


Fig. 15: Identifying Front Door Water Deflector
Courtesy of GENERAL MOTORS CORP.

1. Remove the front door trim panel. Refer to Front Side Door Trim Panel Replacement.

IMPORTANT: Use care when removing the water deflector from the inner door panel not to damage the waterproof seal.

2. Remove the water deflector.

Installation Procedure

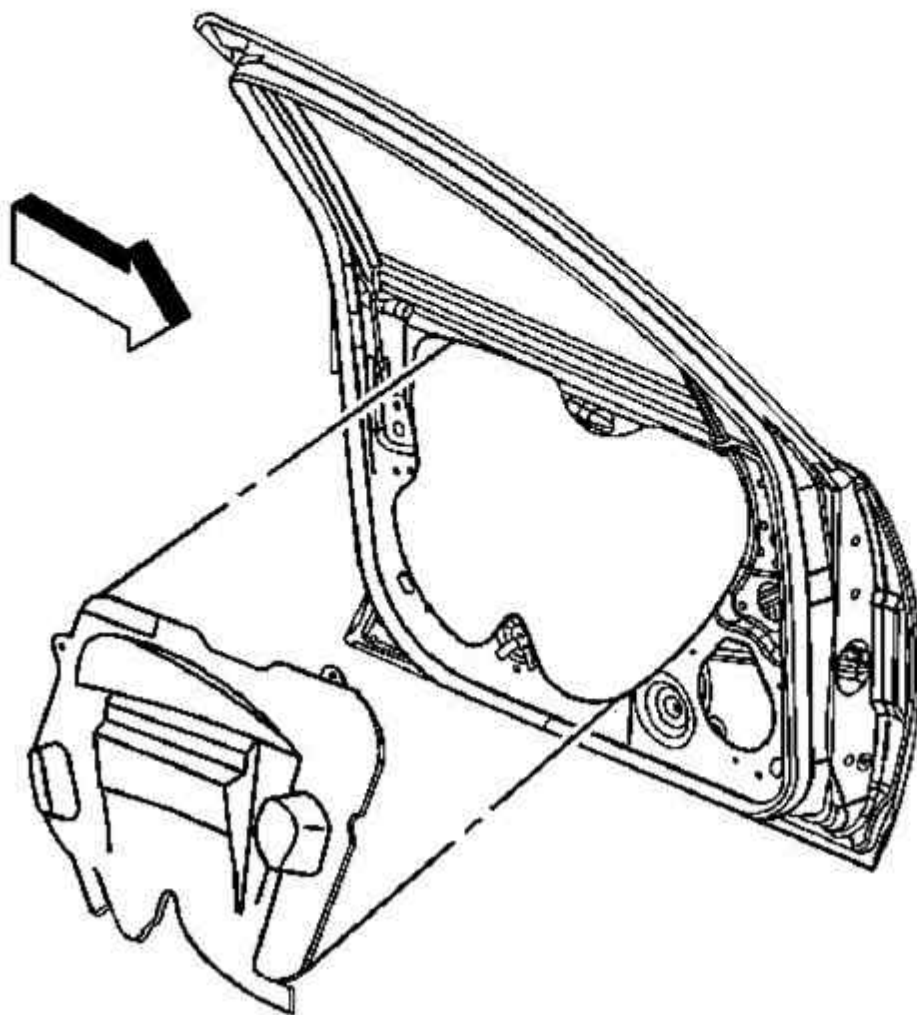


Fig. 16: Identifying Front Door Water Deflector
Courtesy of GENERAL MOTORS CORP.

IMPORTANT: If the door water deflector was torn when removing, use 3M™ 58722 waterproof tape or equivalent to these areas.

1. Align the door water deflector to the inner door panel.
2. Install the water deflector using a small roller to outline the water deflector in order to ensure proper seating.
3. Install the front door trim panel. Refer to **Front Side Door Trim Panel Replacement**.

REAR SIDE DOOR WATER DEFLECTOR REPLACEMENT

Removal Procedure

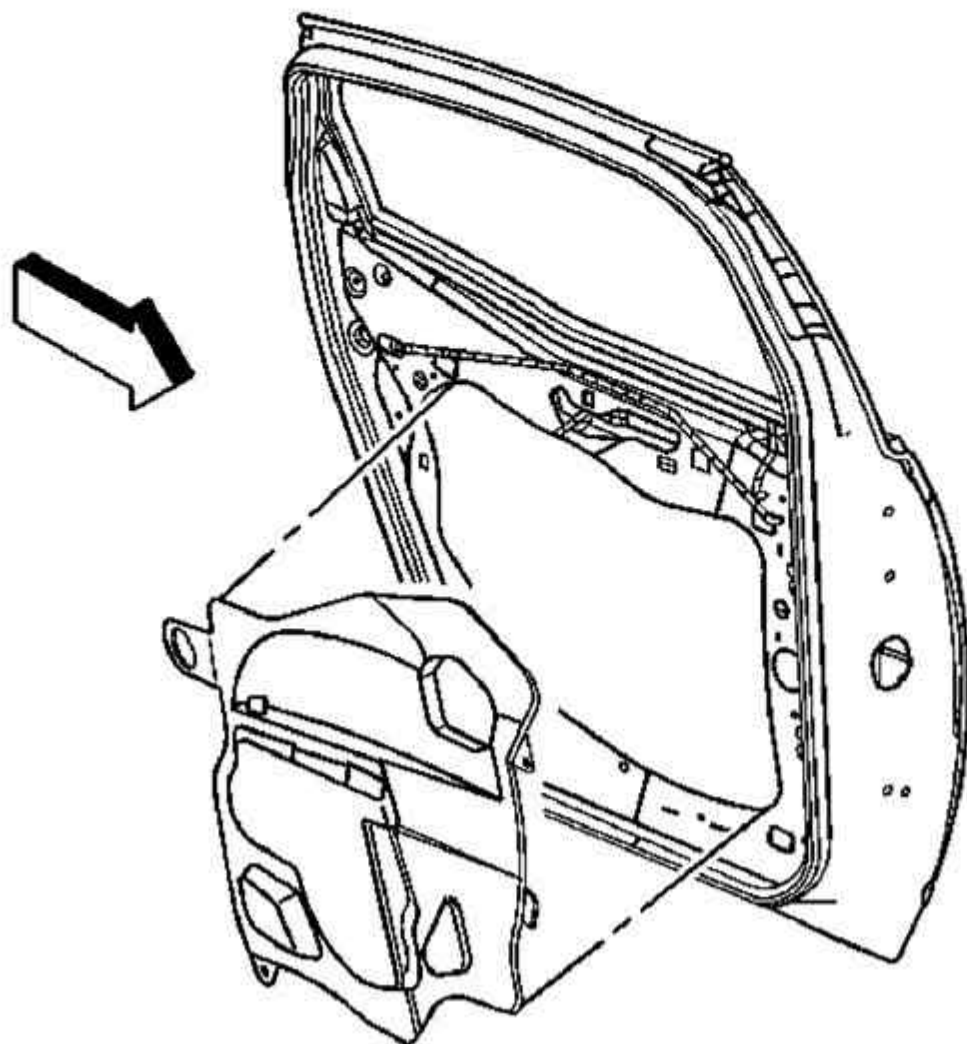


Fig. 17: Identifying Rear Door Water Deflector
Courtesy of GENERAL MOTORS CORP.

1. Remove the rear door trim panel. Refer to Rear Side Door Trim Panel Replacement.

IMPORTANT: Use care when removing the water deflector from the inner door panel not to damage the waterproof seal.

2. Remove the water deflector.

Installation Procedure

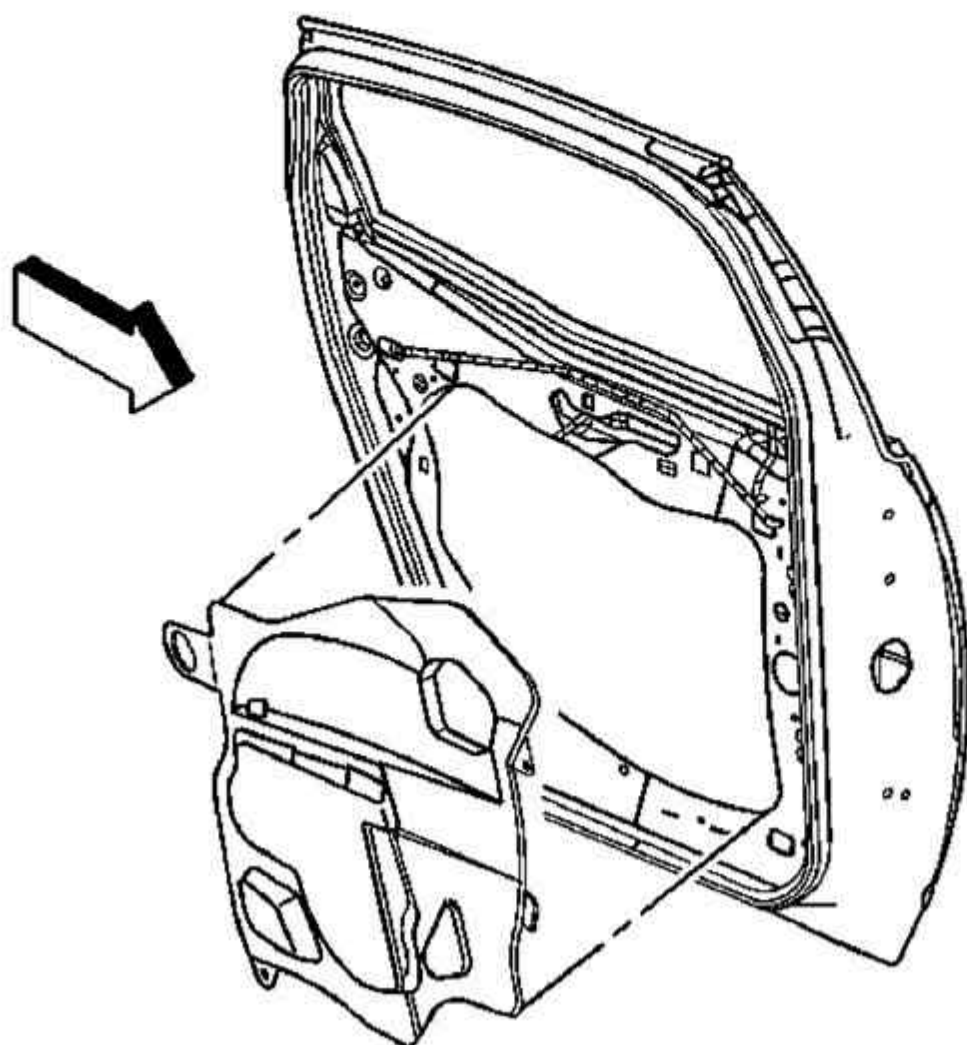


Fig. 18: Identifying Rear Door Water Deflector
Courtesy of GENERAL MOTORS CORP.

IMPORTANT: If the door water deflector was torn when removing, use 3M™ 58722 waterproof tape or equivalent to these areas.

1. Align the water deflector to the inner door panel.
2. Install the water deflector using a small roller to outline the water deflector in order to ensure proper seating.
3. Install the rear door trim panel. Refer to Rear Side Door Trim Panel Replacement.

FRONT SEAT ARMREST CUP HOLDER REPLACEMENT

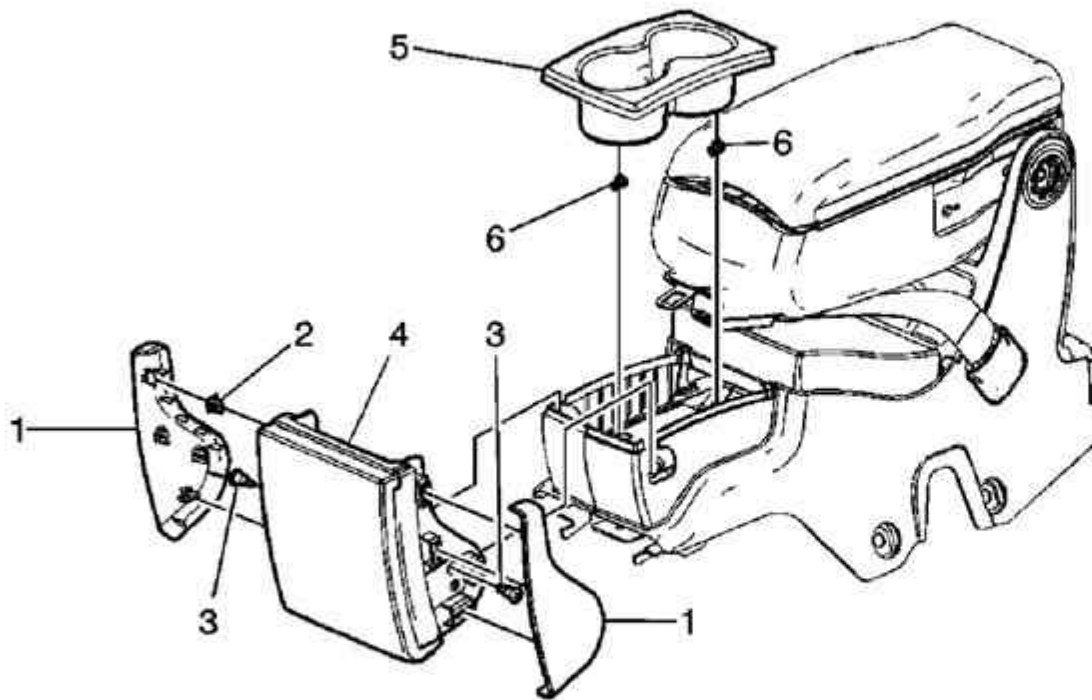


Fig. 19: Identifying Front Seat Armrest Cup Holder
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
NOTE: Refer to <u>Fastener Notice</u> .	
Fastener Tightening Specifications: Refer to <u>Fastener Tightening Specifications</u> .	
1	End Cap, Front Seat Cup Holder (Qty: 2)
2	Clip, End Cap Retainer (Qty: 8)
3	Bolt, Front Seat Panel Pivot (Qty: 2) Tighten: 3 N.m (25 lb in)
4	Panel Assembly, Front Seat
5	Holder, Front Center Seat Cup
6	Clip, Front Center Seat Cup Holder (Qty: 2)

REAR COMPARTMENT TRIM PANEL REPLACEMENT

Tools Required

J 38778 Door Trim Pad Clip Remover

Removal Procedure

1. Open the rear compartment.
2. If equipped, remove the rear compartment convenience net and net retainers.
3. Remove the sill plate. Refer to Rear Compartment Sill Trim Plate Replacement.
4. Remove the floor trim panel. Refer to Rear Floor Trim Plate Replacement.
5. Remove the seat back. Refer to Rear Seat Back Replacement (Folding) or Rear Seat Back Replacement (Non-folding) .

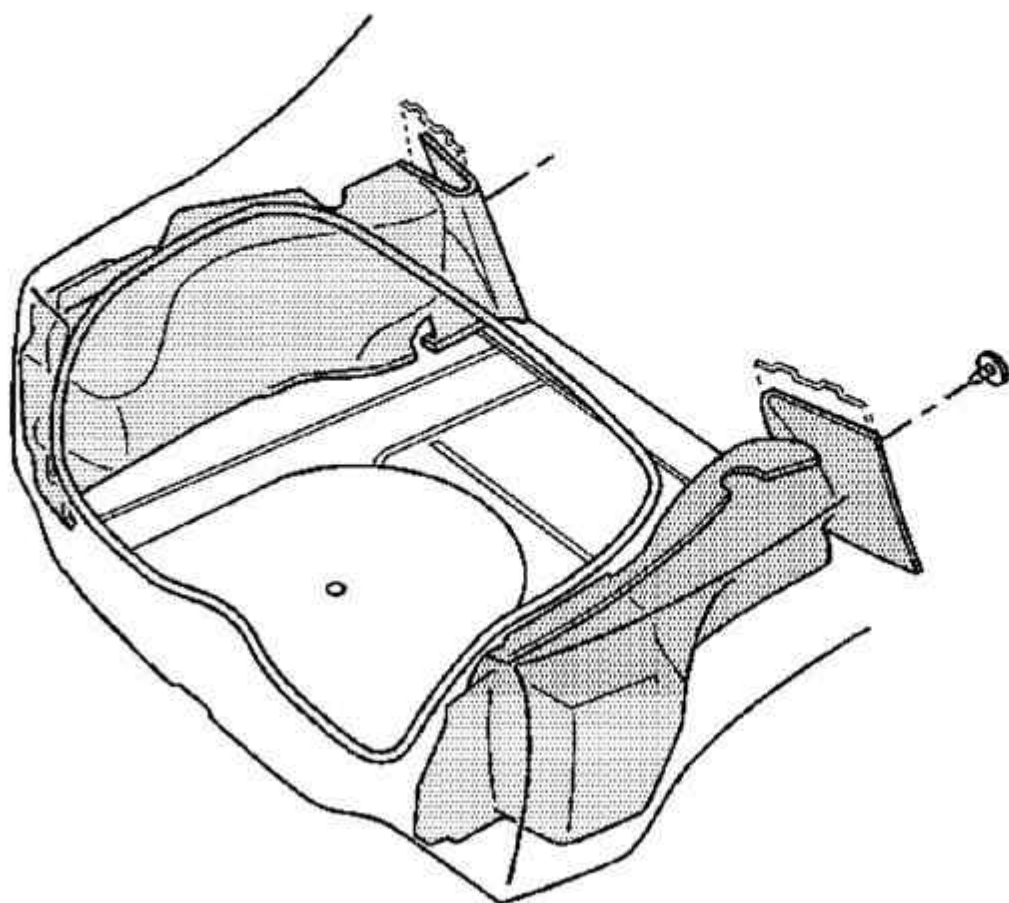


Fig. 20: Identifying Rear Compartment Trim Panel Push-In Retainers
Courtesy of GENERAL MOTORS CORP.

6. Use **J 38778** to remove the push-in retainers from the trim panels.
7. Slide the panels off the metal supports.
8. Remove the trim panels from the rear compartment.

Installation Procedure

1. Position the trim panels in the rear compartment.
2. Position the trim panels on the metal supports by the rear seat back.

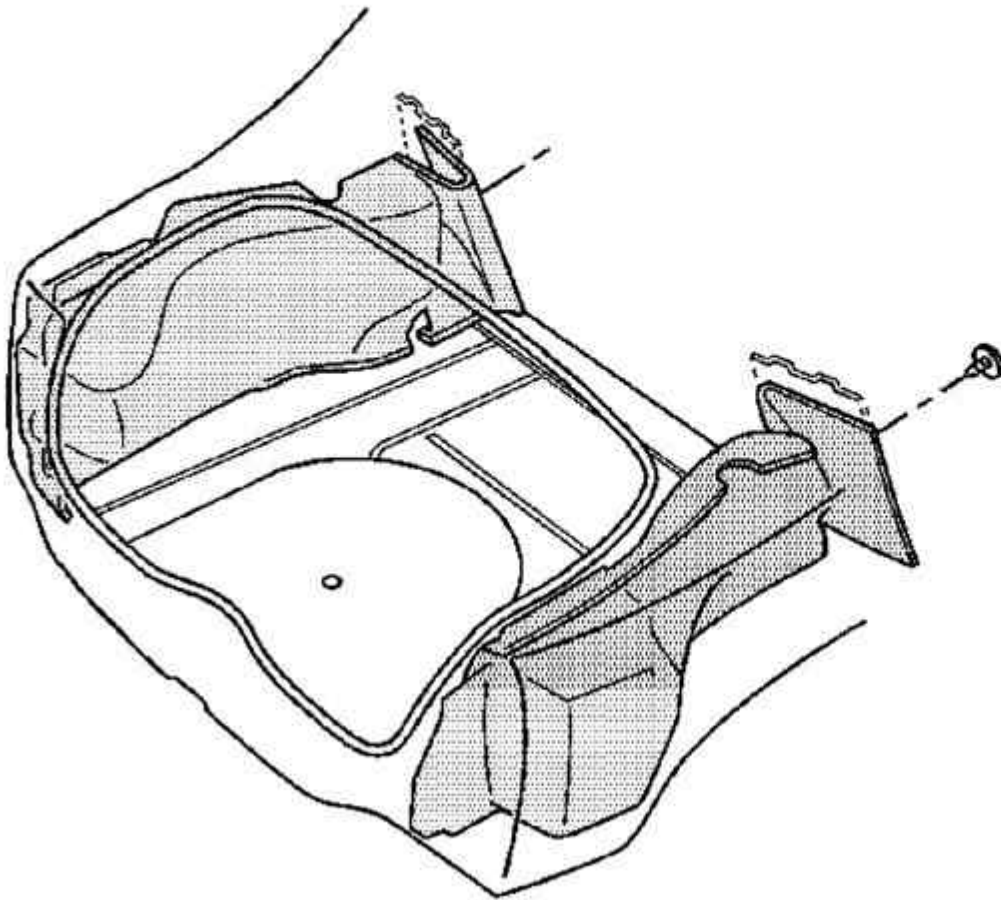


Fig. 21: Identifying Rear Compartment Trim Panel Push-In Retainers
Courtesy of GENERAL MOTORS CORP.

3. Install the push-in retainers.
4. Install the floor trim panel. Refer to Rear Floor Trim Plate Replacement.
5. Install the seat back. Refer to Rear Seat Back Replacement (Folding) or Rear Seat Back Replacement (Non-folding).
6. Install the sill plate. Refer to Rear Compartment Sill Trim Plate Replacement.
7. Install the rear compartment convenience net, if equipped.
8. Close the rear compartment.

FRONT ASSIST HANDLE REPLACEMENT

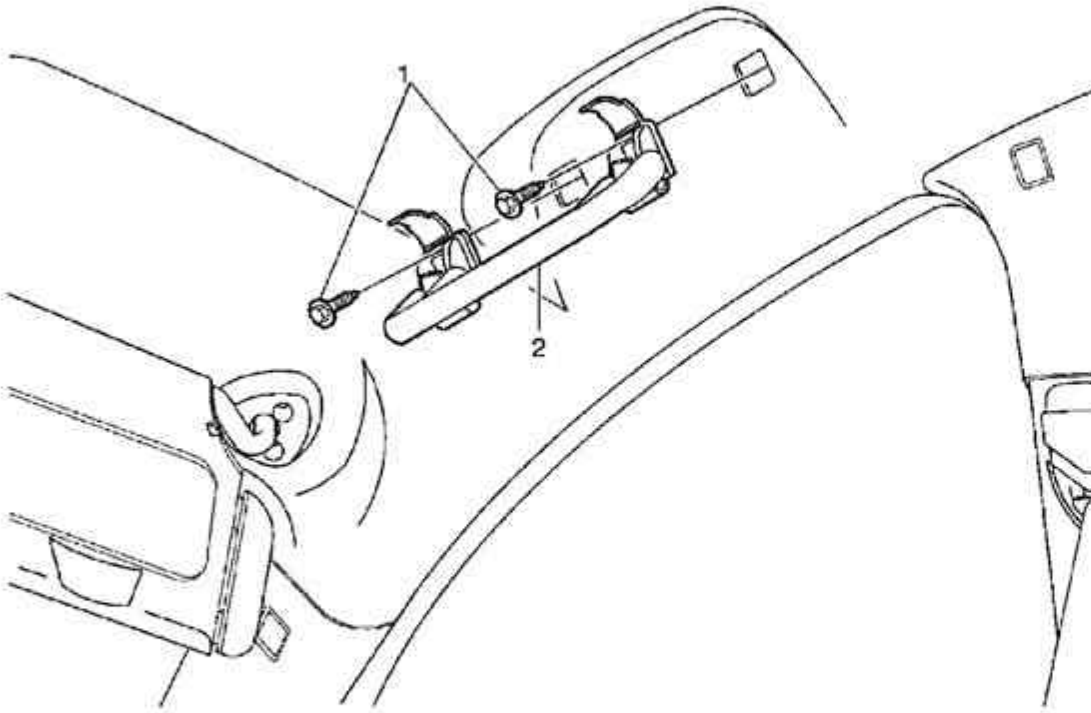


Fig. 22: Identifying Front Assist Handle Screws
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
NOTE: Refer to <u>Fastener Notice</u> .	
Fastener Tightening Specifications: Refer to <u>Fastener Tightening Specifications</u> .	
1	Roof Rail Front Assist Handle Screws (Qty: 2) Tip: Use a small flat bladed tool to lift up the plastic cover to expose the screws. Tighten: 9 N.m (80 lb in)
2	Roof Rail Front Assist Handle

ROOF RAIL REAR ASSIST HANDLE REPLACEMENT

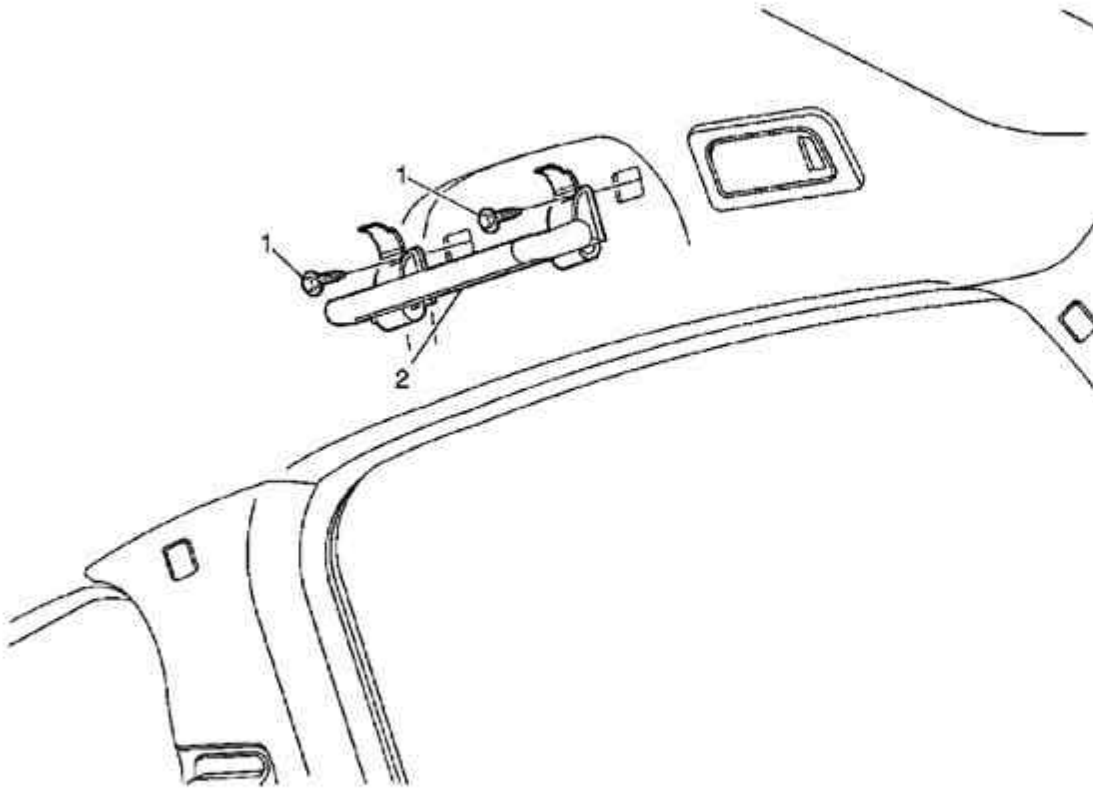


Fig. 23: Identifying Rear Assist Handle & Screws
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
NOTE: Refer to <u>Fastener Notice</u> .	
Fastener Tightening Specifications: Refer to <u>Fastener Tightening Specifications</u> .	
1	Roof Rail Rear Assist Handle Screws (Qty: 2) Tip: Use a small flat bladed tool to lift up the plastic cover to expose the screws. Tighten: 9 N.m (80 lb in)
2	Roof Rail Rear Assist Handle

SUNSHADE REPLACEMENT

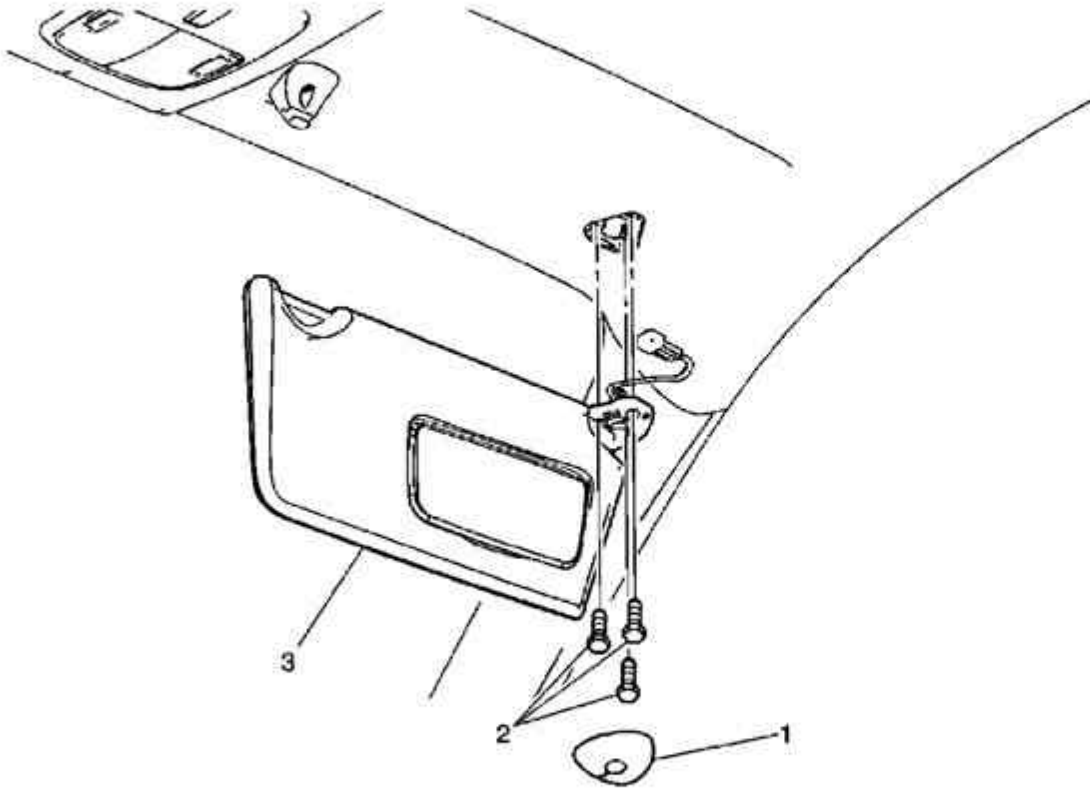


Fig. 24: Identifying Sunshade & Screws
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
NOTE: Refer to <u>Fastener Notice</u> .	
Fastener Tightening Specifications: Refer to <u>Fastener Tightening Specifications</u> . Preliminary Procedure: Lower the front of the headliner to access the sunshade electrical connector, if necessary. Refer to <u>Headlining Trim Panel Replacement</u> .	
1	Sunshade Trim Cover
2	Sunshade Screws (Qty: 3) Tighten: 3 N.m (27 lb in)
3	Sunshade Assembly Tip: • Disconnect the electrical connector. • Remove the sunshade anchor from the roof by unsnapping, if needed.

SUNSHADE ANCHOR REPLACEMENT

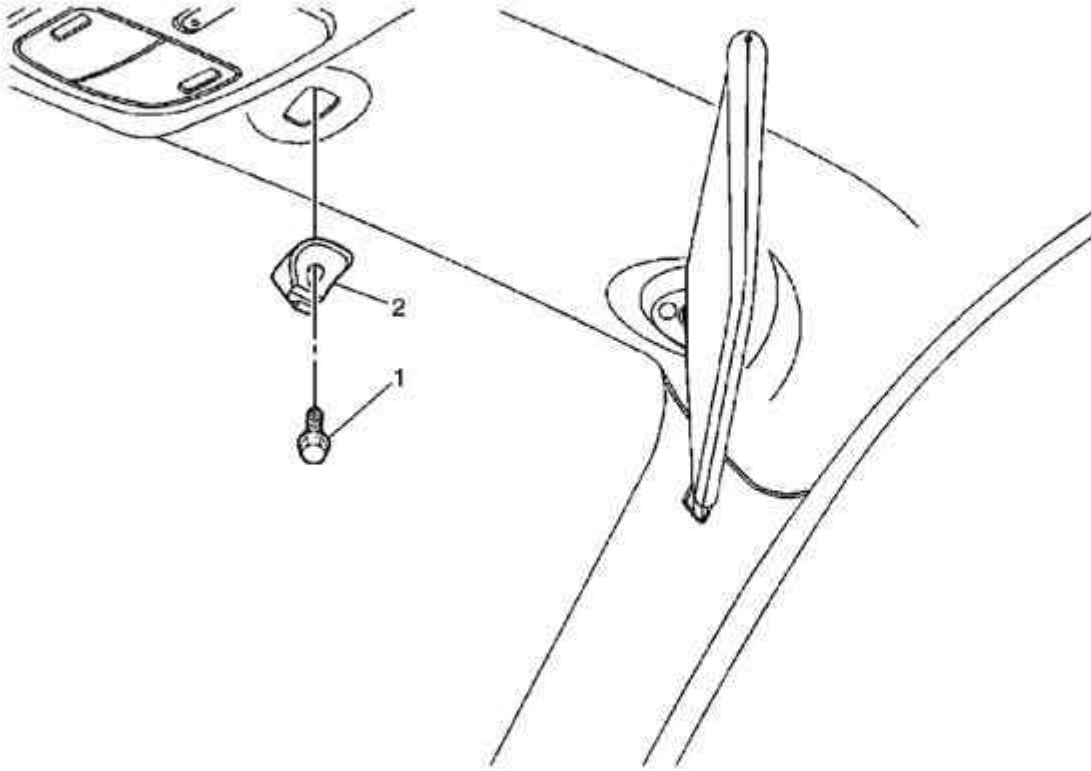


Fig. 25: Identifying Sunshade Anchor & Screws
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
NOTE: Refer to <u>Fastener Notice</u> .	
Fastener Tightening Specifications: Refer to <u>Fastener Tightening Specifications</u> .	
1	Sunshade Support Screw Tip: Disengage the sunshade from the support. Tighten: 2 N.m (18 lb in)
2	Sunshade Support

WINDSHIELD PILLAR GARNISH MOLDING REPLACEMENT

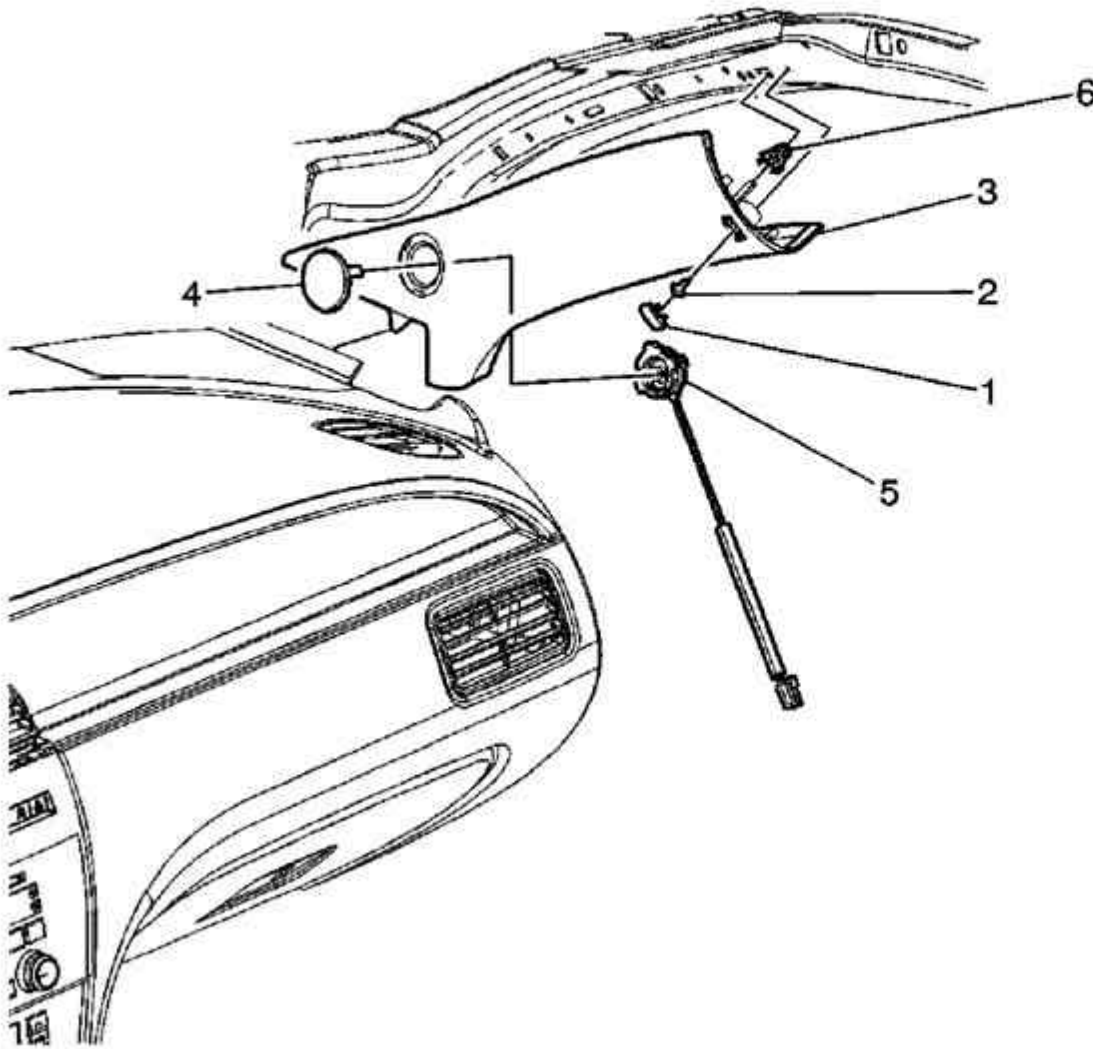


Fig. 26: Identifying Windshield Pillar Garnish Molding
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
NOTE: Refer to <u>Fastener Notice</u> .	
Fastener Tightening Specifications: Refer to <u>Fastener Tightening Specifications Preliminary Procedure</u> : Remove the instrument panel outer trim cover. Refer to <u>Instrument Panel Outer Trim Cover Replacement</u> .	
1	Windshield Side Upper Cap Tip: Use a small flat-bladed tool to release the cap from the molding.
2	Windshield Side Upper Garnish Molding Screw Tighten: 2 N.m (18 lb in)
3	Windshield Side Upper Garnish Molding Tip: 1. Pull the molding away from the windshield pillar to disengage the clips. 2. Disconnect the electrical connector from the speaker.
4	Radio Windshield Side Garnish Molding Grille
5	Radio Windshield Side Garnish Molding Speaker
6	Windshield Side Garnish Molding Clip (Qty: 2)

LOWER PILLAR GARNISH MOLDING REPLACEMENT

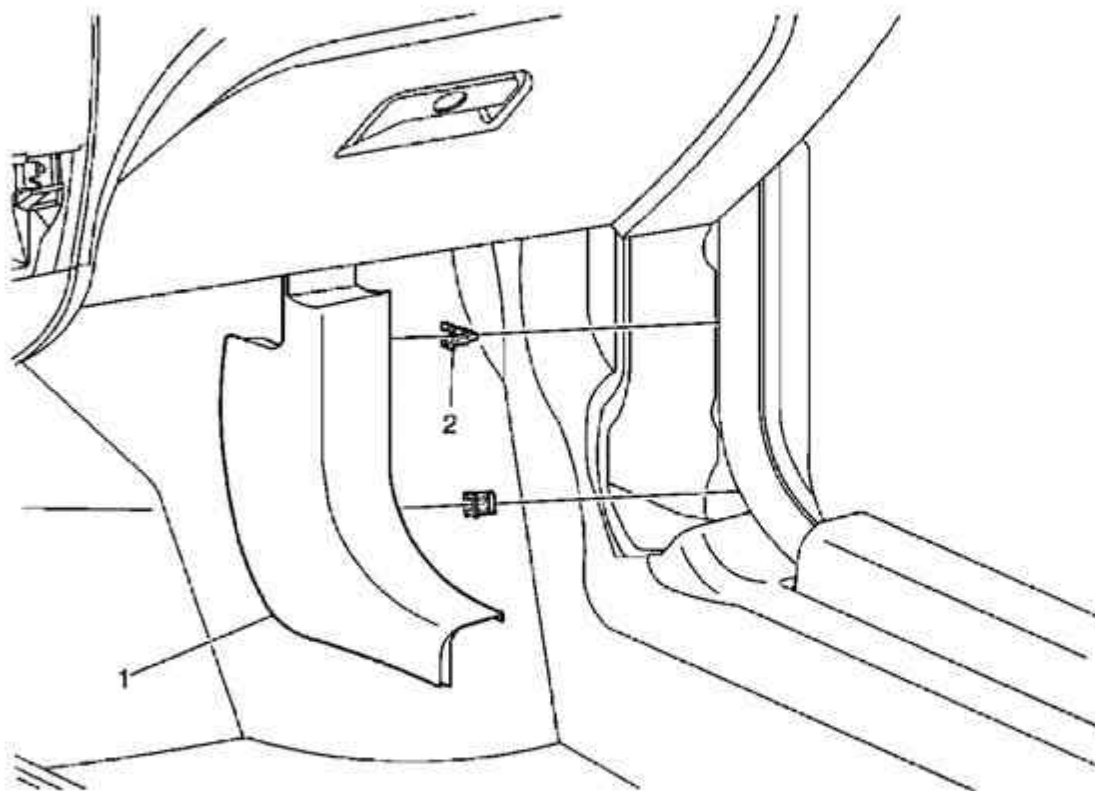


Fig. 27: Identifying Lower Pillar Garnish Molding retainers
Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Fastener Tightening Specifications: Refer to <u>Fastener Tightening Specifications</u> .	
1	Panel Assembly, Lower Pillar Trim
2	Retaining Clip, Lower Pillar Trim Panel (Qty: 2)

CENTER PILLAR UPPER TRIM PANEL REPLACEMENT

Removal Procedure

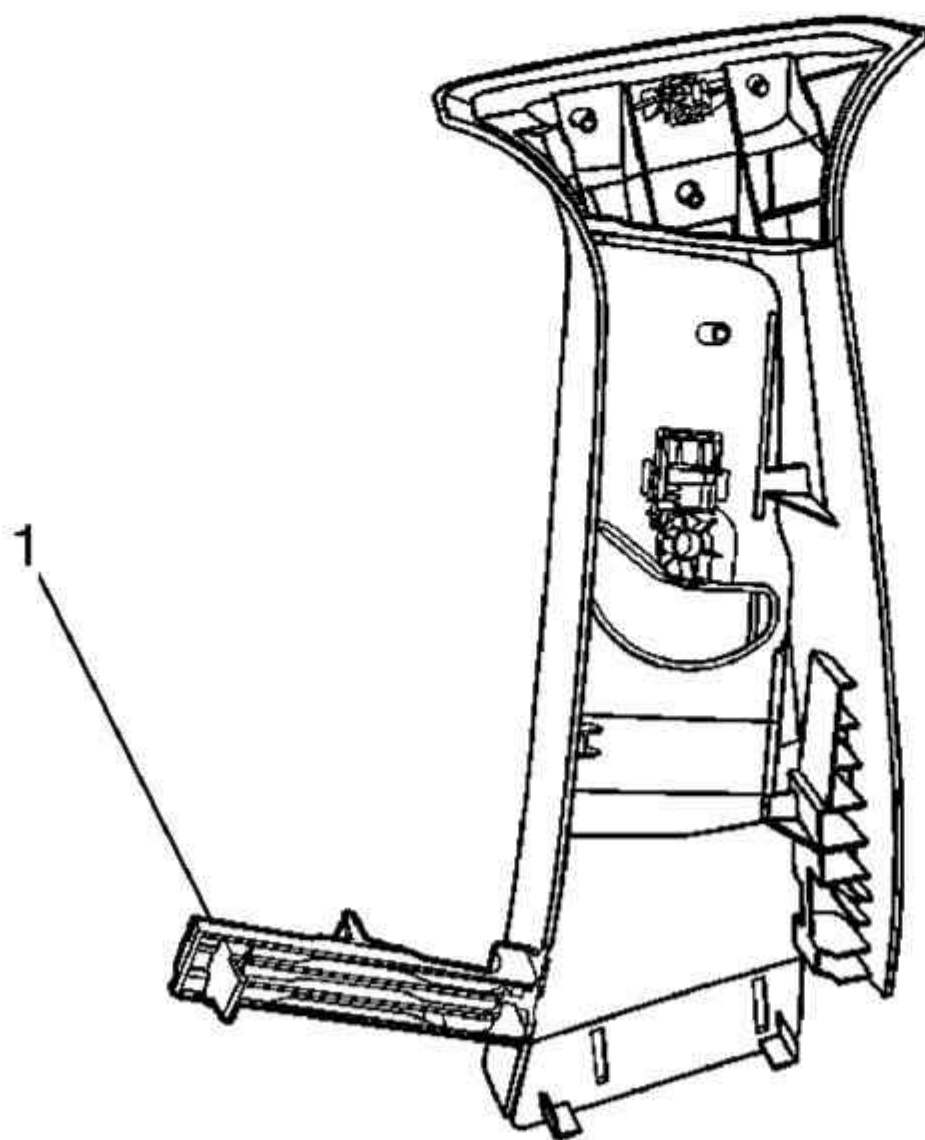


Fig. 28: Removing/Installing Upper Center Pillar Trim Panel
Courtesy of GENERAL MOTORS CORP.

1. Remove the door weatherstrip from the center pillar pinch weld flange to expose the upper trim panel.
2. Grasp the trim panel firmly with both hands. Pull the panel away from the center pillar.
3. Pull the seat belt back through the upper opening in the trim panel.
4. Open the belt guide (1) in the bottom of the panel.
5. Remove the trim panel from the vehicle.

Installation Procedure

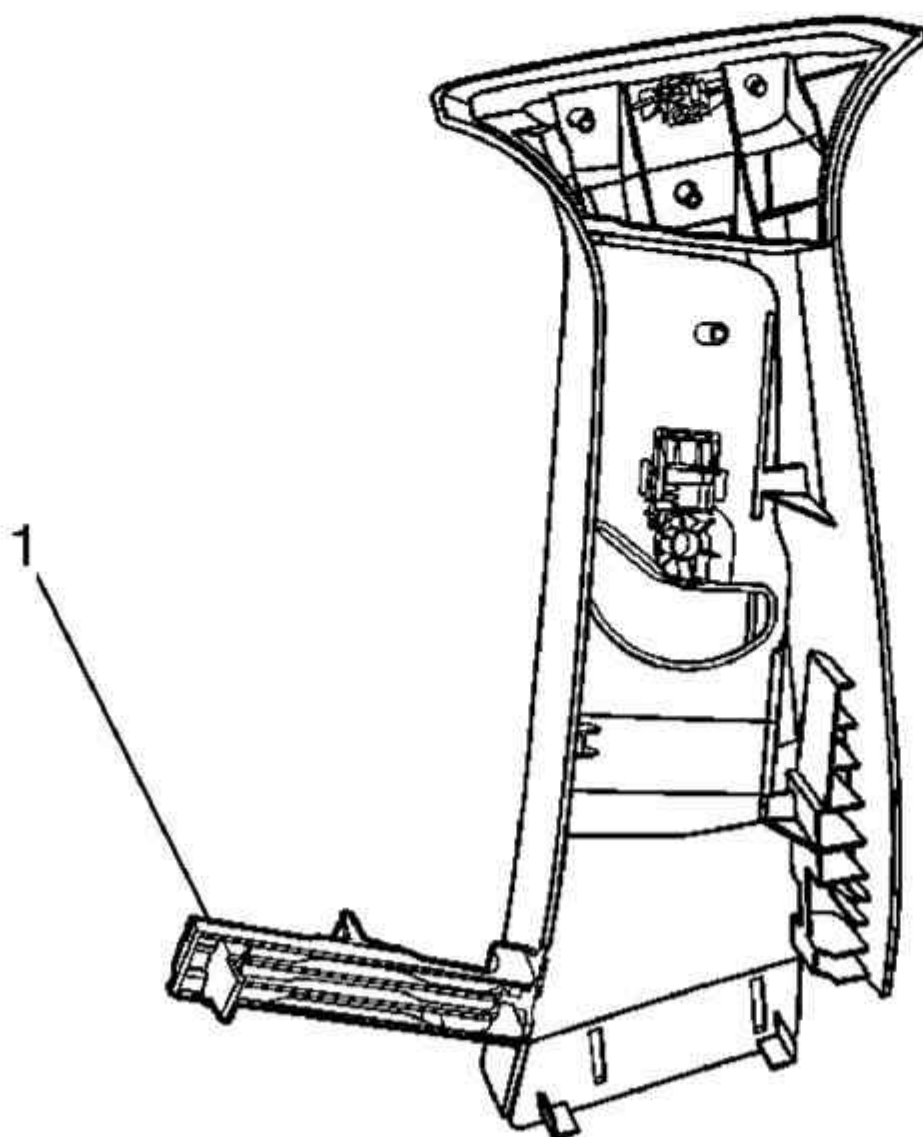


Fig. 29: Removing/Installing Upper Center Pillar Trim Panel
Courtesy of GENERAL MOTORS CORP.

1. Position the upper trim panel to the center pillar.
2. Route the safety belt through the guide (1) and press the guide closed.
3. Route the safety belt through the upper opening in the trim panel.
4. Push firmly on the trim panel in order to seat the retainers.
5. Install the door weatherstrip to the center pillar.

CENTER PILLAR LOWER TRIM PANEL REPLACEMENT

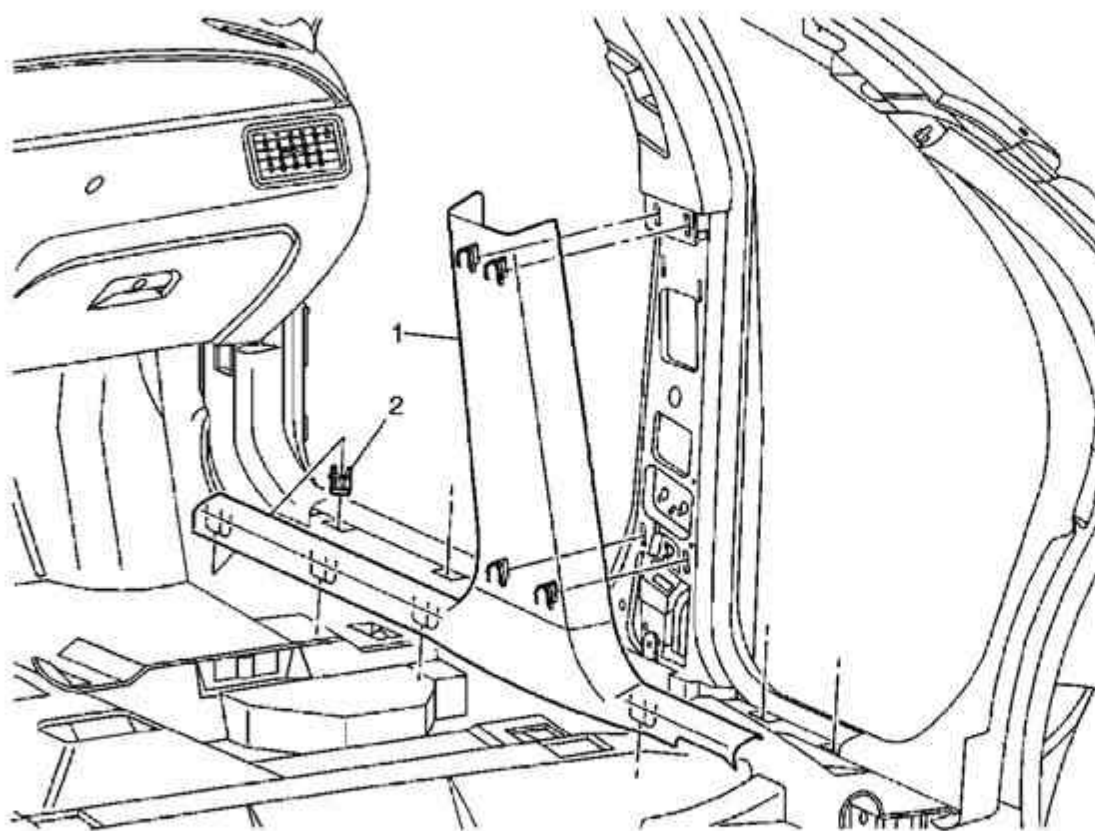


Fig. 30: Identifying Center Pillar Lower Trim Panel
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Fastener Tightening Specifications: Refer to Fastener Tightening Specifications .	
1	Panel Assembly, Center Pillar Lower Trim
2	Retaining Clip, Center Pillar Lower Trim Panel (Qty: 8)

REAR QUARTER UPPER TRIM PANEL REPLACEMENT

Tools Required

J 38778 Door Trim Pad and Garnish Clip Remover

Removal Procedure

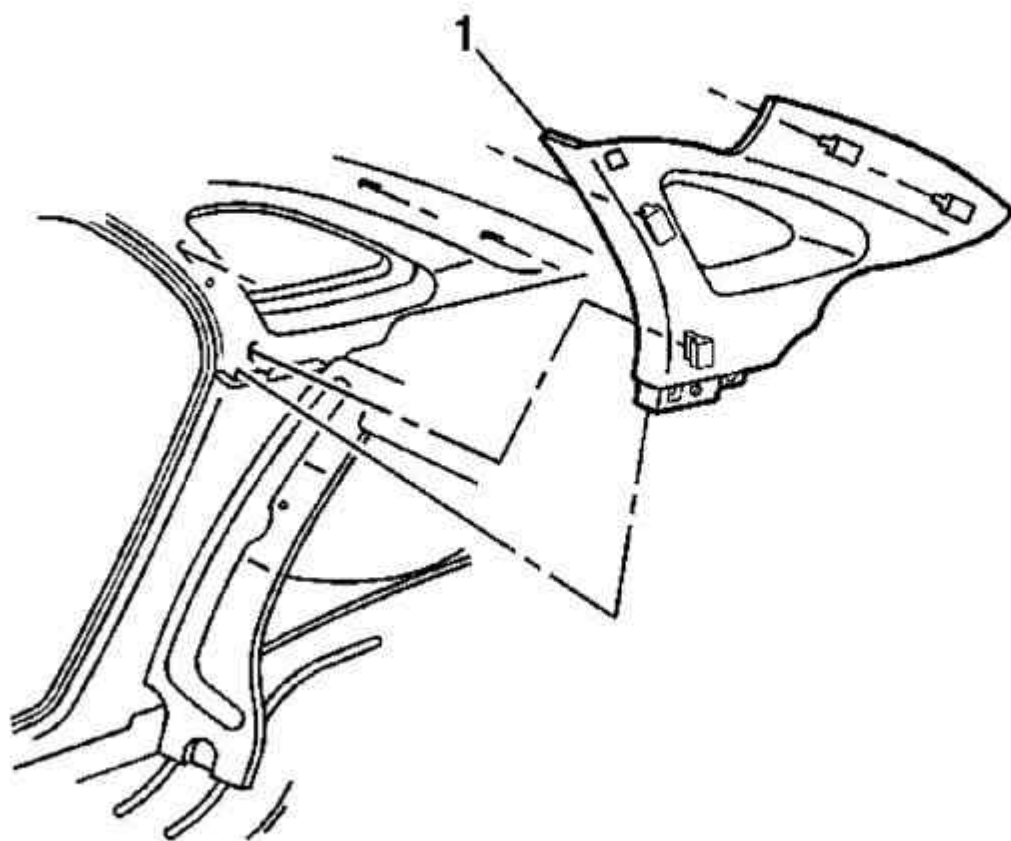


Fig. 31: Identifying Rear Quarter Upper Trim Panel
Courtesy of GENERAL MOTORS CORP.

1. Remove the rear seat back. Refer to **Rear Seat Back Replacement (Folding)** or **Rear Seat Back Replacement (Non-folding)**.
2. Remove the door weatherstrip from the pinch weld flange to expose the upper quarter trim panel.
3. Remove the screw cover and screw in the top of the panel (1).
4. Use **J 38778** to disengage the push-in retainers and remove the trim panel.

Installation Procedure

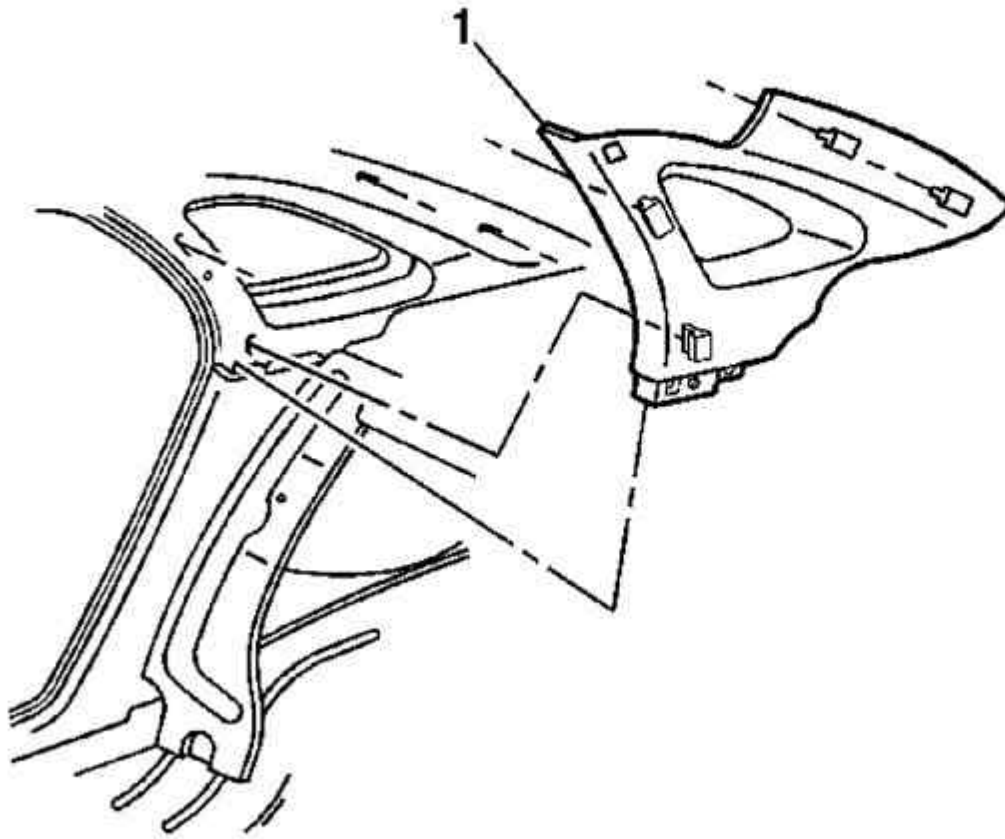


Fig. 32: Identifying Rear Quarter Upper Trim Panel
Courtesy of GENERAL MOTORS CORP.

1. Position the upper quarter trim panel into place.
2. Install the push-in retainers to secure the trim panel (1).

NOTE: Refer to FASTENER NOTICE .

3. Install the quarter upper panel screw in the top of the panel.

Tighten: Tighten the quarter upper panel screw to 3 N.m (27 lb in).

4. Install the door weatherstrip onto the pinch weld flange.
5. Install the rear seat back. Refer to Rear Seat Back Replacement (Folding) or Rear Seat Back Replacement (Non-folding) .

REAR QUARTER LOWER TRIM PANEL REPLACEMENT

Tools Required

J 38778 Door Trim Pad and Garnish Clip Remover

Removal Procedure

1. Loosen the rear carpet retainer. Refer to Center Pillar Lower Trim Panel Replacement.
2. Remove the rear seat cushion. Refer to Rear Seat Cushion Replacement .
3. Remove the rear seat back. Refer to Rear Seat Back Replacement (Folding) or Rear Seat Back Replacement (Non-folding) .

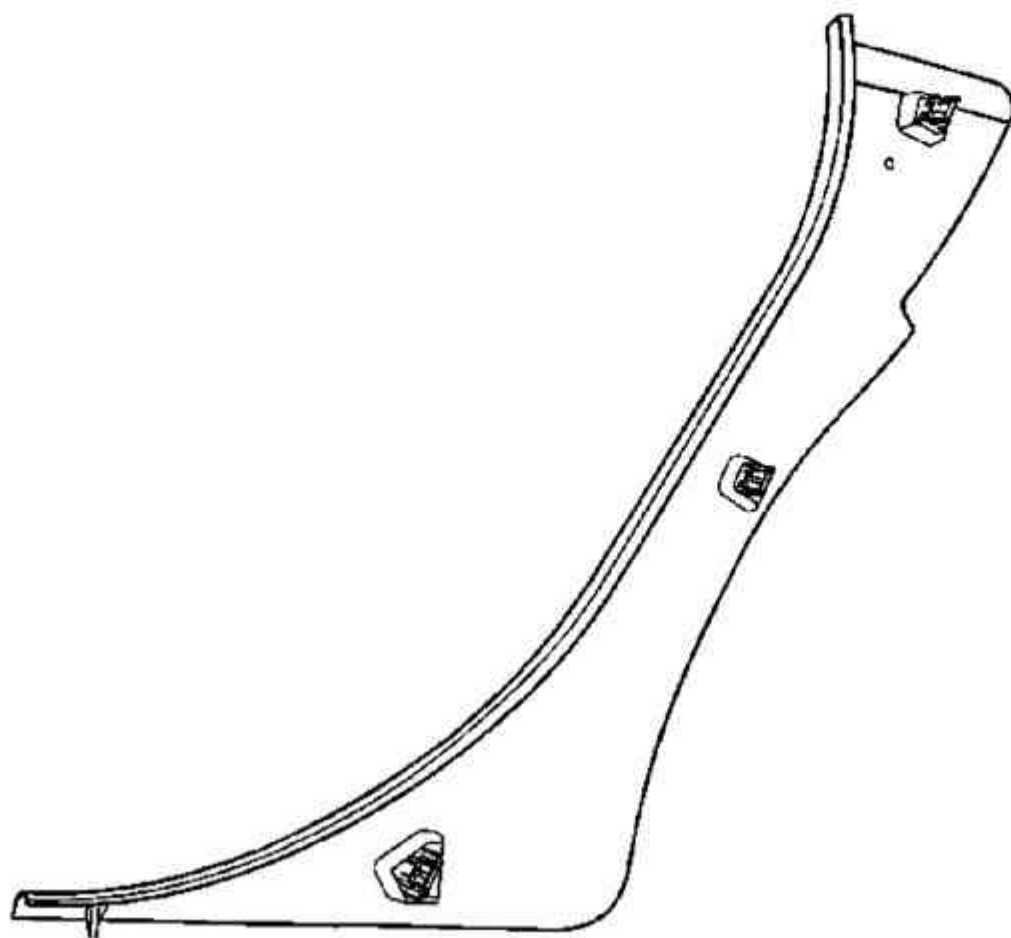


Fig. 33: View Of Rear Lower Quarter Trim Panel
Courtesy of GENERAL MOTORS CORP.

4. Use **J 38778** in order to disengage the push-in retainers. Remove the quarter lower trim.

Installation Procedure

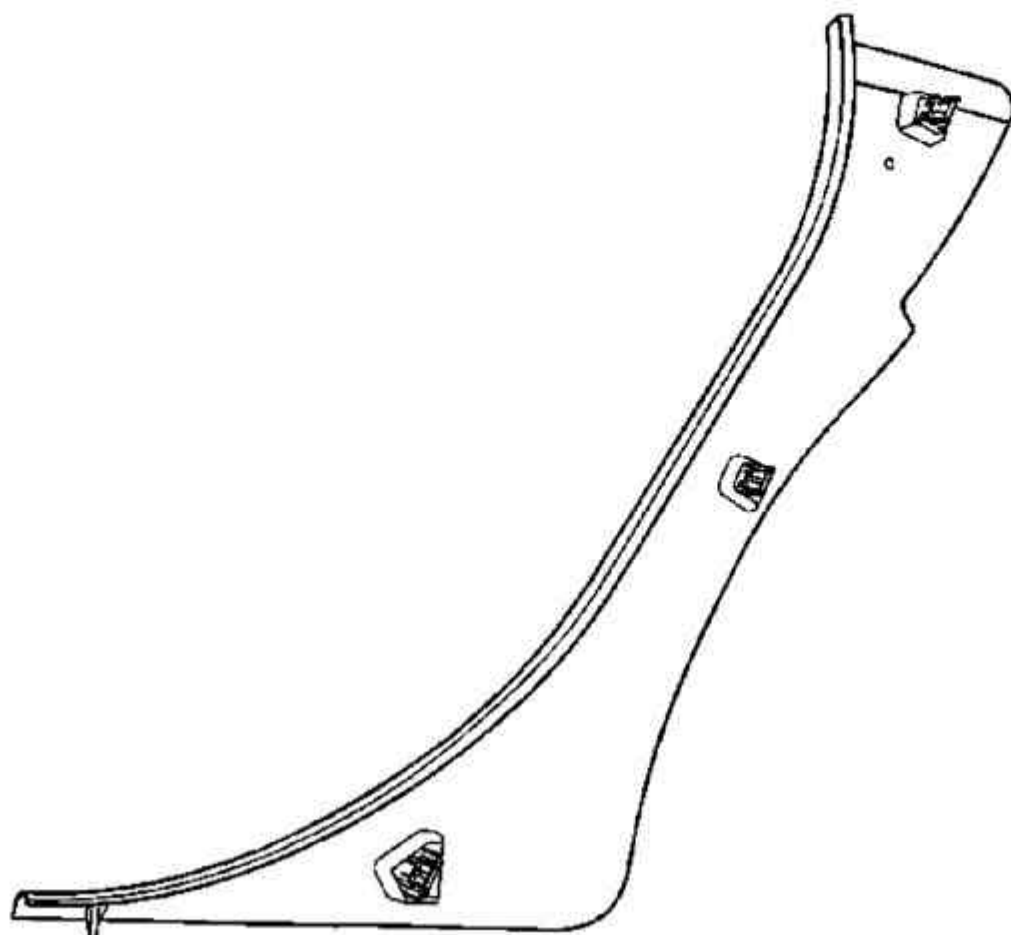


Fig. 34: View Of Rear Lower Quarter Trim Panel
Courtesy of GENERAL MOTORS CORP.

1. Engage the push-in retainers in order to install the quarter lower trim.
2. Install the rear seat back. Refer to **Rear Seat Back Replacement (Folding)** or **Rear Seat Back Replacement (Non-folding)**.
3. Install the rear seat cushion. Refer to **Rear Seat Cushion Replacement**.
4. Return the rear carpet retainer to its installed position. Refer to **Center Pillar Lower Trim Panel Replacement**.

REAR WINDOW SHELF TRIM PANEL REPLACEMENT

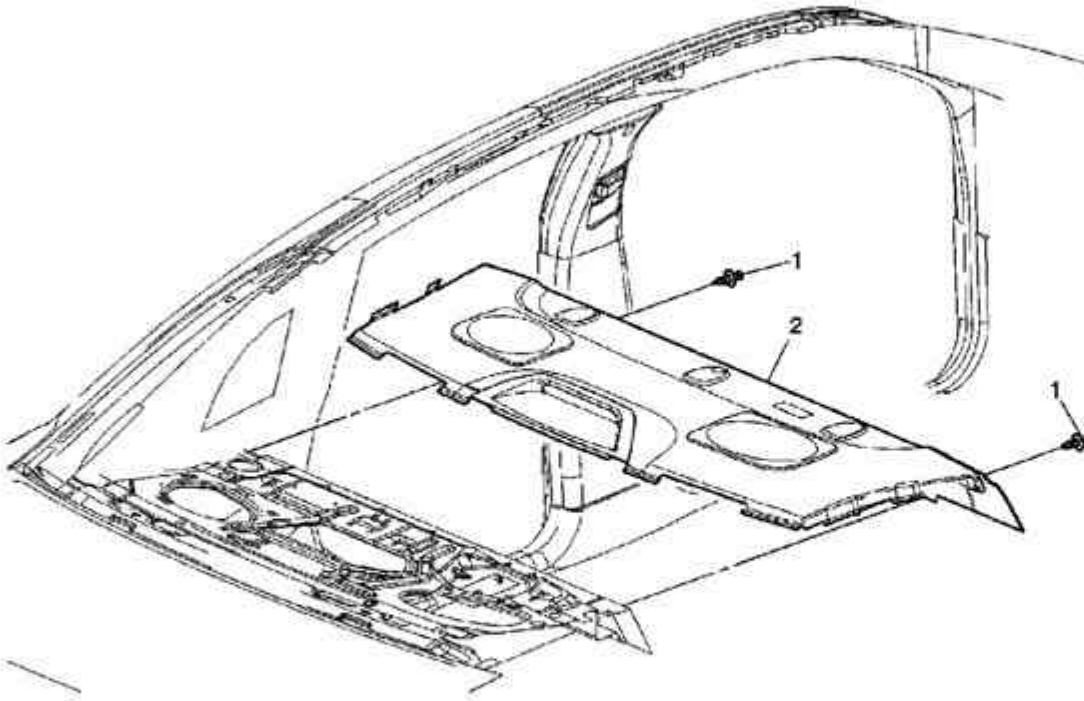


Fig. 35: View Of Rear Window Shelf Trim Panel & Retainers
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Fastener Tightening Specifications: Refer to <u>Fastener Tightening Specifications</u> .	
Preliminary Procedures	
1. Remove the rear seat cushion. Refer to <u>Rear Seat Cushion Replacement</u> . 2. Remove the rear seat back. Refer to <u>Rear Seat Back Replacement (Folding)</u> or <u>Rear Seat Back Replacement (Non-folding)</u> . 3. Remove the rear upper quarter trim panel. Refer to <u>Rear Quarter Upper Trim Panel Replacement</u> .	
1	Rear Window Panel Trim Retainer (Qty: 2)
2	Rear Window Panel Trim Assembly Tip: 1. Lift the panel and remove the outside seat belts through the slots in the trim panel. 2. Lift the panel and remove the center seat belt escutcheon, then pass it and the center seat belt through the slot in the trim panel. 3. Slide the panel forward to disengage the integral hook from the retaining hole. 4. Disconnect the electrical connector from the high mount stop lamp.

REAR COMPARTMENT SILL TRIM PLATE REPLACEMENT

Removal Procedure

1. Open the rear compartment.

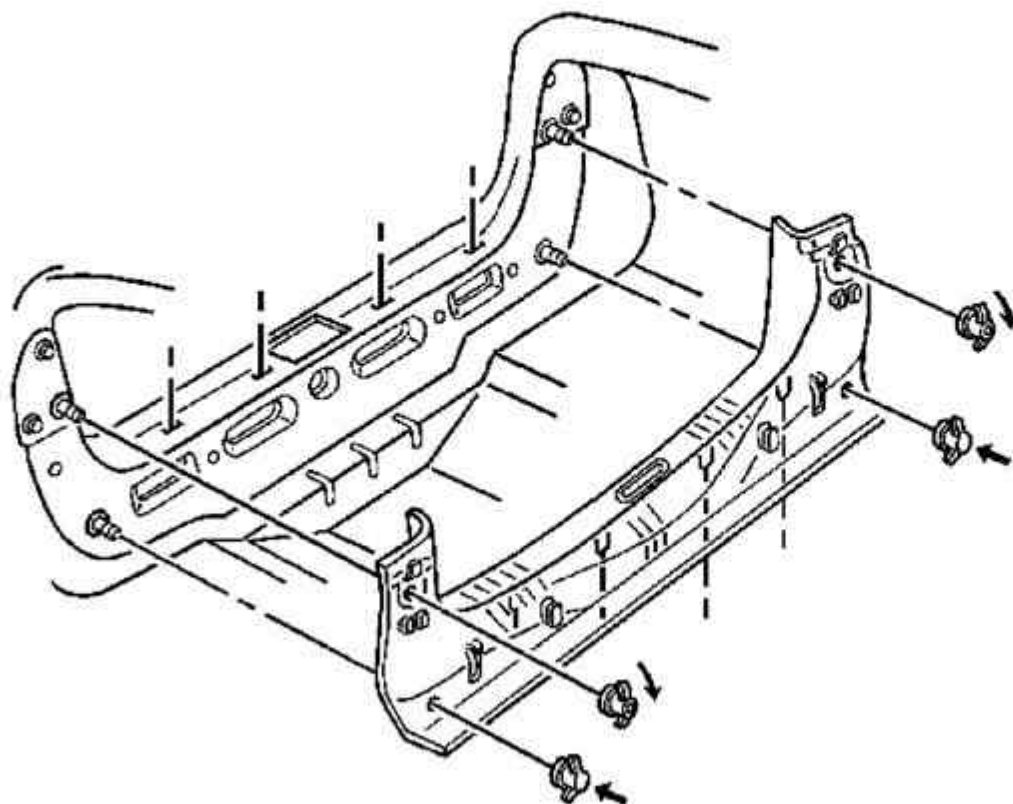


Fig. 36: Identifying Rear Compartment Stowage Net Retainers
Courtesy of GENERAL MOTORS CORP.

2. Remove the rear compartment stowage net and net retainers.
3. Pull up on the rear compartment sill plate to release the retainers.
4. Remove the rear compartment sill plate from rear compartment.

Installation Procedure

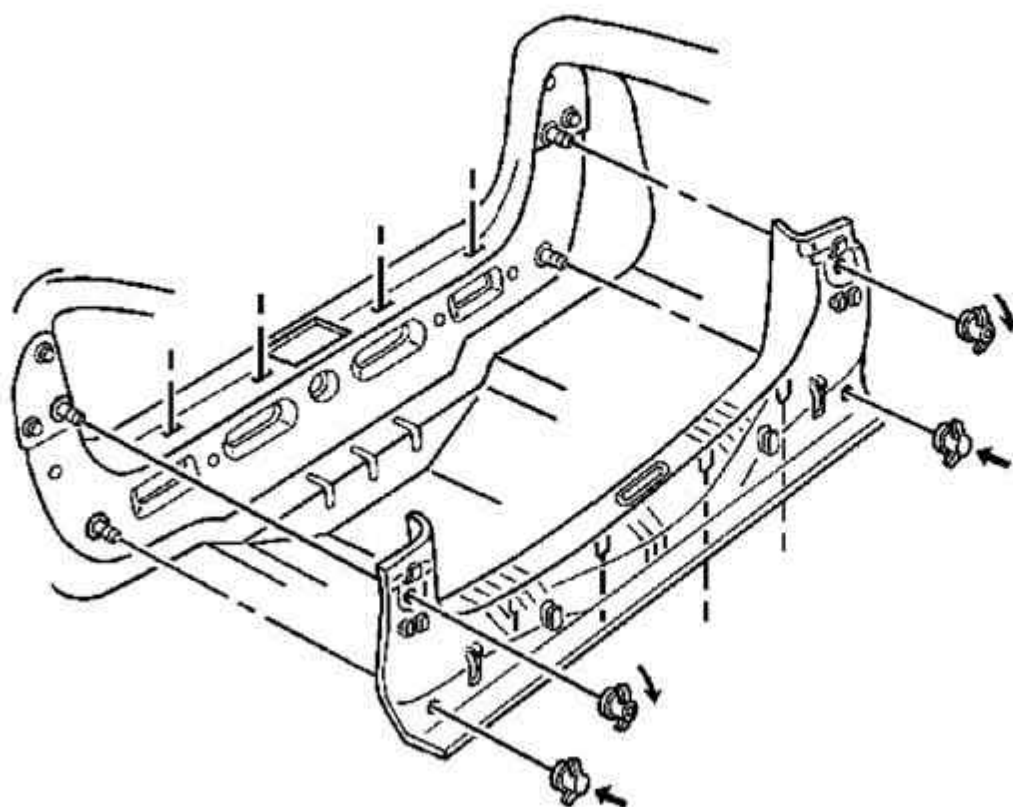


Fig. 37: Identifying Rear Compartment Stowage Net Retainers
Courtesy of GENERAL MOTORS CORP.

1. Align the sill plate retainers to the slots in the rear compartment.
2. Press down on the sill plate to ensure the retainers are fully seated.
3. Install the rear compartment stowage net.
4. Close the rear compartment.

REAR COMPARTMENT LID INNER PANEL TRIM REPLACEMENT

Tools Required

J 38778 Door Trim Pad Clip Remover

Removal Procedure

1. Open the rear compartment lid.

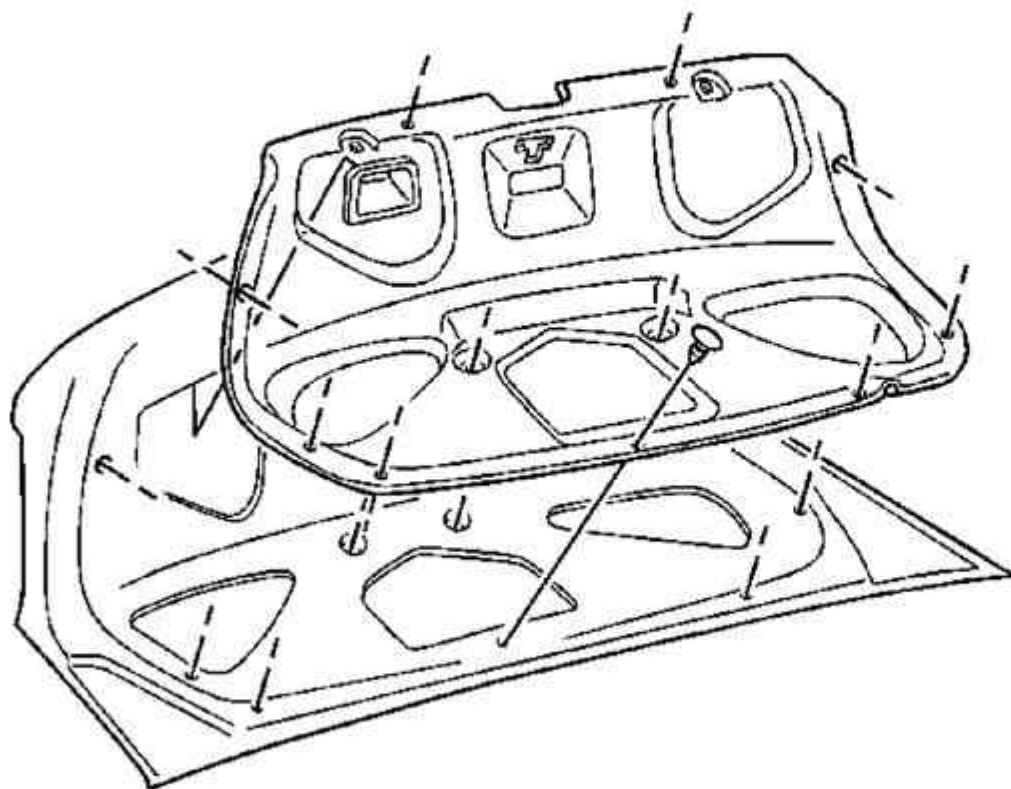


Fig. 38: View Of Rear Compartment Lid Trim
Courtesy of GENERAL MOTORS CORP.

2. Use **J 38778** to remove the push-in retainers from the trim panel on the rear compartment lid.
3. Remove the trim panel from the rear compartment lid.

Installation Procedure

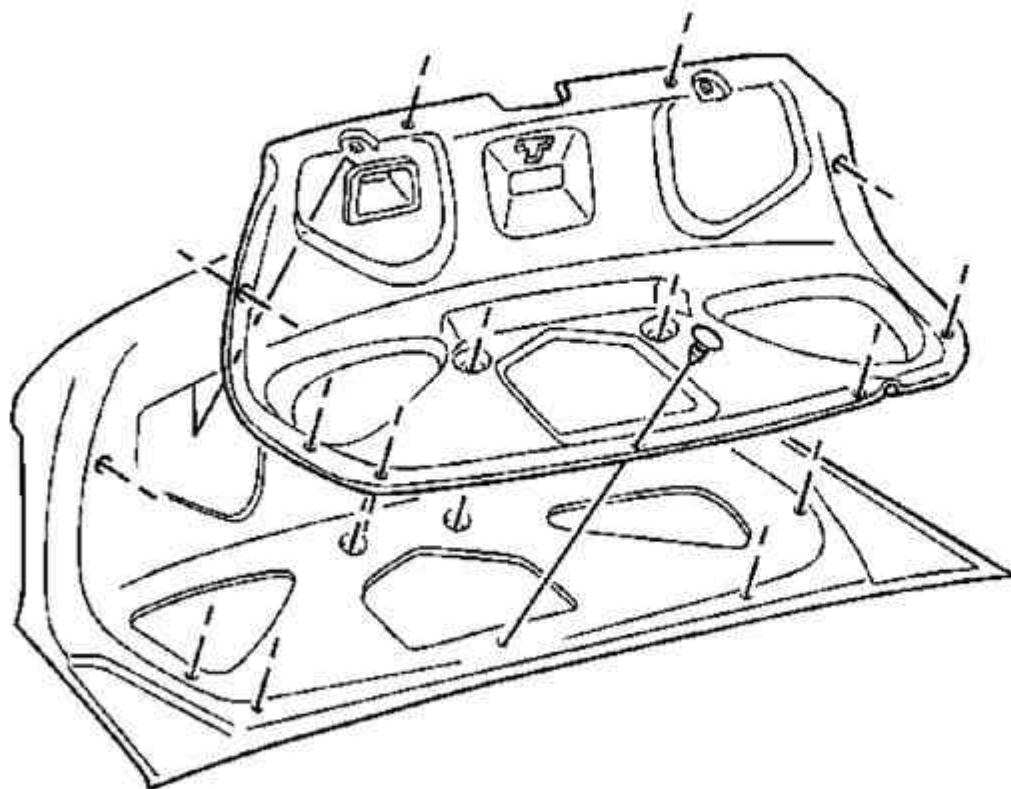


Fig. 39: View Of Rear Compartment Lid Trim
Courtesy of GENERAL MOTORS CORP.

1. Position the trim panel to the rear compartment lid.
2. Install the push-in retainers to the trim panel.
3. Close the rear compartment lid.

REAR COMPARTMENT FRONT TRIM PANEL REPLACEMENT

Removal Procedure

1. Remove the rear seat back. Refer to **Rear Seat Back Replacement (Folding)** or **Rear Seat Back Replacement (Non-folding)**.
2. Remove the push-in retainers from the rear compartment side trim panels.

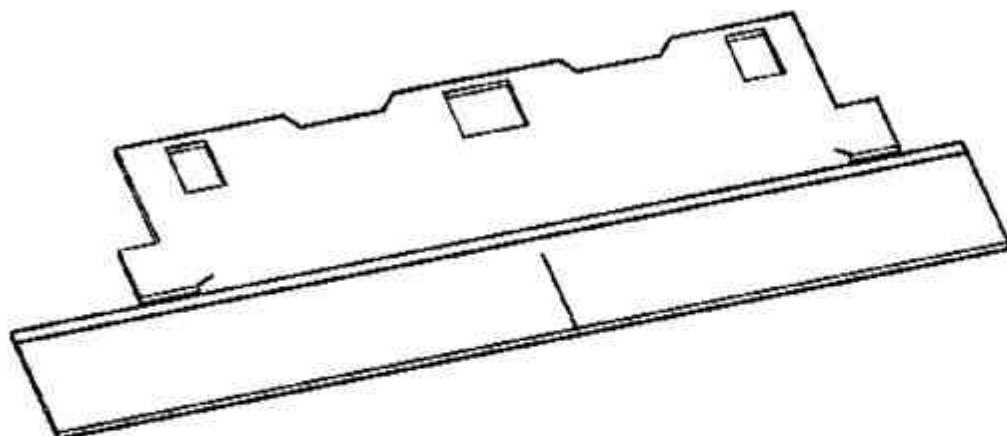


Fig. 40: Identifying Front Trim Panel
Courtesy of GENERAL MOTORS CORP.

3. Slide out the front panel from the 2 side panels.
4. Remove the front trim panel from the vehicle.

Installation Procedure

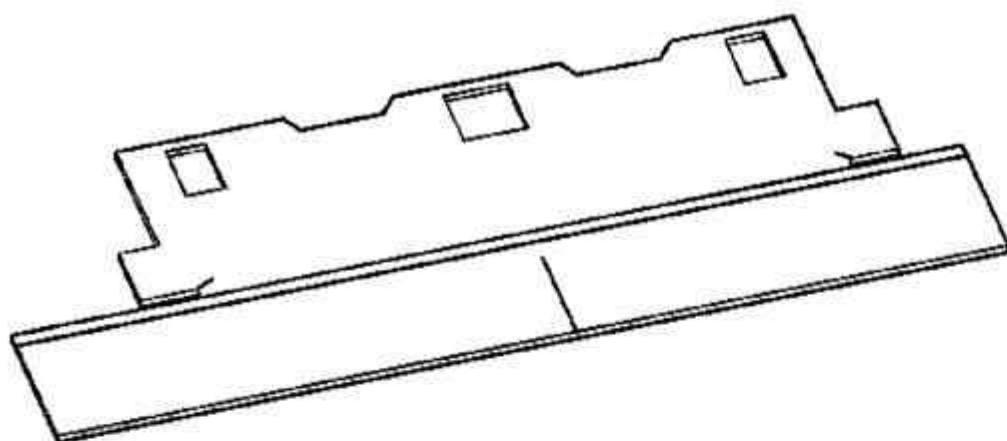


Fig. 41: Identifying Front Trim Panel
Courtesy of GENERAL MOTORS CORP.

1. Position the front trim panel in the vehicle.
2. Slide the panel under the 2 side panels.
3. Install the push-in retainers in the rear compartment side trim panels.
4. Install the rear seat back. Refer to **Rear Seat Back Replacement (Folding)** or **Rear Seat Back Replacement (Non-folding)**.

REAR FLOOR TRIM PLATE REPLACEMENT

Removal Procedure

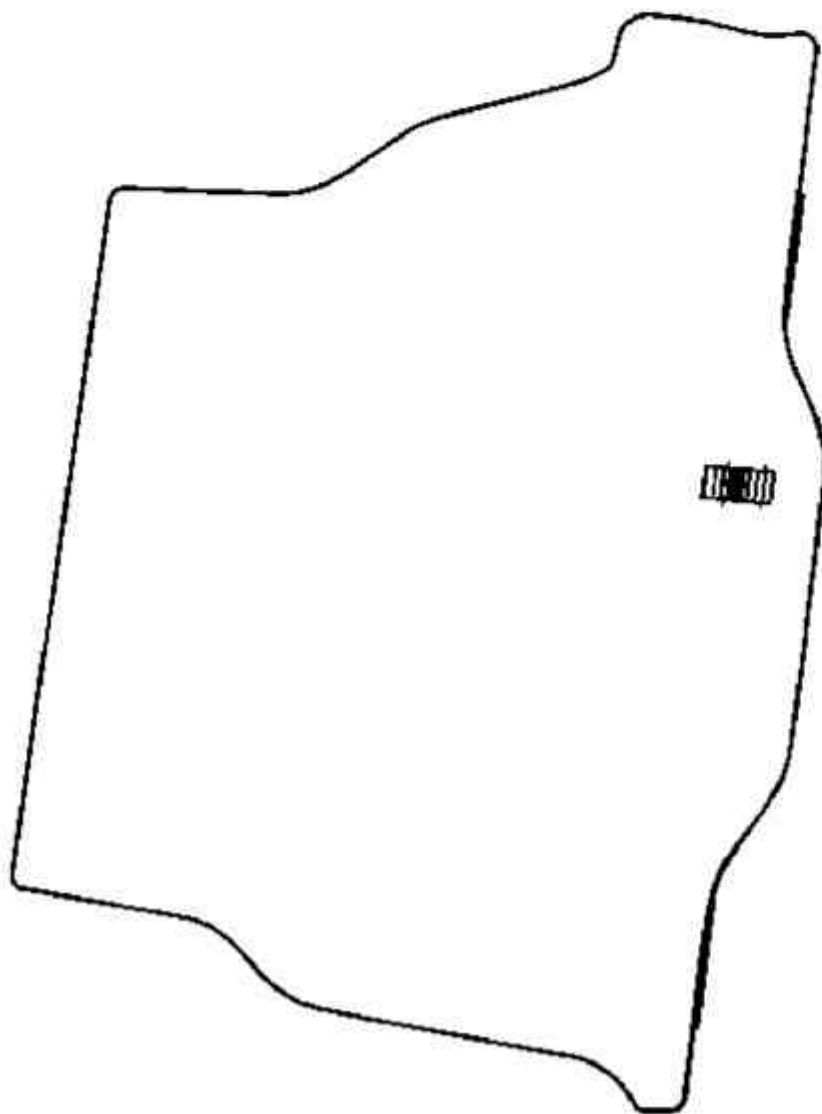


Fig. 42: View Of Floor Trim Plate
Courtesy of GENERAL MOTORS CORP.

1. Open the rear compartment.
2. Remove the rear compartment sill plate. Refer to **Rear Compartment Sill Trim Plate Replacement**.
3. Lift up on the center of the floor trim plate and remove either edge from the side panel.
4. Remove the floor trim plate from the rear compartment.

Installation Procedure

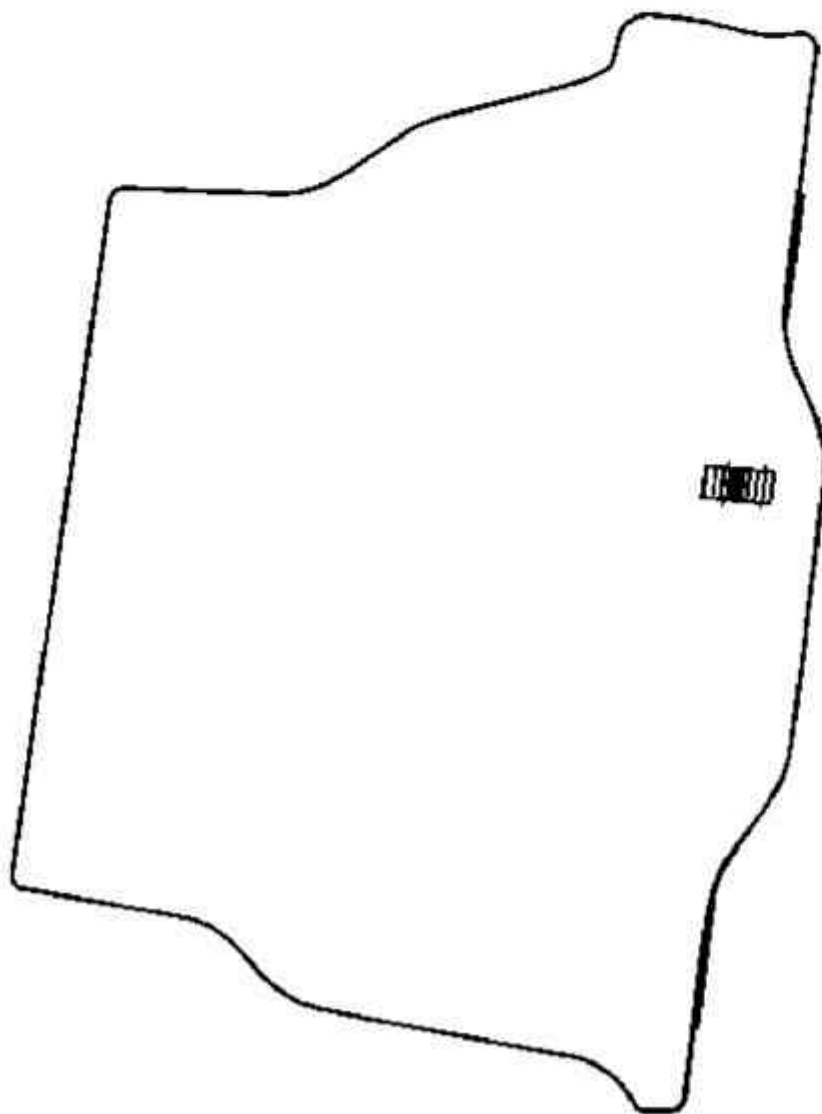


Fig. 43: View Of Floor Trim Plate
Courtesy of GENERAL MOTORS CORP.

1. Position the floor trim plate into the rear compartment.
2. Engage the sides of the floor trim plate, pressing the sides into place.
3. Install the rear compartment sill plate. Refer to **Rear Compartment Sill Trim Plate Replacement**.
4. Close the rear compartment.

FRONT FLOOR CONSOLE CUP HOLDER REPLACEMENT

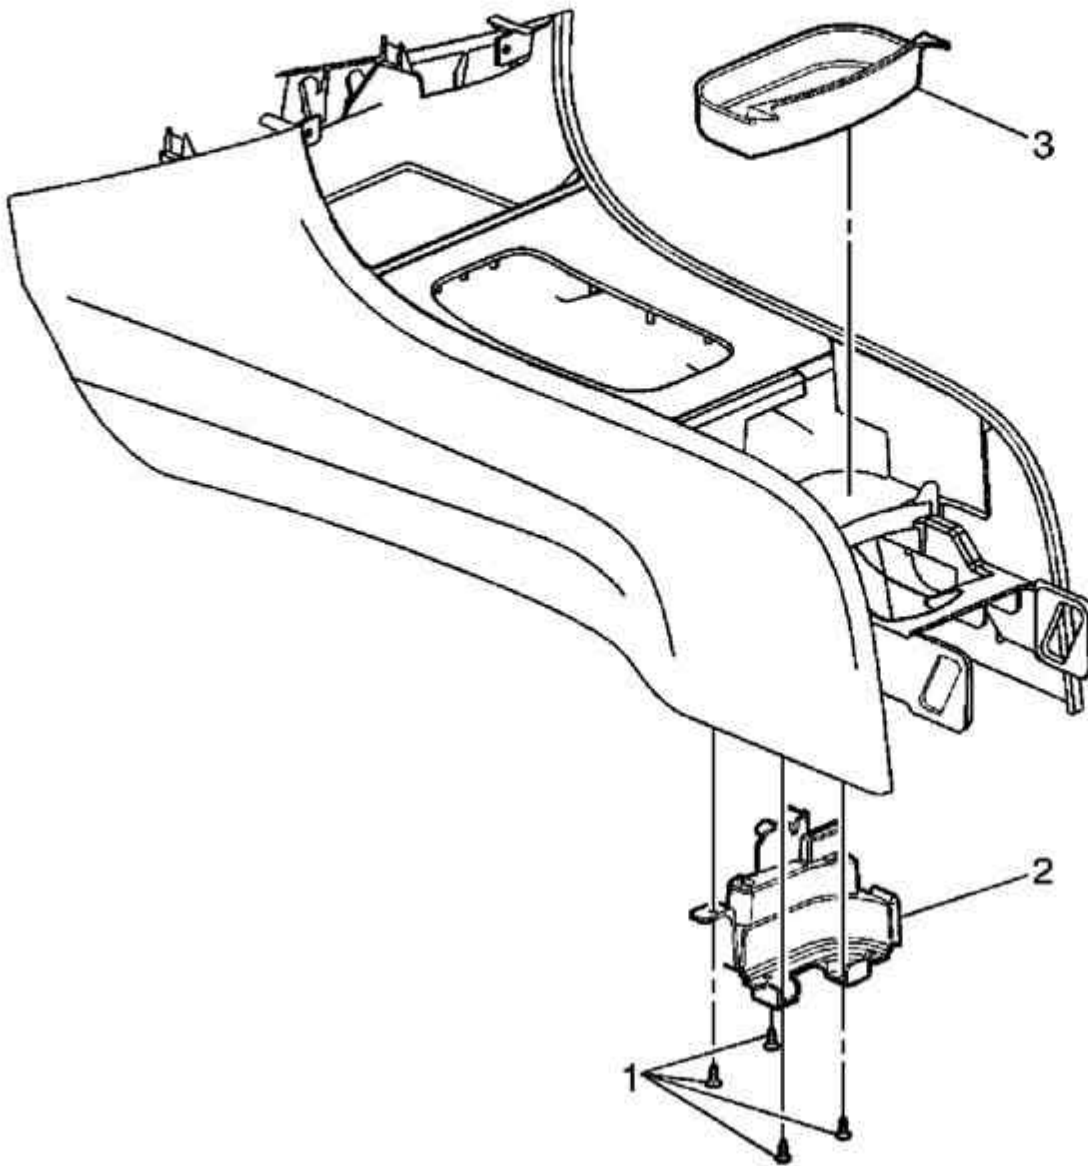


Fig. 44: Identifying Front Floor Console Cupholder
 Courtesy of GENERAL MOTORS CORP.

Callout	Component Name
Preliminary Procedure: Remove the front floor console. Refer to <u>Front Floor Console Replacement</u> .	
1	Front Floor Console Cup Holder Screw (Qty: 4) NOTE: Refer to <u>Fastener Notice</u> . Tighten: 2 N.m (18 lb in)
2	Front Floor Console Cup Holder Assembly
3	Front Floor Console Cup Holder Liner

PRESSURE RELIEF VALVE REPLACEMENT

Removal Procedure

1. Open the rear compartment.
2. Remove the rear bumper fascia. Refer to Rear Bumper Fascia Replacement .
3. Pull back the right rear compartment trim panel as needed. Refer to Rear Compartment Trim Panel Replacement .

4. Use a small, flat-bladed tool to release the snaps on the pressure relief valve. Apply pressure at two upper locations and two lower locations.

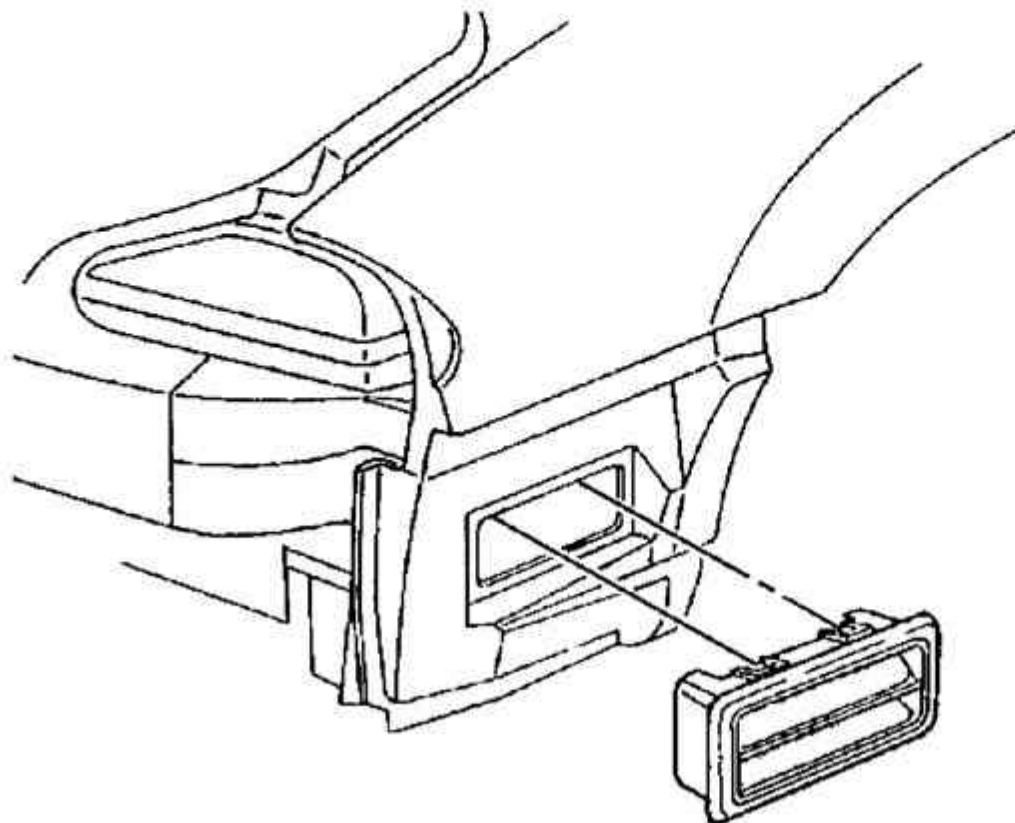


Fig. 45: View Of Pressure Relief Valve
Courtesy of GENERAL MOTORS CORP.

5. Remove the pressure relief valve from the lower quarter panel.

Installation Procedure

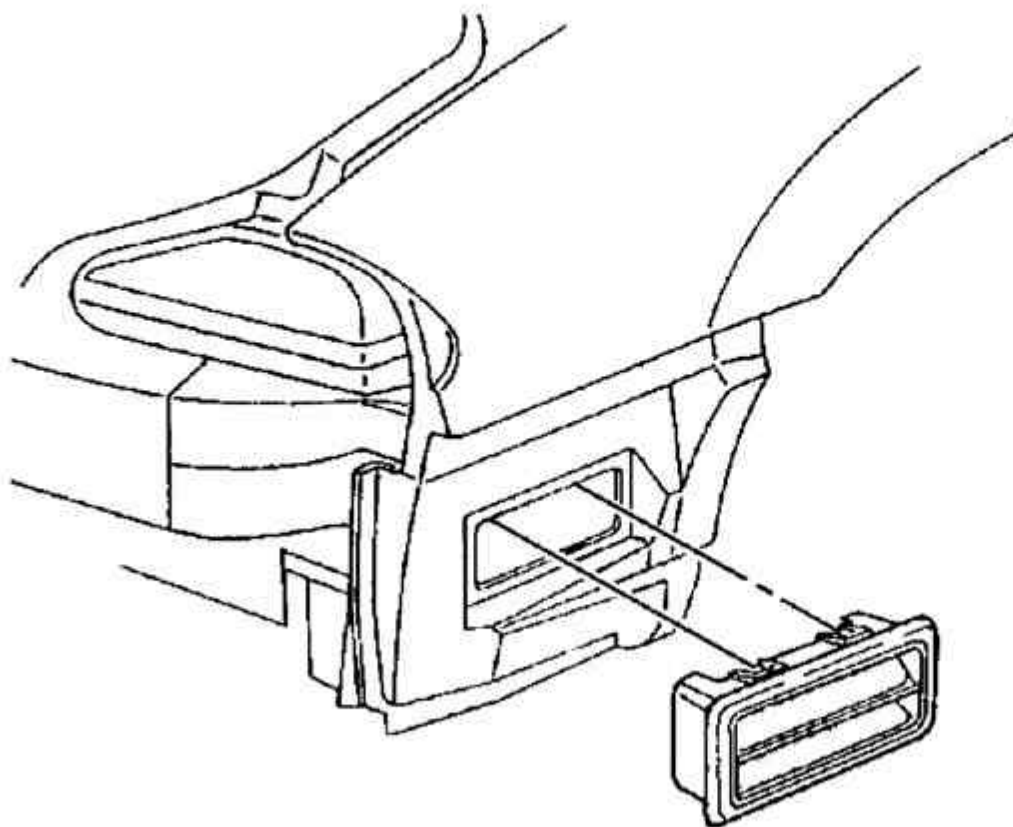


Fig. 46: View Of Pressure Relief Valve
Courtesy of GENERAL MOTORS CORP.

1. Install the pressure relief valve in the lower quarter panel.
2. Press the pressure relief valve into the quarter lower panel until the snaps lock into place at the upper and lower locations.
3. Install the rear compartment trim panel. Refer to **Rear Compartment Trim Panel Replacement**.
4. Install the rear bumper fascia. Refer to **Rear Bumper Fascia Replacement**.
5. Close the rear compartment.

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse

2008 Buick LaCrosse CXL

2008 ACCESSORIES & EQUIPMENT Interior Trim and Paneling - LaCrosse